

Vehicle	System Name	Function Name	SubFunction Name
911(991)	Adaptive cruise control(ACC)	ECU Information	
911(991)	Adaptive cruise control(ACC)	Read Codes	
911(991)	Adaptive cruise control(ACC)	Clear Codes	
911(991)	Adaptive cruise control(ACC)	Live Data	
911(991)	Adaptive cruise control(ACC)	Active Test	Control unit reset
911(991)	Adaptive cruise control(ACC)	Active Test	Lens heater
911(991)	Adaptive cruise control(ACC)	Special Functions	Adjust adaptive cruise control
911(991)	Additional instrument-clock	ECU Information	
911(991)	Additional instrument-clock	Read Codes	
911(991)	Additional instrument-clock	Clear Codes	
911(991)	Additional instrument-clock	Live Data	
911(991)	Additional instrument-clock	Active Test	Control unit reset
911(991)	Additional instrument-clock	Active Test	Lighting
911(991)	Additional instrument-clock	Active Test	Pointer
911(991)	Additional instrument-clock	Active Test	Segment displays
911(991)	Additional instrument-clock	Active Test	Self-test
911(991)	Air conditioning	ECU Information	
911(991)	Air conditioning	Read Codes	
911(991)	Air conditioning	Clear Codes	
911(991)	Air conditioning	Live Data	
911(991)	Air conditioning	Active Test	Compressor break - in reset
911(991)	Air conditioning	Active Test	Cooling performance function test
911(991)	Air conditioning	Active Test	Display test
911(991)	Air conditioning	Active Test	Function enable
911(991)	Air conditioning	Active Test	LED All
911(991)	Air conditioning	Active Test	Left seat heater
911(991)	Air conditioning	Active Test	LIN control motors verification run
911(991)	Air conditioning	Active Test	Mixed air flap
911(991)	Air conditioning	Active Test	Rear window heater
911(991)	Air conditioning	Active Test	Right seat heater
911(991)	Air conditioning	Active Test	Seat ventilation, left
911(991)	Air conditioning	Active Test	Seat ventilation, right
911(991)	Air conditioning	Special Functions	Compressor run-in
911(991)	Air conditioning	Special Functions	Servo motor teaching
911(991)	Airbag	ECU Information	
911(991)	Airbag	Read Codes	
911(991)	Airbag	Clear Codes	
911(991)	Airbag	Live Data	
911(991)	Airbag	Active Test	Airbag warning light
911(991)	Airbag	Active Test	Passenger Airbag Off light
911(991)	Airbag	Active Test	Reset passenger occupant detection teaching values
911(991)	Airbag	Active Test	Re-teach passenger occupant detection
911(991)	Airbag	Special Functions	Occupant detection, replacement/commissioning
911(991)	Airbag	Hot Functions(HOT)	Oil Reset
911(991)	Airbag	Hot Functions(HOT)	Reset with tool
911(991)	Convertible top	ECU Information	
911(991)	Convertible top	Read Codes	
911(991)	Convertible top	Clear Codes	
911(991)	Convertible top	Live Data	
911(991)	Convertible top	Active Test	Calibration
911(991)	Convertible top	Active Test	Control unit reset
911(991)	Convertible top	Active Test	Delete calibration
911(991)	DME	ECU Information	
911(991)	DME	Read Codes	
911(991)	DME	Clear Codes	
911(991)	DME	Live Data	
911(991)	DME	Active Test	Acoustic simulator
911(991)	DME	Active Test	Air cleaner flap (3.4-l + 3.8-l)
911(991)	DME	Active Test	Block function until ignition off
911(991)	DME	Active Test	Boost pressure adjuster (Turbo) - observe HELP
911(991)	DME	Active Test	Camshaft adjustment, bank 1 - intake
911(991)	DME	Active Test	Camshaft adjustment, bank 2 - intake
911(991)	DME	Active Test	Coolant run-on pump (turbo)
911(991)	DME	Active Test	Coolant switch-over valve for heating
911(991)	DME	Active Test	Coolant switch-over valve, clutch oil (PDK)
911(991)	DME	Active Test	Coolant switch-over valve, transmission oil
911(991)	DME	Active Test	Diverter valve (Turbo)
911(991)	DME	Active Test	Electric fuel pump
911(991)	DME	Active Test	Empty the tank
911(991)	DME	Active Test	Engine compartment purge fan level 1 (low)
911(991)	DME	Active Test	Engine compartment purge fan level 2 (high)
911(991)	DME	Active Test	Engine coolant switchover valve
911(991)	DME	Active Test	Exhaust flaps (3.8-l or sports exhaust system)
911(991)	DME	Active Test	Intake manifold switchover (with power kit X51)
911(991)	DME	Active Test	Intake manifold switchover 2 (tuning flap for power kit X51)
911(991)	DME	Active Test	Intake-pipe switchover (tuning flap on 991S + 981S)
911(991)	DME	Active Test	Quantity control valve (high-pressure pump)
911(991)	DME	Active Test	Radiator fan 1 (right)
911(991)	DME	Active Test	Radiator fan 2 (left)
911(991)	DME	Active Test	Request restart - observe HELP
911(991)	DME	Active Test	Request stop
911(991)	DME	Active Test	Tank vent valve
911(991)	DME	Active Test	Thermostat activation
911(991)	DME	Active Test	Valve lift control, bank 1
911(991)	DME	Active Test	Valve lift control, bank 2
911(991)	DME	Special Functions	Adaptations
911(991)	DME	Special Functions	Delete adaptation data
911(991)	DME	Special Functions	First start

911(991)	DME	Special Functions	Ready status
911(991)	DME	Special Functions	Short tests
911(991)	DME	Special Functions	System tests
911(991)	Driver's Door	ECU Information	
911(991)	Driver's Door	Read Codes	
911(991)	Driver's Door	Clear Codes	
911(991)	Driver's Door	Live Data	
911(991)	Driver's Door	Active Test	Activation of all central locking motors
911(991)	Driver's Door	Active Test	Exterior mirror heating
911(991)	Driver's Door	Active Test	Fold-in door mirrors
911(991)	Driver's Door	Active Test	Lights in the door
911(991)	Driver's Door	Active Test	Lower power windows
911(991)	Driver's Door	Active Test	Mirror adjustment
911(991)	Driver's Door	Active Test	Move power windows up
911(991)	Driver's Door	Active Test	Unfold door mirrors
911(991)	Driver's Door	Special Functions	Standardizing power windows
911(991)	Driver-side seat memory	ECU Information	
911(991)	Driver-side seat memory	Read Codes	
911(991)	Driver-side seat memory	Clear Codes	
911(991)	Driver-side seat memory	Live Data	
911(991)	Driver-side seat memory	Active Test	Backrest angle adjustment
911(991)	Driver-side seat memory	Active Test	Backrest width, LBR
911(991)	Driver-side seat memory	Active Test	Lower lumbar blister, LBU
911(991)	Driver-side seat memory	Active Test	Seat angle adjustment (SNV)
911(991)	Driver-side seat memory	Active Test	Seat depth adjustment
911(991)	Driver-side seat memory	Active Test	Seat fore/aft adjustment
911(991)	Driver-side seat memory	Active Test	Seat height adjustment, SHV
911(991)	Driver-side seat memory	Active Test	Seat width, SBR
911(991)	Driver-side seat memory	Active Test	Upper lumbar blister, LBO
911(991)	Driver-side seat memory	Special Functions	Normalize seat motors
911(991)	EPS(power steering)	ECU Information	
911(991)	EPS(power steering)	Read Codes	
911(991)	EPS(power steering)	Clear Codes	
911(991)	EPS(power steering)	Live Data	
911(991)	EPS(power steering)	Active Test	Reset values for steering stops
911(991)	External amplifier	ECU Information	
911(991)	External amplifier	Read Codes	
911(991)	External amplifier	Clear Codes	
911(991)	External amplifier	Live Data	
911(991)	External amplifier	Active Test	3dB reduction
911(991)	External amplifier	Active Test	Activate fan
911(991)	External amplifier	Active Test	Loudspeaker test (acoustic)
911(991)	External amplifier	Active Test	Self-test
911(991)	External amplifier	Active Test	Transport mode
911(991)	Front camera	ECU Information	
911(991)	Front camera	Read Codes	
911(991)	Front camera	Clear Codes	
911(991)	Front camera	Live Data	
911(991)	Front camera	Active Test	Activation of high beam
911(991)	Front camera	Active Test	Control unit reset
911(991)	Front camera	Active Test	Green display for the lane departure warning
911(991)	Front camera	Active Test	Lane departure warning
911(991)	Front camera	Active Test	Traffic-sign display
911(991)	Front camera	Active Test	Windshield heater
911(991)	Front camera	Active Test	Yellow display for the lane departure warning
911(991)	Front-axle lift	ECU Information	
911(991)	Front-axle lift	Read Codes	
911(991)	Front-axle lift	Clear Codes	
911(991)	Front-axle lift	Live Data	
911(991)	Front-axle lift	Active Test	Empty the hydraulic system
911(991)	Front-axle lift	Active Test	Fill/empty pressure accumulator
911(991)	Front-axle lift	Active Test	Filling the hydraulic system
911(991)	Front-axle lift	Active Test	Lift body front section
911(991)	Front-axle lift	Active Test	Lowering body front section
911(991)	Front-axle lift	Active Test	Raise/lower front axle
911(991)	Front-end electronics	ECU Information	
911(991)	Front-end electronics	Read Codes	
911(991)	Front-end electronics	Clear Codes	
911(991)	Front-end electronics	Live Data	
911(991)	Front-end electronics	Active Test	Activation of dipped beam
911(991)	Front-end electronics	Active Test	Activation of steering column adjustment
911(991)	Front-end electronics	Active Test	Actuation of headlamp switchable covers (halogen)
911(991)	Front-end electronics	Active Test	Calibration, axle sensor for HBA (halogen headlight)
911(991)	Front-end electronics	Active Test	Engine-compartment light activation
911(991)	Front-end electronics	Active Test	Foot well light actuation
911(991)	Front-end electronics	Active Test	Front marker light actuation
911(991)	Front-end electronics	Active Test	Garage door opener - Delete all assigned buttons
911(991)	Front-end electronics	Active Test	Hazard warning lights button LED actuation
911(991)	Front-end electronics	Active Test	Headlight cleaning system pump actuation
911(991)	Front-end electronics	Active Test	Left direction indicator actuation in general
911(991)	Front-end electronics	Active Test	Main beam actuation
911(991)	Front-end electronics	Active Test	Right direction indicator actuation in general
911(991)	Front-end electronics	Active Test	Steering column adjustment normalizing run
911(991)	Front-end electronics	Active Test	Tank cap locking element activation
911(991)	Front-end electronics	Active Test	Teach-in process for garage door opener receiver
911(991)	Front-end electronics	Active Test	Two-tone horn actuation
911(991)	Front-end electronics	Active Test	Windshield washer-system pump actuation
911(991)	Front-end electronics	Active Test	Windshield wiper actuation
911(991)	Front-end electronics	Special Functions	Activation of key retaining solenoid

911(991)	Front-end electronics	Special Functions	Analysis of Kessy functions
911(991)	Front-end electronics	Special Functions	Wiping angle adaptation
911(991)	Gateway	ECU Information	
911(991)	Gateway	Read Codes	
911(991)	Gateway	Clear Codes	
911(991)	Gateway	Live Data	
911(991)	Gateway	Active Test	Control unit reset
911(991)	Gateway	Active Test	Generator setpoint voltage
911(991)	Gateway	Active Test	HLK stage specification
911(991)	Gateway	Active Test	Idle speed increase
911(991)	Gateway	Active Test	Relay terminal 30f actuation
911(991)	Gateway	Active Test	Relay terminal 30sd actuation
911(991)	Gateway	Active Test	Reset switch-off stage
911(991)	Gateway	Active Test	Switch terminal G1
911(991)	Gateway	Active Test	Switch terminal G2
911(991)	Gateway	Special Functions	Actual/specified configuration
911(991)	Gateway	Special Functions	Battery change
911(991)	Instrument cluster	ECU Information	
911(991)	Instrument cluster	Read Codes	
911(991)	Instrument cluster	Clear Codes	
911(991)	Instrument cluster	Live Data	
911(991)	Instrument cluster	Active Test	Control unit reset
911(991)	Instrument cluster	Active Test	Light test
911(991)	Instrument cluster	Active Test	Loudspeaker test
911(991)	Instrument cluster	Active Test	Pointer test
911(991)	Instrument cluster	Active Test	Segment-display test
911(991)	Instrument cluster	Active Test	Self-test
911(991)	Instrument cluster	Active Test	TFT display test
911(991)	Instrument cluster	Special Functions	Display test images
911(991)	Instrument cluster	Special Functions	Reset maintenance interval
911(991)	Instrument cluster	Special Functions	Set total mileage
911(991)	Instrument cluster	Special Functions	Tank calibration
911(991)	Instrument cluster	Hot Functions(HOT)	Electric Parking Brake
911(991)	Lane Change Assistant	ECU Information	
911(991)	Lane Change Assistant	Read Codes	
911(991)	Lane Change Assistant	Clear Codes	
911(991)	Lane Change Assistant	Live Data	
911(991)	Lane Change Assistant	Active Test	Driver door mirror warning light
911(991)	Lane Change Assistant	Active Test	Front-passenger door mirror warning light
911(991)	Lane Change Assistant	Active Test	Hard Reset Ecu Reset
911(991)	Left headlight	ECU Information	
911(991)	Left headlight	Read Codes	
911(991)	Left headlight	Clear Codes	
911(991)	Left headlight	Live Data	
911(991)	Left headlight	Active Test	Light distribution, country road lighting
911(991)	Left headlight	Active Test	One-sided reference run
911(991)	Left headlight	Active Test	Self-test
911(991)	Park Assist	ECU Information	
911(991)	Park Assist	Read Codes	
911(991)	Park Assist	Clear Codes	
911(991)	Park Assist	Live Data	
911(991)	Park Assist	Active Test	Control unit reset
911(991)	Park Assist	Active Test	Indicator lamp on button for Park Assist
911(991)	Park Assist	Active Test	Park Assist buzzer, front
911(991)	Park Assist	Active Test	Rear Park Assist buzzer
911(991)	Park Assist	Active Test	System test (all sensors)
911(991)	Parking brake	ECU Information	
911(991)	Parking brake	Read Codes	
911(991)	Parking brake	Clear Codes	
911(991)	Parking brake	Live Data	
911(991)	Parking brake	Active Test	Clamp
911(991)	Parking brake	Active Test	Confirm actuator replacement
911(991)	Parking brake	Active Test	Light test
911(991)	Parking brake	Active Test	Move to installation position
911(991)	Parking brake	Active Test	Release
911(991)	Parking brake	Active Test	T6H7Z
911(991)	Parking brake	Special Functions	Calibration
911(991)	Parking brake	Special Functions	Check basic setting of parking-brake
911(991)	Parking brake	Special Functions	Grinding - in
911(991)	Parking brake	Special Functions	Replace brake pads (operating guide)
911(991)	Parking brake	Hot Functions(HOT)	Tire Pressure Monitoring System
911(991)	PASM	ECU Information	
911(991)	PASM	Read Codes	
911(991)	PASM	Clear Codes	
911(991)	PASM	Live Data	
911(991)	PASM	Active Test	Control unit reset
911(991)	PASM	Special Functions	Calibration
911(991)	PASM	Special Functions	Drive link test:damper valves
911(991)	Passenger's Door	ECU Information	
911(991)	Passenger's Door	Read Codes	
911(991)	Passenger's Door	Clear Codes	
911(991)	Passenger's Door	Live Data	
911(991)	Passenger's Door	Active Test	Activation of all central locking motors
911(991)	Passenger's Door	Active Test	Exterior mirror heating
911(991)	Passenger's Door	Active Test	Fold-in door mirrors
911(991)	Passenger's Door	Active Test	Lights in the door
911(991)	Passenger's Door	Active Test	Lower power windows
911(991)	Passenger's Door	Active Test	Mirror adjustment
911(991)	Passenger's Door	Active Test	Move power windows up

911(991)	Passenger's Door	Active Test	Unfold door mirrors
911(991)	Passenger's Door	Special Functions	Standardizing power windows
911(991)	Passenger-side seat memory	ECU Information	
911(991)	Passenger-side seat memory	Read Codes	
911(991)	Passenger-side seat memory	Clear Codes	
911(991)	Passenger-side seat memory	Live Data	
911(991)	Passenger-side seat memory	Active Test	Backrest angle adjustment
911(991)	Passenger-side seat memory	Active Test	Backrest width, LBR
911(991)	Passenger-side seat memory	Active Test	Lower lumbar blister, LBU
911(991)	Passenger-side seat memory	Active Test	Seat angle adjustment (SNV)
911(991)	Passenger-side seat memory	Active Test	Seat depth adjustment
911(991)	Passenger-side seat memory	Active Test	Seat fore/aft adjustment
911(991)	Passenger-side seat memory	Active Test	Seat height adjustment, SHV
911(991)	Passenger-side seat memory	Active Test	Seat width, SBR
911(991)	Passenger-side seat memory	Active Test	Upper lumbar blister, LBO
911(991)	Passenger-side seat memory	Special Functions	Normalize seat motors
911(991)	PCM/CDR	ECU Information	
911(991)	PCM/CDR	Read Codes	
911(991)	PCM/CDR	Clear Codes	
911(991)	PCM/CDR	Live Data	
911(991)	PCM/CDR	Active Test	3dB reduction
911(991)	PCM/CDR	Active Test	Activate fan
911(991)	PCM/CDR	Active Test	AM field strength
911(991)	PCM/CDR	Active Test	Bluetooth - Delete connected devices from the list
911(991)	PCM/CDR	Active Test	Bluetooth - Find devices
911(991)	PCM/CDR	Active Test	Bluetooth - paging
911(991)	PCM/CDR	Active Test	Button test
911(991)	PCM/CDR	Active Test	CD/DVD eject
911(991)	PCM/CDR	Active Test	Current FM field strength
911(991)	PCM/CDR	Active Test	Developer menu
911(991)	PCM/CDR	Active Test	Digital radio (DAB) - antenna voltage
911(991)	PCM/CDR	Active Test	Digital radio (DAB), current field strength
911(991)	PCM/CDR	Active Test	Display test 1
911(991)	PCM/CDR	Active Test	Display test
911(991)	PCM/CDR	Active Test	DVD drive, Eject
911(991)	PCM/CDR	Active Test	External media source (AUX IN/USB), diagnostic test
911(991)	PCM/CDR	Active Test	External media source (USB), diagnostic test
911(991)	PCM/CDR	Active Test	Factory setting
911(991)	PCM/CDR	Active Test	Loudspeaker test (acoustic)
911(991)	PCM/CDR	Active Test	Loudspeaker test (electrical)
911(991)	PCM/CDR	Active Test	Loudspeaker test
911(991)	PCM/CDR	Active Test	Ring break diagnosis
911(991)	PCM/CDR	Active Test	Satellite antenna, current power consumption
911(991)	PCM/CDR	Active Test	Teach handset
911(991)	PCM/CDR	Active Test	Teach-in telephone handset
911(991)	PCM/CDR	Active Test	Terminal 30 reset
911(991)	PCM/CDR	Active Test	Test tone
911(991)	PCM/CDR	Active Test	Transport mode
911(991)	PCM/CDR	Active Test	Tuner antenna, current power consumption
911(991)	PCM/CDR	Active Test	UMS
911(991)	PCM/CDR	Active Test	USB/AUX
911(991)	PCM/CDR	Special Functions	Confirmation of update
911(991)	PCM/CDR	Special Functions	Function enable
911(991)	PCM/CDR	Special Functions	Multimedia interface test
911(991)	PDCC	ECU Information	
911(991)	PDCC	Read Codes	
911(991)	PDCC	Clear Codes	
911(991)	PDCC	Live Data	
911(991)	PDCC	Active Test	Control unit reset
911(991)	PDCC	Special Functions	Pressure sensor calibration
911(991)	PDCC	Special Functions	Valve actuation
911(991)	Porsche Traction Management(PTM)	ECU Information	
911(991)	Porsche Traction Management(PTM)	Read Codes	
911(991)	Porsche Traction Management(PTM)	Clear Codes	
911(991)	Porsche Traction Management(PTM)	Live Data	
911(991)	Porsche Traction Management(PTM)	Active Test	Activation of additional coolant pump (Turbo only)
911(991)	Porsche Traction Management(PTM)	Active Test	Activation of additional coolant pump
911(991)	Porsche Traction Management(PTM)	Active Test	Bleeding of front axle gearbox
911(991)	Porsche Traction Management(PTM)	Active Test	Control unit reset
911(991)	Porsche Traction Management(PTM)	Active Test	Pressure sensor offset reset
911(991)	Porsche Traction Management(PTM)	Active Test	Reset of service life compensation
911(991)	Porsche Traction Management(PTM)	Special Functions	Front-axle final drive replacement
911(991)	PSM	ECU Information	
911(991)	PSM	Read Codes	
911(991)	PSM	Clear Codes	
911(991)	PSM	Live Data	
911(991)	PSM	Active Test	Control unit reset
911(991)	PSM	Special Functions	Bleed the brakes
911(991)	PSM	Special Functions	Rolling test mode
911(991)	PSM	Special Functions	Sensor cluster compensation
911(991)	PSM	Special Functions	Speed sensor test
911(991)	PSM	Special Functions	Static test
911(991)	Rear left door	ECU Information	
911(991)	Rear left door	Read Codes	
911(991)	Rear left door	Clear Codes	
911(991)	Rear left door	Live Data	
911(991)	Rear left door	Active Test	Lower power windows
911(991)	Rear left door	Active Test	Move power windows up
911(991)	Rear right door	ECU Information	

911(991)	Rear right door	Read Codes	
911(991)	Rear right door	Clear Codes	
911(991)	Rear right door	Live Data	
911(991)	Rear right door	Active Test	Lower power windows
911(991)	Rear right door	Active Test	Move power windows up
911(991)	Rear-axle steering, left	ECU Information	
911(991)	Rear-axle steering, left	Read Codes	
911(991)	Rear-axle steering, left	Clear Codes	
911(991)	Rear-axle steering, left	Live Data	
911(991)	Rear-axle steering, left	Active Test	Approach adjuster position
911(991)	Rear-axle steering, left	Active Test	Control unit reset
911(991)	Rear-axle steering, right	ECU Information	
911(991)	Rear-axle steering, right	Read Codes	
911(991)	Rear-axle steering, right	Clear Codes	
911(991)	Rear-axle steering, right	Live Data	
911(991)	Rear-axle steering, right	Active Test	Approach adjuster position
911(991)	Rear-axle steering, right	Active Test	Control unit reset
911(991)	Rear-end electronics	ECU Information	
911(991)	Rear-end electronics	Read Codes	
911(991)	Rear-end electronics	Clear Codes	
911(991)	Rear-end electronics	Live Data	
911(991)	Rear-end electronics	Active Test	Activate rear-lid lock
911(991)	Rear-end electronics	Active Test	Activation of air deflector
911(991)	Rear-end electronics	Active Test	Activation of interior surveillance button LED
911(991)	Rear-end electronics	Active Test	Activation of orientation light LED
911(991)	Rear-end electronics	Active Test	Activation of rear spoiler
911(991)	Rear-end electronics	Active Test	Activation,sun blind(roof)
911(991)	Rear-end electronics	Active Test	Alarm horn actuation
911(991)	Rear-end electronics	Active Test	Alarm siren actuation
911(991)	Rear-end electronics	Active Test	Brake light actuation
911(991)	Rear-end electronics	Active Test	Central locking LED actuation
911(991)	Rear-end electronics	Active Test	Closing aid actuation
911(991)	Rear-end electronics	Active Test	Convertible-top activation (981)
911(991)	Rear-end electronics	Active Test	Daytime driving lights actuation
911(991)	Rear-end electronics	Active Test	Exhaust flaps actuation
911(991)	Rear-end electronics	Active Test	Front interior lights/reading light actuation
911(991)	Rear-end electronics	Active Test	Front-spoiler activation
911(991)	Rear-end electronics	Active Test	Front-spoiler standardizing run
911(991)	Rear-end electronics	Active Test	LED garage door opener button actuation
911(991)	Rear-end electronics	Active Test	Luggage compartment light actuation
911(991)	Rear-end electronics	Active Test	Numer plate light actuation
911(991)	Rear-end electronics	Active Test	PVTS - Resetting wake-up counters
911(991)	Rear-end electronics	Active Test	Rear fog light actuation
911(991)	Rear-end electronics	Active Test	Rear spoiler standardizing run
911(991)	Rear-end electronics	Active Test	Rear window heater actuation
911(991)	Rear-end electronics	Active Test	Rear wiper actuation
911(991)	Rear-end electronics	Active Test	Reversing lights actuation
911(991)	Rear-end electronics	Active Test	Roof console interior light actuation
911(991)	Rear-end electronics	Active Test	Sliding sunroof actuation
911(991)	Rear-end electronics	Active Test	Sunblind (roof) normalizing run
911(991)	Rear-end electronics	Active Test	Tail lights actuation
911(991)	Rear-end electronics	Active Test	Teach roof console
911(991)	Rear-end electronics	Active Test	Trunk entrapment hook activation (NAR)
911(991)	Rear-end electronics	Active Test	Vanity mirror/glove box light activation
911(991)	Rear-end electronics	Special Functions	Porsche Vehicle Tracking System sequences
911(991)	Rear-end electronics	Special Functions	Sliding/lifting roof standardization
911(991)	Reversing camera	ECU Information	
911(991)	Reversing camera	Read Codes	
911(991)	Reversing camera	Clear Codes	
911(991)	Reversing camera	Live Data	
911(991)	Reversing camera	Active Test	Button function LED
911(991)	Reversing camera	Active Test	Control unit reset
911(991)	Right headlight	ECU Information	
911(991)	Right headlight	Read Codes	
911(991)	Right headlight	Clear Codes	
911(991)	Right headlight	Live Data	
911(991)	Right headlight	Active Test	Light distribution, country road lighting
911(991)	Right headlight	Active Test	One-sided reference run
911(991)	Right headlight	Active Test	Self-test
911(991)	Selector lever	ECU Information	
911(991)	Selector lever	Read Codes	
911(991)	Selector lever	Clear Codes	
911(991)	Selector lever	Live Data	
911(991)	Selector lever	Active Test	Terminal 30 reset
911(991)	Selector lever	Active Test	Transport mode
911(991)	Selector lever	Hot Functions(HOT)	Steering Angle Sensor
911(991)	Steering wheel electronics	ECU Information	
911(991)	Steering wheel electronics	Read Codes	
911(991)	Steering wheel electronics	Clear Codes	
911(991)	Steering wheel electronics	Live Data	
911(991)	Steering wheel electronics	Active Test	Horn
911(991)	Steering wheel electronics	Active Test	Increase volume
911(991)	Steering wheel electronics	Active Test	Launch display
911(991)	Steering wheel electronics	Active Test	MUTE
911(991)	Steering wheel electronics	Active Test	Reduce volume
911(991)	Steering wheel electronics	Active Test	Steering wheel dimming
911(991)	Steering wheel electronics	Active Test	Steering wheel heater
911(991)	Steering wheel electronics	Active Test	Steering-angle sensor: Delete calibration
911(991)	Steering wheel electronics	Special Functions	Function enable

911(991)	Steering wheel electronics	Special Functions	Steering-angle sensor calibration
911(991)	TPM	ECU Information	
911(991)	TPM	Read Codes	
911(991)	TPM	Clear Codes	
911(991)	TPM	Live Data	
911(991)	TPM	Active Test	Control unit reset
911(991)	TPM	Active Test	Save manually taught wheel IDs
911(991)	TPM	Special Functions	Adaptations
911(991)	TPM	Special Functions	First start
911(991)	TPM	Special Functions	Oil filling
911(991)	TPM	Special Functions	Ready status
911(991)	TPM	Special Functions	Short tests
911(991)	TPM	Special Functions	System tests
911(991)	TPM	Special Functions	Teach wheel IDs
911(991)	TPM	Hot Functions(HOT)	Battery
911(991)	Transmission control	ECU Information	
911(991)	Transmission control	Read Codes	
911(991)	Transmission control	Clear Codes	
911(991)	Transmission control	Live Data	
911(991)	Transmission control	Active Test	Bank 1 camshaft adjustment - exhaust
911(991)	Transmission control	Active Test	Bank 1 quantity control valve (high-pressure pump)
911(991)	Transmission control	Active Test	Bank 2 camshaft adjustment - exhaust
911(991)	Transmission control	Active Test	Bank 2 quantity control valve (high-pressure pump)
911(991)	Transmission control	Active Test	Camshaft adjustment, bank 1 - intake
911(991)	Transmission control	Active Test	Camshaft adjustment, bank 2 - intake
911(991)	Transmission control	Active Test	Control unit reset
911(991)	Transmission control	Active Test	Coolant switch-over valve, transmission oil
911(991)	Transmission control	Active Test	Electric fuel pump
911(991)	Transmission control	Active Test	Empty tank
911(991)	Transmission control	Active Test	Engine compartment purge fan level 1 (low)
911(991)	Transmission control	Active Test	Engine compartment purge fan level 2 (high)
911(991)	Transmission control	Active Test	Piston cooling nozzles
911(991)	Transmission control	Active Test	Radiator fan 1
911(991)	Transmission control	Active Test	Radiator fan 2
911(991)	Transmission control	Active Test	Secondary-air pump
911(991)	Transmission control	Active Test	Secondary-air valve
911(991)	Transmission control	Active Test	Tank vent valve
911(991)	Transmission control	Active Test	Transport mode
911(991)	Transmission control	Active Test	Tuning flap
911(991)	Transmission control	Special Functions	Calibration (complete process)
911(991)	Transmission control	Special Functions	Oil filling
911(991)	Transmission control	Special Functions	Read permanent fault memory
911(991)	TV tuner	ECU Information	
911(991)	TV tuner	Read Codes	
911(991)	TV tuner	Clear Codes	
911(991)	TV tuner	Live Data	
911(991)	TV tuner	Active Test	3dB reduction
911(991)	TV tuner	Active Test	Antenna wiring
911(991)	TV tuner	Active Test	Reversing camera video signal
911(991)	TV tuner	Active Test	Transport mode
911(991)	TV tuner	Active Test	Video source
911(996)	ABS	ECU Information	
911(996)	ABS	Read Codes	
911(996)	ABS	Clear Codes	
911(996)	ABS	Live Data	
911(996)	Air conditioning	ECU Information	
911(996)	Air conditioning	Read Codes	
911(996)	Air conditioning	Clear Codes	
911(996)	Air conditioning	Live Data	
911(996)	Air conditioning	Active Test	A/C request signal
911(996)	Air conditioning	Active Test	Central flap motor
911(996)	Air conditioning	Active Test	Footwell/defrost flap motor
911(996)	Air conditioning	Active Test	Fresh air fan
911(996)	Air conditioning	Active Test	Outside air/recirc. air flap
911(996)	Air conditioning	Active Test	Temperature mixing flap motor
911(996)	Airbag	ECU Information	
911(996)	Airbag	Read Codes	
911(996)	Airbag	Clear Codes	
911(996)	Airbag	Live Data	
911(996)	Alarm system	ECU Information	
911(996)	Alarm system	Read Codes	
911(996)	Alarm system	Clear Codes	
911(996)	Alarm system	Live Data	
911(996)	Alarm system	Active Test	Alarm horn
911(996)	Alarm system	Active Test	Comfort closing
911(996)	Alarm system	Active Test	Comfort opening
911(996)	Alarm system	Active Test	Convenient opening, (Targa lid)
911(996)	Alarm system	Active Test	Direction indicator lights
911(996)	Alarm system	Active Test	External output
911(996)	Alarm system	Active Test	Front lid
911(996)	Alarm system	Active Test	Function indicator
911(996)	Alarm system	Active Test	Indicator light(button)
911(996)	Alarm system	Active Test	Interior light
911(996)	Alarm system	Active Test	Lid open display
911(996)	Alarm system	Active Test	Load switch-off
911(996)	Alarm system	Active Test	Lock doors
911(996)	Alarm system	Active Test	Rear luggage/engine comp. opener
911(996)	Alarm system	Active Test	Secure doors
911(996)	Alarm system	Active Test	Tank lock

911(996)	Alarm system	Special Functions	Activation state memory
911(996)	Alarm system	Special Functions	Erase activation state memory
911(996)	Alarm system	Special Functions	Erase event memory
911(996)	Alarm system	Special Functions	Events
911(996)	Alarm system	Special Functions	Interior contact
911(996)	Alarm system	Special Functions	Learning functions
911(996)	Alarm system	Special Functions	System check
911(996)	Automatic Transmission-Tiptronic	ECU Information	
911(996)	Automatic Transmission-Tiptronic	Read Codes	
911(996)	Automatic Transmission-Tiptronic	Clear Codes	
911(996)	Automatic Transmission-Tiptronic	Live Data	
911(996)	Automatic Transmission-Tiptronic	Active Test	Coolant shutoff valve
911(996)	Automatic Transmission-Tiptronic	Active Test	Solenoid valve 1
911(996)	Automatic Transmission-Tiptronic	Active Test	Solenoid valve 2
911(996)	Automatic Transmission-Tiptronic	Active Test	Solenoid valve 3
911(996)	Convertible top	ECU Information	
911(996)	Convertible top	Read Codes	
911(996)	Convertible top	Clear Codes	
911(996)	Convertible top	Live Data	
911(996)	Convertible top	Active Test	Conv. top comp. lib motor, close
911(996)	Convertible top	Active Test	Conv. top comp. lib motor, open
911(996)	Convertible top	Active Test	Convertible top closing
911(996)	Convertible top	Active Test	Door window lifting
911(996)	Convertible top	Active Test	Door window lowering
911(996)	Convertible top	Active Test	Left side flap closing
911(996)	Convertible top	Active Test	Left side flap opening
911(996)	Convertible top	Active Test	Right side flap closing
911(996)	Convertible top	Active Test	Right side flap opening
911(996)	Convertible top	Active Test	Warning light
911(996)	DME	ECU Information	
911(996)	DME	Read Codes	
911(996)	DME	Clear Codes	
911(996)	DME	Live Data	
911(996)	DME	Active Test	A/C compressor
911(996)	DME	Active Test	Boost air bypass valve
911(996)	DME	Active Test	Camshaft adjustment, bank 1
911(996)	DME	Active Test	Camshaft adjustment, bank 2
911(996)	DME	Active Test	Charcoal filter shutoff valve
911(996)	DME	Active Test	Check Engine
911(996)	DME	Active Test	Coolant shutoff valve
911(996)	DME	Active Test	Cylinder 1 injection valve off
911(996)	DME	Active Test	Cylinder 2 injection valve off
911(996)	DME	Active Test	Cylinder 3 injection valve off
911(996)	DME	Active Test	Cylinder 4 injection valve off
911(996)	DME	Active Test	Cylinder 5 injection valve off
911(996)	DME	Active Test	Cylinder 6 injection valve off
911(996)	DME	Active Test	Engine compartment purge fan
911(996)	DME	Active Test	Fan
911(996)	DME	Active Test	Frequency valve, boost control
911(996)	DME	Active Test	Fuel evaporative valve
911(996)	DME	Active Test	Fuel evaporative
911(996)	DME	Active Test	Fuel pump relay final stage
911(996)	DME	Active Test	IACV
911(996)	DME	Active Test	Intake pipe switchover
911(996)	DME	Active Test	Intake pipe switchover
911(996)	DME	Active Test	Resonance flap
911(996)	DME	Active Test	Rpm signal
911(996)	DME	Active Test	Secondary air pump
911(996)	DME	Active Test	Switch-over valve (tuning flap)
911(996)	DME	Active Test	Switch-over valve(secondary air)
911(996)	DME	Active Test	Switch-over valve(tuning flap)
911(996)	DME	Active Test	Valve lift control, banks 1 and 2
911(996)	HBA	ECU Information	
911(996)	HBA	Read Codes	
911(996)	HBA	Clear Codes	
911(996)	HBA	Live Data	
911(996)	HBA	Active Test	Servo motors in max. position
911(996)	HBA	Active Test	Servo motors in middle position
911(996)	HBA	Active Test	Servo motors in min. position
911(996)	Instrument cluster	ECU Information	
911(996)	Instrument cluster	Read Codes	
911(996)	Instrument cluster	Clear Codes	
911(996)	Instrument cluster	Live Data	
911(996)	Instrument cluster	Active Test	Analog speedometer
911(996)	Instrument cluster	Active Test	Belt buzzer
911(996)	Instrument cluster	Active Test	Brake fluid warning lamp
911(996)	Instrument cluster	Active Test	Brake pad warning lamp
911(996)	Instrument cluster	Active Test	Buzzer (v) variable
911(996)	Instrument cluster	Active Test	Buzzer
911(996)	Instrument cluster	Active Test	Coolant temperature
911(996)	Instrument cluster	Active Test	Coolant warning lamp
911(996)	Instrument cluster	Active Test	Dimming, external
911(996)	Instrument cluster	Active Test	Display color red
911(996)	Instrument cluster	Active Test	Display color yellow
911(996)	Instrument cluster	Active Test	Display dimming(background)
911(996)	Instrument cluster	Active Test	Display segments
911(996)	Instrument cluster	Active Test	Fuel level display
911(996)	Instrument cluster	Active Test	Fuel level warning lamp
911(996)	Instrument cluster	Active Test	Gong signal

911(996)	Instrument cluster	Active Test	Instrument cluster warning lights
911(996)	Instrument cluster	Active Test	Key buzzer
911(996)	Instrument cluster	Active Test	Lamp dimming
911(996)	Instrument cluster	Active Test	Light buzzer
911(996)	Instrument cluster	Active Test	Pattern - even columns
911(996)	Instrument cluster	Active Test	Pattern - even lines
911(996)	Instrument cluster	Active Test	Pattern - odd columns
911(996)	Instrument cluster	Active Test	Pattern - odd lines
911(996)	Instrument cluster	Active Test	Pointer
911(996)	Instrument cluster	Active Test	Speed buzzer
911(996)	Instrument cluster	Active Test	Speedometer A
911(996)	Instrument cluster	Active Test	Spoiler warning lamp
911(996)	Instrument cluster	Active Test	Spoiler
911(996)	Instrument cluster	Active Test	Tachometer
911(996)	Instrument cluster	Active Test	Text output
911(996)	Instrument cluster	Active Test	Vehicle voltage display
911(996)	Instrument cluster	Active Test	Washer fluid warning lamp
911(996)	Instrument cluster	Special Functions	Read out values
911(996)	Instrument cluster	Special Functions	Reset tank calibration value
911(996)	Instrument cluster	Special Functions	Total distance
911(996)	Instrument cluster	Special Functions	Write values
911(996)	Park Assistant	ECU Information	
911(996)	Park Assistant	Read Codes	
911(996)	Park Assistant	Clear Codes	
911(996)	Park Assistant	Live Data	
911(996)	Park Assistant	Active Test	Continuous tone
911(996)	Roll-over protection	ECU Information	
911(996)	Roll-over protection	Read Codes	
911(996)	Roll-over protection	Clear Codes	
911(996)	Roll-over protection	Live Data	
911(996)	Seat Memory	ECU Information	
911(996)	Seat Memory	Read Codes	
911(996)	Seat Memory	Clear Codes	
911(996)	Seat Memory	Live Data	
911(996)	Seat Memory	Active Test	Approach to nom. Position, key 1
911(996)	Seat Memory	Active Test	Approach to nom. Position, key 2
911(996)	Seat Memory	Active Test	Approach to nom. Position, key 3
911(996)	Seat Memory	Active Test	Approach to nom. Position, key 4
911(996)	Seat Memory	Active Test	Approach to nominal position 1
911(996)	Seat Memory	Active Test	Approach to nominal position 2
911(996)	Seat Memory	Active Test	Approach to nominal position 3
911(996)	Seat Memory	Active Test	Approach to required key position
911(996)	Seat Memory	Active Test	Backrest forward
911(996)	Seat Memory	Active Test	Backrest Rearward
911(996)	Seat Memory	Active Test	Depressurize lower valve
911(996)	Seat Memory	Active Test	Depressurize upper valve
911(996)	Seat Memory	Active Test	Front height downward
911(996)	Seat Memory	Active Test	Front height upward
911(996)	Seat Memory	Active Test	Left mirror downward
911(996)	Seat Memory	Active Test	Left mirror to the left
911(996)	Seat Memory	Active Test	Left mirror to the right
911(996)	Seat Memory	Active Test	Left mirror upward
911(996)	Seat Memory	Active Test	Longitudinal adjustment forward
911(996)	Seat Memory	Active Test	Longitudinal adjustment Rearward
911(996)	Seat Memory	Active Test	Pressurize lower valve
911(996)	Seat Memory	Active Test	Pressurize upper valve
911(996)	Seat Memory	Active Test	Rear height downward
911(996)	Seat Memory	Active Test	Rear height upward
911(996)	Seat Memory	Active Test	Right mirror downward
911(996)	Seat Memory	Active Test	Right mirror to the left
911(996)	Seat Memory	Active Test	Right mirror to the right
911(996)	Seat Memory	Active Test	Right mirror upward
911(996)	Seat Memory	Active Test	Storage of key 1 position
911(996)	Seat Memory	Active Test	Storage of key 2 position
911(996)	Seat Memory	Active Test	Storage of key 3 position
911(996)	Seat Memory	Active Test	Storage of key 4 position
911(996)	Seat Memory	Active Test	Storage of key position
911(996)	Seat Memory	Active Test	Storage of position 1
911(996)	Seat Memory	Active Test	Storage of position 2
911(996)	Seat Memory	Active Test	Storage of position 3
911(997)	Air Conditioning	ECU Information	
911(997)	Air Conditioning	Read Codes	
911(997)	Air Conditioning	Clear Codes	
911(997)	Air Conditioning	Live Data	
911(997)	Air Conditioning	Active Test	Central flap
911(997)	Air Conditioning	Active Test	Footwell/defroster flap
911(997)	Air Conditioning	Active Test	Fresh air fan
911(997)	Air Conditioning	Active Test	Ram air/recirc. air flap
911(997)	Air Conditioning	Active Test	Reset
911(997)	Air Conditioning	Active Test	Seat heating/set ventilation
911(997)	Air Conditioning	Active Test	Temperature mixing flap
911(997)	Air Conditioning	Special Functions	Control unit replacement
911(997)	Air Conditioning	Special Functions	System check
911(997)	AWS	ECU Information	
911(997)	AWS	Read Codes	
911(997)	AWS	Clear Codes	
911(997)	AWS	Live Data	
911(997)	AWS	Active Test	Reset
911(997)	AWS	Special Functions	Customer-specific settings

911(997)	AWS	Programming	Customer-specific settings
911(997)	BOSE amplifier,external	ECU Information	
911(997)	BOSE amplifier,external	Read Codes	
911(997)	BOSE amplifier,external	Clear Codes	
911(997)	BOSE amplifier,external	Live Data	
911(997)	CD autochanger	ECU Information	
911(997)	CD autochanger	Read Codes	
911(997)	CD autochanger	Clear Codes	
911(997)	Chronometer	ECU Information	
911(997)	Chronometer	Read Codes	
911(997)	Chronometer	Clear Codes	
911(997)	Chronometer	Live Data	
911(997)	Chronometer	Active Test	Reset
911(997)	Chronometer	Special Functions	Control unit replacement
911(997)	Convertible Top	ECU Information	
911(997)	Convertible Top	Read Codes	
911(997)	Convertible Top	Clear Codes	
911(997)	Convertible Top	Live Data	
911(997)	Convertible Top	Active Test	Delete calibration data
911(997)	Convertible Top	Active Test	Output display message
911(997)	Convertible Top	Active Test	Reset convertible top counter
911(997)	Convertible Top	Active Test	Reset
911(997)	Convertible Top	Special Functions	Calibration
911(997)	Convertible Top	Special Functions	Control unit replacement
911(997)	Convertible Top	Special Functions	Customer-specific settings
911(997)	Convertible Top	Special Functions	Model year 05
911(997)	Convertible Top	Programming	as of MY06
911(997)	Convertible Top	Programming	Customer-specific settings
911(997)	Convertible Top	Programming Top	Model year 05
911(997)	Cornering Light	ECU Information	
911(997)	Cornering Light	Read Codes	
911(997)	Cornering Light	Clear Codes	
911(997)	Cornering Light	Live Data	
911(997)	Cornering Light	Active Test	Automatic movement sequence
911(997)	Cornering Light	Active Test	HBA 3° downwards
911(997)	Cornering Light	Active Test	HBA 3° upwards
911(997)	Cornering Light	Active Test	Pivot Cornering Light to left
911(997)	Cornering Light	Active Test	Pivot Cornering Light to right
911(997)	Cornering Light	Active Test	Pivot with steer. wheel while stationary
911(997)	Cornering Light	Active Test	Reset
911(997)	Cornering Light	Special Functions	Calibration
911(997)	Cornering Light	Special Functions	Customer-specific settings
911(997)	Cornering Light	Programming	Customer-specific settings
911(997)	DME	ECU Information	
911(997)	DME	Read Codes	
911(997)	DME	Clear Codes	
911(997)	DME	Live Data	
911(997)	DME	Active Test	Bank 1 intake camshaft
911(997)	DME	Active Test	Bank 2 intake camshaft
911(997)	DME	Active Test	Coolant run-on pump
911(997)	DME	Active Test	Drive link active
911(997)	DME	Active Test	Drive links
911(997)	DME	Active Test	Engine purge fan level 1
911(997)	DME	Active Test	Engine purge fan level 2
911(997)	DME	Active Test	Exhaust flap (if fitted)
911(997)	DME	Active Test	Fuel evaporative valve
911(997)	DME	Active Test	Fuel pump 1
911(997)	DME	Active Test	Fuel tank leak diagnosis pump
911(997)	DME	Active Test	Fuel tank leak diagnosis valve
911(997)	DME	Active Test	Intake pipe switch-over valve
911(997)	DME	Active Test	Quantity control valve
911(997)	DME	Active Test	Valve lift adjustment, bank 1
911(997)	DME	Active Test	Valve lift adjustment, bank 2
911(997)	DME	Special Functions	Customer-specific settings
911(997)	DME	Special Functions	Engine data
911(997)	DME	Special Functions	Ready status
911(997)	DME	Special Functions	Short test
911(997)	DME	Special Functions	Special functions
911(997)	DME	Special Functions	System adaption
911(997)	DME	Special Functions	System check
911(997)	DME	Special Functions	Vehicle data
911(997)	DME	Programming	Customer-specific settings
911(997)	Driver's Door	ECU Information	
911(997)	Driver's Door	Read Codes	
911(997)	Driver's Door	Clear Codes	
911(997)	Driver's Door	Live Data	
911(997)	Driver's Door	Active Test	Close power window
911(997)	Driver's Door	Active Test	Door guard/exit lighting
911(997)	Driver's Door	Active Test	Door opening drive's side
911(997)	Driver's Door	Active Test	Horizontal mirror adjustment -
911(997)	Driver's Door	Active Test	Horizontal mirror adjustment +
911(997)	Driver's Door	Active Test	Lock central locking
911(997)	Driver's Door	Active Test	Mirror heating
911(997)	Driver's Door	Active Test	Open power window
911(997)	Driver's Door	Active Test	Reset
911(997)	Driver's Door	Active Test	Save central locking
911(997)	Driver's Door	Active Test	Unlock central locking
911(997)	Driver's Door	Active Test	Vertical mirror adjustment -
911(997)	Driver's Door	Active Test	Vertical mirror adjustment +

911(997)	Driver's Door	Special Functions	Control unit replacement
911(997)	Driver's Door	Special Functions	Customer-specific settings
911(997)	Driver's Door	Programming	Customer-specific settings
911(997)	Front	ECU Information	
911(997)	Front	Read Codes	
911(997)	Front	Clear Codes	
911(997)	Front	Live Data	
911(997)	Front	Active Test	Activation radiator fan
911(997)	Front	Active Test	Amb. temp. sensor, power supply
911(997)	Front	Active Test	FL dir. Indic. Light/side marker
911(997)	Front	Active Test	Fog light/daytime driving light, left
911(997)	Front	Active Test	Fog light/daytime driving light, right
911(997)	Front	Active Test	FR dir. Indic. Light/side marker
911(997)	Front	Active Test	High beam, left
911(997)	Front	Active Test	High beam, right
911(997)	Front	Active Test	Ind. Light haz. w. lights button
911(997)	Front	Active Test	LED direction indic., Front left
911(997)	Front	Active Test	LED direction indic., Front right
911(997)	Front	Active Test	Left dipped beam(driving light)
911(997)	Front	Active Test	left dir. In. light (Front/Rear)
911(997)	Front	Active Test	Left rear indicator
911(997)	Front	Active Test	Luggage compartment light, Front
911(997)	Front	Active Test	Parking light (marker light), front left
911(997)	Front	Active Test	Parking light (marker light), front right
911(997)	Front	Active Test	Reset
911(997)	Front	Active Test	Right dipped beam(driving light)
911(997)	Front	Active Test	Right dir. In. light (Front/Rear)
911(997)	Front	Active Test	Right rear indicator
911(997)	Front	Active Test	Servo motor Front lid release
911(997)	Front	Active Test	Two-tone horn, high pitch
911(997)	Front	Active Test	Two-tone horn, low pitch
911(997)	Front	Special Functions	Calibration
911(997)	Front	Special Functions	Control unit replacement
911(997)	Front	Special Functions	Customer-specific settings
911(997)	Front	Programming	Customer-specific settings
911(997)	Gateway	ECU Information	
911(997)	Gateway	Read Codes	
911(997)	Gateway	Clear Codes	
911(997)	Gateway	Live Data	
911(997)	Gateway	Active Test	Reset
911(997)	Gateway	Special Functions	Basic coding
911(997)	Gateway	Special Functions	Control unit replacement
911(997)	Gateway	Special Functions	Single-wire test
911(997)	Gateway	Special Functions	Sleep mode
911(997)	Gateway	Special Functions	Vehicle variants
911(997)	Gateway	Programming	Required control unit lists
911(997)	Gateway	Programming	Vehicle variants
911(997)	Instrument Cluster	ECU Information	
911(997)	Instrument Cluster	Read Codes	
911(997)	Instrument Cluster	Clear Codes	
911(997)	Instrument Cluster	Live Data	
911(997)	Instrument Cluster	Active Test	Adop. of CAN control unit tank corr.val.
911(997)	Instrument Cluster	Active Test	Bulb test
911(997)	Instrument Cluster	Active Test	Indicator test
911(997)	Instrument Cluster	Active Test	Loudspeaker test
911(997)	Instrument Cluster	Active Test	Reset on-board computer values
911(997)	Instrument Cluster	Active Test	Reset
911(997)	Instrument Cluster	Active Test	Tank content
911(997)	Instrument Cluster	Active Test	Transf. of corr.val. to el.sys. c. unit
911(997)	Instrument Cluster	Special Functions	Control unit replacement
911(997)	Instrument Cluster	Special Functions	General function routines
911(997)	Instrument Cluster	Special Functions	Special functions
911(997)	Navigation	ECU Information	
911(997)	Navigation	Read Codes	
911(997)	Navigation	Clear Codes	
911(997)	Navigation	Live Data	
911(997)	Navigation	Active Test	DVD drive information
911(997)	Navigation	Active Test	Factory settings
911(997)	Navigation	Active Test	GPS status
911(997)	Navigation	Active Test	Gyroscope (rate-of-turn sensor)
911(997)	Navigation	Active Test	Read sector data
911(997)	Navigation	Active Test	Reverse gear
911(997)	Navigation	Active Test	Wheel pulse counter
911(997)	Park Assistant	ECU Information	
911(997)	Park Assistant	Read Codes	
911(997)	Park Assistant	Clear Codes	
911(997)	Park Assistant	Live Data	
911(997)	Park Assistant	Active Test	Loudspeaker activation
911(997)	Park Assistant	Active Test	Reset
911(997)	Park Assistant	Active Test	Virtual reverse gear
911(997)	Park Assistant	Special Functions	Control unit replacement
911(997)	Park Assistant	Special Functions	Customer-specific settings
911(997)	Park Assistant	Programming	Customer-specific settings
911(997)	PAS	ECU Information	
911(997)	PAS	Read Codes	
911(997)	PAS	Clear Codes	
911(997)	PAS	Live Data	
911(997)	PAS	Special Functions	Basic coding
911(997)	PAS	Special Functions	Control unit replacement

911(997)	PAS	Special Functions	Teaching functions
911(997)	PAS	Hot Functions(HOT)	Oil Reset
911(997)	PAS	Hot Functions(HOT)	Reset with tool
911(997)	PAS	Programming	Basic coding
911(997)	PAS	Programming	Central locking system
911(997)	PAS	Programming	Comfort functions
911(997)	PAS	Programming	Key settings(key 1)
911(997)	PAS	Programming	Key settings(key 2)
911(997)	PAS	Programming	Key settings(key 3)
911(997)	PAS	Programming	Key settings(key 4)
911(997)	PASM	ECU Information	
911(997)	PASM	Read Codes	
911(997)	PASM	Clear Codes	
911(997)	PASM	Live Data	
911(997)	PASM	Active Test	Reset
911(997)	PASM	Active Test	Self-test
911(997)	PASM	Special Functions	Control unit replacement
911(997)	Passenger's Door	ECU Information	
911(997)	Passenger's Door	Read Codes	
911(997)	Passenger's Door	Clear Codes	
911(997)	Passenger's Door	Live Data	
911(997)	Passenger's Door	Active Test	Close power window
911(997)	Passenger's Door	Active Test	Door guard/exit lighting
911(997)	Passenger's Door	Active Test	Door opening passenger's side
911(997)	Passenger's Door	Active Test	Open power window
911(997)	Passenger's Door	Active Test	Power window button lighting
911(997)	Passenger's Door	Active Test	Reset
911(997)	Passenger's Door	Special Functions	Control unit replacement
911(997)	Passenger's Door	Special Functions	Customer-specific settings
911(997)	Passenger's Door	Programming	Customer-specific settings
911(997)	PCM	ECU Information	
911(997)	PCM	Read Codes	
911(997)	PCM	Clear Codes	
911(997)	PCM	Live Data	
911(997)	PCM	Active Test	CD/DVD Eject
911(997)	PCM	Active Test	Developer menu
911(997)	PCM	Active Test	Display test
911(997)	PCM	Active Test	Power supply
911(997)	PCM	Active Test	Reset
911(997)	PCM	Active Test	Set default values (factory settings)
911(997)	PCM	Active Test	Teaching handset...
911(997)	PCM2_MMI	ECU Information	
911(997)	PCM2_MMI	Read Codes	
911(997)	PCM2_MMI	Clear Codes	
911(997)	PCM2_MMI	Live Data	
911(997)	PCM2_MMI	Active Test	Erase personal details
911(997)	PCM2_MMI	Active Test	Set software list
911(997)	PCM2_MMI	Active Test	Test pattern in center display
911(997)	PDK Selector Lever	ECU Information	
911(997)	PDK Selector Lever	Read Codes	
911(997)	PDK Selector Lever	Clear Codes	
911(997)	PDK Selector Lever	Active Test	Reset
911(997)	PDK Selector Lever	Special Functions	Function test, sensors
911(997)	PDK(Tiptronic)	ECU Information	
911(997)	PDK(Tiptronic)	Read Codes	
911(997)	PDK(Tiptronic)	Clear Codes	
911(997)	PDK(Tiptronic)	Live Data	
911(997)	PDK(Tiptronic)	Active Test	Erase adaptation values
911(997)	PDK(Tiptronic)	Active Test	Reset
911(997)	PDK(Tiptronic)	Active Test	Torque converter clutch
911(997)	PDK(Tiptronic)	Active Test	Valve test
911(997)	PDK(Tiptronic)	Special Functions	Backup measures
911(997)	PDK(Tiptronic)	Special Functions	Control unit replacement
911(997)	PDK(Tiptronic)	Special Functions	Customer-specific settings
911(997)	PDK(Tiptronic)	Special Functions	Fluid fill mode
911(997)	PDK(Tiptronic)	Programming	Customer-specific settings
911(997)	POSIP	ECU Information	
911(997)	POSIP	Read Codes	
911(997)	POSIP	Clear Codes	
911(997)	POSIP	Live Data	
911(997)	POSIP	Active Test	Airbag Off indicator light
911(997)	POSIP	Active Test	Airbag sys. error to ins. cluster
911(997)	POSIP	Active Test	Airbag warning light
911(997)	POSIP	Active Test	AWS sys. error to instr. cluster
911(997)	POSIP	Active Test	Crash signal to CAN
911(997)	POSIP	Active Test	Crash signal
911(997)	POSIP	Active Test	Reset
911(997)	POSIP	Active Test	Sys. err. roll-over bar ins. cl.
911(997)	POSIP	Special Functions	Control unit replacement
911(997)	POSIP	Special Functions	Customer-specific settings
911(997)	POSIP	Programming	Customer-specific settings
911(997)	PSM	ECU Information	
911(997)	PSM	Read Codes	
911(997)	PSM	Clear Codes	
911(997)	PSM	Live Data	
911(997)	PSM	Active Test	Pump motor activation
911(997)	PSM	Active Test	Warning light
911(997)	PSM	Special Functions	Bleed
911(997)	PSM	Special Functions	Calibration

911(997)	PSM	Special Functions	Control unit replacement
911(997)	PSM	Special Functions	Customer-specific settings
911(997)	PSM	Special Functions	Inspections/tests
911(997)	PSM	Special Functions	Static test
911(997)	PSM	Programming	Customer-specific settings
911(997)	PTM	ECU Information	
911(997)	PTM	Read Codes	
911(997)	PTM	Clear Codes	
911(997)	PTM	Live Data	
911(997)	PTM	Active Test	Front axle clutch
911(997)	PTM	Active Test	Reset
911(997)	PTM	Special Functions	Control unit replacement
911(997)	PTM	Special Functions	Customer-specific settings
911(997)	PTM	Programming	Customer-specific settings
911(997)	Rear	ECU Information	
911(997)	Rear	Read Codes	
911(997)	Rear	Clear Codes	
911(997)	Rear	Live Data	
911(997)	Rear	Active Test	Activate compressor
911(997)	Rear	Active Test	Anti-theft system horn
911(997)	Rear	Active Test	Brake lights
911(997)	Rear	Active Test	Convertible top closing
911(997)	Rear	Active Test	Convertible top opening
911(997)	Rear	Active Test	Extend spoiler
911(997)	Rear	Active Test	Information terminal 30 on
911(997)	Rear	Active Test	Interior monitoring
911(997)	Rear	Active Test	LED anti-theft syst. Funct. Light
911(997)	Rear	Active Test	Left tail light
911(997)	Rear	Active Test	Lower vehicle
911(997)	Rear	Active Test	Number plate light
911(997)	Rear	Active Test	Raise vehicle
911(997)	Rear	Active Test	Rear fog light
911(997)	Rear	Active Test	Rear lid release
911(997)	Rear	Active Test	Rear luggage compartment light
911(997)	Rear	Active Test	Reset
911(997)	Rear	Active Test	Retract spoiler
911(997)	Rear	Active Test	Reversing light
911(997)	Rear	Active Test	Right tail light
911(997)	Rear	Active Test	Siren
911(997)	Rear	Active Test	Transport mode
911(997)	Rear	Special Functions	Activation state memory
911(997)	Rear	Special Functions	Control unit replacement
911(997)	Rear	Special Functions	Customer-specific settings
911(997)	Rear	Special Functions	Interior monitoring
911(997)	Rear	Programming	Customer-specific settings
911(997)	Seat Memory	ECU Information	
911(997)	Seat Memory	Read Codes	
911(997)	Seat Memory	Clear Codes	
911(997)	Seat Memory	Live Data	
911(997)	Seat Memory	Active Test	Approach to stored val. Person 1
911(997)	Seat Memory	Active Test	Approach to stored val. Person 2
911(997)	Seat Memory	Active Test	Approach to stored values key 1
911(997)	Seat Memory	Active Test	Approach to stored values key 2
911(997)	Seat Memory	Active Test	Approach to stored values key 3
911(997)	Seat Memory	Active Test	Approach to stored values key 4
911(997)	Seat Memory	Active Test	Approach to stored values key 5
911(997)	Seat Memory	Active Test	Approach to stored values key 6
911(997)	Seat Memory	Active Test	Backrest backward
911(997)	Seat Memory	Active Test	Backrest forward
911(997)	Seat Memory	Active Test	Fore/aft adjustment forward
911(997)	Seat Memory	Active Test	Front height downward
911(997)	Seat Memory	Active Test	Front height upward
911(997)	Seat Memory	Active Test	Longitudinal adjustment Rearward
911(997)	Seat Memory	Active Test	Pressurize lower lumbar
911(997)	Seat Memory	Active Test	Pressurize upper lumbar
911(997)	Seat Memory	Active Test	Rear height downward
911(997)	Seat Memory	Active Test	Rear height upward
911(997)	Seat Memory	Active Test	Reset
911(997)	Seat Memory	Active Test	Save values for key 1
911(997)	Seat Memory	Active Test	Save values for key 2
911(997)	Seat Memory	Active Test	Save values for key 3
911(997)	Seat Memory	Active Test	Save values for key 4
911(997)	Seat Memory	Active Test	Save values for key 5
911(997)	Seat Memory	Active Test	Save values for key 6
911(997)	Seat Memory	Active Test	Save values for person 1
911(997)	Seat Memory	Active Test	Save values for person 2
911(997)	Seat Memory	Active Test	Ventilate lower lumbar
911(997)	Seat Memory	Active Test	Ventilate upper lumbar
911(997)	Seat Memory	Special Functions	Control unit replacement
911(997)	Seat Memory	Special Functions	Customer-specific settings
911(997)	Seat Memory	Programming	Customer-specific settings
911(997)	Steering Col. Switch	ECU Information	
911(997)	Steering Col. Switch	Read Codes	
911(997)	Steering Col. Switch	Clear Codes	
911(997)	Steering Col. Switch	Live Data	
911(997)	Steering Col. Switch	Active Test	Audio activation louder
911(997)	Steering Col. Switch	Active Test	Audio activation mute
911(997)	Steering Col. Switch	Active Test	Audio activation quieter
911(997)	Steering Col. Switch	Active Test	Reset

911(997)	Steering Col. Switch	Active Test	Steering wheel heating on
911(997)	Steering Col. Switch	Active Test	Steering wheel lighting
911(997)	Steering Col. Switch	Special Functions	Control unit replacement
911(997)	Steering Col. Switch	Special Functions	Customer-specific settings
911(997)	Steering Col. Switch	Programming	Customer-specific settings
911(997)	Targa Roof	ECU Information	
911(997)	Targa Roof	Read Codes	
911(997)	Targa Roof	Clear Codes	
911(997)	Targa Roof	Live Data	
911(997)	Targa Roof	Active Test	Reset
911(997)	Targa Roof	Special Functions	Customer-specific settings
911(997)	Targa Roof	Hot Functions(HOT)	Tire Pressure Monitoring System
911(997)	Targa Roof	Programming	Customer-specific settings
911(997)	Telephone	ECU Information	
911(997)	Telephone	Read Codes	
911(997)	Telephone	Clear Codes	
911(997)	Telephone	Live Data	
911(997)	TPM	ECU Information	
911(997)	TPM	Read Codes	
911(997)	TPM	Clear Codes	
911(997)	TPM	Live Data	
911(997)	TPM	Special Functions	Control unit replacement
911(997)	TPM	Special Functions	Customer-specific settings
911(997)	TPM	Special Functions	Last identification received
911(997)	TPM	Special Functions	System adaption
911(997)	TPM	Special Functions	System status
911(997)	TPM	Programming	Customer-specific settings
911(997)	TV tuner	ECU Information	
911(997)	TV tuner	Read Codes	
911(997)	TV tuner	Clear Codes	
911(997)	TV tuner	Live Data	
911(997)	TV tuner	Active Test	Driving test: level measurement with frequency input
911(997)	TV tuner	Active Test	Driving test: level measurement with level/country input
911(997)	TV tuner	Active Test	Level measurement with channel/country entry
911(997)	TV tuner	Active Test	Level measurement with curr. TV setting
911(997)	TV tuner	Active Test	Level measurement with frequency entry
911(997)	TV tuner	Active Test	Reset
911(997)	TV tuner	Active Test	Statistical antenna diagnosis
911(997)	Unit Support	ECU Information	
911(997)	Unit Support	Read Codes	
911(997)	Unit Support	Clear Codes	
911(997)	Unit Support	Live Data	
911(997)	Unit Support	Active Test	Activation of left bearing
911(997)	Unit Support	Active Test	Current setpoint - right bearing
911(997)	Unit Support	Active Test	Reset
911(997)	Unit Support	Special Functions	Customer-specific settings
911(997)	Unit Support	Programming	Customer-specific settings
911(997)	VEH.ELECTRICAL SYS.	ECU Information	
911(997)	VEH.ELECTRICAL SYS.	Read Codes	
911(997)	VEH.ELECTRICAL SYS.	Clear Codes	
911(997)	VEH.ELECTRICAL SYS.	Live Data	
911(997)	VEH.ELECTRICAL SYS.	Active Test	Garage door opener LED
911(997)	VEH.ELECTRICAL SYS.	Active Test	Headlight cleaning system
911(997)	VEH.ELECTRICAL SYS.	Active Test	Interior light
911(997)	VEH.ELECTRICAL SYS.	Active Test	Left seat heater
911(997)	VEH.ELECTRICAL SYS.	Active Test	Lock filler flap
911(997)	VEH.ELECTRICAL SYS.	Active Test	Orientation light
911(997)	VEH.ELECTRICAL SYS.	Active Test	Rear spoiler function light
911(997)	VEH.ELECTRICAL SYS.	Active Test	Rear window heater
911(997)	VEH.ELECTRICAL SYS.	Active Test	Reset garage door opener buttons
911(997)	VEH.ELECTRICAL SYS.	Active Test	Reset
911(997)	VEH.ELECTRICAL SYS.	Active Test	Right seat heater
911(997)	VEH.ELECTRICAL SYS.	Active Test	Sport-function light
911(997)	VEH.ELECTRICAL SYS.	Active Test	Switch off terminal 30G
911(997)	VEH.ELECTRICAL SYS.	Active Test	Teach universal receiver
911(997)	VEH.ELECTRICAL SYS.	Active Test	Unlock filler flap
911(997)	VEH.ELECTRICAL SYS.	Active Test	Voltage for rain sensor
911(997)	VEH.ELECTRICAL SYS.	Active Test	Washing system pump
911(997)	VEH.ELECTRICAL SYS.	Active Test	Wiper brake
911(997)	VEH.ELECTRICAL SYS.	Active Test	Wiper motor stage 1
911(997)	VEH.ELECTRICAL SYS.	Active Test	Wiper motor stage 2
911(997)	VEH.ELECTRICAL SYS.	Special Functions	Control unit replacement
911(997)	VEH.ELECTRICAL SYS.	Special Functions	Customer-specific settings
911(997)	VEH.ELECTRICAL SYS.	Programming	Customer-specific settings
Boxster(987)	Air Conditioning	ECU Information	
Boxster(987)	Air Conditioning	Read Codes	
Boxster(987)	Air Conditioning	Clear Codes	
Boxster(987)	Air Conditioning	Live Data	
Boxster(987)	Air Conditioning	Active Test	Central flap
Boxster(987)	Air Conditioning	Active Test	Footwell/defroster flap
Boxster(987)	Air Conditioning	Active Test	Fresh air fan
Boxster(987)	Air Conditioning	Active Test	Ram air/recirc. air flap
Boxster(987)	Air Conditioning	Active Test	Reset
Boxster(987)	Air Conditioning	Active Test	Seat heating/set ventilation
Boxster(987)	Air Conditioning	Active Test	Temperature mixing flap
Boxster(987)	Air Conditioning	Special Functions	Control unit replacement
Boxster(987)	Air Conditioning	Special Functions	System check
Boxster(987)	Air Conditioning	Hot Functions(HOT)	Tire Pressure Monitoring System
Boxster(987)	AWS	ECU Information	

Boxster(987)	AWS	Read Codes	
Boxster(987)	AWS	Clear Codes	
Boxster(987)	AWS	Live Data	
Boxster(987)	AWS	Active Test	Reset
Boxster(987)	AWS	Special Functions	Customer-specific settings
Boxster(987)	AWS	Programming	Customer-specific settings
Boxster(987)	BOSE amplifier,external	ECU Information	
Boxster(987)	BOSE amplifier,external	Read Codes	
Boxster(987)	BOSE amplifier,external	Clear Codes	
Boxster(987)	BOSE amplifier,external	Live Data	
Boxster(987)	CD autochanger	ECU Information	
Boxster(987)	CD autochanger	Read Codes	
Boxster(987)	CD autochanger	Clear Codes	
Boxster(987)	Chronometer	ECU Information	
Boxster(987)	Chronometer	Read Codes	
Boxster(987)	Chronometer	Clear Codes	
Boxster(987)	Chronometer	Live Data	
Boxster(987)	Chronometer	Active Test	Reset
Boxster(987)	Chronometer	Special Functions	Control unit replacement
Boxster(987)	Cornering Light	ECU Information	
Boxster(987)	Cornering Light	Read Codes	
Boxster(987)	Cornering Light	Clear Codes	
Boxster(987)	Cornering Light	Live Data	
Boxster(987)	Cornering Light	Active Test	Automatic movement sequence
Boxster(987)	Cornering Light	Active Test	HBA 3° downwards
Boxster(987)	Cornering Light	Active Test	HBA 3° upwards
Boxster(987)	Cornering Light	Active Test	Pivot Cornering Light to left
Boxster(987)	Cornering Light	Active Test	Pivot Cornering Light to right
Boxster(987)	Cornering Light	Active Test	Pivot with steer. wheel while stationary
Boxster(987)	Cornering Light	Active Test	Reset
Boxster(987)	Cornering Light	Special Functions	Calibration
Boxster(987)	Cornering Light	Special Functions	Customer-specific settings
Boxster(987)	Cornering Light	Programming	Customer-specific settings
Boxster(987)	DME	ECU Information	
Boxster(987)	DME	Read Codes	
Boxster(987)	DME	Clear Codes	
Boxster(987)	DME	Live Data	
Boxster(987)	DME	Active Test	Bank 1 intake camshaft
Boxster(987)	DME	Active Test	Bank 2 intake camshaft
Boxster(987)	DME	Active Test	Coolant run-on pump
Boxster(987)	DME	Active Test	Drive link active
Boxster(987)	DME	Active Test	Drive links
Boxster(987)	DME	Active Test	Engine purge fan level 1
Boxster(987)	DME	Active Test	Engine purge fan level 2
Boxster(987)	DME	Active Test	Exhaust flap (if fitted)
Boxster(987)	DME	Active Test	Fuel evaporative valve
Boxster(987)	DME	Active Test	Fuel pump 1
Boxster(987)	DME	Active Test	Fuel tank leak diagnosis pump
Boxster(987)	DME	Active Test	Fuel tank leak diagnosis valve
Boxster(987)	DME	Active Test	Intake pipe switch-over valve
Boxster(987)	DME	Active Test	Quantity control valve
Boxster(987)	DME	Active Test	Valve lift adjustment, bank 1
Boxster(987)	DME	Active Test	Valve lift adjustment, bank 2
Boxster(987)	DME	Special Functions	Customer-specific settings
Boxster(987)	DME	Special Functions	Engine data
Boxster(987)	DME	Special Functions	Ready status
Boxster(987)	DME	Special Functions	Short test
Boxster(987)	DME	Special Functions	Special functions
Boxster(987)	DME	Special Functions	System adaption
Boxster(987)	DME	Special Functions	System check
Boxster(987)	DME	Special Functions	Vehicle data
Boxster(987)	DME	Programming	Customer-specific settings
Boxster(987)	Driver's Door	ECU Information	
Boxster(987)	Driver's Door	Read Codes	
Boxster(987)	Driver's Door	Clear Codes	
Boxster(987)	Driver's Door	Live Data	
Boxster(987)	Driver's Door	Active Test	Close power window
Boxster(987)	Driver's Door	Active Test	Door guard/exit lighting
Boxster(987)	Driver's Door	Active Test	Door opening drive's side
Boxster(987)	Driver's Door	Active Test	Horizontal mirror adjustment -
Boxster(987)	Driver's Door	Active Test	Horizontal mirror adjustment +
Boxster(987)	Driver's Door	Active Test	Lock central locking
Boxster(987)	Driver's Door	Active Test	Mirror heating
Boxster(987)	Driver's Door	Active Test	Open power window
Boxster(987)	Driver's Door	Active Test	Reset
Boxster(987)	Driver's Door	Active Test	Save central locking
Boxster(987)	Driver's Door	Active Test	Unlock central locking
Boxster(987)	Driver's Door	Active Test	Vertical mirror adjustment -
Boxster(987)	Driver's Door	Active Test	Vertical mirror adjustment +
Boxster(987)	Driver's Door	Special Functions	Control unit replacement
Boxster(987)	Driver's Door	Special Functions	Customer-specific settings
Boxster(987)	Driver's Door	Programming	Customer-specific settings
Boxster(987)	Front	ECU Information	
Boxster(987)	Front	Read Codes	
Boxster(987)	Front	Clear Codes	
Boxster(987)	Front	Live Data	
Boxster(987)	Front	Active Test	Activation radiator fan
Boxster(987)	Front	Active Test	Amb. temp. sensor, power supply
Boxster(987)	Front	Active Test	FL dir. Indic. Light/side marker

Boxster(987)	Front	Active Test	Fog light/daytime driving light, left
Boxster(987)	Front	Active Test	Fog light/daytime driving light, right
Boxster(987)	Front	Active Test	FR dir. Indic. Light/side marker
Boxster(987)	Front	Active Test	High beam, left
Boxster(987)	Front	Active Test	High beam, right
Boxster(987)	Front	Active Test	Ind. Light haz. w. lights button
Boxster(987)	Front	Active Test	LED direction indic., Front left
Boxster(987)	Front	Active Test	LED direction indic., Front right
Boxster(987)	Front	Active Test	Left dipped beam(driving light)
Boxster(987)	Front	Active Test	left dir. In. light (Front/Rear)
Boxster(987)	Front	Active Test	Left rear indicator
Boxster(987)	Front	Active Test	Luggage compartment light, Front
Boxster(987)	Front	Active Test	Parking light (marker light), front left
Boxster(987)	Front	Active Test	Parking light (marker light), front right
Boxster(987)	Front	Active Test	Reset
Boxster(987)	Front	Active Test	Right dipped beam(driving light)
Boxster(987)	Front	Active Test	Right dir. In. light (Front/Rear)
Boxster(987)	Front	Active Test	Right rear indicator
Boxster(987)	Front	Active Test	Servo motor Front lid release
Boxster(987)	Front	Active Test	Two-tone horn, high pitch
Boxster(987)	Front	Active Test	Two-tone horn, low pitch
Boxster(987)	Front	Special Functions	Calibration
Boxster(987)	Front	Special Functions	Control unit replacement
Boxster(987)	Front	Special Functions	Customer-specific settings
Boxster(987)	Front	Programming	Customer-specific settings
Boxster(987)	Gateway	ECU Information	
Boxster(987)	Gateway	Read Codes	
Boxster(987)	Gateway	Clear Codes	
Boxster(987)	Gateway	Live Data	
Boxster(987)	Gateway	Active Test	Reset
Boxster(987)	Gateway	Special Functions	Basic coding
Boxster(987)	Gateway	Special Functions	Control unit replacement
Boxster(987)	Gateway	Special Functions	Single-wire test
Boxster(987)	Gateway	Special Functions	Sleep mode
Boxster(987)	Gateway	Special Functions	Vehicle variants
Boxster(987)	Gateway	Programming	Required control unit lists
Boxster(987)	Gateway	Programming	Vehicle variants
Boxster(987)	Instrument Cluster	ECU Information	
Boxster(987)	Instrument Cluster	Read Codes	
Boxster(987)	Instrument Cluster	Clear Codes	
Boxster(987)	Instrument Cluster	Live Data	
Boxster(987)	Instrument Cluster	Active Test	Adop. of CAN control unit tank corr.val.
Boxster(987)	Instrument Cluster	Active Test	Bulb test
Boxster(987)	Instrument Cluster	Active Test	Indicator test
Boxster(987)	Instrument Cluster	Active Test	Loudspeaker test
Boxster(987)	Instrument Cluster	Active Test	Reset on-board computer values
Boxster(987)	Instrument Cluster	Active Test	Reset
Boxster(987)	Instrument Cluster	Active Test	Tank content
Boxster(987)	Instrument Cluster	Active Test	Transf. of corr.val. to el.sys. c. unit
Boxster(987)	Instrument Cluster	Special Functions	Control unit replacement
Boxster(987)	Instrument Cluster	Special Functions	General function routines
Boxster(987)	Instrument Cluster	Special Functions	Special functions
Boxster(987)	Navigation	ECU Information	
Boxster(987)	Navigation	Read Codes	
Boxster(987)	Navigation	Clear Codes	
Boxster(987)	Navigation	Live Data	
Boxster(987)	Navigation	Active Test	DVD drive information
Boxster(987)	Navigation	Active Test	Factory settings
Boxster(987)	Navigation	Active Test	GPS status
Boxster(987)	Navigation	Active Test	Gyroscope (rate-of-turn sensor)
Boxster(987)	Navigation	Active Test	Read sector data
Boxster(987)	Navigation	Active Test	Reverse gear
Boxster(987)	Navigation	Active Test	Wheel pulse counter
Boxster(987)	Park Assistant	ECU Information	
Boxster(987)	Park Assistant	Read Codes	
Boxster(987)	Park Assistant	Clear Codes	
Boxster(987)	Park Assistant	Live Data	
Boxster(987)	Park Assistant	Active Test	Loudspeaker activation
Boxster(987)	Park Assistant	Active Test	Reset
Boxster(987)	Park Assistant	Active Test	Virtual reverse gear
Boxster(987)	Park Assistant	Special Functions	Control unit replacement
Boxster(987)	Park Assistant	Special Functions	Customer-specific settings
Boxster(987)	Park Assistant	Programming	Customer-specific settings
Boxster(987)	PAS	ECU Information	
Boxster(987)	PAS	Read Codes	
Boxster(987)	PAS	Clear Codes	
Boxster(987)	PAS	Live Data	
Boxster(987)	PAS	Special Functions	Basic coding
Boxster(987)	PAS	Special Functions	Control unit replacement
Boxster(987)	PAS	Special Functions	Teaching functions
Boxster(987)	PAS	Programming	Basic coding
Boxster(987)	PAS	Programming	Central locking system
Boxster(987)	PAS	Programming	Comfort functions
Boxster(987)	PAS	Programming	Key settings(key 1)
Boxster(987)	PAS	Programming	Key settings(key 2)
Boxster(987)	PAS	Programming	Key settings(key 3)
Boxster(987)	PAS	Programming	Key settings(key 4)
Boxster(987)	PASM	ECU Information	
Boxster(987)	PASM	Read Codes	

Boxster(987)	PASM	Clear Codes	
Boxster(987)	PASM	Live Data	
Boxster(987)	PASM	Active Test	Reset
Boxster(987)	PASM	Active Test	Self-test
Boxster(987)	PASM	Special Functions	Control unit replacement
Boxster(987)	Passenger's Door	ECU Information	
Boxster(987)	Passenger's Door	Read Codes	
Boxster(987)	Passenger's Door	Clear Codes	
Boxster(987)	Passenger's Door	Live Data	
Boxster(987)	Passenger's Door	Active Test	Close power window
Boxster(987)	Passenger's Door	Active Test	Door guard/exit lighting
Boxster(987)	Passenger's Door	Active Test	Door opening passenger's side
Boxster(987)	Passenger's Door	Active Test	Open power window
Boxster(987)	Passenger's Door	Active Test	Power window button lighting
Boxster(987)	Passenger's Door	Active Test	Reset
Boxster(987)	Passenger's Door	Special Functions	Control unit replacement
Boxster(987)	Passenger's Door	Special Functions	Customer-specific settings
Boxster(987)	Passenger's Door	Programming	Customer-specific settings
Boxster(987)	PCM	ECU Information	
Boxster(987)	PCM	Read Codes	
Boxster(987)	PCM	Clear Codes	
Boxster(987)	PCM	Live Data	
Boxster(987)	PCM	Active Test	CD/DVD Eject
Boxster(987)	PCM	Active Test	Developer menu
Boxster(987)	PCM	Active Test	Display test
Boxster(987)	PCM	Active Test	Power supply
Boxster(987)	PCM	Active Test	Reset
Boxster(987)	PCM	Active Test	Set default values (factory settings)
Boxster(987)	PCM	Active Test	Teaching handset...
Boxster(987)	PCM2_MMI	ECU Information	
Boxster(987)	PCM2_MMI	Read Codes	
Boxster(987)	PCM2_MMI	Clear Codes	
Boxster(987)	PCM2_MMI	Live Data	
Boxster(987)	PCM2_MMI	Active Test	Erase personal details
Boxster(987)	PCM2_MMI	Active Test	Set software list
Boxster(987)	PCM2_MMI	Active Test	Test pattern in center display
Boxster(987)	PDK Selector Lever	ECU Information	
Boxster(987)	PDK Selector Lever	Read Codes	
Boxster(987)	PDK Selector Lever	Clear Codes	
Boxster(987)	PDK Selector Lever	Active Test	Reset
Boxster(987)	PDK Selector Lever	Special Functions	Function test, sensors
Boxster(987)	PDK(Tiptronic)	ECU Information	
Boxster(987)	PDK(Tiptronic)	Read Codes	
Boxster(987)	PDK(Tiptronic)	Clear Codes	
Boxster(987)	PDK(Tiptronic)	Live Data	
Boxster(987)	PDK(Tiptronic)	Active Test	Erase adaptation values
Boxster(987)	PDK(Tiptronic)	Active Test	Reset
Boxster(987)	PDK(Tiptronic)	Active Test	Torque converter clutch
Boxster(987)	PDK(Tiptronic)	Active Test	Valve test
Boxster(987)	PDK(Tiptronic)	Special Functions	Backup measures
Boxster(987)	PDK(Tiptronic)	Special Functions	Control unit replacement
Boxster(987)	PDK(Tiptronic)	Special Functions	Customer-specific settings
Boxster(987)	PDK(Tiptronic)	Special Functions	Fluid fill mode
Boxster(987)	PDK(Tiptronic)	Programming	Customer-specific settings
Boxster(987)	POSIP	ECU Information	
Boxster(987)	POSIP	Read Codes	
Boxster(987)	POSIP	Clear Codes	
Boxster(987)	POSIP	Live Data	
Boxster(987)	POSIP	Active Test	Airbag Off indicator light
Boxster(987)	POSIP	Active Test	Airbag sys. error to ins. cluster
Boxster(987)	POSIP	Active Test	Airbag warning light
Boxster(987)	POSIP	Active Test	AWS sys. error to instr. cluster
Boxster(987)	POSIP	Active Test	Crash signal to CAN
Boxster(987)	POSIP	Active Test	Crash signal
Boxster(987)	POSIP	Active Test	Reset
Boxster(987)	POSIP	Active Test	Sys. err. roll-over bar ins. cl.
Boxster(987)	POSIP	Special Functions	Control unit replacement
Boxster(987)	POSIP	Special Functions	Customer-specific settings
Boxster(987)	POSIP	Programming	Customer-specific settings
Boxster(987)	PSM	ECU Information	
Boxster(987)	PSM	Read Codes	
Boxster(987)	PSM	Clear Codes	
Boxster(987)	PSM	Live Data	
Boxster(987)	PSM	Active Test	Pump motor activation
Boxster(987)	PSM	Active Test	Warning light
Boxster(987)	PSM	Special Functions	Bleed
Boxster(987)	PSM	Special Functions	Calibration
Boxster(987)	PSM	Special Functions	Control unit replacement
Boxster(987)	PSM	Special Functions	Customer-specific settings
Boxster(987)	PSM	Special Functions	Inspections/tests
Boxster(987)	PSM	Special Functions	Static test
Boxster(987)	PSM	Programming	Customer-specific settings
Boxster(987)	Rear	ECU Information	
Boxster(987)	Rear	Read Codes	
Boxster(987)	Rear	Clear Codes	
Boxster(987)	Rear	Live Data	
Boxster(987)	Rear	Active Test	Activate compressor
Boxster(987)	Rear	Active Test	Anti-theft system horn
Boxster(987)	Rear	Active Test	Brake lights

Boxster(987)	Rear	Active Test	Convertible top closing
Boxster(987)	Rear	Active Test	Convertible top opening
Boxster(987)	Rear	Active Test	Extend spoiler
Boxster(987)	Rear	Active Test	Information terminal 30 on
Boxster(987)	Rear	Active Test	Interior monitoring
Boxster(987)	Rear	Active Test	LED anti-theft syst. Funct. Light
Boxster(987)	Rear	Active Test	Left tail light
Boxster(987)	Rear	Active Test	Lower vehicle
Boxster(987)	Rear	Active Test	Number plate light
Boxster(987)	Rear	Active Test	Raise vehicle
Boxster(987)	Rear	Active Test	Rear fog light
Boxster(987)	Rear	Active Test	Rear lid release
Boxster(987)	Rear	Active Test	Rear luggage compartment light
Boxster(987)	Rear	Active Test	Reset
Boxster(987)	Rear	Active Test	Retract spoiler
Boxster(987)	Rear	Active Test	Reversing light
Boxster(987)	Rear	Active Test	Right tail light
Boxster(987)	Rear	Active Test	Siren
Boxster(987)	Rear	Active Test	Transport mode
Boxster(987)	Rear	Special Functions	Activation state memory
Boxster(987)	Rear	Special Functions	Control unit replacement
Boxster(987)	Rear	Special Functions	Customer-specific settings
Boxster(987)	Rear	Special Functions	Interior monitoring
Boxster(987)	Rear	Programming	Customer-specific settings
Boxster(987)	Seat Memory	ECU Information	
Boxster(987)	Seat Memory	Read Codes	
Boxster(987)	Seat Memory	Clear Codes	
Boxster(987)	Seat Memory	Live Data	
Boxster(987)	Seat Memory	Active Test	Approach to stored val. Person 1
Boxster(987)	Seat Memory	Active Test	Approach to stored val. Person 2
Boxster(987)	Seat Memory	Active Test	Approach to stored values key 1
Boxster(987)	Seat Memory	Active Test	Approach to stored values key 2
Boxster(987)	Seat Memory	Active Test	Approach to stored values key 3
Boxster(987)	Seat Memory	Active Test	Approach to stored values key 4
Boxster(987)	Seat Memory	Active Test	Approach to stored values key 5
Boxster(987)	Seat Memory	Active Test	Approach to stored values key 6
Boxster(987)	Seat Memory	Active Test	Backrest backward
Boxster(987)	Seat Memory	Active Test	Backrest forward
Boxster(987)	Seat Memory	Active Test	Fore/aft adjustment forward
Boxster(987)	Seat Memory	Active Test	Front height downward
Boxster(987)	Seat Memory	Active Test	Front height upward
Boxster(987)	Seat Memory	Active Test	Longitudinal adjustment Rearward
Boxster(987)	Seat Memory	Active Test	Pressurize lower lumbar
Boxster(987)	Seat Memory	Active Test	Pressurize upper lumbar
Boxster(987)	Seat Memory	Active Test	Rear height downward
Boxster(987)	Seat Memory	Active Test	Rear height upward
Boxster(987)	Seat Memory	Active Test	Reset
Boxster(987)	Seat Memory	Active Test	Save values for key 1
Boxster(987)	Seat Memory	Active Test	Save values for key 2
Boxster(987)	Seat Memory	Active Test	Save values for key 3
Boxster(987)	Seat Memory	Active Test	Save values for key 4
Boxster(987)	Seat Memory	Active Test	Save values for key 5
Boxster(987)	Seat Memory	Active Test	Save values for key 6
Boxster(987)	Seat Memory	Active Test	Save values for person 1
Boxster(987)	Seat Memory	Active Test	Save values for person 2
Boxster(987)	Seat Memory	Active Test	Ventilate lower lumbar
Boxster(987)	Seat Memory	Active Test	Ventilate upper lumbar
Boxster(987)	Seat Memory	Special Functions	Control unit replacement
Boxster(987)	Seat Memory	Special Functions	Customer-specific settings
Boxster(987)	Seat Memory	Programming	Customer-specific settings
Boxster(987)	Steering Col. Switch	ECU Information	
Boxster(987)	Steering Col. Switch	Read Codes	
Boxster(987)	Steering Col. Switch	Clear Codes	
Boxster(987)	Steering Col. Switch	Live Data	
Boxster(987)	Steering Col. Switch	Active Test	Audio activation louder
Boxster(987)	Steering Col. Switch	Active Test	Audio activation mute
Boxster(987)	Steering Col. Switch	Active Test	Audio activation quieter
Boxster(987)	Steering Col. Switch	Active Test	Reset
Boxster(987)	Steering Col. Switch	Active Test	Steering wheel heating on
Boxster(987)	Steering Col. Switch	Active Test	Steering wheel lighting
Boxster(987)	Steering Col. Switch	Special Functions	Control unit replacement
Boxster(987)	Steering Col. Switch	Special Functions	Customer-specific settings
Boxster(987)	Steering Col. Switch	Programming	Customer-specific settings
Boxster(987)	Telephone	ECU Information	
Boxster(987)	Telephone	Read Codes	
Boxster(987)	Telephone	Clear Codes	
Boxster(987)	Telephone	Live Data	
Boxster(987)	TPM	ECU Information	
Boxster(987)	TPM	Read Codes	
Boxster(987)	TPM	Clear Codes	
Boxster(987)	TPM	Live Data	
Boxster(987)	TPM	Special Functions	Control unit replacement
Boxster(987)	TPM	Special Functions	Customer-specific settings
Boxster(987)	TPM	Special Functions	Last identification received
Boxster(987)	TPM	Special Functions	System adaption
Boxster(987)	TPM	Special Functions	System status
Boxster(987)	TPM	Hot Functions(HOT)	Oil Reset
Boxster(987)	TPM	Hot Functions(HOT)	Reset with tool
Boxster(987)	TPM	Programming	Customer-specific settings

Boxster(987)	TV tuner	ECU Information	
Boxster(987)	TV tuner	Read Codes	
Boxster(987)	TV tuner	Clear Codes	
Boxster(987)	TV tuner	Live Data	
Boxster(987)	TV tuner	Active Test	Driving test: level measurement with frequency input
Boxster(987)	TV tuner	Active Test	Driving test: level measurement with level/country input
Boxster(987)	TV tuner	Active Test	Level measurement with channel/country entry
Boxster(987)	TV tuner	Active Test	Level measurement with curr. TV setting
Boxster(987)	TV tuner	Active Test	Level measurement with frequency entry
Boxster(987)	TV tuner	Active Test	Reset
Boxster(987)	TV tuner	Active Test	Statistical antenna diagnosis
Boxster(987)	VEH.ELECTRICAL SYS.	ECU Information	
Boxster(987)	VEH.ELECTRICAL SYS.	Read Codes	
Boxster(987)	VEH.ELECTRICAL SYS.	Clear Codes	
Boxster(987)	VEH.ELECTRICAL SYS.	Live Data	
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Garage door opener LED
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Headlight cleaning system
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Interior light
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Left seat heater
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Lock filler flap
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Orientation light
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Rear spoiler function light
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Rear window heater
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Reset garage door opener buttons
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Reset
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Right seat heater
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Sport-function light
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Switch off terminal 30G
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Teach universal receiver
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Unlock filler flap
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Voltage for rain sensor
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Washing system pump
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Wiper brake
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Wiper motor stage 1
Boxster(987)	VEH.ELECTRICAL SYS.	Active Test	Wiper motor stage 2
Boxster(987)	VEH.ELECTRICAL SYS.	Special Functions	Control unit replacement
Boxster(987)	VEH.ELECTRICAL SYS.	Special Functions	Customer-specific settings
Boxster(987)	VEH.ELECTRICAL SYS.	Programming	Customer-specific settings
Boxster/Cayman(981)	Adaptive cruise control(ACC)	ECU Information	
Boxster/Cayman(981)	Adaptive cruise control(ACC)	Read Codes	
Boxster/Cayman(981)	Adaptive cruise control(ACC)	Clear Codes	
Boxster/Cayman(981)	Adaptive cruise control(ACC)	Live Data	
Boxster/Cayman(981)	Adaptive cruise control(ACC)	Active Test	Control unit reset
Boxster/Cayman(981)	Adaptive cruise control(ACC)	Active Test	Lens heater
Boxster/Cayman(981)	Adaptive cruise control(ACC)	Special Functions	Adjust adaptive cruise control
Boxster/Cayman(981)	Additional instrument-clock	ECU Information	
Boxster/Cayman(981)	Additional instrument-clock	Read Codes	
Boxster/Cayman(981)	Additional instrument-clock	Clear Codes	
Boxster/Cayman(981)	Additional instrument-clock	Live Data	
Boxster/Cayman(981)	Additional instrument-clock	Active Test	Control unit reset
Boxster/Cayman(981)	Additional instrument-clock	Active Test	Lighting
Boxster/Cayman(981)	Additional instrument-clock	Active Test	Pointer
Boxster/Cayman(981)	Additional instrument-clock	Active Test	Segment displays
Boxster/Cayman(981)	Additional instrument-clock	Active Test	Self-test
Boxster/Cayman(981)	Air conditioning	ECU Information	
Boxster/Cayman(981)	Air conditioning	Read Codes	
Boxster/Cayman(981)	Air conditioning	Clear Codes	
Boxster/Cayman(981)	Air conditioning	Live Data	
Boxster/Cayman(981)	Air conditioning	Active Test	Compressor break - in reset
Boxster/Cayman(981)	Air conditioning	Active Test	Cooling performance function test
Boxster/Cayman(981)	Air conditioning	Active Test	Display test
Boxster/Cayman(981)	Air conditioning	Active Test	Function enable
Boxster/Cayman(981)	Air conditioning	Active Test	LED All
Boxster/Cayman(981)	Air conditioning	Active Test	Left seat heater
Boxster/Cayman(981)	Air conditioning	Active Test	LIN control motors verification run
Boxster/Cayman(981)	Air conditioning	Active Test	Mixed air flap
Boxster/Cayman(981)	Air conditioning	Active Test	Rear window heater
Boxster/Cayman(981)	Air conditioning	Active Test	Right seat heater
Boxster/Cayman(981)	Air conditioning	Active Test	Seat ventilation, left
Boxster/Cayman(981)	Air conditioning	Active Test	Seat ventilation, right
Boxster/Cayman(981)	Air conditioning	Special Functions	Compressor run-in
Boxster/Cayman(981)	Air conditioning	Special Functions	Servo motor teaching
Boxster/Cayman(981)	Airbag	ECU Information	
Boxster/Cayman(981)	Airbag	Read Codes	
Boxster/Cayman(981)	Airbag	Clear Codes	
Boxster/Cayman(981)	Airbag	Live Data	
Boxster/Cayman(981)	Airbag	Active Test	Airbag warning light
Boxster/Cayman(981)	Airbag	Active Test	Passenger Airbag Off light
Boxster/Cayman(981)	Airbag	Active Test	Reset passenger occupant detection teaching values
Boxster/Cayman(981)	Airbag	Active Test	Re-teach passenger occupant detection
Boxster/Cayman(981)	Airbag	Special Functions	Occupant detection, replacement/commissioning
Boxster/Cayman(981)	Airbag	Hot Functions(HOT)	Oil Reset
Boxster/Cayman(981)	Airbag	Hot Functions(HOT)	Reset with tool
Boxster/Cayman(981)	Convertible top	ECU Information	
Boxster/Cayman(981)	Convertible top	Read Codes	
Boxster/Cayman(981)	Convertible top	Clear Codes	
Boxster/Cayman(981)	Convertible top	Live Data	
Boxster/Cayman(981)	Convertible top	Active Test	Calibration
Boxster/Cayman(981)	Convertible top	Active Test	Control unit reset

Boxster/Cayman(981)	Convertible top	Active Test	Delete calibration
Boxster/Cayman(981)	DME	ECU Information	
Boxster/Cayman(981)	DME	Read Codes	
Boxster/Cayman(981)	DME	Clear Codes	
Boxster/Cayman(981)	DME	Live Data	
Boxster/Cayman(981)	DME	Active Test	Acoustic simulator
Boxster/Cayman(981)	DME	Active Test	Air cleaner flap (3.4-l + 3.8-l)
Boxster/Cayman(981)	DME	Active Test	Block function until ignition off
Boxster/Cayman(981)	DME	Active Test	Boost pressure adjuster (Turbo) - observe HELP
Boxster/Cayman(981)	DME	Active Test	Camshaft adjustment, bank 1 - intake
Boxster/Cayman(981)	DME	Active Test	Camshaft adjustment, bank 2 - intake
Boxster/Cayman(981)	DME	Active Test	Coolant run-on pump (turbo)
Boxster/Cayman(981)	DME	Active Test	Coolant switch-over valve for heating
Boxster/Cayman(981)	DME	Active Test	Coolant switch-over valve, clutch oil (PDK)
Boxster/Cayman(981)	DME	Active Test	Coolant switch-over valve, transmission oil
Boxster/Cayman(981)	DME	Active Test	Diverter valve (Turbo)
Boxster/Cayman(981)	DME	Active Test	Electric fuel pump
Boxster/Cayman(981)	DME	Active Test	Empty the tank
Boxster/Cayman(981)	DME	Active Test	Engine compartment purge fan level 1 (low)
Boxster/Cayman(981)	DME	Active Test	Engine compartment purge fan level 2 (high)
Boxster/Cayman(981)	DME	Active Test	Engine coolant switchover valve
Boxster/Cayman(981)	DME	Active Test	Exhaust flaps (3.8-l or sports exhaust system)
Boxster/Cayman(981)	DME	Active Test	Intake manifold switchover (with power kit X51)
Boxster/Cayman(981)	DME	Active Test	Intake manifold switchover 2 (tuning flap for power kit X51)
Boxster/Cayman(981)	DME	Active Test	Intake-pipe switchover (tuning flap on 991S + 981S)
Boxster/Cayman(981)	DME	Active Test	Quantity control valve (high-pressure pump)
Boxster/Cayman(981)	DME	Active Test	Radiator fan 1 (right)
Boxster/Cayman(981)	DME	Active Test	Radiator fan 2 (left)
Boxster/Cayman(981)	DME	Active Test	Request restart - observe HELP
Boxster/Cayman(981)	DME	Active Test	Request stop
Boxster/Cayman(981)	DME	Active Test	Tank vent valve
Boxster/Cayman(981)	DME	Active Test	Thermostat activation
Boxster/Cayman(981)	DME	Active Test	Valve lift control, bank 1
Boxster/Cayman(981)	DME	Active Test	Valve lift control, bank 2
Boxster/Cayman(981)	DME	Special Functions	Adaptations
Boxster/Cayman(981)	DME	Special Functions	Delete adaptation data
Boxster/Cayman(981)	DME	Special Functions	First start
Boxster/Cayman(981)	DME	Special Functions	Ready status
Boxster/Cayman(981)	DME	Special Functions	Short tests
Boxster/Cayman(981)	DME	Special Functions	System tests
Boxster/Cayman(981)	Driver's Door	ECU Information	
Boxster/Cayman(981)	Driver's Door	Read Codes	
Boxster/Cayman(981)	Driver's Door	Clear Codes	
Boxster/Cayman(981)	Driver's Door	Live Data	
Boxster/Cayman(981)	Driver's Door	Active Test	Activation of all central locking motors
Boxster/Cayman(981)	Driver's Door	Active Test	Exterior mirror heating
Boxster/Cayman(981)	Driver's Door	Active Test	Fold-in door mirrors
Boxster/Cayman(981)	Driver's Door	Active Test	Lights in the door
Boxster/Cayman(981)	Driver's Door	Active Test	Lower power windows
Boxster/Cayman(981)	Driver's Door	Active Test	Mirror adjustment
Boxster/Cayman(981)	Driver's Door	Active Test	Move power windows up
Boxster/Cayman(981)	Driver's Door	Active Test	Unfold door mirrors
Boxster/Cayman(981)	Driver's Door	Special Functions	Standardizing power windows
Boxster/Cayman(981)	Driver-side seat memory	ECU Information	
Boxster/Cayman(981)	Driver-side seat memory	Read Codes	
Boxster/Cayman(981)	Driver-side seat memory	Clear Codes	
Boxster/Cayman(981)	Driver-side seat memory	Live Data	
Boxster/Cayman(981)	Driver-side seat memory	Active Test	Backrest angle adjustment
Boxster/Cayman(981)	Driver-side seat memory	Active Test	Backrest width, LBR
Boxster/Cayman(981)	Driver-side seat memory	Active Test	Lower lumbar blister, LBU
Boxster/Cayman(981)	Driver-side seat memory	Active Test	Seat angle adjustment (SNV)
Boxster/Cayman(981)	Driver-side seat memory	Active Test	Seat depth adjustment
Boxster/Cayman(981)	Driver-side seat memory	Active Test	Seat fore/aft adjustment
Boxster/Cayman(981)	Driver-side seat memory	Active Test	Seat height adjustment, SHV
Boxster/Cayman(981)	Driver-side seat memory	Active Test	Seat width, SBR
Boxster/Cayman(981)	Driver-side seat memory	Active Test	Upper lumbar blister, LBO
Boxster/Cayman(981)	Driver-side seat memory	Special Functions	Normalize seat motors
Boxster/Cayman(981)	External amplifier	ECU Information	
Boxster/Cayman(981)	External amplifier	Read Codes	
Boxster/Cayman(981)	External amplifier	Clear Codes	
Boxster/Cayman(981)	External amplifier	Live Data	
Boxster/Cayman(981)	External amplifier	Active Test	3dB reduction
Boxster/Cayman(981)	External amplifier	Active Test	Activate fan
Boxster/Cayman(981)	External amplifier	Active Test	Loudspeaker test (acoustic)
Boxster/Cayman(981)	External amplifier	Active Test	Self-test
Boxster/Cayman(981)	External amplifier	Active Test	Transport mode
Boxster/Cayman(981)	Front camera	ECU Information	
Boxster/Cayman(981)	Front camera	Read Codes	
Boxster/Cayman(981)	Front camera	Clear Codes	
Boxster/Cayman(981)	Front camera	Live Data	
Boxster/Cayman(981)	Front camera	Active Test	Activation of high beam
Boxster/Cayman(981)	Front camera	Active Test	Control unit reset
Boxster/Cayman(981)	Front camera	Active Test	Green display for the lane departure warning
Boxster/Cayman(981)	Front camera	Active Test	Lane departure warning
Boxster/Cayman(981)	Front camera	Active Test	Traffic-sign display
Boxster/Cayman(981)	Front camera	Active Test	Windshield heater
Boxster/Cayman(981)	Front camera	Active Test	Yellow display for the lane departure warning
Boxster/Cayman(981)	Front-end electronics	ECU Information	
Boxster/Cayman(981)	Front-end electronics	Read Codes	

Boxster/Cayman(981)	Front-end electronics	Clear Codes	
Boxster/Cayman(981)	Front-end electronics	Live Data	
Boxster/Cayman(981)	Front-end electronics	Active Test	Activation of dipped beam
Boxster/Cayman(981)	Front-end electronics	Active Test	Activation of steering column adjustment
Boxster/Cayman(981)	Front-end electronics	Active Test	Actuation of headlamp switchable covers (halogen)
Boxster/Cayman(981)	Front-end electronics	Active Test	Calibration, axle sensor for HBA (halogen headlight)
Boxster/Cayman(981)	Front-end electronics	Active Test	Engine-compartment light activation
Boxster/Cayman(981)	Front-end electronics	Active Test	Foot well light actuation
Boxster/Cayman(981)	Front-end electronics	Active Test	Front marker light actuation
Boxster/Cayman(981)	Front-end electronics	Active Test	Garage door opener - Delete all assigned buttons
Boxster/Cayman(981)	Front-end electronics	Active Test	Hazard warning lights button LED actuation
Boxster/Cayman(981)	Front-end electronics	Active Test	Headlight cleaning system pump actuation
Boxster/Cayman(981)	Front-end electronics	Active Test	Left direction indicator actuation in general
Boxster/Cayman(981)	Front-end electronics	Active Test	Main beam actuation
Boxster/Cayman(981)	Front-end electronics	Active Test	Right direction indicator actuation in general
Boxster/Cayman(981)	Front-end electronics	Active Test	Steering column adjustment normalizing run
Boxster/Cayman(981)	Front-end electronics	Active Test	Tank cap locking element activation
Boxster/Cayman(981)	Front-end electronics	Active Test	Teach-in process for garage door opener receiver
Boxster/Cayman(981)	Front-end electronics	Active Test	Two-tone horn actuation
Boxster/Cayman(981)	Front-end electronics	Active Test	Windshield washer-system pump actuation
Boxster/Cayman(981)	Front-end electronics	Active Test	Windshield wiper actuation
Boxster/Cayman(981)	Front-end electronics	Special Functions	Activation of key retaining solenoid
Boxster/Cayman(981)	Front-end electronics	Special Functions	Analysis of Kessy functions
Boxster/Cayman(981)	Front-end electronics	Special Functions	Wiping angle adaptation
Boxster/Cayman(981)	Gateway	ECU Information	
Boxster/Cayman(981)	Gateway	Read Codes	
Boxster/Cayman(981)	Gateway	Clear Codes	
Boxster/Cayman(981)	Gateway	Live Data	
Boxster/Cayman(981)	Gateway	Active Test	Control unit reset
Boxster/Cayman(981)	Gateway	Active Test	Generator setpoint voltage
Boxster/Cayman(981)	Gateway	Active Test	HLK stage specification
Boxster/Cayman(981)	Gateway	Active Test	Idle speed increase
Boxster/Cayman(981)	Gateway	Active Test	Relay terminal 30f actuation
Boxster/Cayman(981)	Gateway	Active Test	Relay terminal 30sd actuation
Boxster/Cayman(981)	Gateway	Active Test	Reset switch-off stage
Boxster/Cayman(981)	Gateway	Active Test	Switch terminal G1
Boxster/Cayman(981)	Gateway	Active Test	Switch terminal G2
Boxster/Cayman(981)	Gateway	Special Functions	Actual/specified configuration
Boxster/Cayman(981)	Gateway	Special Functions	Battery change
Boxster/Cayman(981)	headlight,right	ECU Information	
Boxster/Cayman(981)	headlight,right	Read Codes	
Boxster/Cayman(981)	headlight,right	Clear Codes	
Boxster/Cayman(981)	headlight,right	Live Data	
Boxster/Cayman(981)	headlight,right	Active Test	Light distribution, country road lighting
Boxster/Cayman(981)	headlight,right	Active Test	One-sided reference run
Boxster/Cayman(981)	headlight,right	Active Test	Self-test
Boxster/Cayman(981)	Instrument cluster	ECU Information	
Boxster/Cayman(981)	Instrument cluster	Read Codes	
Boxster/Cayman(981)	Instrument cluster	Clear Codes	
Boxster/Cayman(981)	Instrument cluster	Live Data	
Boxster/Cayman(981)	Instrument cluster	Active Test	Control unit reset
Boxster/Cayman(981)	Instrument cluster	Active Test	Light test
Boxster/Cayman(981)	Instrument cluster	Active Test	Loudspeaker test
Boxster/Cayman(981)	Instrument cluster	Active Test	Pointer test
Boxster/Cayman(981)	Instrument cluster	Active Test	Segment-display test
Boxster/Cayman(981)	Instrument cluster	Active Test	Self-test
Boxster/Cayman(981)	Instrument cluster	Active Test	TFT display test
Boxster/Cayman(981)	Instrument cluster	Special Functions	Display test images
Boxster/Cayman(981)	Instrument cluster	Special Functions	Reset maintenance interval
Boxster/Cayman(981)	Instrument cluster	Special Functions	Set total mileage
Boxster/Cayman(981)	Instrument cluster	Special Functions	Tank calibration
Boxster/Cayman(981)	Instrument cluster	Hot Functions(HOT)	Electric Parking Brake
Boxster/Cayman(981)	Lane Change Assistant	ECU Information	
Boxster/Cayman(981)	Lane Change Assistant	Read Codes	
Boxster/Cayman(981)	Lane Change Assistant	Clear Codes	
Boxster/Cayman(981)	Lane Change Assistant	Live Data	
Boxster/Cayman(981)	Lane Change Assistant	Active Test	Driver door mirror warning light
Boxster/Cayman(981)	Lane Change Assistant	Active Test	Front-passenger door mirror warning light
Boxster/Cayman(981)	Lane Change Assistant	Active Test	Hard Reset Ecu Reset
Boxster/Cayman(981)	Lane Change Assistant	Hot Functions(HOT)	Diesel Particle Filter
Boxster/Cayman(981)	Left headlight	ECU Information	
Boxster/Cayman(981)	Left headlight	Read Codes	
Boxster/Cayman(981)	Left headlight	Clear Codes	
Boxster/Cayman(981)	Left headlight	Live Data	
Boxster/Cayman(981)	Left headlight	Active Test	Light distribution, country road lighting
Boxster/Cayman(981)	Left headlight	Active Test	One-sided reference run
Boxster/Cayman(981)	Left headlight	Active Test	Self-test
Boxster/Cayman(981)	Park Assist	ECU Information	
Boxster/Cayman(981)	Park Assist	Read Codes	
Boxster/Cayman(981)	Park Assist	Clear Codes	
Boxster/Cayman(981)	Park Assist	Live Data	
Boxster/Cayman(981)	Park Assist	Active Test	Control unit reset
Boxster/Cayman(981)	Park Assist	Active Test	Indicator lamp on button for Park Assist
Boxster/Cayman(981)	Park Assist	Active Test	Park Assist buzzer, front
Boxster/Cayman(981)	Park Assist	Active Test	Rear Park Assist buzzer
Boxster/Cayman(981)	Park Assist	Active Test	System test (all sensors)
Boxster/Cayman(981)	Parking brake	ECU Information	
Boxster/Cayman(981)	Parking brake	Read Codes	
Boxster/Cayman(981)	Parking brake	Clear Codes	

Boxster/Cayman(981)	Parking brake	Live Data	
Boxster/Cayman(981)	Parking brake	Active Test	Clamp
Boxster/Cayman(981)	Parking brake	Active Test	Confirm actuator replacement
Boxster/Cayman(981)	Parking brake	Active Test	Light test
Boxster/Cayman(981)	Parking brake	Active Test	Move to installation position
Boxster/Cayman(981)	Parking brake	Active Test	Release
Boxster/Cayman(981)	Parking brake	Active Test	T6H7Z
Boxster/Cayman(981)	Parking brake	Special Functions	Calibration
Boxster/Cayman(981)	Parking brake	Special Functions	Check basic setting of parking-brake
Boxster/Cayman(981)	Parking brake	Special Functions	Grinding - in
Boxster/Cayman(981)	Parking brake	Special Functions	Replace brake pads (operating guide)
Boxster/Cayman(981)	Parking brake	Hot Functions(HOT)	Tire Pressure Monitoring System
Boxster/Cayman(981)	PASM	ECU Information	
Boxster/Cayman(981)	PASM	Read Codes	
Boxster/Cayman(981)	PASM	Clear Codes	
Boxster/Cayman(981)	PASM	Live Data	
Boxster/Cayman(981)	PASM	Active Test	Control unit reset
Boxster/Cayman(981)	PASM	Special Functions	Calibration
Boxster/Cayman(981)	PASM	Special Functions	Drive link test:damper valves
Boxster/Cayman(981)	Passenger's Door	ECU Information	
Boxster/Cayman(981)	Passenger's Door	Read Codes	
Boxster/Cayman(981)	Passenger's Door	Clear Codes	
Boxster/Cayman(981)	Passenger's Door	Live Data	
Boxster/Cayman(981)	Passenger's Door	Active Test	Activation of all central locking motors
Boxster/Cayman(981)	Passenger's Door	Active Test	Exterior mirror heating
Boxster/Cayman(981)	Passenger's Door	Active Test	Fold-in door mirrors
Boxster/Cayman(981)	Passenger's Door	Active Test	Lights in the door
Boxster/Cayman(981)	Passenger's Door	Active Test	Lower power windows
Boxster/Cayman(981)	Passenger's Door	Active Test	Mirror adjustment
Boxster/Cayman(981)	Passenger's Door	Active Test	Move power windows up
Boxster/Cayman(981)	Passenger's Door	Active Test	Unfold door mirrors
Boxster/Cayman(981)	Passenger's Door	Special Functions	Standardizing power windows
Boxster/Cayman(981)	Passenger-side seat memory	ECU Information	
Boxster/Cayman(981)	Passenger-side seat memory	Read Codes	
Boxster/Cayman(981)	Passenger-side seat memory	Clear Codes	
Boxster/Cayman(981)	Passenger-side seat memory	Live Data	
Boxster/Cayman(981)	Passenger-side seat memory	Active Test	Backrest angle adjustment
Boxster/Cayman(981)	Passenger-side seat memory	Active Test	Backrest width, LBR
Boxster/Cayman(981)	Passenger-side seat memory	Active Test	Lower lumbar blister, LBU
Boxster/Cayman(981)	Passenger-side seat memory	Active Test	Seat angle adjustment (SNV)
Boxster/Cayman(981)	Passenger-side seat memory	Active Test	Seat depth adjustment
Boxster/Cayman(981)	Passenger-side seat memory	Active Test	Seat fore/aft adjustment
Boxster/Cayman(981)	Passenger-side seat memory	Active Test	Seat height adjustment, SHV
Boxster/Cayman(981)	Passenger-side seat memory	Active Test	Seat width, SBR
Boxster/Cayman(981)	Passenger-side seat memory	Active Test	Upper lumbar blister, LBO
Boxster/Cayman(981)	Passenger-side seat memory	Special Functions	Normalize seat motors
Boxster/Cayman(981)	PCM/CDR	ECU Information	
Boxster/Cayman(981)	PCM/CDR	Read Codes	
Boxster/Cayman(981)	PCM/CDR	Clear Codes	
Boxster/Cayman(981)	PCM/CDR	Live Data	
Boxster/Cayman(981)	PCM/CDR	Active Test	3dB reduction
Boxster/Cayman(981)	PCM/CDR	Active Test	Activate fan
Boxster/Cayman(981)	PCM/CDR	Active Test	AM field strength
Boxster/Cayman(981)	PCM/CDR	Active Test	Bluetooth - Delete connected devices from the list
Boxster/Cayman(981)	PCM/CDR	Active Test	Bluetooth - Find devices
Boxster/Cayman(981)	PCM/CDR	Active Test	Bluetooth - paging
Boxster/Cayman(981)	PCM/CDR	Active Test	Button test
Boxster/Cayman(981)	PCM/CDR	Active Test	CD/DVD eject
Boxster/Cayman(981)	PCM/CDR	Active Test	Current FM field strength
Boxster/Cayman(981)	PCM/CDR	Active Test	Developer menu
Boxster/Cayman(981)	PCM/CDR	Active Test	Digital radio (DAB) - antenna voltage
Boxster/Cayman(981)	PCM/CDR	Active Test	Digital radio (DAB), current field strength
Boxster/Cayman(981)	PCM/CDR	Active Test	Display test 1
Boxster/Cayman(981)	PCM/CDR	Active Test	Display test
Boxster/Cayman(981)	PCM/CDR	Active Test	DVD drive, Eject
Boxster/Cayman(981)	PCM/CDR	Active Test	External media source (AUX IN/USB), diagnostic test
Boxster/Cayman(981)	PCM/CDR	Active Test	External media source (USB), diagnostic test
Boxster/Cayman(981)	PCM/CDR	Active Test	Factory setting
Boxster/Cayman(981)	PCM/CDR	Active Test	Loudspeaker test (acoustic)
Boxster/Cayman(981)	PCM/CDR	Active Test	Loudspeaker test (electrical)
Boxster/Cayman(981)	PCM/CDR	Active Test	Loudspeaker test
Boxster/Cayman(981)	PCM/CDR	Active Test	Ring break diagnosis
Boxster/Cayman(981)	PCM/CDR	Active Test	Satellite antenna, current power consumption
Boxster/Cayman(981)	PCM/CDR	Active Test	Teach handset
Boxster/Cayman(981)	PCM/CDR	Active Test	Teach-in telephone handset
Boxster/Cayman(981)	PCM/CDR	Active Test	Terminal 30 reset
Boxster/Cayman(981)	PCM/CDR	Active Test	Test tone
Boxster/Cayman(981)	PCM/CDR	Active Test	Transport mode
Boxster/Cayman(981)	PCM/CDR	Active Test	Tuner antenna, current power consumption
Boxster/Cayman(981)	PCM/CDR	Active Test	UMS
Boxster/Cayman(981)	PCM/CDR	Active Test	USB/AUX
Boxster/Cayman(981)	PCM/CDR	Special Functions	Confirmation of update
Boxster/Cayman(981)	PCM/CDR	Special Functions	Function enable
Boxster/Cayman(981)	PCM/CDR	Special Functions	Multimedia interface test
Boxster/Cayman(981)	Power steering	ECU Information	
Boxster/Cayman(981)	Power steering	Read Codes	
Boxster/Cayman(981)	Power steering	Clear Codes	
Boxster/Cayman(981)	Power steering	Live Data	
Boxster/Cayman(981)	Power steering	Active Test	Reset values for steering stops

Boxster/Cayman(981)	PSM	ECU Information	
Boxster/Cayman(981)	PSM	Read Codes	
Boxster/Cayman(981)	PSM	Clear Codes	
Boxster/Cayman(981)	PSM	Live Data	
Boxster/Cayman(981)	PSM	Active Test	Control unit reset
Boxster/Cayman(981)	PSM	Special Functions	Bleed the brakes
Boxster/Cayman(981)	PSM	Special Functions	Rolling test mode
Boxster/Cayman(981)	PSM	Special Functions	Sensor cluster compensation
Boxster/Cayman(981)	PSM	Special Functions	Speed sensor test
Boxster/Cayman(981)	PSM	Special Functions	Static test
Boxster/Cayman(981)	Rear-end electronics	ECU Information	
Boxster/Cayman(981)	Rear-end electronics	Read Codes	
Boxster/Cayman(981)	Rear-end electronics	Clear Codes	
Boxster/Cayman(981)	Rear-end electronics	Live Data	
Boxster/Cayman(981)	Rear-end electronics	Active Test	Activate rear-lid lock
Boxster/Cayman(981)	Rear-end electronics	Active Test	Activation of air deflector
Boxster/Cayman(981)	Rear-end electronics	Active Test	Activation of interior surveillance button LED
Boxster/Cayman(981)	Rear-end electronics	Active Test	Activation of orientation light LED
Boxster/Cayman(981)	Rear-end electronics	Active Test	Activation of rear spoiler
Boxster/Cayman(981)	Rear-end electronics	Active Test	Activation,sun blind(roof)
Boxster/Cayman(981)	Rear-end electronics	Active Test	Alarm horn actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Alarm siren actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Brake light actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Central locking LED actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Closing aid actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Convertible-top activation (981)
Boxster/Cayman(981)	Rear-end electronics	Active Test	Daytime driving lights actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Exhaust flaps actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Front interior lights/reading light actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Front-spoiler activation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Front-spoiler standardizing run
Boxster/Cayman(981)	Rear-end electronics	Active Test	LED garage door opener button actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Luggage compartment light actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Numer plate light actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	PVTS - Resetting wake-up counters
Boxster/Cayman(981)	Rear-end electronics	Active Test	Rear fog light actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Rear spoiler standardizing run
Boxster/Cayman(981)	Rear-end electronics	Active Test	Rear window heater actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Rear wiper actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Reversing lights actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Roof console interior light actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Sliding sunroof actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Sunblind (roof) normalizing run
Boxster/Cayman(981)	Rear-end electronics	Active Test	Tail lights actuation
Boxster/Cayman(981)	Rear-end electronics	Active Test	Teach roof console
Boxster/Cayman(981)	Rear-end electronics	Active Test	Trunk entrapment hook activation (NAR)
Boxster/Cayman(981)	Rear-end electronics	Active Test	Vanity mirror/glove box light activation
Boxster/Cayman(981)	Rear-end electronics	Special Functions	Porsche Vehicle Tracking System sequences
Boxster/Cayman(981)	Rear-end electronics	Special Functions	Sliding/lifting roof standardization
Boxster/Cayman(981)	Reversing camera	ECU Information	
Boxster/Cayman(981)	Reversing camera	Read Codes	
Boxster/Cayman(981)	Reversing camera	Clear Codes	
Boxster/Cayman(981)	Reversing camera	Live Data	
Boxster/Cayman(981)	Reversing camera	Active Test	Button function LED
Boxster/Cayman(981)	Reversing camera	Active Test	Control unit reset
Boxster/Cayman(981)	Selector lever	ECU Information	
Boxster/Cayman(981)	Selector lever	Read Codes	
Boxster/Cayman(981)	Selector lever	Clear Codes	
Boxster/Cayman(981)	Selector lever	Live Data	
Boxster/Cayman(981)	Selector lever	Active Test	Terminal 30 reset
Boxster/Cayman(981)	Selector lever	Active Test	Transport mode
Boxster/Cayman(981)	Selector lever	Hot Functions(HOT)	Steering Angle Sensor
Boxster/Cayman(981)	Steering wheel electronics	ECU Information	
Boxster/Cayman(981)	Steering wheel electronics	Read Codes	
Boxster/Cayman(981)	Steering wheel electronics	Clear Codes	
Boxster/Cayman(981)	Steering wheel electronics	Live Data	
Boxster/Cayman(981)	Steering wheel electronics	Active Test	Horn
Boxster/Cayman(981)	Steering wheel electronics	Active Test	Increase volume
Boxster/Cayman(981)	Steering wheel electronics	Active Test	Launch display
Boxster/Cayman(981)	Steering wheel electronics	Active Test	MUTE
Boxster/Cayman(981)	Steering wheel electronics	Active Test	Reduce volume
Boxster/Cayman(981)	Steering wheel electronics	Active Test	Steering wheel dimming
Boxster/Cayman(981)	Steering wheel electronics	Active Test	Steering wheel heater
Boxster/Cayman(981)	Steering wheel electronics	Active Test	Steering-angle sensor: Delete calibration
Boxster/Cayman(981)	Steering wheel electronics	Special Functions	Function enable
Boxster/Cayman(981)	Steering wheel electronics	Special Functions	Steering-angle sensor calibration
Boxster/Cayman(981)	Transmission control	ECU Information	
Boxster/Cayman(981)	Transmission control	Read Codes	
Boxster/Cayman(981)	Transmission control	Clear Codes	
Boxster/Cayman(981)	Transmission control	Live Data	
Boxster/Cayman(981)	Transmission control	Active Test	Bank 1 camshaft adjustment - exhaust
Boxster/Cayman(981)	Transmission control	Active Test	Bank 1 quantity control valve (high-pressure pump)
Boxster/Cayman(981)	Transmission control	Active Test	Bank 2 camshaft adjustment - exhaust
Boxster/Cayman(981)	Transmission control	Active Test	Bank 2 quantity control valve (high-pressure pump)
Boxster/Cayman(981)	Transmission control	Active Test	Camshaft adjustment, bank 1 - intake
Boxster/Cayman(981)	Transmission control	Active Test	Camshaft adjustment, bank 2 - intake
Boxster/Cayman(981)	Transmission control	Active Test	Control unit reset
Boxster/Cayman(981)	Transmission control	Active Test	Coolant switch-over valve, transmission oil
Boxster/Cayman(981)	Transmission control	Active Test	Electric fuel pump

Boxster/Cayman(981)	Transmission control	Active Test	Empty tank
Boxster/Cayman(981)	Transmission control	Active Test	Engine compartment purge fan level 1 (low)
Boxster/Cayman(981)	Transmission control	Active Test	Engine compartment purge fan level 2 (high)
Boxster/Cayman(981)	Transmission control	Active Test	Piston cooling nozzles
Boxster/Cayman(981)	Transmission control	Active Test	Radiator fan 1
Boxster/Cayman(981)	Transmission control	Active Test	Radiator fan 2
Boxster/Cayman(981)	Transmission control	Active Test	Secondary-air pump
Boxster/Cayman(981)	Transmission control	Active Test	Secondary-air valve
Boxster/Cayman(981)	Transmission control	Active Test	Tank vent valve
Boxster/Cayman(981)	Transmission control	Active Test	Transport mode
Boxster/Cayman(981)	Transmission control	Active Test	Tuning flap
Boxster/Cayman(981)	Transmission control	Special Functions	Calibration (complete process)
Boxster/Cayman(981)	Transmission control	Special Functions	Oil filling
Boxster/Cayman(981)	Transmission control	Special Functions	Read permanent fault memory
Boxster/Cayman(981)	TV tuner	ECU Information	
Boxster/Cayman(981)	TV tuner	Read Codes	
Boxster/Cayman(981)	TV tuner	Clear Codes	
Boxster/Cayman(981)	TV tuner	Live Data	
Boxster/Cayman(981)	TV tuner	Active Test	3dB reduction
Boxster/Cayman(981)	TV tuner	Active Test	Antenna wiring
Boxster/Cayman(981)	TV tuner	Active Test	Reversing camera video signal
Boxster/Cayman(981)	TV tuner	Active Test	Transport mode
Boxster/Cayman(981)	TV tuner	Active Test	Video source
Boxster/Cayman(981)	Tyre pressure monitoring	ECU Information	
Boxster/Cayman(981)	Tyre pressure monitoring	Read Codes	
Boxster/Cayman(981)	Tyre pressure monitoring	Clear Codes	
Boxster/Cayman(981)	Tyre pressure monitoring	Live Data	
Boxster/Cayman(981)	Tyre pressure monitoring	Active Test	Control unit reset
Boxster/Cayman(981)	Tyre pressure monitoring	Active Test	Save manually taught wheel IDs
Boxster/Cayman(981)	Tyre pressure monitoring	Special Functions	Teach wheel IDs
Boxster/Cayman(981)	Tyre pressure monitoring	Hot Functions(HOT)	Battery
Carrera GT	ABS	ECU Information	
Carrera GT	ABS	Read Codes	
Carrera GT	ABS	Clear Codes	
Carrera GT	ABS	Live Data	
Carrera GT	Air conditioning	ECU Information	
Carrera GT	Air conditioning	Read Codes	
Carrera GT	Air conditioning	Clear Codes	
Carrera GT	Air conditioning	Live Data	
Carrera GT	Airbag	ECU Information	
Carrera GT	Airbag	Read Codes	
Carrera GT	Airbag	Clear Codes	
Carrera GT	Airbag	Live Data	
Carrera GT	Alarm system	ECU Information	
Carrera GT	Alarm system	Read Codes	
Carrera GT	Alarm system	Clear Codes	
Carrera GT	DME	Read Codes	
Carrera GT	DME	Clear Codes	
Carrera GT	Instrument cluster	ECU Information	
Carrera GT	Instrument cluster	Read Codes	
Carrera GT	Instrument cluster	Clear Codes	
Carrera GT	Instrument cluster	Live Data	
Carrera GT	Instrument cluster	Active Test	Buzzer
Carrera GT	Instrument cluster	Active Test	Display color red
Carrera GT	Instrument cluster	Active Test	Display color yellow
Carrera GT	Instrument cluster	Active Test	Gong signal
Carrera GT	Instrument cluster	Active Test	Instrument cluster warning lights
Carrera GT	Instrument cluster	Active Test	Pattern - even columns
Carrera GT	Instrument cluster	Active Test	Pattern - even lines
Carrera GT	Instrument cluster	Active Test	Pattern - odd columns
Carrera GT	Instrument cluster	Active Test	Pattern - odd lines
Carrera GT	Instrument cluster	Active Test	Pointer
Carrera GT	Instrument cluster	Active Test	Speedometer A
Carrera GT	Instrument cluster	Active Test	Text output
Carrera GT	Instrument cluster	Special Functions	Read out values
Carrera GT	Instrument cluster	Special Functions	Reset tank calibration value
Carrera GT	Instrument cluster	Special Functions	Total distance
Carrera GT	Instrument cluster	Special Functions	Write values
Carrera GT	TPM	ECU Information	
Carrera GT	TPM	Read Codes	
Carrera GT	TPM	Clear Codes	
Carrera GT	TPM	Live Data	
Cayenne(92A from MY 2011)	A/C compressor	ECU Information	
Cayenne(92A from MY 2011)	A/C compressor	Read Codes	
Cayenne(92A from MY 2011)	A/C compressor	Clear Codes	
Cayenne(92A from MY 2011)	A/C compressor	Live Data	
Cayenne(92A from MY 2011)	A/C compressor	Active Test	Reset adaption values
Cayenne(92A from MY 2011)	Adaptive cruise control	ECU Information	
Cayenne(92A from MY 2011)	Adaptive cruise control	Read Codes	
Cayenne(92A from MY 2011)	Adaptive cruise control	Clear Codes	
Cayenne(92A from MY 2011)	Adaptive cruise control	Live Data	
Cayenne(92A from MY 2011)	Adaptive cruise control	Active Test	Control unit reset
Cayenne(92A from MY 2011)	Adaptive cruise control	Active Test	Lens heater
Cayenne(92A from MY 2011)	Adaptive cruise control	Special Functions	Adjust adaptive cruise control
Cayenne(92A from MY 2011)	Additional compass instrument	ECU Information	
Cayenne(92A from MY 2011)	Additional compass instrument	Read Codes	
Cayenne(92A from MY 2011)	Additional compass instrument	Clear Codes	
Cayenne(92A from MY 2011)	Additional compass instrument	Live Data	
Cayenne(92A from MY 2011)	Additional compass instrument	Active Test	Automatic compass calibration

Cayenne(92A from MY 2011)	Additional compass instrument	Active Test	Compass
Cayenne(92A from MY 2011)	Additional compass instrument	Active Test	Lighting
Cayenne(92A from MY 2011)	Additional compass instrument	Active Test	Segments
Cayenne(92A from MY 2011)	Additional instrument-watch	ECU Information	
Cayenne(92A from MY 2011)	Additional instrument-watch	Read Codes	
Cayenne(92A from MY 2011)	Additional instrument-watch	Clear Codes	
Cayenne(92A from MY 2011)	Additional instrument-watch	Live Data	
Cayenne(92A from MY 2011)	Additional instrument-watch	Active Test	Control unit reset
Cayenne(92A from MY 2011)	Additional instrument-watch	Active Test	Lighting
Cayenne(92A from MY 2011)	Additional instrument-watch	Active Test	Pointer
Cayenne(92A from MY 2011)	Additional instrument-watch	Active Test	Segment displays
Cayenne(92A from MY 2011)	Additional instrument-watch	Active Test	Self-test
Cayenne(92A from MY 2011)	Air conditioner	ECU Information	
Cayenne(92A from MY 2011)	Air conditioner	Read Codes	
Cayenne(92A from MY 2011)	Air conditioner	Clear Codes	
Cayenne(92A from MY 2011)	Air conditioner	Live Data	
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Air flow, rear left
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Air flow, rear right
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Compressor break - in reset
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Compressor break - in,E-compressor(hybrid)
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Compressor break-in
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Control unit reset
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Defroster flap
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Display test
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Erase fault memory after control unit replacement or coding
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Extended ventilation element
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Footwell B-pillar, rear left
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Footwell B-pillar, rear right
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Fresh-air blower
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Front left footwell
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Front left seat heater
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Front left seat ventilation
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Front left side vent
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Front left temperature mixing flaps
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Front right footwell
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Front right seat heater
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Front right seat ventilation
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Front right side vent
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Front right temperature mixing flaps
Cayenne(92A from MY 2011)	Air conditioner	Active Test	LIN control motors measurement run
Cayenne(92A from MY 2011)	Air conditioner	Active Test	LIN control motors verification run
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Rear left seat heating
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Rear left seat ventilation
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Rear right seat heating
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Rear right seat ventilation
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Recirculation flap
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Teaching LIN servo motors
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Temperature mixing flap, rear left
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Temperature mixing flap, rear right
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Water pump relay
Cayenne(92A from MY 2011)	Air conditioner	Active Test	Water valve
Cayenne(92A from MY 2011)	Air conditioner	Special Functions	LIN control motors measurement run
Cayenne(92A from MY 2011)	Air conditioner	Special Functions	Teach-in:LIN automatic addressing
Cayenne(92A from MY 2011)	Airbag	ECU Information	
Cayenne(92A from MY 2011)	Airbag	Read Codes	
Cayenne(92A from MY 2011)	Airbag	Clear Codes	
Cayenne(92A from MY 2011)	Airbag	Live Data	
Cayenne(92A from MY 2011)	Airbag	Active Test	Display - Passenger Airbag OFF
Cayenne(92A from MY 2011)	Airbag	Special Functions	Lock
Cayenne(92A from MY 2011)	Airbag	Hot Functions(HOT)	Oil Reset
Cayenne(92A from MY 2011)	Airbag	Hot Functions(HOT)	Reset with tool
Cayenne(92A from MY 2011)	All-wheel drive	ECU Information	
Cayenne(92A from MY 2011)	All-wheel drive	Read Codes	
Cayenne(92A from MY 2011)	All-wheel drive	Clear Codes	
Cayenne(92A from MY 2011)	All-wheel drive	Live Data	
Cayenne(92A from MY 2011)	All-wheel drive	Active Test	Forced calibration
Cayenne(92A from MY 2011)	All-wheel drive	Active Test	Set classification memory
Cayenne(92A from MY 2011)	All-wheel drive	Special Functions	Transfer-box oil service
Cayenne(92A from MY 2011)	Auxiliary heating	ECU Information	
Cayenne(92A from MY 2011)	Auxiliary heating	Read Codes	
Cayenne(92A from MY 2011)	Auxiliary heating	Clear Codes	
Cayenne(92A from MY 2011)	Auxiliary heating	Live Data	
Cayenne(92A from MY 2011)	Auxiliary heating	Active Test	3/2-way valve
Cayenne(92A from MY 2011)	Auxiliary heating	Active Test	Combustion blower
Cayenne(92A from MY 2011)	Auxiliary heating	Active Test	Glow pin
Cayenne(92A from MY 2011)	Auxiliary heating	Active Test	Hand-held transmitter teach-in for receiver
Cayenne(92A from MY 2011)	Auxiliary heating	Active Test	Metering pump
Cayenne(92A from MY 2011)	Auxiliary heating	Active Test	Test start
Cayenne(92A from MY 2011)	Auxiliary heating	Active Test	Test stop
Cayenne(92A from MY 2011)	DME	ECU Information	
Cayenne(92A from MY 2011)	DME	Read Codes	
Cayenne(92A from MY 2011)	DME	Clear Codes	
Cayenne(92A from MY 2011)	DME	Live Data	
Cayenne(92A from MY 2011)	DME	Active Test	Acoustic simulator
Cayenne(92A from MY 2011)	DME	Active Test	Activation for electric auxiliary coolant pump in HT circuit
Cayenne(92A from MY 2011)	DME	Active Test	Activation for electric auxiliary coolant pump in LT circuit
Cayenne(92A from MY 2011)	DME	Active Test	Activation of accelerator pedal module
Cayenne(92A from MY 2011)	DME	Active Test	Activation of bank 1 glow time control unit
Cayenne(92A from MY 2011)	DME	Active Test	Activation of bank 1 throttle valve control unit

Cayenne(92A from MY 2011)	DME	Active Test	Activation of bank 1 turbocharger
Cayenne(92A from MY 2011)	DME	Active Test	Activation of bank 2 glow time control unit
Cayenne(92A from MY 2011)	DME	Active Test	Activation of bank 2 throttle valve control unit
Cayenne(92A from MY 2011)	DME	Active Test	Activation of bank 2 turbocharger
Cayenne(92A from MY 2011)	DME	Active Test	Activation of bleeding 2, hybrid clutch hydraulic system
Cayenne(92A from MY 2011)	DME	Active Test	Activation of bleeding for hybrid clutch hydraulic system
Cayenne(92A from MY 2011)	DME	Active Test	Activation of coolant filling service position
Cayenne(92A from MY 2011)	DME	Active Test	Activation of coolant valve service position
Cayenne(92A from MY 2011)	DME	Active Test	Activation of electric machine bypass valve
Cayenne(92A from MY 2011)	DME	Active Test	Activation of engine mounting 1
Cayenne(92A from MY 2011)	DME	Active Test	Activation of exhaust gas recirculation cooler bypass valve
Cayenne(92A from MY 2011)	DME	Active Test	Activation of exhaust gas recirculation valve, bank 1
Cayenne(92A from MY 2011)	DME	Active Test	Activation of exhaust gas recirculation valve, bank 2
Cayenne(92A from MY 2011)	DME	Active Test	Activation of fuel injector 1
Cayenne(92A from MY 2011)	DME	Active Test	Activation of fuel injector 2
Cayenne(92A from MY 2011)	DME	Active Test	Activation of fuel injector 3
Cayenne(92A from MY 2011)	DME	Active Test	Activation of fuel injector 4
Cayenne(92A from MY 2011)	DME	Active Test	Activation of fuel injector 5
Cayenne(92A from MY 2011)	DME	Active Test	Activation of fuel injector 6
Cayenne(92A from MY 2011)	DME	Active Test	Activation of fuel pump electronics
Cayenne(92A from MY 2011)	DME	Active Test	Activation of fuel-pump electronics
Cayenne(92A from MY 2011)	DME	Active Test	Activation of glow-time control unit
Cayenne(92A from MY 2011)	DME	Active Test	Activation of heater 1 for reducing agent
Cayenne(92A from MY 2011)	DME	Active Test	Activation of heater 2 for reducing agent
Cayenne(92A from MY 2011)	DME	Active Test	Activation of hybrid clutch air entrapment test
Cayenne(92A from MY 2011)	DME	Active Test	Activation of hybrid clutch characteristic adaptation
Cayenne(92A from MY 2011)	DME	Active Test	Activation of hybrid clutch closing function
Cayenne(92A from MY 2011)	DME	Active Test	Activation of hybrid clutch contact point adaptation
Cayenne(92A from MY 2011)	DME	Active Test	Activation of hybrid clutch leakage test
Cayenne(92A from MY 2011)	DME	Active Test	Activation of hybrid clutch opening function
Cayenne(92A from MY 2011)	DME	Active Test	Activation of indicator light for pre-glow time
Cayenne(92A from MY 2011)	DME	Active Test	Activation of injector for reducing agent
Cayenne(92A from MY 2011)	DME	Active Test	Activation of intake camshaft control, bank 1
Cayenne(92A from MY 2011)	DME	Active Test	Activation of intake camshaft control, bank 2
Cayenne(92A from MY 2011)	DME	Active Test	Activation of intake manifold flap for air flow control
Cayenne(92A from MY 2011)	DME	Active Test	Activation of intake-pipe flap for air flow control, bank 1
Cayenne(92A from MY 2011)	DME	Active Test	Activation of intake-pipe flap for air flow control, bank 2
Cayenne(92A from MY 2011)	DME	Active Test	Activation of oil pressure control valve
Cayenne(92A from MY 2011)	DME	Active Test	Activation of potted water pump
Cayenne(92A from MY 2011)	DME	Active Test	Activation of pump for exhaust routing cooler
Cayenne(92A from MY 2011)	DME	Active Test	Activation of pump for reducing agent
Cayenne(92A from MY 2011)	DME	Active Test	Activation of radiator fan 1
Cayenne(92A from MY 2011)	DME	Active Test	Activation of radiator fan
Cayenne(92A from MY 2011)	DME	Active Test	Activation of radiator shutter
Cayenne(92A from MY 2011)	DME	Active Test	Activation of relay for secondary-air pump
Cayenne(92A from MY 2011)	DME	Active Test	Activation of reset of energy input values for hybrid clutch
Cayenne(92A from MY 2011)	DME	Active Test	Activation of reset of hybrid-clutch learning values
Cayenne(92A from MY 2011)	DME	Active Test	Activation of solenoid valve for tank leakage diagnosis
Cayenne(92A from MY 2011)	DME	Active Test	Activation of supply relay for engine components
Cayenne(92A from MY 2011)	DME	Active Test	Activation of tank leakage diagnostic pump (if system is available)
Cayenne(92A from MY 2011)	DME	Active Test	Activation of throttle valve control unit
Cayenne(92A from MY 2011)	DME	Active Test	Activation of valve for exhaust gas recirculation
Cayenne(92A from MY 2011)	DME	Active Test	Activation of valve for oil pressure control
Cayenne(92A from MY 2011)	DME	Active Test	Activation of water pump with on/off control
Cayenne(92A from MY 2011)	DME	Active Test	Activation, radiator fan activation
Cayenne(92A from MY 2011)	DME	Active Test	Additional coolant pump
Cayenne(92A from MY 2011)	DME	Active Test	AIR pump
Cayenne(92A from MY 2011)	DME	Active Test	Bank 1 camshaft adjustment - exhaust
Cayenne(92A from MY 2011)	DME	Active Test	Bank 2 camshaft adjustment - exhaust
Cayenne(92A from MY 2011)	DME	Active Test	Camshaft adjustment - exhaust
Cayenne(92A from MY 2011)	DME	Active Test	Camshaft adjustment - intake
Cayenne(92A from MY 2011)	DME	Active Test	Camshaft adjustment, bank 1 - intake
Cayenne(92A from MY 2011)	DME	Active Test	Camshaft adjustment, bank 2 - intake
Cayenne(92A from MY 2011)	DME	Active Test	Control unit reset
Cayenne(92A from MY 2011)	DME	Active Test	Cycle valve for boost pressure control
Cayenne(92A from MY 2011)	DME	Active Test	Disable function
Cayenne(92A from MY 2011)	DME	Active Test	Diverter valve
Cayenne(92A from MY 2011)	DME	Active Test	Drain the tank
Cayenne(92A from MY 2011)	DME	Active Test	Electric coolant pump 1
Cayenne(92A from MY 2011)	DME	Active Test	Electric coolant pump 2 (charge-air cooler)
Cayenne(92A from MY 2011)	DME	Active Test	Electric coolant pump
Cayenne(92A from MY 2011)	DME	Active Test	Electric fuel feed pump test
Cayenne(92A from MY 2011)	DME	Active Test	Electric fuel pump
Cayenne(92A from MY 2011)	DME	Active Test	Engine relay (Power supply for ignition modules)
Cayenne(92A from MY 2011)	DME	Active Test	Exhaust gas flaps
Cayenne(92A from MY 2011)	DME	Active Test	Fuel injector 1
Cayenne(92A from MY 2011)	DME	Active Test	Fuel injector 2
Cayenne(92A from MY 2011)	DME	Active Test	Fuel injector 3
Cayenne(92A from MY 2011)	DME	Active Test	Fuel injector 4
Cayenne(92A from MY 2011)	DME	Active Test	Fuel injector 5
Cayenne(92A from MY 2011)	DME	Active Test	Fuel injector 6
Cayenne(92A from MY 2011)	DME	Active Test	Fuel tank activation (drain fuel)
Cayenne(92A from MY 2011)	DME	Active Test	Fuel tank activation(drain fuel)
Cayenne(92A from MY 2011)	DME	Active Test	Grille air shutter adaptation
Cayenne(92A from MY 2011)	DME	Active Test	Intake camshaft adjustment activation, bank 1
Cayenne(92A from MY 2011)	DME	Active Test	Intake camshaft adjustment activation, bank 2
Cayenne(92A from MY 2011)	DME	Active Test	Intake manifold flaps for air flow control
Cayenne(92A from MY 2011)	DME	Active Test	Intake pipe flap
Cayenne(92A from MY 2011)	DME	Active Test	Intake pipe switch-over valve

Cayenne(92A from MY 2011)	DME	Active Test	Kickdown adaptation
Cayenne(92A from MY 2011)	DME	Active Test	Leakage diagnostic pump (tank)
Cayenne(92A from MY 2011)	DME	Active Test	Left exhaust flap (sports exhaust system)
Cayenne(92A from MY 2011)	DME	Active Test	Oil pressure valve switchover test
Cayenne(92A from MY 2011)	DME	Active Test	Pressure control valve
Cayenne(92A from MY 2011)	DME	Active Test	Quantity control valve (high-pressure pump)
Cayenne(92A from MY 2011)	DME	Active Test	Quantity control valves (high-pressure pump)
Cayenne(92A from MY 2011)	DME	Active Test	Radiator fan activation
Cayenne(92A from MY 2011)	DME	Active Test	Radiator fans
Cayenne(92A from MY 2011)	DME	Active Test	Radiator shutter
Cayenne(92A from MY 2011)	DME	Active Test	Request restart
Cayenne(92A from MY 2011)	DME	Active Test	Request stop
Cayenne(92A from MY 2011)	DME	Active Test	Reset of catalytic converter learning values
Cayenne(92A from MY 2011)	DME	Active Test	Reset of differential-pressure sensor learning values
Cayenne(92A from MY 2011)	DME	Active Test	Reset of learning values of metering unit and pressure control valve
Cayenne(92A from MY 2011)	DME	Active Test	Reset of the block of the reducing agent metering system
Cayenne(92A from MY 2011)	DME	Active Test	Reset of the diesel particulate filter learning values, bank 1
Cayenne(92A from MY 2011)	DME	Active Test	Reset of the differential pressure sensor learning values, bank 1
Cayenne(92A from MY 2011)	DME	Active Test	Reset of the differential pressure sensor learning values, bank 2
Cayenne(92A from MY 2011)	DME	Active Test	Reset of the learning values for the cylinder pressure sensors
Cayenne(92A from MY 2011)	DME	Active Test	Reset of the learning values of the reducing agent metering system
Cayenne(92A from MY 2011)	DME	Active Test	Reset of the oxygen sensor learning values
Cayenne(92A from MY 2011)	DME	Active Test	Reset of the particle filter learning values
Cayenne(92A from MY 2011)	DME	Active Test	Reset of the particle filter learning values, bank 2
Cayenne(92A from MY 2011)	DME	Active Test	Reset reducing agent fill level
Cayenne(92A from MY 2011)	DME	Active Test	Right exhaust flap
Cayenne(92A from MY 2011)	DME	Active Test	Secondary air valve
Cayenne(92A from MY 2011)	DME	Active Test	Secondary-air system activation
Cayenne(92A from MY 2011)	DME	Active Test	Secondary-air valve 2
Cayenne(92A from MY 2011)	DME	Active Test	Solenoid valve for mechanical coolant pump
Cayenne(92A from MY 2011)	DME	Active Test	Tank vent valve activation
Cayenne(92A from MY 2011)	DME	Active Test	Tank vent valve
Cayenne(92A from MY 2011)	DME	Active Test	Test of oil pressure valve switchover
Cayenne(92A from MY 2011)	DME	Active Test	Thermostat activation
Cayenne(92A from MY 2011)	DME	Active Test	Turbocharger activation
Cayenne(92A from MY 2011)	DME	Active Test	Valve lift control, bank 1
Cayenne(92A from MY 2011)	DME	Active Test	Valve lift control, bank 2
Cayenne(92A from MY 2011)	DME	Special Functions	Adaptation while engine is running
Cayenne(92A from MY 2011)	DME	Special Functions	Adaptations
Cayenne(92A from MY 2011)	DME	Special Functions	Adaptations
Cayenne(92A from MY 2011)	DME	Special Functions	Adopt bank 1 diesel particulate filter mileage in the DME
Cayenne(92A from MY 2011)	DME	Special Functions	Adopt bank 2 diesel particulate filter mileage in the DME
Cayenne(92A from MY 2011)	DME	Special Functions	Bleed fuel system
Cayenne(92A from MY 2011)	DME	Special Functions	Clutch actuator and separating clutch
Cayenne(92A from MY 2011)	DME	Special Functions	Delete adaptation data
Cayenne(92A from MY 2011)	DME	Special Functions	Diesel particulate filter regeneration
Cayenne(92A from MY 2011)	DME	Special Functions	Exhaust gas recirculation test.
Cayenne(92A from MY 2011)	DME	Special Functions	First start
Cayenne(92A from MY 2011)	DME	Special Functions	Oil filling
Cayenne(92A from MY 2011)	DME	Special Functions	Ready status
Cayenne(92A from MY 2011)	DME	Special Functions	Short tests
Cayenne(92A from MY 2011)	DME	Special Functions	System tests
Cayenne(92A from MY 2011)	DME	Special Functions	Tank leakage diagnostics
Cayenne(92A from MY 2011)	DME	Special Functions	Turbocharger test
Cayenne(92A from MY 2011)	Driver's Door	ECU Information	
Cayenne(92A from MY 2011)	Driver's Door	Read Codes	
Cayenne(92A from MY 2011)	Driver's Door	Clear Codes	
Cayenne(92A from MY 2011)	Driver's Door	Live Data	
Cayenne(92A from MY 2011)	Driver's Door	Active Test	Activation of all central locking motors
Cayenne(92A from MY 2011)	Driver's Door	Active Test	Exterior mirror heating
Cayenne(92A from MY 2011)	Driver's Door	Active Test	Fold-in door mirrors
Cayenne(92A from MY 2011)	Driver's Door	Active Test	Lights in the door
Cayenne(92A from MY 2011)	Driver's Door	Active Test	Lower power windows
Cayenne(92A from MY 2011)	Driver's Door	Active Test	Mirror adjustment
Cayenne(92A from MY 2011)	Driver's Door	Active Test	Move power windows up
Cayenne(92A from MY 2011)	Driver's Door	Active Test	Unfold door mirrors
Cayenne(92A from MY 2011)	Driver's Door	Special Functions	Standardizing power windows
Cayenne(92A from MY 2011)	Driver-side seat memory	ECU Information	
Cayenne(92A from MY 2011)	Driver-side seat memory	Read Codes	
Cayenne(92A from MY 2011)	Driver-side seat memory	Clear Codes	
Cayenne(92A from MY 2011)	Driver-side seat memory	Live Data	
Cayenne(92A from MY 2011)	Driver-side seat memory	Active Test	Backrest angle adjustment
Cayenne(92A from MY 2011)	Driver-side seat memory	Active Test	Backrest width, LBR
Cayenne(92A from MY 2011)	Driver-side seat memory	Active Test	Lower lumbar blister, LBU
Cayenne(92A from MY 2011)	Driver-side seat memory	Active Test	Seat angle adjustment (SNV)
Cayenne(92A from MY 2011)	Driver-side seat memory	Active Test	Seat depth adjustment
Cayenne(92A from MY 2011)	Driver-side seat memory	Active Test	Seat fore/aft adjustment
Cayenne(92A from MY 2011)	Driver-side seat memory	Active Test	Seat height adjustment, SHV
Cayenne(92A from MY 2011)	Driver-side seat memory	Active Test	Seat width, SBR
Cayenne(92A from MY 2011)	Driver-side seat memory	Active Test	Upper lumbar blister, LBO
Cayenne(92A from MY 2011)	Driver-side seat memory	Special Functions	Normalize seat motors
Cayenne(92A from MY 2011)	DVD changer	ECU Information	
Cayenne(92A from MY 2011)	DVD changer	Read Codes	
Cayenne(92A from MY 2011)	DVD changer	Clear Codes	
Cayenne(92A from MY 2011)	DVD changer	Live Data	
Cayenne(92A from MY 2011)	DVD changer	Active Test	Eject medium
Cayenne(92A from MY 2011)	Emergency call system	ECU Information	
Cayenne(92A from MY 2011)	Emergency call system	Read Codes	
Cayenne(92A from MY 2011)	Emergency call system	Clear Codes	

Cayenne(92A from MY 2011)	Emergency call system	Live Data	
Cayenne(92A from MY 2011)	Emergency call system	Active Test	Erase history memory
Cayenne(92A from MY 2011)	Exterior sound amplifier	ECU Information	
Cayenne(92A from MY 2011)	Exterior sound amplifier	Read Codes	
Cayenne(92A from MY 2011)	Exterior sound amplifier	Clear Codes	
Cayenne(92A from MY 2011)	Exterior sound amplifier	Live Data	
Cayenne(92A from MY 2011)	Exterior sound amplifier	Active Test	Hard Reset Ecu Reset
Cayenne(92A from MY 2011)	Exterior sound amplifier	Active Test	Loudspeaker test (acoustic)
Cayenne(92A from MY 2011)	Exterior sound amplifier	Active Test	Loudspeaker test (electrical)
Cayenne(92A from MY 2011)	External amplifier	ECU Information	
Cayenne(92A from MY 2011)	External amplifier	Read Codes	
Cayenne(92A from MY 2011)	External amplifier	Clear Codes	
Cayenne(92A from MY 2011)	External amplifier	Live Data	
Cayenne(92A from MY 2011)	External amplifier	Active Test	3dB reduction
Cayenne(92A from MY 2011)	External amplifier	Active Test	Activate fan
Cayenne(92A from MY 2011)	External amplifier	Active Test	FastSleepMode(closed-circuit current)
Cayenne(92A from MY 2011)	External amplifier	Active Test	Loudspeaker test (acoustic)
Cayenne(92A from MY 2011)	External amplifier	Active Test	Self-Test
Cayenne(92A from MY 2011)	External amplifier	Active Test	SilentMode (bus idle)
Cayenne(92A from MY 2011)	External amplifier	Active Test	Transport mode
Cayenne(92A from MY 2011)	Front camera	ECU Information	
Cayenne(92A from MY 2011)	Front camera	Read Codes	
Cayenne(92A from MY 2011)	Front camera	Clear Codes	
Cayenne(92A from MY 2011)	Front camera	Live Data	
Cayenne(92A from MY 2011)	Front camera	Active Test	Activation of high beam
Cayenne(92A from MY 2011)	Front camera	Active Test	Control unit reset
Cayenne(92A from MY 2011)	Front camera	Active Test	Green display for the lane departure warning
Cayenne(92A from MY 2011)	Front camera	Active Test	Lane departure warning
Cayenne(92A from MY 2011)	Front camera	Active Test	Traffic-sign display
Cayenne(92A from MY 2011)	Front camera	Active Test	Windshield heater
Cayenne(92A from MY 2011)	Front camera	Active Test	Yellow display for the lane departure warning
Cayenne(92A from MY 2011)	Front camera	Special Functions	Calibration front camera
Cayenne(92A from MY 2011)	Front-end electronics	ECU Information	
Cayenne(92A from MY 2011)	Front-end electronics	Read Codes	
Cayenne(92A from MY 2011)	Front-end electronics	Clear Codes	
Cayenne(92A from MY 2011)	Front-end electronics	Live Data	
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Activation of dipped beam
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Activation of steering column adjustment
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Actuation of headlamp switchable covers (halogen)
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Calibration, axle sensor for HBA (halogen headlight)
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Engine-compartment light activation
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Foot well light actuation
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Front marker light actuation
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Garage door opener - Delete all assigned buttons
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Hazard warning lights button LED actuation
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Headlight cleaning system pump actuation
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Key identification
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Left direction indicator actuation in general
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Main beam actuation
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Right direction indicator actuation in general
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Tank cap locking element activation
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Teach-in process for garage door opener receiver
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Two-tone horn actuation
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Windshield washer-system pump actuation
Cayenne(92A from MY 2011)	Front-end electronics	Active Test	Windshield wiper actuation
Cayenne(92A from MY 2011)	Front-end electronics	Special Functions	Analysis of Kessy functions
Cayenne(92A from MY 2011)	Front-end electronics	Special Functions	Headlight beam adjustment calibration
Cayenne(92A from MY 2011)	Front-end electronics	Special Functions	Steering column adjustment normalizing run
Cayenne(92A from MY 2011)	Front-end electronics	Hot Functions(HOT)	Battery
Cayenne(92A from MY 2011)	Gateway	ECU Information	
Cayenne(92A from MY 2011)	Gateway	Read Codes	
Cayenne(92A from MY 2011)	Gateway	Clear Codes	
Cayenne(92A from MY 2011)	Gateway	Live Data	
Cayenne(92A from MY 2011)	Gateway	Active Test	Control unit reset
Cayenne(92A from MY 2011)	Gateway	Active Test	Generator setpoint voltage
Cayenne(92A from MY 2011)	Gateway	Active Test	HLK stage specification
Cayenne(92A from MY 2011)	Gateway	Active Test	Idle speed increase
Cayenne(92A from MY 2011)	Gateway	Active Test	Relay terminal 30f actuation
Cayenne(92A from MY 2011)	Gateway	Active Test	Relay terminal 30sd actuation
Cayenne(92A from MY 2011)	Gateway	Active Test	Reset switch-off stage
Cayenne(92A from MY 2011)	Gateway	Active Test	Switch terminal G1
Cayenne(92A from MY 2011)	Gateway	Active Test	Switch terminal G2
Cayenne(92A from MY 2011)	Gateway	Special Functions	Actual/specified configuration
Cayenne(92A from MY 2011)	Gateway	Special Functions	Battery change
Cayenne(92A from MY 2011)	High-voltage battery	ECU Information	
Cayenne(92A from MY 2011)	High-voltage battery	Read Codes	
Cayenne(92A from MY 2011)	High-voltage battery	Clear Codes	
Cayenne(92A from MY 2011)	High-voltage battery	Live Data	
Cayenne(92A from MY 2011)	High-voltage battery	Active Test	Control unit reset
Cayenne(92A from MY 2011)	High-voltage battery	Active Test	Fan control, high-voltage battery
Cayenne(92A from MY 2011)	High-voltage battery	Active Test	High-voltage battery coolant pump
Cayenne(92A from MY 2011)	High-voltage battery	Special Functions	Battery classification
Cayenne(92A from MY 2011)	High-voltage battery	Special Functions	High-voltage battery charging
Cayenne(92A from MY 2011)	High-voltage charger	ECU Information	
Cayenne(92A from MY 2011)	High-voltage charger	Read Codes	
Cayenne(92A from MY 2011)	High-voltage charger	Clear Codes	
Cayenne(92A from MY 2011)	High-voltage charger	Live Data	
Cayenne(92A from MY 2011)	High-voltage charger	Active Test	Charge flap lock A
Cayenne(92A from MY 2011)	High-voltage charger	Active Test	Charging connector A locking test

Cayenne(92A from MY 2011)	High-voltage charger	Active Test	Charging indicator lights
Cayenne(92A from MY 2011)	High-voltage charger	Active Test	Charging socket - button LEDs
Cayenne(92A from MY 2011)	High-voltage charger	Active Test	Charging socket - charging socket lid
Cayenne(92A from MY 2011)	High-voltage charger	Active Test	Charging socket - lock test
Cayenne(92A from MY 2011)	High-voltage charger	Active Test	Charging socket LEDs
Cayenne(92A from MY 2011)	High-voltage charger	Active Test	Control unit reset
Cayenne(92A from MY 2011)	High-voltage charger	Active Test	Push button LEDs
Cayenne(92A from MY 2011)	High-voltage power electronics	ECU Information	
Cayenne(92A from MY 2011)	High-voltage power electronics	Read Codes	
Cayenne(92A from MY 2011)	High-voltage power electronics	Clear Codes	
Cayenne(92A from MY 2011)	High-voltage power electronics	Live Data	
Cayenne(92A from MY 2011)	High-voltage power electronics	Active Test	Control unit reset
Cayenne(92A from MY 2011)	Instrument cluster	ECU Information	
Cayenne(92A from MY 2011)	Instrument cluster	Read Codes	
Cayenne(92A from MY 2011)	Instrument cluster	Clear Codes	
Cayenne(92A from MY 2011)	Instrument cluster	Live Data	
Cayenne(92A from MY 2011)	Instrument cluster	Active Test	Control unit reset
Cayenne(92A from MY 2011)	Instrument cluster	Active Test	Dimming
Cayenne(92A from MY 2011)	Instrument cluster	Active Test	Gear display test
Cayenne(92A from MY 2011)	Instrument cluster	Active Test	Light test
Cayenne(92A from MY 2011)	Instrument cluster	Active Test	Loudspeaker test
Cayenne(92A from MY 2011)	Instrument cluster	Active Test	Pointer
Cayenne(92A from MY 2011)	Instrument cluster	Active Test	Segment-display test
Cayenne(92A from MY 2011)	Instrument cluster	Active Test	Self test
Cayenne(92A from MY 2011)	Instrument cluster	Special Functions	Calibrate fuel-level sensor
Cayenne(92A from MY 2011)	Instrument cluster	Special Functions	Reset maintenance interval
Cayenne(92A from MY 2011)	Instrument cluster	Special Functions	Restore fuel level sensor comparison values to Rear-end electronics control unit
Cayenne(92A from MY 2011)	Instrument cluster	Special Functions	Save fuel level sensor comparison values to Rear-end electronics control unit
Cayenne(92A from MY 2011)	Instrument cluster	Special Functions	Set total mileage
Cayenne(92A from MY 2011)	Instrument cluster	Hot Functions(HOT)	Electric Parking Brake
Cayenne(92A from MY 2011)	Lane Change Assistant	ECU Information	
Cayenne(92A from MY 2011)	Lane Change Assistant	Read Codes	
Cayenne(92A from MY 2011)	Lane Change Assistant	Clear Codes	
Cayenne(92A from MY 2011)	Lane Change Assistant	Live Data	
Cayenne(92A from MY 2011)	Lane Change Assistant	Active Test	Control unit reset
Cayenne(92A from MY 2011)	Lane Change Assistant	Active Test	Driver door mirror warning light
Cayenne(92A from MY 2011)	Lane Change Assistant	Active Test	Front-passenger door mirror warning Light
Cayenne(92A from MY 2011)	Lane Change Assistant	Active Test	Indicator light
Cayenne(92A from MY 2011)	Lane Change Assistant	Active Test	Lane Change Assist indicator Lighting
Cayenne(92A from MY 2011)	Lane Change Assistant	Active Test	Lane Change Assist status light in instrument cluster
Cayenne(92A from MY 2011)	Lane Change Assistant	Active Test	Passenger warning light
Cayenne(92A from MY 2011)	Lane Change Assistant	Active Test	Warning light, driver
Cayenne(92A from MY 2011)	Left headlight	ECU Information	
Cayenne(92A from MY 2011)	Left headlight	Read Codes	
Cayenne(92A from MY 2011)	Left headlight	Clear Codes	
Cayenne(92A from MY 2011)	Left headlight	Live Data	
Cayenne(92A from MY 2011)	Left headlight	Active Test	Activate variable light distribution
Cayenne(92A from MY 2011)	Left headlight	Active Test	Actuate static cornering light
Cayenne(92A from MY 2011)	Left headlight	Active Test	Headlight beam adjustment calibration
Cayenne(92A from MY 2011)	Left headlight	Active Test	Headlight beam adjustment reference run
Cayenne(92A from MY 2011)	Left headlight	Active Test	Move cornering light
Cayenne(92A from MY 2011)	Left headlight	Active Test	Move headlight beam adjustment
Cayenne(92A from MY 2011)	Left headlight	Active Test	Synchronous operation of headlight beam adjustment and cornering light
Cayenne(92A from MY 2011)	Left headlight	Special Functions	Headlight beam adjustment calibration
Cayenne(92A from MY 2011)	Level control/PASM	ECU Information	
Cayenne(92A from MY 2011)	Level control/PASM	Read Codes	
Cayenne(92A from MY 2011)	Level control/PASM	Clear Codes	
Cayenne(92A from MY 2011)	Level control/PASM	Live Data	
Cayenne(92A from MY 2011)	Level control/PASM	Active Test	Activate/deactivate level control
Cayenne(92A from MY 2011)	Level control/PASM	Active Test	Adjust vehicle to normal level
Cayenne(92A from MY 2011)	Level control/PASM	Active Test	Compressor,air spring and change-over valves drive link test
Cayenne(92A from MY 2011)	Level control/PASM	Active Test	Conclude diagnostic session
Cayenne(92A from MY 2011)	Level control/PASM	Active Test	Damper drive link test
Cayenne(92A from MY 2011)	Level control/PASM	Active Test	Drive link test for accumulator filling
Cayenne(92A from MY 2011)	Level control/PASM	Active Test	Drive-link test, bypass valve
Cayenne(92A from MY 2011)	Level control/PASM	Active Test	locking commissioning
Cayenne(92A from MY 2011)	Level control/PASM	Active Test	Redetermination of system air volume
Cayenne(92A from MY 2011)	Level control/PASM	Special Functions	Bleeding axle by axle
Cayenne(92A from MY 2011)	Level control/PASM	Special Functions	Bleeding of complete air suspension system
Cayenne(92A from MY 2011)	Level control/PASM	Special Functions	Filling air suspension system/individual components
Cayenne(92A from MY 2011)	Level control/PASM	Special Functions	Height sensor system calibration
Cayenne(92A from MY 2011)	Level control/PASM	Special Functions	Height sensor system component test
Cayenne(92A from MY 2011)	Level control/PASM	Special Functions	Replacement of an air spring
Cayenne(92A from MY 2011)	Park Assist	ECU Information	
Cayenne(92A from MY 2011)	Park Assist	Read Codes	
Cayenne(92A from MY 2011)	Park Assist	Clear Codes	
Cayenne(92A from MY 2011)	Park Assist	Live Data	
Cayenne(92A from MY 2011)	Park Assist	Active Test	Indicator light in button for Park Assist
Cayenne(92A from MY 2011)	Park Assist	Active Test	Park Assist buzzer, front
Cayenne(92A from MY 2011)	Park Assist	Active Test	Rear Park Assist buzzer
Cayenne(92A from MY 2011)	Park Assist	Active Test	System function test (All sensors)
Cayenne(92A from MY 2011)	Parking Brake	ECU Information	
Cayenne(92A from MY 2011)	Parking Brake	Read Codes	
Cayenne(92A from MY 2011)	Parking Brake	Clear Codes	
Cayenne(92A from MY 2011)	Parking Brake	Live Data	
Cayenne(92A from MY 2011)	Parking Brake	Active Test	Clamp
Cayenne(92A from MY 2011)	Parking Brake	Active Test	Confirm actuator replacement
Cayenne(92A from MY 2011)	Parking Brake	Active Test	Light test
Cayenne(92A from MY 2011)	Parking Brake	Active Test	Move to installation position

Cayenne(92A from MY 2011)	Parking Brake	Active Test	Release
Cayenne(92A from MY 2011)	Parking Brake	Special Functions	Calibration
Cayenne(92A from MY 2011)	Parking Brake	Special Functions	Check basic setting of parking-brake
Cayenne(92A from MY 2011)	Parking Brake	Special Functions	Grinding - in
Cayenne(92A from MY 2011)	Parking Brake	Special Functions	Replace brake pads (operating guide)
Cayenne(92A from MY 2011)	Parking Brake	Hot Functions(HOT)	Tire Pressure Monitoring System
Cayenne(92A from MY 2011)	Passenger's Door	ECU Information	
Cayenne(92A from MY 2011)	Passenger's Door	Read Codes	
Cayenne(92A from MY 2011)	Passenger's Door	Clear Codes	
Cayenne(92A from MY 2011)	Passenger's Door	Live Data	
Cayenne(92A from MY 2011)	Passenger's Door	Active Test	Activation of all central locking motors
Cayenne(92A from MY 2011)	Passenger's Door	Active Test	Exterior mirror heating
Cayenne(92A from MY 2011)	Passenger's Door	Active Test	Fold-in door mirrors
Cayenne(92A from MY 2011)	Passenger's Door	Active Test	Lights in the door
Cayenne(92A from MY 2011)	Passenger's Door	Active Test	Lower power windows
Cayenne(92A from MY 2011)	Passenger's Door	Active Test	Mirror adjustment
Cayenne(92A from MY 2011)	Passenger's Door	Active Test	Move power windows up
Cayenne(92A from MY 2011)	Passenger's Door	Active Test	Unfold door mirrors
Cayenne(92A from MY 2011)	Passenger's Door	Special Functions	Standardizing power windows
Cayenne(92A from MY 2011)	Passenger-side seat memory	ECU Information	
Cayenne(92A from MY 2011)	Passenger-side seat memory	Read Codes	
Cayenne(92A from MY 2011)	Passenger-side seat memory	Clear Codes	
Cayenne(92A from MY 2011)	Passenger-side seat memory	Live Data	
Cayenne(92A from MY 2011)	Passenger-side seat memory	Active Test	Backrest angle adjustment
Cayenne(92A from MY 2011)	Passenger-side seat memory	Active Test	Backrest width, LBR
Cayenne(92A from MY 2011)	Passenger-side seat memory	Active Test	Lower lumbar blister, LBU
Cayenne(92A from MY 2011)	Passenger-side seat memory	Active Test	Seat angle adjustment (SNV)
Cayenne(92A from MY 2011)	Passenger-side seat memory	Active Test	Seat depth adjustment
Cayenne(92A from MY 2011)	Passenger-side seat memory	Active Test	Seat fore/aft adjustment
Cayenne(92A from MY 2011)	Passenger-side seat memory	Active Test	Seat height adjustment, SHV
Cayenne(92A from MY 2011)	Passenger-side seat memory	Active Test	Seat width, SBR
Cayenne(92A from MY 2011)	Passenger-side seat memory	Active Test	Upper lumbar blister, LBO
Cayenne(92A from MY 2011)	Passenger-side seat memory	Special Functions	Normalize seat motors
Cayenne(92A from MY 2011)	PCM/CDR	ECU Information	
Cayenne(92A from MY 2011)	PCM/CDR	Read Codes	
Cayenne(92A from MY 2011)	PCM/CDR	Clear Codes	
Cayenne(92A from MY 2011)	PCM/CDR	Live Data	
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Activate fan
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	AM field strength
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Balance
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Bass
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Bluetooth - Delete coupled devices from the list
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Bluetooth - Find devices
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Bluetooth - paging
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Button test
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	CD/DVD eject
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	CDR loudspeaker test
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Current FM field strength
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Developer menu
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Digital radio (DAB) - antenna voltage
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Digital radio (DAB), current field strength
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Display test
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	DVD drive, Eject
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	External media source (AUX IN/USB), diagnostic test
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	External media source (USB), diagnostic test
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Factory setting
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Fader
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	FM field strength
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Loudspeaker test (electrical)
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Loudspeaker test
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Microphone level
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	MUTE
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Ring break diagnosis
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Self test
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Teach handset
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Terminal 30 reset
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Test signal
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Transport mode
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Treble
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Tuner antenna, current power consumption
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Tuner signal
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	USB/AUX
Cayenne(92A from MY 2011)	PCM/CDR	Active Test	Volume
Cayenne(92A from MY 2011)	PCM/CDR	Special Functions	AM field strength
Cayenne(92A from MY 2011)	PCM/CDR	Special Functions	Confirmation of update
Cayenne(92A from MY 2011)	PCM/CDR	Special Functions	Current FM field strength
Cayenne(92A from MY 2011)	PCM/CDR	Special Functions	FM field strength
Cayenne(92A from MY 2011)	PCM/CDR	Special Functions	Function activation
Cayenne(92A from MY 2011)	PCM/CDR	Special Functions	PCM self-test
Cayenne(92A from MY 2011)	PDCC	ECU Information	
Cayenne(92A from MY 2011)	PDCC	Read Codes	
Cayenne(92A from MY 2011)	PDCC	Clear Codes	
Cayenne(92A from MY 2011)	PDCC	Live Data	
Cayenne(92A from MY 2011)	PDCC	Active Test	Control unit reset
Cayenne(92A from MY 2011)	PDCC	Special Functions	Pressure sensor calibration
Cayenne(92A from MY 2011)	PDCC	Special Functions	Valve actuation
Cayenne(92A from MY 2011)	PSM	ECU Information	
Cayenne(92A from MY 2011)	PSM	Read Codes	
Cayenne(92A from MY 2011)	PSM	Clear Codes	

Cayenne(92A from MY 2011)	PSM	Live Data	
Cayenne(92A from MY 2011)	PSM	Active Test	Self test
Cayenne(92A from MY 2011)	PSM	Special Functions	Bleed the brakes
Cayenne(92A from MY 2011)	PSM	Special Functions	Hydraulic swap test
Cayenne(92A from MY 2011)	PSM	Special Functions	PSM sensor calibration
Cayenne(92A from MY 2011)	PSM	Special Functions	Rolling test mode
Cayenne(92A from MY 2011)	Rear differential lock	ECU Information	
Cayenne(92A from MY 2011)	Rear differential lock	Read Codes	
Cayenne(92A from MY 2011)	Rear differential lock	Clear Codes	
Cayenne(92A from MY 2011)	Rear differential lock	Live Data	
Cayenne(92A from MY 2011)	Rear left door	ECU Information	
Cayenne(92A from MY 2011)	Rear left door	Read Codes	
Cayenne(92A from MY 2011)	Rear left door	Clear Codes	
Cayenne(92A from MY 2011)	Rear left door	Live Data	
Cayenne(92A from MY 2011)	Rear left door	Active Test	Activation of all central locking motors
Cayenne(92A from MY 2011)	Rear left door	Active Test	Lights in the door
Cayenne(92A from MY 2011)	Rear left door	Active Test	Lower power windows
Cayenne(92A from MY 2011)	Rear left door	Active Test	Move power windows up
Cayenne(92A from MY 2011)	Rear left door	Special Functions	Standardizing power windows
Cayenne(92A from MY 2011)	Rear lid	ECU Information	
Cayenne(92A from MY 2011)	Rear lid	Read Codes	
Cayenne(92A from MY 2011)	Rear lid	Clear Codes	
Cayenne(92A from MY 2011)	Rear lid	Live Data	
Cayenne(92A from MY 2011)	Rear lid	Active Test	Activate beeper
Cayenne(92A from MY 2011)	Rear lid	Special Functions	Calibration
Cayenne(92A from MY 2011)	Rear right door	ECU Information	
Cayenne(92A from MY 2011)	Rear right door	Read Codes	
Cayenne(92A from MY 2011)	Rear right door	Clear Codes	
Cayenne(92A from MY 2011)	Rear right door	Live Data	
Cayenne(92A from MY 2011)	Rear right door	Active Test	Activation of all central locking motors
Cayenne(92A from MY 2011)	Rear right door	Active Test	Lights in the door
Cayenne(92A from MY 2011)	Rear right door	Active Test	Lower power windows
Cayenne(92A from MY 2011)	Rear right door	Active Test	Move power windows up
Cayenne(92A from MY 2011)	Rear right door	Special Functions	Standardizing power windows
Cayenne(92A from MY 2011)	Rear-end electronics	ECU Information	
Cayenne(92A from MY 2011)	Rear-end electronics	Read Codes	
Cayenne(92A from MY 2011)	Rear-end electronics	Clear Codes	
Cayenne(92A from MY 2011)	Rear-end electronics	Live Data	
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Activation of interior surveillance button LED
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Activation of orientation light LED
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Activation of rear fog light
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Activation,sun blind(roof)
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Alarm horn actuation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Alarm siren actuation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Brake light actuation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Central locking LED actuation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Closing aid actuation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Daytime driving lights actuation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Exhaust flaps actuation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	LED garage door opener button actuation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Luggage compartment light actuation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Numer plate light actuation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	PVTS - Resetting wake-up counters
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Rear window heater actuation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Rear wiper actuation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Reversing lights actuation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Roof system activation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Tail lights actuation
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Teach roof console
Cayenne(92A from MY 2011)	Rear-end electronics	Active Test	Vanity mirror/glove box light activation
Cayenne(92A from MY 2011)	Rear-end electronics	Special Functions	PCC/PVTS - deactivation
Cayenne(92A from MY 2011)	Rear-end electronics	Special Functions	PVTS/MOD - teach driver cards
Cayenne(92A from MY 2011)	Rear-end electronics	Special Functions	Standardization of sliding roof/panorama roof
Cayenne(92A from MY 2011)	Rear-end electronics	Special Functions	Teach Vehicle Tracking System(VTS)
Cayenne(92A from MY 2011)	Reversing camera	ECU Information	
Cayenne(92A from MY 2011)	Reversing camera	Read Codes	
Cayenne(92A from MY 2011)	Reversing camera	Clear Codes	
Cayenne(92A from MY 2011)	Reversing camera	Live Data	
Cayenne(92A from MY 2011)	Reversing camera	Active Test	Control unit reset
Cayenne(92A from MY 2011)	Reversing camera	Active Test	Parking_Aid_Button_Indicator_Light_Test
Cayenne(92A from MY 2011)	Right headlight	ECU Information	
Cayenne(92A from MY 2011)	Right headlight	Read Codes	
Cayenne(92A from MY 2011)	Right headlight	Clear Codes	
Cayenne(92A from MY 2011)	Right headlight	Live Data	
Cayenne(92A from MY 2011)	Right headlight	Active Test	Activate variable light distribution
Cayenne(92A from MY 2011)	Right headlight	Active Test	Actuate static cornering light
Cayenne(92A from MY 2011)	Right headlight	Active Test	Headlight beam adjustment calibration
Cayenne(92A from MY 2011)	Right headlight	Active Test	Headlight beam adjustment reference run
Cayenne(92A from MY 2011)	Right headlight	Active Test	Move cornering light
Cayenne(92A from MY 2011)	Right headlight	Active Test	Move headlight beam adjustment
Cayenne(92A from MY 2011)	Right headlight	Active Test	Synchronous operation of headlight beam adjustment and cornering light
Cayenne(92A from MY 2011)	Right headlight	Special Functions	Headlight beam adjustment calibration
Cayenne(92A from MY 2011)	Right headlight	Special Functions	Synchronized tests
Cayenne(92A from MY 2011)	Steering aid	ECU Information	
Cayenne(92A from MY 2011)	Steering aid	Read Codes	
Cayenne(92A from MY 2011)	Steering aid	Clear Codes	
Cayenne(92A from MY 2011)	Steering aid	Live Data	
Cayenne(92A from MY 2011)	Steering aid	Active Test	Astuator test
Cayenne(92A from MY 2011)	Steering aid	Active Test	Self test

Cayenne(92A from MY 2011)	Steering aid	Hot Functions(HOT)	Steering Angle Sensor
Cayenne(92A from MY 2011)	Steering wheel electronics	ECU Information	
Cayenne(92A from MY 2011)	Steering wheel electronics	Read Codes	
Cayenne(92A from MY 2011)	Steering wheel electronics	Clear Codes	
Cayenne(92A from MY 2011)	Steering wheel electronics	Live Data	
Cayenne(92A from MY 2011)	Steering wheel electronics	Active Test	Activation of horn
Cayenne(92A from MY 2011)	Steering wheel electronics	Active Test	Activation of steering wheel heating
Cayenne(92A from MY 2011)	Steering wheel electronics	Active Test	Activation of steering-wheel lighting brightness
Cayenne(92A from MY 2011)	Steering wheel electronics	Active Test	Increase volume
Cayenne(92A from MY 2011)	Steering wheel electronics	Active Test	Mute volume
Cayenne(92A from MY 2011)	Steering wheel electronics	Active Test	Reduce volume
Cayenne(92A from MY 2011)	Steering wheel electronics	Special Functions	Function activation
Cayenne(92A from MY 2011)	Steering wheel electronics	Special Functions	Steering-angle sensor calibration
Cayenne(92A from MY 2011)	Tiptronic transmission control	ECU Information	
Cayenne(92A from MY 2011)	Tiptronic transmission control	Read Codes	
Cayenne(92A from MY 2011)	Tiptronic transmission control	Clear Codes	
Cayenne(92A from MY 2011)	Tiptronic transmission control	Live Data	
Cayenne(92A from MY 2011)	Tiptronic transmission control	Active Test	Reset of the adaption values
Cayenne(92A from MY 2011)	Tire Pressure Monitoring System	ECU Information	
Cayenne(92A from MY 2011)	Tire Pressure Monitoring System	Read Codes	
Cayenne(92A from MY 2011)	Tire Pressure Monitoring System	Clear Codes	
Cayenne(92A from MY 2011)	Tire Pressure Monitoring System	Live Data	
Cayenne(92A from MY 2011)	Tire Pressure Monitoring System	Active Test	Control unit reset
Cayenne(92A from MY 2011)	Tire Pressure Monitoring System	Active Test	Save manually taught wheel IDs
Cayenne(92A from MY 2011)	Tire Pressure Monitoring System	Special Functions	Teach wheel IDs
Cayenne(92A from MY 2011)	Tire Pressure Monitoring System	Special Functions	Teach wheel sensors
Cayenne(92A from MY 2011)	Trailer hitch	ECU Information	
Cayenne(92A from MY 2011)	Trailer hitch	Read Codes	
Cayenne(92A from MY 2011)	Trailer hitch	Clear Codes	
Cayenne(92A from MY 2011)	Trailer hitch	Live Data	
Cayenne(92A from MY 2011)	Trailer hitch	Active Test	Brake light (trailer)
Cayenne(92A from MY 2011)	Trailer hitch	Active Test	Left direction indicator (trailer)
Cayenne(92A from MY 2011)	Trailer hitch	Active Test	Left tail light(trailer)
Cayenne(92A from MY 2011)	Trailer hitch	Active Test	Rear fog light, trailer
Cayenne(92A from MY 2011)	Trailer hitch	Active Test	Reversing lights (trailer)
Cayenne(92A from MY 2011)	Trailer hitch	Active Test	Right direction indicator light (trailer)
Cayenne(92A from MY 2011)	Trailer hitch	Active Test	Right tail light (trailer)
Cayenne(92A from MY 2011)	Trailer hitch	Active Test	Swivel in trailer hitch
Cayenne(92A from MY 2011)	Trailer hitch	Active Test	Swivel out trailer hitch
Cayenne(92A from MY 2011)	Trailer hitch	Active Test	Trailer control unit initializing
Cayenne(92A from MY 2011)	TV tuner	ECU Information	
Cayenne(92A from MY 2011)	TV tuner	Read Codes	
Cayenne(92A from MY 2011)	TV tuner	Clear Codes	
Cayenne(92A from MY 2011)	TV tuner	Live Data	
Cayenne(92A from MY 2011)	TV tuner	Active Test	Antenna reception current setting
Cayenne(92A from MY 2011)	TV tuner	Active Test	Antenna reception via channel specification
Cayenne(92A from MY 2011)	TV tuner	Active Test	Antenna road test via frequency specification
Cayenne(92A from MY 2011)	TV tuner	Active Test	Antenna statistics
Cayenne(92A from MY 2011)	TV tuner	Active Test	Antenna wiring
Cayenne(92A from MY 2011)	TV tuner	Active Test	Audio and video signal test
Cayenne(92A from MY 2011)	TV tuner	Active Test	SilentMode (bus idle)
Cayenne(92A from MY 2011)	TV tuner	Active Test	Transport mode
Cayenne(92A from MY 2011)	TV tuner	Active Test	Video signal for reversing camera
Cayenne(9PA up to MY 2010)	AHK	ECU Information	
Cayenne(9PA up to MY 2010)	AHK	Read Codes	
Cayenne(9PA up to MY 2010)	AHK	Clear Codes	
Cayenne(9PA up to MY 2010)	AHK	Live Data	
Cayenne(9PA up to MY 2010)	AHK	Active Test	
Cayenne(9PA up to MY 2010)	AHK	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	AHK	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	Air Conditioning	ECU Information	
Cayenne(9PA up to MY 2010)	Air Conditioning	Read Codes	
Cayenne(9PA up to MY 2010)	Air Conditioning	Clear Codes	
Cayenne(9PA up to MY 2010)	Air Conditioning	Live Data	
Cayenne(9PA up to MY 2010)	Air Conditioning	Active Test	
Cayenne(9PA up to MY 2010)	Air Conditioning	Special Functions	Calibration
Cayenne(9PA up to MY 2010)	Air Conditioning	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	Air Conditioning	Special Functions	Service position
Cayenne(9PA up to MY 2010)	Air Conditioning	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	Airbag	ECU Information	
Cayenne(9PA up to MY 2010)	Airbag	Read Codes	
Cayenne(9PA up to MY 2010)	Airbag	Clear Codes	
Cayenne(9PA up to MY 2010)	Airbag	Live Data	
Cayenne(9PA up to MY 2010)	Airbag	Active Test	
Cayenne(9PA up to MY 2010)	Airbag	Special Functions	Lock(rollover)
Cayenne(9PA up to MY 2010)	Airbag	Special Functions	System adaption
Cayenne(9PA up to MY 2010)	Airbag	Hot Functions(HOT)	Tire Pressure Monitoring System
Cayenne(9PA up to MY 2010)	Auxiliary Heater	ECU Information	
Cayenne(9PA up to MY 2010)	Auxiliary Heater	Read Codes	
Cayenne(9PA up to MY 2010)	Auxiliary Heater	Clear Codes	
Cayenne(9PA up to MY 2010)	Auxiliary Heater	Live Data	
Cayenne(9PA up to MY 2010)	Auxiliary Heater	Active Test	
Cayenne(9PA up to MY 2010)	Auxiliary Heater	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	Auxiliary Heater	Special Functions	Teach remote control
Cayenne(9PA up to MY 2010)	Auxiliary Heater	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	AWS	ECU Information	
Cayenne(9PA up to MY 2010)	AWS	Read Codes	
Cayenne(9PA up to MY 2010)	AWS	Clear Codes	
Cayenne(9PA up to MY 2010)	AWS	Special Functions	Calibration

Cayenne(9PA up to MY 2010)	AWS	Special Functions	Reset
Cayenne(9PA up to MY 2010)	DME	ECU Information	
Cayenne(9PA up to MY 2010)	DME	Read Codes	
Cayenne(9PA up to MY 2010)	DME	Clear Codes	
Cayenne(9PA up to MY 2010)	DME	Live Data	
Cayenne(9PA up to MY 2010)	DME	Active Test	Activation of radiator fan 1
Cayenne(9PA up to MY 2010)	DME	Active Test	Activation of radiator fan 2
Cayenne(9PA up to MY 2010)	DME	Active Test	Bank 1 intake camshaft
Cayenne(9PA up to MY 2010)	DME	Active Test	Bank 2 intake camshaft
Cayenne(9PA up to MY 2010)	DME	Active Test	Boost air bypass valve
Cayenne(9PA up to MY 2010)	DME	Active Test	Boost pressure control valve
Cayenne(9PA up to MY 2010)	DME	Active Test	Brake booster vacuum pump
Cayenne(9PA up to MY 2010)	DME	Active Test	Carbon shut-off valve
Cayenne(9PA up to MY 2010)	DME	Active Test	Coolant run-on pump
Cayenne(9PA up to MY 2010)	DME	Active Test	Exhaust camshaft
Cayenne(9PA up to MY 2010)	DME	Active Test	Exhaust gas flaps
Cayenne(9PA up to MY 2010)	DME	Active Test	Fuel pump 1
Cayenne(9PA up to MY 2010)	DME	Active Test	Fuel pump 2
Cayenne(9PA up to MY 2010)	DME	Active Test	Fuel Pump Primary Circuit
Cayenne(9PA up to MY 2010)	DME	Active Test	Fuel pump relay 2 output stage
Cayenne(9PA up to MY 2010)	DME	Active Test	Inlet camshaft
Cayenne(9PA up to MY 2010)	DME	Active Test	Intake pipe switchover
Cayenne(9PA up to MY 2010)	DME	Active Test	Leakage diagnosis pump
Cayenne(9PA up to MY 2010)	DME	Active Test	Main relay
Cayenne(9PA up to MY 2010)	DME	Active Test	Quantity control valve
Cayenne(9PA up to MY 2010)	DME	Active Test	Secondary air pump, bank 1
Cayenne(9PA up to MY 2010)	DME	Active Test	Secondary air pump, bank 2
Cayenne(9PA up to MY 2010)	DME	Active Test	Secondary air valve
Cayenne(9PA up to MY 2010)	DME	Active Test	Tank leakage diagnostic pump
Cayenne(9PA up to MY 2010)	DME	Active Test	Tank vent valve
Cayenne(9PA up to MY 2010)	DME	Active Test	Tank vent valve, final stage
Cayenne(9PA up to MY 2010)	DME	Active Test	Valve lift adjustment, bank 1
Cayenne(9PA up to MY 2010)	DME	Active Test	Valve lift adjustment, bank 2
Cayenne(9PA up to MY 2010)	DME	Active Test	Water pump control
Cayenne(9PA up to MY 2010)	DME	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	DME	Special Functions	Engine data
Cayenne(9PA up to MY 2010)	DME	Special Functions	First start
Cayenne(9PA up to MY 2010)	DME	Special Functions	Ready status
Cayenne(9PA up to MY 2010)	DME	Special Functions	Short test
Cayenne(9PA up to MY 2010)	DME	Special Functions	System adaption
Cayenne(9PA up to MY 2010)	DME	Special Functions	Vehicle data
Cayenne(9PA up to MY 2010)	DME	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	Gateway	ECU Information	
Cayenne(9PA up to MY 2010)	Gateway	Read Codes	
Cayenne(9PA up to MY 2010)	Gateway	Clear Codes	
Cayenne(9PA up to MY 2010)	Gateway	Live Data	
Cayenne(9PA up to MY 2010)	Gateway	Special Functions	Control unit replacement
Cayenne(9PA up to MY 2010)	Gateway	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	Gateway	Special Functions	General function routines
Cayenne(9PA up to MY 2010)	Gateway	Special Functions	Nominal & Actual configuration
Cayenne(9PA up to MY 2010)	Gateway	Special Functions	Read fault bits
Cayenne(9PA up to MY 2010)	Gateway	Special Functions	Reset
Cayenne(9PA up to MY 2010)	Gateway	Special Functions	Single-wire test
Cayenne(9PA up to MY 2010)	Gateway	Special Functions	Sleep mode
Cayenne(9PA up to MY 2010)	Gateway	Special Functions	Wake-Up guardian
Cayenne(9PA up to MY 2010)	Gateway	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	Headlight CU left	ECU Information	
Cayenne(9PA up to MY 2010)	Headlight CU left	Read Codes	
Cayenne(9PA up to MY 2010)	Headlight CU left	Clear Codes	
Cayenne(9PA up to MY 2010)	Headlight CU left	Live Data	
Cayenne(9PA up to MY 2010)	Headlight CU left	Active Test	Individual tests
Cayenne(9PA up to MY 2010)	Headlight CU left	Active Test	Synchronized tests
Cayenne(9PA up to MY 2010)	Headlight CU left	Special Functions	Calibration
Cayenne(9PA up to MY 2010)	Headlight CU left	Special Functions	Operating data
Cayenne(9PA up to MY 2010)	Headlight CU left	Special Functions	Reset
Cayenne(9PA up to MY 2010)	Headlight CU left	Special Functions	System exchange
Cayenne(9PA up to MY 2010)	Headlight CU right	ECU Information	
Cayenne(9PA up to MY 2010)	Headlight CU right	Read Codes	
Cayenne(9PA up to MY 2010)	Headlight CU right	Clear Codes	
Cayenne(9PA up to MY 2010)	Headlight CU right	Live Data	
Cayenne(9PA up to MY 2010)	Headlight CU right	Active Test	Individual tests
Cayenne(9PA up to MY 2010)	Headlight CU right	Active Test	Synchronized tests
Cayenne(9PA up to MY 2010)	Headlight CU right	Special Functions	Operating data
Cayenne(9PA up to MY 2010)	Headlight CU right	Special Functions	Reset
Cayenne(9PA up to MY 2010)	Headlight CU right	Special Functions	System exchange
Cayenne(9PA up to MY 2010)	Headlight CU right	Hot Functions(HOT)	Oil Reset
Cayenne(9PA up to MY 2010)	Headlight CU right	Hot Functions(HOT)	Reset with tool
Cayenne(9PA up to MY 2010)	Instrument Cluster	ECU Information	
Cayenne(9PA up to MY 2010)	Instrument Cluster	Read Codes	
Cayenne(9PA up to MY 2010)	Instrument Cluster	Clear Codes	
Cayenne(9PA up to MY 2010)	Instrument Cluster	Live Data	
Cayenne(9PA up to MY 2010)	Instrument Cluster	Active Test	
Cayenne(9PA up to MY 2010)	Instrument Cluster	Special Functions	Control unit replacement -- Read Value
Cayenne(9PA up to MY 2010)	Instrument Cluster	Special Functions	Maintenance interval
Cayenne(9PA up to MY 2010)	Instrument Cluster	Special Functions	Milage (km) since last inspection
Cayenne(9PA up to MY 2010)	Instrument Cluster	Special Functions	Time (in days) since last inspection
Cayenne(9PA up to MY 2010)	Instrument Cluster	Special Functions	Total distance
Cayenne(9PA up to MY 2010)	Kessy	ECU Information	
Cayenne(9PA up to MY 2010)	Kessy	Read Codes	

Cayenne(9PA up to MY 2010)	Kessy	Clear Codes	
Cayenne(9PA up to MY 2010)	Kessy	Live Data	
Cayenne(9PA up to MY 2010)	Kessy	Active Test	
Cayenne(9PA up to MY 2010)	Left HBA	ECU Information	
Cayenne(9PA up to MY 2010)	Left HBA	Read Codes	
Cayenne(9PA up to MY 2010)	Left HBA	Clear Codes	
Cayenne(9PA up to MY 2010)	Left HBA	Live Data	
Cayenne(9PA up to MY 2010)	Left HBA	Active Test	Position 1
Cayenne(9PA up to MY 2010)	Left HBA	Active Test	Position 2
Cayenne(9PA up to MY 2010)	Left HBA	Active Test	Position 3
Cayenne(9PA up to MY 2010)	Left HBA	Active Test	Position 4
Cayenne(9PA up to MY 2010)	Left HBA	Special Functions	Calibration
Cayenne(9PA up to MY 2010)	Left HBA	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	Left HBA	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	Level Control	ECU Information	
Cayenne(9PA up to MY 2010)	Level Control	Read Codes	
Cayenne(9PA up to MY 2010)	Level Control	Clear Codes	
Cayenne(9PA up to MY 2010)	Level Control	Live Data	
Cayenne(9PA up to MY 2010)	Level Control	Active Test	
Cayenne(9PA up to MY 2010)	Level Control	Special Functions	Bleed
Cayenne(9PA up to MY 2010)	Level Control	Special Functions	Calibration
Cayenne(9PA up to MY 2010)	Level Control	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	Level Control	Special Functions	Fill
Cayenne(9PA up to MY 2010)	Level Control	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	Mag.Field Sensor	ECU Information	
Cayenne(9PA up to MY 2010)	Mag.Field Sensor	Read Codes	
Cayenne(9PA up to MY 2010)	Mag.Field Sensor	Clear Codes	
Cayenne(9PA up to MY 2010)	Mag.Field Sensor	Live Data	
Cayenne(9PA up to MY 2010)	New HBA	ECU Information	
Cayenne(9PA up to MY 2010)	New HBA	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	New HBA	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	Panorama Roof	ECU Information	
Cayenne(9PA up to MY 2010)	Panorama Roof	Read Codes	
Cayenne(9PA up to MY 2010)	Panorama Roof	Clear Codes	
Cayenne(9PA up to MY 2010)	Panorama Roof	Live Data	
Cayenne(9PA up to MY 2010)	Park Assistant	ECU Information	
Cayenne(9PA up to MY 2010)	Park Assistant	Read Codes	
Cayenne(9PA up to MY 2010)	Park Assistant	Clear Codes	
Cayenne(9PA up to MY 2010)	Park Assistant	Live Data	
Cayenne(9PA up to MY 2010)	Park Assistant	Active Test	
Cayenne(9PA up to MY 2010)	Park Assistant	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	Park Assistant	Special Functions	Parameterization
Cayenne(9PA up to MY 2010)	Park Assistant	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	PDCC/ORS	ECU Information	
Cayenne(9PA up to MY 2010)	PDCC/ORS	Read Codes	
Cayenne(9PA up to MY 2010)	PDCC/ORS	Clear Codes	
Cayenne(9PA up to MY 2010)	PDCC/ORS	Live Data	
Cayenne(9PA up to MY 2010)	PDCC/ORS	Active Test	Bleed
Cayenne(9PA up to MY 2010)	PDCC/ORS	Active Test	FA directional valve activation
Cayenne(9PA up to MY 2010)	PDCC/ORS	Active Test	FA pressure control valve activation
Cayenne(9PA up to MY 2010)	PDCC/ORS	Active Test	RA directional valve activation
Cayenne(9PA up to MY 2010)	PDCC/ORS	Active Test	RA pressure control valve activation
Cayenne(9PA up to MY 2010)	PDCC/ORS	Active Test	Safety valve activation
Cayenne(9PA up to MY 2010)	PDCC/ORS	Active Test	System check
Cayenne(9PA up to MY 2010)	PDCC/ORS	Active Test	Valve clocking
Cayenne(9PA up to MY 2010)	PDCC/ORS	Special Functions	Calibration
Cayenne(9PA up to MY 2010)	PDCC/ORS	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	PDCC/ORS	Special Functions	Reset
Cayenne(9PA up to MY 2010)	PDCC/ORS	Special Functions	System exchange
Cayenne(9PA up to MY 2010)	PDCC/ORS	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	PSM	ECU Information	
Cayenne(9PA up to MY 2010)	PSM	Read Codes	
Cayenne(9PA up to MY 2010)	PSM	Clear Codes	
Cayenne(9PA up to MY 2010)	PSM	Live Data	
Cayenne(9PA up to MY 2010)	PSM	Active Test	
Cayenne(9PA up to MY 2010)	PSM	Special Functions	Calibration
Cayenne(9PA up to MY 2010)	PSM	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	PSM	Special Functions	System adaption
Cayenne(9PA up to MY 2010)	PSM	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	Rear/Doors	ECU Information	
Cayenne(9PA up to MY 2010)	Rear/Doors	Read Codes	
Cayenne(9PA up to MY 2010)	Rear/Doors	Clear Codes	
Cayenne(9PA up to MY 2010)	Rear/Doors	Live Data	
Cayenne(9PA up to MY 2010)	Rear/Doors	Active Test	
Cayenne(9PA up to MY 2010)	Rear/Doors	Special Functions	Control unit replacement
Cayenne(9PA up to MY 2010)	Rear/Doors	Special Functions	Installation list
Cayenne(9PA up to MY 2010)	Rear/Doors	Special Functions	Parameterization
Cayenne(9PA up to MY 2010)	Right HBA	ECU Information	
Cayenne(9PA up to MY 2010)	Right HBA	Read Codes	
Cayenne(9PA up to MY 2010)	Right HBA	Clear Codes	
Cayenne(9PA up to MY 2010)	Right HBA	Live Data	
Cayenne(9PA up to MY 2010)	Right HBA	Active Test	Position 1
Cayenne(9PA up to MY 2010)	Right HBA	Active Test	Position 2
Cayenne(9PA up to MY 2010)	Right HBA	Active Test	Position 3
Cayenne(9PA up to MY 2010)	Right HBA	Active Test	Position 4
Cayenne(9PA up to MY 2010)	Right HBA	Special Functions	Calibration
Cayenne(9PA up to MY 2010)	Right HBA	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	Right HBA	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	Seat Memory,Driver	ECU Information	

Cayenne(9PA up to MY 2010)	Seat Memory,Driver	Read Codes	
Cayenne(9PA up to MY 2010)	Seat Memory,Driver	Clear Codes	
Cayenne(9PA up to MY 2010)	Seat Memory,Driver	Live Data	
Cayenne(9PA up to MY 2010)	Seat Memory,Driver	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	Seat Memory,Driver	Special Functions	Lock
Cayenne(9PA up to MY 2010)	Seat Memory,Driver	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	Seat Memory,Passenger	ECU Information	
Cayenne(9PA up to MY 2010)	Seat Memory,Passenger	Read Codes	
Cayenne(9PA up to MY 2010)	Seat Memory,Passenger	Clear Codes	
Cayenne(9PA up to MY 2010)	Seat Memory,Passenger	Live Data	
Cayenne(9PA up to MY 2010)	Seat Memory,Passenger	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	Seat Memory,Passenger	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	Steering Col. Switch	ECU Information	
Cayenne(9PA up to MY 2010)	Steering Col. Switch	Read Codes	
Cayenne(9PA up to MY 2010)	Steering Col. Switch	Clear Codes	
Cayenne(9PA up to MY 2010)	Steering Col. Switch	Live Data	
Cayenne(9PA up to MY 2010)	Steering Col. Switch	Active Test	
Cayenne(9PA up to MY 2010)	Steering Col. Switch	Special Functions	Control unit replacement
Cayenne(9PA up to MY 2010)	Steering Col. Switch	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	Steering Col. Switch	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	Tailgate	ECU Information	
Cayenne(9PA up to MY 2010)	Tailgate	Read Codes	
Cayenne(9PA up to MY 2010)	Tailgate	Clear Codes	
Cayenne(9PA up to MY 2010)	Tailgate	Live Data	
Cayenne(9PA up to MY 2010)	Tailgate	Active Test	Close rear lid
Cayenne(9PA up to MY 2010)	Tailgate	Active Test	Open rear lid
Cayenne(9PA up to MY 2010)	Tailgate	Special Functions	Calibration
Cayenne(9PA up to MY 2010)	Tailgate	Special Functions	Control unit replacement
Cayenne(9PA up to MY 2010)	Tiptronic	ECU Information	
Cayenne(9PA up to MY 2010)	Tiptronic	Read Codes	
Cayenne(9PA up to MY 2010)	Tiptronic	Clear Codes	
Cayenne(9PA up to MY 2010)	Tiptronic	Live Data	
Cayenne(9PA up to MY 2010)	Tiptronic	Special Functions	Control unit replacement
Cayenne(9PA up to MY 2010)	Tiptronic	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	Tiptronic	Special Functions	Reset adaption values
Cayenne(9PA up to MY 2010)	Tiptronic	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	TPM	ECU Information	
Cayenne(9PA up to MY 2010)	TPM	Read Codes	
Cayenne(9PA up to MY 2010)	TPM	Clear Codes	
Cayenne(9PA up to MY 2010)	TPM	Live Data	
Cayenne(9PA up to MY 2010)	TPM	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	TPM	Special Functions	Last identification received
Cayenne(9PA up to MY 2010)	TPM	Special Functions	System adaption
Cayenne(9PA up to MY 2010)	TPM	Special Functions	System check
Cayenne(9PA up to MY 2010)	TPM	Special Functions	Write wheel set
Cayenne(9PA up to MY 2010)	TPM	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	Transfer Case	ECU Information	
Cayenne(9PA up to MY 2010)	Transfer Case	Read Codes	
Cayenne(9PA up to MY 2010)	Transfer Case	Clear Codes	
Cayenne(9PA up to MY 2010)	Transfer Case	Live Data	
Cayenne(9PA up to MY 2010)	Transverse Lock	ECU Information	
Cayenne(9PA up to MY 2010)	Transverse Lock	Read Codes	
Cayenne(9PA up to MY 2010)	Transverse Lock	Clear Codes	
Cayenne(9PA up to MY 2010)	Transverse Lock	Live Data	
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	ECU Information	
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Read Codes	
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Clear Codes	
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Live Data	
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Deactivate seat heating
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	FL parking light (side light)
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Footwell lights
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	FR parking light (side light)
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Fr. Right side marker light (NAR)
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Front left side marker light(NAR)
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Front right direction indicator
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Front washer
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Fuel pump
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Hazard warning light button
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Interior light, terminal 30G
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Lamp for additional high beam, l.
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Lamp for additional high beam, r.
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Left fog light
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Left side di. Indicator (not NAR)
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Rear left direction indicator
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Rear right direction indicator
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Rear window washer
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Right direction indicator light
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Right fog light
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Right side dir. Indicat. (not NAR)
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Setpoint generator volt.: 10.6V
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Setpoint generator volt.: 13.5V
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Setpoint generator volt.: 15.0V
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Solen. Switch f. high beam, right
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Solenoid swit. F. high beam, left
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Terminal 58d
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Two-tone horn
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Wake-up chassis
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	Windscreen washer pump
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Active Test	

Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Special Functions	Customer-specific settings
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Special Functions	System adaption
Cayenne(9PA up to MY 2010)	VEH.ELECTRICAL SYS.	Programming	Customer-specific settings
Cayenne(9PA up to MY 2010)	Wiper	ECU Information	
Cayenne(9PA up to MY 2010)	Wiper	Read Codes	
Cayenne(9PA up to MY 2010)	Wiper	Clear Codes	
Cayenne(9PA up to MY 2010)	Wiper	Live Data	
Cayenne(9PA up to MY 2010)	Wiper	Active Test	
Cayman(987)	Air Conditioning	ECU Information	
Cayman(987)	Air Conditioning	Read Codes	
Cayman(987)	Air Conditioning	Clear Codes	
Cayman(987)	Air Conditioning	Live Data	
Cayman(987)	Air Conditioning	Active Test	Central flap
Cayman(987)	Air Conditioning	Active Test	Footwell/defroster flap
Cayman(987)	Air Conditioning	Active Test	Fresh air fan
Cayman(987)	Air Conditioning	Active Test	Ram air/recirc. air flap
Cayman(987)	Air Conditioning	Active Test	Reset
Cayman(987)	Air Conditioning	Active Test	Seat heating/set ventilation
Cayman(987)	Air Conditioning	Active Test	Temperature mixing flap
Cayman(987)	Air Conditioning	Special Functions	Control unit replacement
Cayman(987)	Air Conditioning	Special Functions	System check
Cayman(987)	Air Conditioning	Hot Functions(HOT)	Oil Reset
Cayman(987)	Air Conditioning	Hot Functions(HOT)	Reset with tool
Cayman(987)	AWS	ECU Information	
Cayman(987)	AWS	Read Codes	
Cayman(987)	AWS	Clear Codes	
Cayman(987)	AWS	Live Data	
Cayman(987)	AWS	Active Test	Reset
Cayman(987)	AWS	Special Functions	Customer-specific settings
Cayman(987)	AWS	Programming	Customer-specific settings
Cayman(987)	BOSE amplifier,external	ECU Information	
Cayman(987)	BOSE amplifier,external	Read Codes	
Cayman(987)	BOSE amplifier,external	Clear Codes	
Cayman(987)	BOSE amplifier,external	Live Data	
Cayman(987)	CD autochanger	ECU Information	
Cayman(987)	CD autochanger	Read Codes	
Cayman(987)	CD autochanger	Clear Codes	
Cayman(987)	Chronometer	ECU Information	
Cayman(987)	Chronometer	Read Codes	
Cayman(987)	Chronometer	Clear Codes	
Cayman(987)	Chronometer	Live Data	
Cayman(987)	Chronometer	Active Test	Reset
Cayman(987)	Chronometer	Special Functions	Control unit replacement
Cayman(987)	Cornering Light	ECU Information	
Cayman(987)	Cornering Light	Read Codes	
Cayman(987)	Cornering Light	Clear Codes	
Cayman(987)	Cornering Light	Live Data	
Cayman(987)	Cornering Light	Active Test	Automatic movement sequence
Cayman(987)	Cornering Light	Active Test	HBA 3° downwards
Cayman(987)	Cornering Light	Active Test	HBA 3° upwards
Cayman(987)	Cornering Light	Active Test	Pivot Cornering Light to left
Cayman(987)	Cornering Light	Active Test	Pivot Cornering Light to right
Cayman(987)	Cornering Light	Active Test	Pivot with steer. wheel while stationary
Cayman(987)	Cornering Light	Active Test	Reset
Cayman(987)	Cornering Light	Special Functions	Calibration
Cayman(987)	Cornering Light	Special Functions	Customer-specific settings
Cayman(987)	Cornering Light	Programming	Customer-specific settings
Cayman(987)	DME	ECU Information	
Cayman(987)	DME	Read Codes	
Cayman(987)	DME	Clear Codes	
Cayman(987)	DME	Live Data	
Cayman(987)	DME	Active Test	Bank 1 intake camshaft
Cayman(987)	DME	Active Test	Bank 2 intake camshaft
Cayman(987)	DME	Active Test	Coolant run-on pump
Cayman(987)	DME	Active Test	Drive link active
Cayman(987)	DME	Active Test	Drive links
Cayman(987)	DME	Active Test	Engine purge fan level 1
Cayman(987)	DME	Active Test	Engine purge fan level 2
Cayman(987)	DME	Active Test	Exhaust flap (if fitted)
Cayman(987)	DME	Active Test	Fuel evaporative valve
Cayman(987)	DME	Active Test	Fuel pump 1
Cayman(987)	DME	Active Test	Fuel tank leak diagnosis pump
Cayman(987)	DME	Active Test	Fuel tank leak diagnosis valve
Cayman(987)	DME	Active Test	Intake pipe switch-over valve
Cayman(987)	DME	Active Test	Quantity control valve
Cayman(987)	DME	Active Test	Valve lift adjustment, bank 1
Cayman(987)	DME	Active Test	Valve lift adjustment, bank 2
Cayman(987)	DME	Special Functions	Customer-specific settings
Cayman(987)	DME	Special Functions	Engine data
Cayman(987)	DME	Special Functions	Ready status
Cayman(987)	DME	Special Functions	Short test
Cayman(987)	DME	Special Functions	Special functions
Cayman(987)	DME	Special Functions	System adaption
Cayman(987)	DME	Special Functions	System check
Cayman(987)	DME	Special Functions	Vehicle data
Cayman(987)	DME	Programming	Customer-specific settings
Cayman(987)	Driver's Door	ECU Information	
Cayman(987)	Driver's Door	Read Codes	
Cayman(987)	Driver's Door	Clear Codes	

Cayman(987)	Driver's Door	Live Data	
Cayman(987)	Driver's Door	Active Test	Close power window
Cayman(987)	Driver's Door	Active Test	Door guard/exit lighting
Cayman(987)	Driver's Door	Active Test	Door opening drive's side
Cayman(987)	Driver's Door	Active Test	Horizontal mirror adjustment -
Cayman(987)	Driver's Door	Active Test	Horizontal mirror adjustment +
Cayman(987)	Driver's Door	Active Test	Lock central locking
Cayman(987)	Driver's Door	Active Test	Mirror heating
Cayman(987)	Driver's Door	Active Test	Open power window
Cayman(987)	Driver's Door	Active Test	Reset
Cayman(987)	Driver's Door	Active Test	Save central locking
Cayman(987)	Driver's Door	Active Test	Unlock central locking
Cayman(987)	Driver's Door	Active Test	Vertical mirror adjustment -
Cayman(987)	Driver's Door	Active Test	Vertical mirror adjustment +
Cayman(987)	Driver's Door	Special Functions	Control unit replacement
Cayman(987)	Driver's Door	Special Functions	Customer-specific settings
Cayman(987)	Driver's Door	Programming	Customer-specific settings
Cayman(987)	Front	ECU Information	
Cayman(987)	Front	Read Codes	
Cayman(987)	Front	Clear Codes	
Cayman(987)	Front	Live Data	
Cayman(987)	Front	Active Test	Activation radiator fan
Cayman(987)	Front	Active Test	Amb. temp. sensor, power supply
Cayman(987)	Front	Active Test	FL dir. Indic. Light/side marker
Cayman(987)	Front	Active Test	Fog light/daytime driving light, left
Cayman(987)	Front	Active Test	Fog light/daytime driving light, right
Cayman(987)	Front	Active Test	FR dir. Indic. Light/side marker
Cayman(987)	Front	Active Test	High beam, left
Cayman(987)	Front	Active Test	High beam, right
Cayman(987)	Front	Active Test	Ind. Light haz. w. lights button
Cayman(987)	Front	Active Test	LED direction indic., Front left
Cayman(987)	Front	Active Test	LED direction indic., Front right
Cayman(987)	Front	Active Test	Left dipped beam(driving light)
Cayman(987)	Front	Active Test	left dir. In. light (Front/Rear)
Cayman(987)	Front	Active Test	Left rear indicator
Cayman(987)	Front	Active Test	Luggage compartment light, Front
Cayman(987)	Front	Active Test	Parking light (marker light), front left
Cayman(987)	Front	Active Test	Parking light (marker light), front right
Cayman(987)	Front	Active Test	Reset
Cayman(987)	Front	Active Test	Right dipped beam(driving light)
Cayman(987)	Front	Active Test	Right dir. In. light (Front/Rear)
Cayman(987)	Front	Active Test	Right rear indicator
Cayman(987)	Front	Active Test	Servo motor Front lid release
Cayman(987)	Front	Active Test	Two-tone horn, high pitch
Cayman(987)	Front	Active Test	Two-tone horn, low pitch
Cayman(987)	Front	Special Functions	Calibration
Cayman(987)	Front	Special Functions	Control unit replacement
Cayman(987)	Front	Special Functions	Customer-specific settings
Cayman(987)	Front	Programming	Customer-specific settings
Cayman(987)	Gateway	ECU Information	
Cayman(987)	Gateway	Read Codes	
Cayman(987)	Gateway	Clear Codes	
Cayman(987)	Gateway	Live Data	
Cayman(987)	Gateway	Active Test	Reset
Cayman(987)	Gateway	Special Functions	Basic coding
Cayman(987)	Gateway	Special Functions	Control unit replacement
Cayman(987)	Gateway	Special Functions	Single-wire test
Cayman(987)	Gateway	Special Functions	Sleep mode
Cayman(987)	Gateway	Special Functions	Vehicle variants
Cayman(987)	Gateway	Programming	Required control unit lists
Cayman(987)	Gateway	Programming	Vehicle variants
Cayman(987)	Instrument Cluster	ECU Information	
Cayman(987)	Instrument Cluster	Read Codes	
Cayman(987)	Instrument Cluster	Clear Codes	
Cayman(987)	Instrument Cluster	Live Data	
Cayman(987)	Instrument Cluster	Active Test	Adop. of CAN control unit tank corr.val.
Cayman(987)	Instrument Cluster	Active Test	Bulb test
Cayman(987)	Instrument Cluster	Active Test	Indicator test
Cayman(987)	Instrument Cluster	Active Test	Loudspeaker test
Cayman(987)	Instrument Cluster	Active Test	Reset on-board computer values
Cayman(987)	Instrument Cluster	Active Test	Reset
Cayman(987)	Instrument Cluster	Active Test	Tank content
Cayman(987)	Instrument Cluster	Active Test	Transf. of corr.val. to el.sys. c. unit
Cayman(987)	Instrument Cluster	Special Functions	Control unit replacement
Cayman(987)	Instrument Cluster	Special Functions	General function routines
Cayman(987)	Instrument Cluster	Special Functions	Special functions
Cayman(987)	Navigation	ECU Information	
Cayman(987)	Navigation	Read Codes	
Cayman(987)	Navigation	Clear Codes	
Cayman(987)	Navigation	Live Data	
Cayman(987)	Navigation	Active Test	DVD drive information
Cayman(987)	Navigation	Active Test	Factory settings
Cayman(987)	Navigation	Active Test	GPS status
Cayman(987)	Navigation	Active Test	Gyroscope (rate-of-turn sensor)
Cayman(987)	Navigation	Active Test	Read sector data
Cayman(987)	Navigation	Active Test	Reverse gear
Cayman(987)	Navigation	Active Test	Wheel pulse counter
Cayman(987)	Park Assistant	ECU Information	
Cayman(987)	Park Assistant	Read Codes	

Cayman(987)	Park Assistant	Clear Codes	
Cayman(987)	Park Assistant	Live Data	
Cayman(987)	Park Assistant	Active Test	Loudspeaker activation
Cayman(987)	Park Assistant	Active Test	Reset
Cayman(987)	Park Assistant	Active Test	Virtual reverse gear
Cayman(987)	Park Assistant	Special Functions	Control unit replacement
Cayman(987)	Park Assistant	Special Functions	Customer-specific settings
Cayman(987)	Park Assistant	Programming	Customer-specific settings
Cayman(987)	PAS	ECU Information	
Cayman(987)	PAS	Read Codes	
Cayman(987)	PAS	Clear Codes	
Cayman(987)	PAS	Live Data	
Cayman(987)	PAS	Special Functions	Basic coding
Cayman(987)	PAS	Special Functions	Control unit replacement
Cayman(987)	PAS	Special Functions	Teaching functions
Cayman(987)	PAS	Programming	Basic coding
Cayman(987)	PAS	Programming	Central locking system
Cayman(987)	PAS	Programming	Comfort functions
Cayman(987)	PAS	Programming	Key settings(key 1)
Cayman(987)	PAS	Programming	Key settings(key 2)
Cayman(987)	PAS	Programming	Key settings(key 3)
Cayman(987)	PAS	Programming	Key settings(key 4)
Cayman(987)	PASM	ECU Information	
Cayman(987)	PASM	Read Codes	
Cayman(987)	PASM	Clear Codes	
Cayman(987)	PASM	Live Data	
Cayman(987)	PASM	Active Test	Reset
Cayman(987)	PASM	Active Test	Self-test
Cayman(987)	PASM	Special Functions	Control unit replacement
Cayman(987)	Passenger's Door	ECU Information	
Cayman(987)	Passenger's Door	Read Codes	
Cayman(987)	Passenger's Door	Clear Codes	
Cayman(987)	Passenger's Door	Live Data	
Cayman(987)	Passenger's Door	Active Test	Close power window
Cayman(987)	Passenger's Door	Active Test	Door guard/exit lighting
Cayman(987)	Passenger's Door	Active Test	Door opening passenger's side
Cayman(987)	Passenger's Door	Active Test	Open power window
Cayman(987)	Passenger's Door	Active Test	Power window button lighting
Cayman(987)	Passenger's Door	Active Test	Reset
Cayman(987)	Passenger's Door	Special Functions	Control unit replacement
Cayman(987)	Passenger's Door	Special Functions	Customer-specific settings
Cayman(987)	Passenger's Door	Programming	Customer-specific settings
Cayman(987)	PCM	ECU Information	
Cayman(987)	PCM	Read Codes	
Cayman(987)	PCM	Clear Codes	
Cayman(987)	PCM	Live Data	
Cayman(987)	PCM	Active Test	CD/DVD Eject
Cayman(987)	PCM	Active Test	Developer menu
Cayman(987)	PCM	Active Test	Display test
Cayman(987)	PCM	Active Test	Power supply
Cayman(987)	PCM	Active Test	Reset
Cayman(987)	PCM	Active Test	Set default values (factory settings)
Cayman(987)	PCM	Active Test	Teaching handset...
Cayman(987)	PCM2_MMI	ECU Information	
Cayman(987)	PCM2_MMI	Read Codes	
Cayman(987)	PCM2_MMI	Clear Codes	
Cayman(987)	PCM2_MMI	Live Data	
Cayman(987)	PCM2_MMI	Active Test	Erase personal details
Cayman(987)	PCM2_MMI	Active Test	Set software list
Cayman(987)	PCM2_MMI	Active Test	Test pattern in center display
Cayman(987)	PDK Selector Lever	ECU Information	
Cayman(987)	PDK Selector Lever	Read Codes	
Cayman(987)	PDK Selector Lever	Clear Codes	
Cayman(987)	PDK Selector Lever	Active Test	Reset
Cayman(987)	PDK Selector Lever	Special Functions	Function test, sensors
Cayman(987)	PDK(Tiptronic)	ECU Information	
Cayman(987)	PDK(Tiptronic)	Read Codes	
Cayman(987)	PDK(Tiptronic)	Clear Codes	
Cayman(987)	PDK(Tiptronic)	Live Data	
Cayman(987)	PDK(Tiptronic)	Active Test	Erase adaptation values
Cayman(987)	PDK(Tiptronic)	Active Test	Reset
Cayman(987)	PDK(Tiptronic)	Active Test	Torque converter clutch
Cayman(987)	PDK(Tiptronic)	Active Test	Valve test
Cayman(987)	PDK(Tiptronic)	Special Functions	Backup measures
Cayman(987)	PDK(Tiptronic)	Special Functions	Control unit replacement
Cayman(987)	PDK(Tiptronic)	Special Functions	Customer-specific settings
Cayman(987)	PDK(Tiptronic)	Special Functions	Fluid fill mode
Cayman(987)	PDK(Tiptronic)	Programming	Customer-specific settings
Cayman(987)	POSIP	ECU Information	
Cayman(987)	POSIP	Read Codes	
Cayman(987)	POSIP	Clear Codes	
Cayman(987)	POSIP	Live Data	
Cayman(987)	POSIP	Active Test	Airbag Off indicator light
Cayman(987)	POSIP	Active Test	Airbag sys. error to ins. cluster
Cayman(987)	POSIP	Active Test	Airbag warning light
Cayman(987)	POSIP	Active Test	AWS sys. error to instr. cluster
Cayman(987)	POSIP	Active Test	Crash signal to CAN
Cayman(987)	POSIP	Active Test	Crash signal
Cayman(987)	POSIP	Active Test	Reset

Cayman(987)	POSIP	Active Test	Sys. err. roll-over bar ins. cl.
Cayman(987)	POSIP	Special Functions	Control unit replacement
Cayman(987)	POSIP	Special Functions	Customer-specific settings
Cayman(987)	POSIP	Programming	Customer-specific settings
Cayman(987)	PSM	ECU Information	
Cayman(987)	PSM	Read Codes	
Cayman(987)	PSM	Clear Codes	
Cayman(987)	PSM	Live Data	
Cayman(987)	PSM	Active Test	Pump motor activation
Cayman(987)	PSM	Active Test	Warning light
Cayman(987)	PSM	Special Functions	Bleed
Cayman(987)	PSM	Special Functions	Calibration
Cayman(987)	PSM	Special Functions	Control unit replacement
Cayman(987)	PSM	Special Functions	Customer-specific settings
Cayman(987)	PSM	Special Functions	Inspections/tests
Cayman(987)	PSM	Special Functions	Static test
Cayman(987)	PSM	Programming	Customer-specific settings
Cayman(987)	Rear	ECU Information	
Cayman(987)	Rear	Read Codes	
Cayman(987)	Rear	Clear Codes	
Cayman(987)	Rear	Live Data	
Cayman(987)	Rear	Active Test	Activate compressor
Cayman(987)	Rear	Active Test	Anti-theft system horn
Cayman(987)	Rear	Active Test	Brake lights
Cayman(987)	Rear	Active Test	Convertible top closing
Cayman(987)	Rear	Active Test	Convertible top opening
Cayman(987)	Rear	Active Test	Extend spoiler
Cayman(987)	Rear	Active Test	Information terminal 30 on
Cayman(987)	Rear	Active Test	Interior monitoring
Cayman(987)	Rear	Active Test	LED anti-theft syst. Funct. Light
Cayman(987)	Rear	Active Test	Left tail light
Cayman(987)	Rear	Active Test	Lower vehicle
Cayman(987)	Rear	Active Test	Number plate light
Cayman(987)	Rear	Active Test	Raise vehicle
Cayman(987)	Rear	Active Test	Rear fog light
Cayman(987)	Rear	Active Test	Rear lid release
Cayman(987)	Rear	Active Test	Rear luggage compartment light
Cayman(987)	Rear	Active Test	Reset
Cayman(987)	Rear	Active Test	Retract spoiler
Cayman(987)	Rear	Active Test	Reversing light
Cayman(987)	Rear	Active Test	Right tail light
Cayman(987)	Rear	Active Test	Siren
Cayman(987)	Rear	Active Test	Transport mode
Cayman(987)	Rear	Special Functions	Activation state memory
Cayman(987)	Rear	Special Functions	Control unit replacement
Cayman(987)	Rear	Special Functions	Customer-specific settings
Cayman(987)	Rear	Special Functions	Interior monitoring
Cayman(987)	Rear	Programming	Customer-specific settings
Cayman(987)	Seat Memory	ECU Information	
Cayman(987)	Seat Memory	Read Codes	
Cayman(987)	Seat Memory	Clear Codes	
Cayman(987)	Seat Memory	Live Data	
Cayman(987)	Seat Memory	Active Test	Approach to stored val. Person 1
Cayman(987)	Seat Memory	Active Test	Approach to stored val. Person 2
Cayman(987)	Seat Memory	Active Test	Approach to stored values key 1
Cayman(987)	Seat Memory	Active Test	Approach to stored values key 2
Cayman(987)	Seat Memory	Active Test	Approach to stored values key 3
Cayman(987)	Seat Memory	Active Test	Approach to stored values key 4
Cayman(987)	Seat Memory	Active Test	Approach to stored values key 5
Cayman(987)	Seat Memory	Active Test	Approach to stored values key 6
Cayman(987)	Seat Memory	Active Test	Backrest backward
Cayman(987)	Seat Memory	Active Test	Backrest forward
Cayman(987)	Seat Memory	Active Test	Fore/aft adjustment forward
Cayman(987)	Seat Memory	Active Test	Front height downward
Cayman(987)	Seat Memory	Active Test	Front height upward
Cayman(987)	Seat Memory	Active Test	Longitudinal adjustment Rearward
Cayman(987)	Seat Memory	Active Test	Pressurize lower lumbar
Cayman(987)	Seat Memory	Active Test	Pressurize upper lumbar
Cayman(987)	Seat Memory	Active Test	Rear height downward
Cayman(987)	Seat Memory	Active Test	Rear height upward
Cayman(987)	Seat Memory	Active Test	Reset
Cayman(987)	Seat Memory	Active Test	Save values for key 1
Cayman(987)	Seat Memory	Active Test	Save values for key 2
Cayman(987)	Seat Memory	Active Test	Save values for key 3
Cayman(987)	Seat Memory	Active Test	Save values for key 4
Cayman(987)	Seat Memory	Active Test	Save values for key 5
Cayman(987)	Seat Memory	Active Test	Save values for key 6
Cayman(987)	Seat Memory	Active Test	Save values for person 1
Cayman(987)	Seat Memory	Active Test	Save values for person 2
Cayman(987)	Seat Memory	Active Test	Ventilate lower lumbar
Cayman(987)	Seat Memory	Active Test	Ventilate upper lumbar
Cayman(987)	Seat Memory	Special Functions	Control unit replacement
Cayman(987)	Seat Memory	Special Functions	Customer-specific settings
Cayman(987)	Seat Memory	Programming	Customer-specific settings
Cayman(987)	Steering Col. Switch	ECU Information	
Cayman(987)	Steering Col. Switch	Read Codes	
Cayman(987)	Steering Col. Switch	Clear Codes	
Cayman(987)	Steering Col. Switch	Live Data	
Cayman(987)	Steering Col. Switch	Active Test	Audio activation louder

Cayman(987)	Steering Col. Switch	Active Test	Audio activation mute
Cayman(987)	Steering Col. Switch	Active Test	Audio activation quieter
Cayman(987)	Steering Col. Switch	Active Test	Reset
Cayman(987)	Steering Col. Switch	Active Test	Steering wheel heating on
Cayman(987)	Steering Col. Switch	Active Test	Steering wheel lighting
Cayman(987)	Steering Col. Switch	Special Functions	Control unit replacement
Cayman(987)	Steering Col. Switch	Special Functions	Customer-specific settings
Cayman(987)	Steering Col. Switch	Hot Functions(HOT)	Tire Pressure Monitoring System
Cayman(987)	Steering Col. Switch	Programming	Customer-specific settings
Cayman(987)	Telephone	ECU Information	
Cayman(987)	Telephone	Read Codes	
Cayman(987)	Telephone	Clear Codes	
Cayman(987)	Telephone	Live Data	
Cayman(987)	TPM	ECU Information	
Cayman(987)	TPM	Read Codes	
Cayman(987)	TPM	Clear Codes	
Cayman(987)	TPM	Live Data	
Cayman(987)	TPM	Special Functions	Control unit replacement
Cayman(987)	TPM	Special Functions	Customer-specific settings
Cayman(987)	TPM	Special Functions	Last identification received
Cayman(987)	TPM	Special Functions	System adaption
Cayman(987)	TPM	Special Functions	System status
Cayman(987)	TPM	Programming	Customer-specific settings
Cayman(987)	TV tuner	ECU Information	
Cayman(987)	TV tuner	Read Codes	
Cayman(987)	TV tuner	Clear Codes	
Cayman(987)	TV tuner	Live Data	
Cayman(987)	TV tuner	Active Test	Driving test: level measurement with frequency input
Cayman(987)	TV tuner	Active Test	Driving test: level measurement with level/country input
Cayman(987)	TV tuner	Active Test	Level measurement with channel/country entry
Cayman(987)	TV tuner	Active Test	Level measurement with curr. TV setting
Cayman(987)	TV tuner	Active Test	Level measurement with frequency entry
Cayman(987)	TV tuner	Active Test	Reset
Cayman(987)	TV tuner	Active Test	Statistical antenna diagnosis
Cayman(987)	VEH.ELECTRICAL SYS.	ECU Information	
Cayman(987)	VEH.ELECTRICAL SYS.	Read Codes	
Cayman(987)	VEH.ELECTRICAL SYS.	Clear Codes	
Cayman(987)	VEH.ELECTRICAL SYS.	Live Data	
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Garage door opener LED
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Headlight cleaning system
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Interior light
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Left seat heater
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Lock filler flap
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Orientation light
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Rear spoiler function light
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Rear window heater
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Reset garage door opener buttons
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Reset
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Right seat heater
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Sport-function light
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Switch off terminal 30G
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Teach universal receiver
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Unlock filler flap
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Voltage for rain sensor
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Washing system pump
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Wiper brake
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Wiper motor stage 1
Cayman(987)	VEH.ELECTRICAL SYS.	Active Test	Wiper motor stage 2
Cayman(987)	VEH.ELECTRICAL SYS.	Special Functions	Control unit replacement
Cayman(987)	VEH.ELECTRICAL SYS.	Special Functions	Customer-specific settings
Cayman(987)	VEH.ELECTRICAL SYS.	Programming	Customer-specific settings
Cayman/Boxster(986)	ABS	ECU Information	
Cayman/Boxster(986)	ABS	Read Codes	
Cayman/Boxster(986)	ABS	Clear Codes	
Cayman/Boxster(986)	ABS	Live Data	
Cayman/Boxster(986)	Air conditioning	ECU Information	
Cayman/Boxster(986)	Air conditioning	Read Codes	
Cayman/Boxster(986)	Air conditioning	Clear Codes	
Cayman/Boxster(986)	Air conditioning	Live Data	
Cayman/Boxster(986)	Air conditioning	Active Test	A/C request signal
Cayman/Boxster(986)	Air conditioning	Active Test	Central flap motor
Cayman/Boxster(986)	Air conditioning	Active Test	Footwell/defrost flap motor
Cayman/Boxster(986)	Air conditioning	Active Test	Fresh air fan
Cayman/Boxster(986)	Air conditioning	Active Test	Outside air/recirc. air flap
Cayman/Boxster(986)	Air conditioning	Active Test	Temperature mixing flap motor
Cayman/Boxster(986)	Airbag	ECU Information	
Cayman/Boxster(986)	Airbag	Read Codes	
Cayman/Boxster(986)	Airbag	Clear Codes	
Cayman/Boxster(986)	Airbag	Live Data	
Cayman/Boxster(986)	Alarm system	ECU Information	
Cayman/Boxster(986)	Alarm system	Read Codes	
Cayman/Boxster(986)	Alarm system	Clear Codes	
Cayman/Boxster(986)	Automatic Transmission-Tiptronic	ECU Information	
Cayman/Boxster(986)	Automatic Transmission-Tiptronic	Read Codes	
Cayman/Boxster(986)	Automatic Transmission-Tiptronic	Clear Codes	
Cayman/Boxster(986)	Automatic Transmission-Tiptronic	Live Data	
Cayman/Boxster(986)	Automatic Transmission-Tiptronic	Active Test	Coolant shutoff valve
Cayman/Boxster(986)	Automatic Transmission-Tiptronic	Active Test	Solenoid valve 1
Cayman/Boxster(986)	Automatic Transmission-Tiptronic	Active Test	Solenoid valve 2

Cayman/Boxster(986)	Automatic Transmission-Tiptronic	Active Test	Solenoid valve 3
Cayman/Boxster(986)	DME	ECU Information	
Cayman/Boxster(986)	DME	Read Codes	
Cayman/Boxster(986)	DME	Clear Codes	
Cayman/Boxster(986)	DME	Live Data	
Cayman/Boxster(986)	DME	Active Test	A/C compressor
Cayman/Boxster(986)	DME	Active Test	Camshaft adjustment, bank 1
Cayman/Boxster(986)	DME	Active Test	Camshaft adjustment, bank 2
Cayman/Boxster(986)	DME	Active Test	Charcoal filter shutoff valve
Cayman/Boxster(986)	DME	Active Test	Check Engine
Cayman/Boxster(986)	DME	Active Test	Coolant shutoff valve
Cayman/Boxster(986)	DME	Active Test	Cylinder 1 injection valve off
Cayman/Boxster(986)	DME	Active Test	Cylinder 2 injection valve off
Cayman/Boxster(986)	DME	Active Test	Cylinder 3 injection valve off
Cayman/Boxster(986)	DME	Active Test	Cylinder 4 injection valve off
Cayman/Boxster(986)	DME	Active Test	Cylinder 5 injection valve off
Cayman/Boxster(986)	DME	Active Test	Cylinder 6 injection valve off
Cayman/Boxster(986)	DME	Active Test	Engine compartment purge fan
Cayman/Boxster(986)	DME	Active Test	Fan
Cayman/Boxster(986)	DME	Active Test	Fuel evaporative valve
Cayman/Boxster(986)	DME	Active Test	Fuel evaporative
Cayman/Boxster(986)	DME	Active Test	Fuel pump relay final stage
Cayman/Boxster(986)	DME	Active Test	IACV
Cayman/Boxster(986)	DME	Active Test	Intake pipe switchover
Cayman/Boxster(986)	DME	Active Test	Intake pipe switchover
Cayman/Boxster(986)	DME	Active Test	Rpm signal
Cayman/Boxster(986)	DME	Active Test	Secondary air pump
Cayman/Boxster(986)	DME	Active Test	Switch-over valve(secondary air)
Cayman/Boxster(986)	DME	Active Test	Switch-over valve(tuning flap)
Cayman/Boxster(986)	HBA	ECU Information	
Cayman/Boxster(986)	HBA	Read Codes	
Cayman/Boxster(986)	HBA	Clear Codes	
Cayman/Boxster(986)	HBA	Live Data	
Cayman/Boxster(986)	HBA	Active Test	Servo motors in max. position
Cayman/Boxster(986)	HBA	Active Test	Servo motors in middle position
Cayman/Boxster(986)	HBA	Active Test	Servo motors in min. position
Cayman/Boxster(986)	Instrument cluster	ECU Information	
Cayman/Boxster(986)	Instrument cluster	Read Codes	
Cayman/Boxster(986)	Instrument cluster	Clear Codes	
Cayman/Boxster(986)	Instrument cluster	Live Data	
Cayman/Boxster(986)	Instrument cluster	Active Test	Analog speedometer
Cayman/Boxster(986)	Instrument cluster	Active Test	Belt buzzer
Cayman/Boxster(986)	Instrument cluster	Active Test	Brake fluid warning lamp
Cayman/Boxster(986)	Instrument cluster	Active Test	Brake pad warning lamp
Cayman/Boxster(986)	Instrument cluster	Active Test	Buzzer (v) variable
Cayman/Boxster(986)	Instrument cluster	Active Test	Buzzer
Cayman/Boxster(986)	Instrument cluster	Active Test	Coolant temperature
Cayman/Boxster(986)	Instrument cluster	Active Test	Coolant warning lamp
Cayman/Boxster(986)	Instrument cluster	Active Test	Dimming, external
Cayman/Boxster(986)	Instrument cluster	Active Test	Display color red
Cayman/Boxster(986)	Instrument cluster	Active Test	Display color yellow
Cayman/Boxster(986)	Instrument cluster	Active Test	Display dimming(background)
Cayman/Boxster(986)	Instrument cluster	Active Test	Display segments
Cayman/Boxster(986)	Instrument cluster	Active Test	Fuel level display
Cayman/Boxster(986)	Instrument cluster	Active Test	Fuel level warning lamp
Cayman/Boxster(986)	Instrument cluster	Active Test	Gong signal
Cayman/Boxster(986)	Instrument cluster	Active Test	Instrument cluster warning lights
Cayman/Boxster(986)	Instrument cluster	Active Test	Key buzzer
Cayman/Boxster(986)	Instrument cluster	Active Test	Lamp dimming
Cayman/Boxster(986)	Instrument cluster	Active Test	Light buzzer
Cayman/Boxster(986)	Instrument cluster	Active Test	Pattern - even columns
Cayman/Boxster(986)	Instrument cluster	Active Test	Pattern - even lines
Cayman/Boxster(986)	Instrument cluster	Active Test	Pattern - odd columns
Cayman/Boxster(986)	Instrument cluster	Active Test	Pattern - odd lines
Cayman/Boxster(986)	Instrument cluster	Active Test	Pointer
Cayman/Boxster(986)	Instrument cluster	Active Test	Speed buzzer
Cayman/Boxster(986)	Instrument cluster	Active Test	Speedometer A
Cayman/Boxster(986)	Instrument cluster	Active Test	Spoiler warning lamp
Cayman/Boxster(986)	Instrument cluster	Active Test	spoiler
Cayman/Boxster(986)	Instrument cluster	Active Test	Tachometer
Cayman/Boxster(986)	Instrument cluster	Active Test	Text output
Cayman/Boxster(986)	Instrument cluster	Active Test	Washer fluid warning lamp
Cayman/Boxster(986)	Instrument cluster	Special Functions	Read out values
Cayman/Boxster(986)	Instrument cluster	Special Functions	Reset tank calibration value
Cayman/Boxster(986)	Instrument cluster	Special Functions	Tank calibration
Cayman/Boxster(986)	Instrument cluster	Special Functions	Total distance
Cayman/Boxster(986)	Instrument cluster	Special Functions	Write values
Cayman/Boxster(986)	Park Assistant	ECU Information	
Cayman/Boxster(986)	Park Assistant	Read Codes	
Cayman/Boxster(986)	Park Assistant	Clear Codes	
Cayman/Boxster(986)	Park Assistant	Live Data	
Cayman/Boxster(986)	Park Assistant	Active Test	Continuous tone
Cayman/Boxster(986)	Seat Memory	ECU Information	
Cayman/Boxster(986)	Seat Memory	Read Codes	
Cayman/Boxster(986)	Seat Memory	Clear Codes	
Cayman/Boxster(986)	Seat Memory	Live Data	
Cayman/Boxster(986)	Seat Memory	Active Test	Approach to nom. Position, key 1
Cayman/Boxster(986)	Seat Memory	Active Test	Approach to nom. Position, key 2
Cayman/Boxster(986)	Seat Memory	Active Test	Approach to nom. Position, key 3

Cayman/Boxster(986)	Seat Memory	Active Test	Approach to nom. Position, key 4
Cayman/Boxster(986)	Seat Memory	Active Test	Approach to nominal position 1
Cayman/Boxster(986)	Seat Memory	Active Test	Approach to nominal position 2
Cayman/Boxster(986)	Seat Memory	Active Test	Approach to nominal position 3
Cayman/Boxster(986)	Seat Memory	Active Test	Approach to required key position
Cayman/Boxster(986)	Seat Memory	Active Test	Backrest forward
Cayman/Boxster(986)	Seat Memory	Active Test	Backrest Rearward
Cayman/Boxster(986)	Seat Memory	Active Test	Depressurize lower valve
Cayman/Boxster(986)	Seat Memory	Active Test	Depressurize upper valve
Cayman/Boxster(986)	Seat Memory	Active Test	Front height downward
Cayman/Boxster(986)	Seat Memory	Active Test	Front height upward
Cayman/Boxster(986)	Seat Memory	Active Test	Left mirror downward
Cayman/Boxster(986)	Seat Memory	Active Test	Left mirror to the left
Cayman/Boxster(986)	Seat Memory	Active Test	Left mirror to the right
Cayman/Boxster(986)	Seat Memory	Active Test	Left mirror upward
Cayman/Boxster(986)	Seat Memory	Active Test	Longitudinal adjustment forward
Cayman/Boxster(986)	Seat Memory	Active Test	Longitudinal adjustment Rearward
Cayman/Boxster(986)	Seat Memory	Active Test	Pressurize lower valve
Cayman/Boxster(986)	Seat Memory	Active Test	Pressurize upper valve
Cayman/Boxster(986)	Seat Memory	Active Test	Rear height downward
Cayman/Boxster(986)	Seat Memory	Active Test	Rear height upward
Cayman/Boxster(986)	Seat Memory	Active Test	Right mirror downward
Cayman/Boxster(986)	Seat Memory	Active Test	Right mirror to the left
Cayman/Boxster(986)	Seat Memory	Active Test	Right mirror to the right
Cayman/Boxster(986)	Seat Memory	Active Test	Right mirror upward
Cayman/Boxster(986)	Seat Memory	Active Test	Storage of key 1 position
Cayman/Boxster(986)	Seat Memory	Active Test	Storage of key 2 position
Cayman/Boxster(986)	Seat Memory	Active Test	Storage of key 3 position
Cayman/Boxster(986)	Seat Memory	Active Test	Storage of key 4 position
Cayman/Boxster(986)	Seat Memory	Active Test	Storage of key position
Cayman/Boxster(986)	Seat Memory	Active Test	Storage of position 1
Cayman/Boxster(986)	Seat Memory	Active Test	Storage of position 2
Cayman/Boxster(986)	Seat Memory	Active Test	Storage of position 3
GT2(996)	ABS	ECU Information	
GT2(996)	ABS	Read Codes	
GT2(996)	ABS	Clear Codes	
GT2(996)	ABS	Live Data	
GT2(996)	Air conditioning	ECU Information	
GT2(996)	Air conditioning	Read Codes	
GT2(996)	Air conditioning	Clear Codes	
GT2(996)	Air conditioning	Live Data	
GT2(996)	Air conditioning	Active Test	A/C request signal
GT2(996)	Air conditioning	Active Test	Central flap motor
GT2(996)	Air conditioning	Active Test	Footwell/defrost flap motor
GT2(996)	Air conditioning	Active Test	Fresh air fan
GT2(996)	Air conditioning	Active Test	Outside air/recirc. air flap
GT2(996)	Air conditioning	Active Test	Temperature mixing flap motor
GT2(996)	Airbag	ECU Information	
GT2(996)	Airbag	Read Codes	
GT2(996)	Airbag	Clear Codes	
GT2(996)	Airbag	Live Data	
GT2(996)	Alarm system	ECU Information	
GT2(996)	Alarm system	Read Codes	
GT2(996)	Alarm system	Clear Codes	
GT2(996)	DME	ECU Information	
GT2(996)	DME	Read Codes	
GT2(996)	DME	Clear Codes	
GT2(996)	DME	Live Data	
GT2(996)	DME	Active Test	A/C compressor
GT2(996)	DME	Active Test	Boost air bypass valve
GT2(996)	DME	Active Test	Camshaft adjustment, bank 1
GT2(996)	DME	Active Test	Camshaft adjustment, bank 2
GT2(996)	DME	Active Test	Charcoal filter shutoff valve
GT2(996)	DME	Active Test	Coolant shutoff valve
GT2(996)	DME	Active Test	Cylinder 1 injection valve off
GT2(996)	DME	Active Test	Cylinder 2 injection valve off
GT2(996)	DME	Active Test	Cylinder 3 injection valve off
GT2(996)	DME	Active Test	Cylinder 4 injection valve off
GT2(996)	DME	Active Test	Cylinder 5 injection valve off
GT2(996)	DME	Active Test	Cylinder 6 injection valve off
GT2(996)	DME	Active Test	Engine compartment purge fan
GT2(996)	DME	Active Test	Fan
GT2(996)	DME	Active Test	Frequency valve, boost control
GT2(996)	DME	Active Test	Fuel evaporative valve
GT2(996)	DME	Active Test	Fuel pump relay final stage
GT2(996)	DME	Active Test	Secondary air pump
GT2(996)	DME	Active Test	Switch-over valve(secondary air)
GT2(996)	DME	Active Test	Valve lift control, banks 1 and 2
GT2(996)	HBA	ECU Information	
GT2(996)	HBA	Read Codes	
GT2(996)	HBA	Clear Codes	
GT2(996)	HBA	Live Data	
GT2(996)	HBA	Active Test	Servo motors in max. position
GT2(996)	HBA	Active Test	Servo motors in middle position
GT2(996)	HBA	Active Test	Servo motors in min. position
GT2(996)	HBA	Hot Functions(HOT)	Diesel Particle Filter
GT2(996)	Instrument cluster	ECU Information	
GT2(996)	Instrument cluster	Read Codes	
GT2(996)	Instrument cluster	Clear Codes	

GT2(996)	Instrument cluster	Live Data	
GT2(996)	Instrument cluster	Active Test	Buzzer
GT2(996)	Instrument cluster	Active Test	Display color red
GT2(996)	Instrument cluster	Active Test	Display color yellow
GT2(996)	Instrument cluster	Active Test	Gong signal
GT2(996)	Instrument cluster	Active Test	Instrument cluster warning lights
GT2(996)	Instrument cluster	Active Test	Pattern - even columns
GT2(996)	Instrument cluster	Active Test	Pattern - even lines
GT2(996)	Instrument cluster	Active Test	Pattern - odd columns
GT2(996)	Instrument cluster	Active Test	Pattern - odd lines
GT2(996)	Instrument cluster	Active Test	Pointer
GT2(996)	Instrument cluster	Active Test	Speedometer A
GT2(996)	Instrument cluster	Active Test	Text output
GT2(996)	Instrument cluster	Special Functions	Read out values
GT2(996)	Instrument cluster	Special Functions	Reset tank calibration value
GT2(996)	Instrument cluster	Special Functions	Total distance
GT2(996)	Instrument cluster	Special Functions	Write values
GT2(996)	PCM2	Read Codes	
GT2(996)	PCM2	Clear Codes	
GT3(996)	ABS 5	ECU Information	
GT3(996)	ABS 5	Read Codes	
GT3(996)	ABS 5	Clear Codes	
GT3(996)	ABS 5	Live Data	
GT3(996)	Air conditioning	ECU Information	
GT3(996)	Air conditioning	Read Codes	
GT3(996)	Air conditioning	Clear Codes	
GT3(996)	Air conditioning	Live Data	
GT3(996)	Air conditioning	Active Test	A/C request signal
GT3(996)	Air conditioning	Active Test	Central flap motor
GT3(996)	Air conditioning	Active Test	Footwell/defrost flap motor
GT3(996)	Air conditioning	Active Test	Fresh air fan
GT3(996)	Air conditioning	Active Test	Outside air/recirc. air flap
GT3(996)	Air conditioning	Active Test	Temperature mixing flap motor
GT3(996)	Airbag	ECU Information	
GT3(996)	Airbag	Read Codes	
GT3(996)	Airbag	Clear Codes	
GT3(996)	Airbag	Live Data	
GT3(996)	Alarm system	ECU Information	
GT3(996)	Alarm system	Read Codes	
GT3(996)	Alarm system	Clear Codes	
GT3(996)	CDR23	Read Codes	
GT3(996)	CDR23	Clear Codes	
GT3(996)	DME	ECU Information	
GT3(996)	DME	Read Codes	
GT3(996)	DME	Clear Codes	
GT3(996)	DME	Live Data	
GT3(996)	DME	Active Test	A/C compressor
GT3(996)	DME	Active Test	Camshaft adjustment, bank 1
GT3(996)	DME	Active Test	Camshaft adjustment, bank 2
GT3(996)	DME	Active Test	Charcoal filter shutoff valve
GT3(996)	DME	Active Test	Check Engine
GT3(996)	DME	Active Test	Coolant shutoff valve
GT3(996)	DME	Active Test	Cylinder 1 injection valve off
GT3(996)	DME	Active Test	Cylinder 2 injection valve off
GT3(996)	DME	Active Test	Cylinder 3 injection valve off
GT3(996)	DME	Active Test	Cylinder 4 injection valve off
GT3(996)	DME	Active Test	Cylinder 5 injection valve off
GT3(996)	DME	Active Test	Cylinder 6 injection valve off
GT3(996)	DME	Active Test	Engine compartment purge fan
GT3(996)	DME	Active Test	Fan
GT3(996)	DME	Active Test	Fuel evaporative valve
GT3(996)	DME	Active Test	Fuel pump relay final stage
GT3(996)	DME	Active Test	IACV
GT3(996)	DME	Active Test	Intake pipe switchover
GT3(996)	DME	Active Test	Resonance flap
GT3(996)	DME	Active Test	Rpm signal
GT3(996)	DME	Active Test	Secondary air pump
GT3(996)	DME	Active Test	Switch-over valve(secondary air)
GT3(996)	DME	Active Test	Valve lift control, banks 1 and 2
GT3(996)	HBA	ECU Information	
GT3(996)	HBA	Read Codes	
GT3(996)	HBA	Clear Codes	
GT3(996)	HBA	Live Data	
GT3(996)	HBA	Active Test	Servo motors in max. position
GT3(996)	HBA	Active Test	Servo motors in middle position
GT3(996)	HBA	Active Test	Servo motors in min. position
GT3(996)	Instrument cluster	ECU Information	
GT3(996)	Instrument cluster	Read Codes	
GT3(996)	Instrument cluster	Clear Codes	
GT3(996)	Instrument cluster	Live Data	
GT3(996)	Instrument cluster	Active Test	Analog speedometer
GT3(996)	Instrument cluster	Active Test	Belt buzzer
GT3(996)	Instrument cluster	Active Test	Brake fluid warning lamp
GT3(996)	Instrument cluster	Active Test	Brake pad warning lamp
GT3(996)	Instrument cluster	Active Test	Buzzer (v) variable
GT3(996)	Instrument cluster	Active Test	Buzzer
GT3(996)	Instrument cluster	Active Test	Coolant temperature
GT3(996)	Instrument cluster	Active Test	Coolant warning lamp
GT3(996)	Instrument cluster	Active Test	Dimming, external

GT3(996)	Instrument cluster	Active Test	Display color red
GT3(996)	Instrument cluster	Active Test	Display color yellow
GT3(996)	Instrument cluster	Active Test	Display dimming(background)
GT3(996)	Instrument cluster	Active Test	Display segments
GT3(996)	Instrument cluster	Active Test	Fuel level display
GT3(996)	Instrument cluster	Active Test	Fuel level warning lamp
GT3(996)	Instrument cluster	Active Test	Gong signal
GT3(996)	Instrument cluster	Active Test	Instrument cluster warning lights
GT3(996)	Instrument cluster	Active Test	Key buzzer
GT3(996)	Instrument cluster	Active Test	Lamp dimming
GT3(996)	Instrument cluster	Active Test	Light buzzer
GT3(996)	Instrument cluster	Active Test	Pattern - even columns
GT3(996)	Instrument cluster	Active Test	Pattern - even lines
GT3(996)	Instrument cluster	Active Test	Pattern - odd columns
GT3(996)	Instrument cluster	Active Test	Pattern - odd lines
GT3(996)	Instrument cluster	Active Test	Pointer
GT3(996)	Instrument cluster	Active Test	Speed buzzer
GT3(996)	Instrument cluster	Active Test	Speedometer A
GT3(996)	Instrument cluster	Active Test	Tachometer
GT3(996)	Instrument cluster	Active Test	Text output
GT3(996)	Instrument cluster	Active Test	Vehicle voltage display
GT3(996)	Instrument cluster	Active Test	Washer fluid warning lamp
GT3(996)	Instrument cluster	Special Functions	Read out values
GT3(996)	Instrument cluster	Special Functions	Reset tank calibration value
GT3(996)	Instrument cluster	Special Functions	Total distance
GT3(996)	Instrument cluster	Special Functions	Write values
Macan	Adaptive cruise control(ACC)	ECU Information	
Macan	Adaptive cruise control(ACC)	Read Codes	
Macan	Adaptive cruise control(ACC)	Clear Codes	
Macan	Adaptive cruise control(ACC)	Live Data	
Macan	Adaptive cruise control(ACC)	Active Test	Control unit reset
Macan	Adaptive cruise control(ACC)	Active Test	Lens heater
Macan	Adaptive cruise control(ACC)	Special Functions	Adjust adaptive cruise control
Macan	Additional compass instrument	ECU Information	
Macan	Additional compass instrument	Read Codes	
Macan	Additional compass instrument	Clear Codes	
Macan	Additional compass instrument	Live Data	
Macan	Additional compass instrument	Active Test	Automatic compass calibration
Macan	Additional compass instrument	Active Test	Compass
Macan	Additional compass instrument	Active Test	Control unit reset
Macan	Additional compass instrument	Active Test	Lighting
Macan	Additional compass instrument	Active Test	Segments
Macan	Additional instrument:watch	ECU Information	
Macan	Additional instrument:watch	Read Codes	
Macan	Additional instrument:watch	Clear Codes	
Macan	Additional instrument:watch	Live Data	
Macan	Additional instrument:watch	Active Test	Control unit reset
Macan	Additional instrument:watch	Active Test	Lighting test
Macan	Additional instrument:watch	Active Test	Pointer
Macan	Additional instrument:watch	Active Test	Self-test
Macan	Additional instrument:watch	Active Test	Test segment display
Macan	Air conditioner	ECU Information	
Macan	Air conditioner	Read Codes	
Macan	Air conditioner	Clear Codes	
Macan	Air conditioner	Live Data	
Macan	Air conditioner	Active Test	Compressor break - in reset
Macan	Air conditioner	Active Test	Compressor break-in
Macan	Air conditioner	Active Test	Defroster flap
Macan	Air conditioner	Active Test	Display test
Macan	Air conditioner	Active Test	Erase fault memory after control unit replacement or coding
Macan	Air conditioner	Active Test	Extended ventilation field, left
Macan	Air conditioner	Active Test	Extended ventilation field, right
Macan	Air conditioner	Active Test	Fresh-air blower
Macan	Air conditioner	Active Test	Front left footwell
Macan	Air conditioner	Active Test	Front left seat heater
Macan	Air conditioner	Active Test	Front left seat ventilation
Macan	Air conditioner	Active Test	Front left temperature mixing flaps
Macan	Air conditioner	Active Test	Front right footwell
Macan	Air conditioner	Active Test	Front right seat heater
Macan	Air conditioner	Active Test	Front right seat ventilation
Macan	Air conditioner	Active Test	Front right temperature mixing flaps
Macan	Air conditioner	Active Test	LIN control motors measurement run
Macan	Air conditioner	Active Test	LIN control motors verification run
Macan	Air conditioner	Active Test	Ram air flap
Macan	Air conditioner	Active Test	Rear left seat heating
Macan	Air conditioner	Active Test	Rear right seat heating
Macan	Air conditioner	Active Test	Rear temperature mixing flap drive link test
Macan	Air conditioner	Active Test	Recirculation flap
Macan	Air conditioner	Active Test	Teaching LIN servo motors
Macan	Air conditioner	Active Test	Water pump
Macan	Air conditioner	Active Test	Water valve
Macan	Air conditioner	Special Functions	LIN control motors measurement run
Macan	Air conditioner	Special Functions	Teach-in:LIN automatic addressing
Macan	Airbag	ECU Information	
Macan	Airbag	Read Codes	
Macan	Airbag	Clear Codes	
Macan	Airbag	Live Data	
Macan	Airbag	Active Test	Display - Passenger Airbag OFF
Macan	Airbag	Special Functions	Calibrate seat occupancy detection

Macan	Airbag	Special Functions	Lock
Macan	Airbag	Hot Functions(HOT)	Oil Reset
Macan	Airbag	Hot Functions(HOT)	Reset with tool
Macan	All-wheel drive	ECU Information	
Macan	All-wheel drive	Read Codes	
Macan	All-wheel drive	Clear Codes	
Macan	All-wheel drive	Live Data	
Macan	All-wheel drive	Active Test	Forced calibration
Macan	All-wheel drive	Active Test	Set classification memory
Macan	All-wheel drive	Special Functions	Transfer-box oil service
Macan	Auxiliary water heater	ECU Information	
Macan	Auxiliary water heater	Read Codes	
Macan	Auxiliary water heater	Clear Codes	
Macan	Auxiliary water heater	Live Data	
Macan	Auxiliary water heater	Active Test	3/2-way valve
Macan	Auxiliary water heater	Active Test	Combustion blower
Macan	Auxiliary water heater	Active Test	Glow pin
Macan	Auxiliary water heater	Active Test	Hand-held transmitter teach-in for receiver
Macan	Auxiliary water heater	Active Test	Metering pump
Macan	Auxiliary water heater	Active Test	Test start
Macan	Auxiliary water heater	Active Test	Test stop
Macan	DME	ECU Information	
Macan	DME	Read Codes	
Macan	DME	Clear Codes	
Macan	DME	Live Data	
Macan	DME	Active Test	Acoustic simulator
Macan	DME	Active Test	Activation of coolant filling service position
Macan	DME	Active Test	Activation of engine mounting 1
Macan	DME	Active Test	Activation of engine mounting 2
Macan	DME	Active Test	Activation of exhaust gas recirculation cooler bypass valve
Macan	DME	Active Test	Activation of fuel pump electronics
Macan	DME	Active Test	Activation of glow-time control unit
Macan	DME	Active Test	Activation of heater 1 for reducing agent
Macan	DME	Active Test	Activation of heater 2 for reducing agent
Macan	DME	Active Test	Activation of injector for reducing agent
Macan	DME	Active Test	Activation of intake manifold flap for air flow control
Macan	DME	Active Test	Activation of pump for reducing agent
Macan	DME	Active Test	Activation of radiator fan 1
Macan	DME	Active Test	Activation of radiator fan 1+2
Macan	DME	Active Test	Activation of radiator fan 2
Macan	DME	Active Test	Activation of relay for auxiliary coolant pump
Macan	DME	Active Test	Activation of throttle valve control unit
Macan	DME	Active Test	Activation of valve for exhaust gas recirculation
Macan	DME	Active Test	Activation of valve for oil pressure control
Macan	DME	Active Test	Adaptation - boost pressure regulator
Macan	DME	Active Test	Adaptation - fuel pump
Macan	DME	Active Test	AIR pump
Macan	DME	Active Test	Bank 1 camshaft adjustment - exhaust
Macan	DME	Active Test	Bank 2 camshaft adjustment - exhaust
Macan	DME	Active Test	Boost pressure adjuster
Macan	DME	Active Test	Boost pressure control
Macan	DME	Active Test	Camshaft adjustment - exhaust
Macan	DME	Active Test	Camshaft adjustment - intake
Macan	DME	Active Test	Camshaft adjustment, bank 1 - intake
Macan	DME	Active Test	Camshaft adjustment, bank 2 - intake
Macan	DME	Active Test	Cat. conv. efficiency
Macan	DME	Active Test	Catalytic converter blocked
Macan	DME	Active Test	Catalytic converter effect 2
Macan	DME	Active Test	Chain elongation correction (after repairs)
Macan	DME	Active Test	Chain elongation reset (after replacing timing chain)
Macan	DME	Active Test	Coolant shut-off valve for transmission
Macan	DME	Active Test	Cooling system
Macan	DME	Active Test	Cycle valve for boost pressure control
Macan	DME	Active Test	Disable function
Macan	DME	Active Test	Diverter valve
Macan	DME	Active Test	Drain fuel tank
Macan	DME	Active Test	Drain the tank
Macan	DME	Active Test	Electric coolant pump
Macan	DME	Active Test	Electric fuel pump
Macan	DME	Active Test	Engine bearing 1
Macan	DME	Active Test	Engine bearing 2
Macan	DME	Active Test	Engine relay (Power supply for ignition modules)
Macan	DME	Active Test	Exhaust camshaft
Macan	DME	Active Test	Exhaust flap 2
Macan	DME	Active Test	Fuel high-pressure reduction
Macan	DME	Active Test	Fuel injector 1 - intake manifold
Macan	DME	Active Test	Fuel injector 1
Macan	DME	Active Test	Fuel injector 2 - intake manifold
Macan	DME	Active Test	Fuel injector 2
Macan	DME	Active Test	Fuel injector 3 - intake manifold
Macan	DME	Active Test	Fuel injector 3
Macan	DME	Active Test	Fuel injector 4 - intake manifold
Macan	DME	Active Test	Fuel injector 4
Macan	DME	Active Test	Fuel low-pressure control valve
Macan	DME	Active Test	Fuel trim adaptation - intake manifold injection
Macan	DME	Active Test	Grill air shutter
Macan	DME	Active Test	Grille air shutter adaptation
Macan	DME	Active Test	Intake camshaft
Macan	DME	Active Test	Intake pipe flap

Macan	DME	Active Test	Knock control
Macan	DME	Active Test	Lambda control deviation
Macan	DME	Active Test	Left engine mount
Macan	DME	Active Test	Left exhaust flap (sports exhaust system)
Macan	DME	Active Test	Mixture adaptation, partial load
Macan	DME	Active Test	Oil pressure switchover valve
Macan	DME	Active Test	Oil pressure valve switchover test
Macan	DME	Active Test	Oxygen sensor active test downstream of catalytic converter
Macan	DME	Active Test	Oxygen sensor dynamics downstream of catalytic converter
Macan	DME	Active Test	Oxygen sensor dynamics upstream of catalytic converter
Macan	DME	Active Test	Oxygen sensor heater
Macan	DME	Active Test	Oxygen sensor offset upstream of catalytic converter
Macan	DME	Active Test	Oxygen sensor oscillation downstream of catalytic converter
Macan	DME	Active Test	Oxygen sensors in air
Macan	DME	Active Test	Piston cooling jets
Macan	DME	Active Test	Pressure control valve
Macan	DME	Active Test	Quantity control valve (fuel high-pressure pump)
Macan	DME	Active Test	Quantity control valves (high-pressure pump)
Macan	DME	Active Test	Radiator fans
Macan	DME	Active Test	Radiator shutter activation
Macan	DME	Active Test	Relay for secondary air pump
Macan	DME	Active Test	Request restart
Macan	DME	Active Test	Request stop
Macan	DME	Active Test	Reset of catalytic converter learning values
Macan	DME	Active Test	Reset of differential-pressure sensor learning values
Macan	DME	Active Test	Reset of learning values of metering unit and pressure control valve
Macan	DME	Active Test	Reset of the block of the reducing agent metering system
Macan	DME	Active Test	Reset of the learning values for the cylinder pressure sensors
Macan	DME	Active Test	Reset of the learning values of the reducing agent metering system
Macan	DME	Active Test	Reset of the oxygen sensor learning values
Macan	DME	Active Test	Reset of the particle filter learning values
Macan	DME	Active Test	Reset reducing agent fill level
Macan	DME	Active Test	Right engine mount
Macan	DME	Active Test	Right exhaust flap
Macan	DME	Active Test	Secondary air valve
Macan	DME	Active Test	Secondary-air system
Macan	DME	Active Test	Service position
Macan	DME	Active Test	Tank vent valve (Drive links)
Macan	DME	Active Test	Tank vent valve (Routines)
Macan	DME	Active Test	Tank vent valve
Macan	DME	Active Test	Thermostat activation
Macan	DME	Active Test	Throttle adaption
Macan	DME	Active Test	Turbocharger activation
Macan	DME	Active Test	Valve lift control, bank 1
Macan	DME	Active Test	Valve lift control, bank 2
Macan	DME	Active Test	Valve lift system
Macan	DME	Special Functions	Adaptation while engine is running
Macan	DME	Special Functions	Adaptations
Macan	DME	Special Functions	Adopt particle filter mileage in the DME
Macan	DME	Special Functions	Delete adaptation data
Macan	DME	Special Functions	First start
Macan	DME	Special Functions	Particle filter regeneration
Macan	DME	Special Functions	Ready status
Macan	DME	Special Functions	Reducing agent system
Macan	DME	Special Functions	Short tests
Macan	DME	Special Functions	System tests
Macan	DME	Special Functions	Turbocharger test
Macan	Driver's door	ECU Information	
Macan	Driver's door	Read Codes	
Macan	Driver's door	Clear Codes	
Macan	Driver's door	Live Data	
Macan	Driver's door	Active Test	Activation of all central locking motors
Macan	Driver's door	Active Test	Exterior mirror heating
Macan	Driver's door	Active Test	Fold-in door mirrors
Macan	Driver's door	Active Test	Lights in the door
Macan	Driver's door	Active Test	Lower power windows
Macan	Driver's door	Active Test	Mirror adjustment
Macan	Driver's door	Active Test	Raise power windows
Macan	Driver's door	Active Test	Unfold door mirrors
Macan	Driver's door	Special Functions	Standardizing power windows
Macan	Driver-side seat memory	ECU Information	
Macan	Driver-side seat memory	Read Codes	
Macan	Driver-side seat memory	Clear Codes	
Macan	Driver-side seat memory	Live Data	
Macan	Driver-side seat memory	Active Test	Backrest angle adjustment
Macan	Driver-side seat memory	Active Test	Backrest width
Macan	Driver-side seat memory	Active Test	Fore-and-aft adjustment
Macan	Driver-side seat memory	Active Test	Lower lumbar blister
Macan	Driver-side seat memory	Active Test	Seat angle adjustment
Macan	Driver-side seat memory	Active Test	Seat depth adjustment
Macan	Driver-side seat memory	Active Test	Seat height adjustment
Macan	Driver-side seat memory	Active Test	Seat width
Macan	Driver-side seat memory	Active Test	Upper lumbar blister
Macan	Driver-side seat memory	Special Functions	Normalize seat motors
Macan	DVD changer	ECU Information	
Macan	DVD changer	Read Codes	
Macan	DVD changer	Clear Codes	
Macan	DVD changer	Live Data	
Macan	DVD changer	Active Test	Eject medium

Macan	Emergency call system	ECU Information	
Macan	Emergency call system	Read Codes	
Macan	Emergency call system	Clear Codes	
Macan	Emergency call system	Live Data	
Macan	Emergency call system	Active Test	Erase history memory
Macan	External amplifier	ECU Information	
Macan	External amplifier	Read Codes	
Macan	External amplifier	Clear Codes	
Macan	External amplifier	Live Data	
Macan	External amplifier	Active Test	3dB reduction
Macan	External amplifier	Active Test	Self-Test
Macan	External amplifier	Active Test	Transport mode
Macan	Front camera	ECU Information	
Macan	Front camera	Read Codes	
Macan	Front camera	Clear Codes	
Macan	Front camera	Live Data	
Macan	Front camera	Active Test	Activation of high beam
Macan	Front camera	Active Test	Control unit reset
Macan	Front camera	Active Test	Green display for the lane departure warning
Macan	Front camera	Active Test	Lane departure warning
Macan	Front camera	Active Test	Traffic-sign display
Macan	Front camera	Active Test	Windshield heater
Macan	Front camera	Active Test	Yellow display for the lane departure warning
Macan	Front-end electronics	ECU Information	
Macan	Front-end electronics	Read Codes	
Macan	Front-end electronics	Clear Codes	
Macan	Front-end electronics	Live Data	
Macan	Front-end electronics	Active Test	Activation of dipped beam
Macan	Front-end electronics	Active Test	Activation of steering column adjustment
Macan	Front-end electronics	Active Test	Actuation of headlamp switchable covers (halogen)
Macan	Front-end electronics	Active Test	Foot well light actuation
Macan	Front-end electronics	Active Test	Front marker light actuation
Macan	Front-end electronics	Active Test	Garage door opener - Delete all assigned buttons
Macan	Front-end electronics	Active Test	Hazard warning lights button LED actuation
Macan	Front-end electronics	Active Test	Headlight cleaning system pump actuation
Macan	Front-end electronics	Active Test	Key identification
Macan	Front-end electronics	Active Test	Left direction indicator actuation in general
Macan	Front-end electronics	Active Test	Main beam actuation
Macan	Front-end electronics	Active Test	Right direction indicator actuation in general
Macan	Front-end electronics	Active Test	Tank cap locking element activation
Macan	Front-end electronics	Active Test	Teach-in process for garage door opener receiver
Macan	Front-end electronics	Active Test	Two-tone horn actuation
Macan	Front-end electronics	Active Test	Windshield washer-system pump actuation
Macan	Front-end electronics	Active Test	Windshield wiper actuation
Macan	Front-end electronics	Special Functions	Analysis of Kessy functions
Macan	Front-end electronics	Special Functions	Headlight beam adjustment calibration
Macan	Front-end electronics	Special Functions	Steering column adjustment normalizing run
Macan	Gateway	ECU Information	
Macan	Gateway	Read Codes	
Macan	Gateway	Clear Codes	
Macan	Gateway	Live Data	
Macan	Gateway	Active Test	Control unit reset
Macan	Gateway	Active Test	Generator setpoint voltage
Macan	Gateway	Active Test	Idle speed increase
Macan	Gateway	Active Test	Relay terminal 30f actuation
Macan	Gateway	Active Test	Relay terminal 30sd actuation
Macan	Gateway	Active Test	Reset switch-off stage
Macan	Gateway	Special Functions	Actual/specified configuration
Macan	Gateway	Special Functions	Battery change
Macan	Headlight(central)	ECU Information	
Macan	Headlight(central)	Read Codes	
Macan	Headlight(central)	Clear Codes	
Macan	Headlight(central)	Live Data	
Macan	Headlight(central)	Active Test	Activate variable light distribution
Macan	Headlight(central)	Active Test	Actuate static cornering light
Macan	Headlight(central)	Active Test	Move cornering light
Macan	Headlight(central)	Active Test	Move headlight beam adjustment
Macan	Headlight(central)	Active Test	Synchronous operation of headlight beam adjustment and cornering light
Macan	Headlight(central)	Special Functions	Headlight beam adjustment calibration
Macan	Headlight(central)	Special Functions	Synchronized tests
Macan	Instrument cluster	ECU Information	
Macan	Instrument cluster	Read Codes	
Macan	Instrument cluster	Clear Codes	
Macan	Instrument cluster	Live Data	
Macan	Instrument cluster	Active Test	Bulb test
Macan	Instrument cluster	Active Test	Control unit reset
Macan	Instrument cluster	Active Test	Loudspeaker test
Macan	Instrument cluster	Active Test	Pointer test
Macan	Instrument cluster	Active Test	Pointer
Macan	Instrument cluster	Active Test	Segment-display test
Macan	Instrument cluster	Active Test	Self-test
Macan	Instrument cluster	Active Test	TFT display test
Macan	Instrument cluster	Special Functions	Reset maintenance interval
Macan	Instrument cluster	Special Functions	Set total mileage
Macan	Instrument cluster	Special Functions	Tank calibration
Macan	Instrument cluster	Hot Functions(HOT)	Electric Parking Brake
Macan	Lane change assist(LCA)	ECU Information	
Macan	Lane change assist(LCA)	Read Codes	
Macan	Lane change assist(LCA)	Clear Codes	

Macan	Lane change assist(LCA)	Live Data	
Macan	Lane change assist(LCA)	Active Test	Control unit reset
Macan	Lane change assist(LCA)	Active Test	Driver door mirror warning light
Macan	Lane change assist(LCA)	Active Test	Front-passenger door mirror warning light
Macan	Lane change assist(LCA)	Active Test	Lane Change Assist indicator light
Macan	Lane change assist(LCA)	Active Test	Lane Change Assist status light (instrument cluster)
Macan	Level control/PASM	ECU Information	
Macan	Level control/PASM	Read Codes	
Macan	Level control/PASM	Clear Codes	
Macan	Level control/PASM	Live Data	
Macan	Level control/PASM	Active Test	Activate/deactivate level control
Macan	Level control/PASM	Active Test	Adjust vehicle to normal level
Macan	Level control/PASM	Active Test	Compressor,air spring and change-over valves drive link test
Macan	Level control/PASM	Active Test	Conclude diagnostic session
Macan	Level control/PASM	Active Test	Damper drive link test
Macan	Level control/PASM	Active Test	Drive link test for accumulator filling
Macan	Level control/PASM	Active Test	Drive-link test, bypass valve
Macan	Level control/PASM	Active Test	locking commissioning
Macan	Level control/PASM	Active Test	Redetermination of system air volume
Macan	Level control/PASM	Special Functions	Bleeding of complete air suspension system
Macan	Level control/PASM	Special Functions	Height sensor system calibration
Macan	Level control/PASM	Special Functions	Height sensor system component test
Macan	Level control/PASM	Special Functions	Inflate air suspension system
Macan	Level control/PASM	Special Functions	Replacement of an air spring
Macan	Park Assist	ECU Information	
Macan	Park Assist	Read Codes	
Macan	Park Assist	Clear Codes	
Macan	Park Assist	Live Data	
Macan	Park Assist	Active Test	Indicator light in button for ParkAssist
Macan	Park Assist	Active Test	Park Assist buzzer, front
Macan	Park Assist	Active Test	Rear Park Assist buzzer
Macan	Parking brake	ECU Information	
Macan	Parking brake	Read Codes	
Macan	Parking brake	Clear Codes	
Macan	Parking brake	Live Data	
Macan	Parking brake	Active Test	Activate all function lamps
Macan	Parking brake	Active Test	Close parking brake
Macan	Parking brake	Active Test	Open parking brake
Macan	Parking brake	Active Test	Reset maximum brake temperature
Macan	Parking brake	Special Functions	Assembly position
Macan	Parking brake	Special Functions	Replace brake pads (operating guide)
Macan	Parking brake	Hot Functions(HOT)	Tire Pressure Monitoring System
Macan	Passenger's door	ECU Information	
Macan	Passenger's door	Read Codes	
Macan	Passenger's door	Clear Codes	
Macan	Passenger's door	Live Data	
Macan	Passenger's door	Active Test	Activation of all central locking motors
Macan	Passenger's door	Active Test	Exterior mirror heating
Macan	Passenger's door	Active Test	Fold-in door mirrors
Macan	Passenger's door	Active Test	Lights in the door
Macan	Passenger's door	Active Test	Lower power windows
Macan	Passenger's door	Active Test	Mirror adjustment
Macan	Passenger's door	Active Test	Raise power windows
Macan	Passenger's door	Active Test	Unfold door mirrors
Macan	Passenger's door	Special Functions	Standardizing power windows
Macan	Passenger-side seat memory	ECU Information	
Macan	Passenger-side seat memory	Read Codes	
Macan	Passenger-side seat memory	Clear Codes	
Macan	Passenger-side seat memory	Live Data	
Macan	Passenger-side seat memory	Active Test	Backrest angle adjustment
Macan	Passenger-side seat memory	Active Test	Backrest width
Macan	Passenger-side seat memory	Active Test	Fore-and-aft adjustment
Macan	Passenger-side seat memory	Active Test	Lower lumbar blister
Macan	Passenger-side seat memory	Active Test	Seat angle adjustment
Macan	Passenger-side seat memory	Active Test	Seat depth adjustment
Macan	Passenger-side seat memory	Active Test	Seat height adjustment
Macan	Passenger-side seat memory	Active Test	Seat width
Macan	Passenger-side seat memory	Active Test	Upper lumbar blister
Macan	Passenger-side seat memory	Special Functions	Normalize seat motors
Macan	PCM/CDR	ECU Information	
Macan	PCM/CDR	Read Codes	
Macan	PCM/CDR	Clear Codes	
Macan	PCM/CDR	Live Data	
Macan	PCM/CDR	Active Test	AM field strength
Macan	PCM/CDR	Active Test	Balance
Macan	PCM/CDR	Active Test	Bass
Macan	PCM/CDR	Active Test	Button test
Macan	PCM/CDR	Active Test	CD/DVD eject
Macan	PCM/CDR	Active Test	CDR loudspeaker test
Macan	PCM/CDR	Active Test	Current FM field strength
Macan	PCM/CDR	Active Test	DAB field strength
Macan	PCM/CDR	Active Test	Developer menu
Macan	PCM/CDR	Active Test	Digital radio (DAB) - antenna voltage
Macan	PCM/CDR	Active Test	Display test
Macan	PCM/CDR	Active Test	Factory setting
Macan	PCM/CDR	Active Test	Fader
Macan	PCM/CDR	Active Test	FM field strength
Macan	PCM/CDR	Active Test	Loudspeaker test
Macan	PCM/CDR	Active Test	Microphone level

Macan	PCM/CDR	Active Test	MUTE
Macan	PCM/CDR	Active Test	Self test
Macan	PCM/CDR	Active Test	Teach handset
Macan	PCM/CDR	Active Test	Terminal 30 reset
Macan	PCM/CDR	Active Test	Test signal
Macan	PCM/CDR	Active Test	Transport mode
Macan	PCM/CDR	Active Test	Treble
Macan	PCM/CDR	Active Test	Tuner antenna, current power consumption
Macan	PCM/CDR	Active Test	Tuner signal
Macan	PCM/CDR	Active Test	USB/AUX
Macan	PCM/CDR	Active Test	Volume
Macan	PCM/CDR	Special Functions	AM field strength
Macan	PCM/CDR	Special Functions	Current FM field strength
Macan	PCM/CDR	Special Functions	FM field strength
Macan	PCM/CDR	Special Functions	Function activation
Macan	Power steering	ECU Information	
Macan	Power steering	Read Codes	
Macan	Power steering	Clear Codes	
Macan	Power steering	Live Data	
Macan	Power steering	Active Test	Control unit reset
Macan	Power steering	Special Functions	Calibrate
Macan	PSM	ECU Information	
Macan	PSM	Read Codes	
Macan	PSM	Clear Codes	
Macan	PSM	Live Data	
Macan	PSM	Active Test	Control unit reset
Macan	PSM	Active Test	Electric switch-over valve 1
Macan	PSM	Active Test	Electric switch-over valve 2
Macan	PSM	Active Test	Inlet valve, front left
Macan	PSM	Active Test	Inlet valve, front right
Macan	PSM	Active Test	Inlet valve, rear left
Macan	PSM	Active Test	Inlet valve, rear right
Macan	PSM	Active Test	Outlet valve, front left
Macan	PSM	Active Test	Outlet valve, front right
Macan	PSM	Active Test	Outlet valve, rear left
Macan	PSM	Active Test	Outlet valve, rear right
Macan	PSM	Active Test	Pump motor
Macan	PSM	Active Test	Special valve 1
Macan	PSM	Active Test	Special valve 2
Macan	PSM	Special Functions	Bleed the brakes
Macan	PSM	Special Functions	Hydraulic swap test
Macan	PSM	Special Functions	PSM sensor calibration
Macan	PSM	Special Functions	Rolling test mode
Macan	Rear left door	ECU Information	
Macan	Rear left door	Read Codes	
Macan	Rear left door	Clear Codes	
Macan	Rear left door	Live Data	
Macan	Rear left door	Active Test	Activation of all central locking motors
Macan	Rear left door	Active Test	Lights in the door
Macan	Rear left door	Active Test	Lower power windows
Macan	Rear left door	Active Test	Lower side-window sunblind
Macan	Rear left door	Active Test	Raise power windows
Macan	Rear left door	Active Test	Raise side-window sunblind
Macan	Rear left door	Special Functions	Standardizing power windows
Macan	Rear lid	ECU Information	
Macan	Rear lid	Read Codes	
Macan	Rear lid	Clear Codes	
Macan	Rear lid	Live Data	
Macan	Rear lid	Active Test	Activate beeper
Macan	Rear lid	Special Functions	Calibration
Macan	Rear right door	ECU Information	
Macan	Rear right door	Read Codes	
Macan	Rear right door	Clear Codes	
Macan	Rear right door	Live Data	
Macan	Rear right door	Active Test	Activation of all central locking motors
Macan	Rear right door	Active Test	Lights in the door
Macan	Rear right door	Active Test	Lower power windows
Macan	Rear right door	Active Test	Lower side-window sunblind
Macan	Rear right door	Active Test	Raise power windows
Macan	Rear right door	Active Test	Raise side-window sunblind
Macan	Rear right door	Special Functions	Standardizing power windows
Macan	Rear-differential lock	ECU Information	
Macan	Rear-differential lock	Read Codes	
Macan	Rear-differential lock	Clear Codes	
Macan	Rear-differential lock	Live Data	
Macan	Rear-end electronics	ECU Information	
Macan	Rear-end electronics	Read Codes	
Macan	Rear-end electronics	Clear Codes	
Macan	Rear-end electronics	Live Data	
Macan	Rear-end electronics	Active Test	Activation of interior surveillance button LED
Macan	Rear-end electronics	Active Test	Activation of orientation light LED
Macan	Rear-end electronics	Active Test	Activation of rear fog light
Macan	Rear-end electronics	Active Test	Activation,sun blind(roof)
Macan	Rear-end electronics	Active Test	Alarm horn actuation
Macan	Rear-end electronics	Active Test	Alarm siren actuation
Macan	Rear-end electronics	Active Test	Brake light actuation
Macan	Rear-end electronics	Active Test	Central locking LED actuation
Macan	Rear-end electronics	Active Test	Closing aid actuation
Macan	Rear-end electronics	Active Test	Daytime driving lights actuation

Macan	Rear-end electronics	Active Test	Exhaust flaps actuation
Macan	Rear-end electronics	Active Test	LED garage door opener button actuation
Macan	Rear-end electronics	Active Test	Luggage compartment light actuation
Macan	Rear-end electronics	Active Test	Numer plate light actuation
Macan	Rear-end electronics	Active Test	Rear fog light actuation
Macan	Rear-end electronics	Active Test	Rear window heater actuation
Macan	Rear-end electronics	Active Test	Rear wiper actuation
Macan	Rear-end electronics	Active Test	Reversing lights actuation
Macan	Rear-end electronics	Active Test	Roof system activation
Macan	Rear-end electronics	Active Test	Tail lights actuation
Macan	Rear-end electronics	Active Test	Teach roof console
Macan	Rear-end electronics	Active Test	Vanity mirror/glove box light activation
Macan	Rear-end electronics	Special Functions	Standardization of sliding roof/panorama roof
Macan	Reducing agent system	ECU Information	
Macan	Reducing agent system	Read Codes	
Macan	Reducing agent system	Clear Codes	
Macan	Reducing agent system	Live Data	
Macan	Reducing agent system	Active Test	Activation of heater 1 for reducing agent
Macan	Reducing agent system	Active Test	Activation of heater 2 for reducing agent
Macan	Reducing agent system	Hot Functions(HOT)	Steering Angle Sensor
Macan	Reversing camera	ECU Information	
Macan	Reversing camera	Read Codes	
Macan	Reversing camera	Clear Codes	
Macan	Reversing camera	Live Data	
Macan	Reversing camera	Active Test	Control unit reset
Macan	Sound symposer	ECU Information	
Macan	Sound symposer	Read Codes	
Macan	Sound symposer	Clear Codes	
Macan	Sound symposer	Live Data	
Macan	Sound symposer	Active Test	Sound actuator
Macan	Steering wheel electronics	ECU Information	
Macan	Steering wheel electronics	Read Codes	
Macan	Steering wheel electronics	Clear Codes	
Macan	Steering wheel electronics	Live Data	
Macan	Steering wheel electronics	Active Test	Horn
Macan	Steering wheel electronics	Active Test	Increase volume
Macan	Steering wheel electronics	Active Test	Mute volume
Macan	Steering wheel electronics	Active Test	Reduce volume
Macan	Steering wheel electronics	Active Test	Steering wheel heater
Macan	Steering wheel electronics	Special Functions	Function activation
Macan	Steering wheel electronics	Special Functions	Steering-angle sensor calibration
Macan	Tire Pressure Monitoring System	ECU Information	
Macan	Tire Pressure Monitoring System	Read Codes	
Macan	Tire Pressure Monitoring System	Clear Codes	
Macan	Tire Pressure Monitoring System	Live Data	
Macan	Tire Pressure Monitoring System	Active Test	Control unit reset
Macan	Tire Pressure Monitoring System	Active Test	Save manually taught wheel IDs
Macan	Tire Pressure Monitoring System	Special Functions	Teach wheel IDs
Macan	Tire Pressure Monitoring System	Hot Functions(HOT)	Battery
Macan	Trailer hitch	ECU Information	
Macan	Trailer hitch	Read Codes	
Macan	Trailer hitch	Clear Codes	
Macan	Trailer hitch	Live Data	
Macan	Trailer hitch	Active Test	Brake light (trailer)
Macan	Trailer hitch	Active Test	Indicator light for extending trailer hitch
Macan	Trailer hitch	Active Test	Indicator light for retracting trailer hitch
Macan	Trailer hitch	Active Test	Left brake light (trailer)
Macan	Trailer hitch	Active Test	Left direction indicator (trailer)
Macan	Trailer hitch	Active Test	Left rear light (trailer)
Macan	Trailer hitch	Active Test	Rear fog light (trailer)
Macan	Trailer hitch	Active Test	Rear light (trailer)
Macan	Trailer hitch	Active Test	Reversing light (trailer)
Macan	Trailer hitch	Active Test	Right brake light (trailer)
Macan	Trailer hitch	Active Test	Right direction indicator (trailer)
Macan	Trailer hitch	Active Test	Right rear light (trailer)
Macan	Trailer hitch	Active Test	Trailer control unit initializing
Macan	Transmission control	ECU Information	
Macan	Transmission control	Read Codes	
Macan	Transmission control	Clear Codes	
Macan	Transmission control	Live Data	
Macan	Transmission control	Active Test	Calibration of the transmission range sensor
Macan	Transmission control	Special Functions	Calibrate
Macan	TV tuner	ECU Information	
Macan	TV tuner	Read Codes	
Macan	TV tuner	Clear Codes	
Macan	TV tuner	Live Data	
Macan	TV tuner	Active Test	Antenna reception current setting
Macan	TV tuner	Active Test	Antenna reception via channel specification
Macan	TV tuner	Active Test	Antenna road test via frequency specification
Macan	TV tuner	Active Test	Antenna statistics
Macan	TV tuner	Active Test	Antenna wiring
Macan	TV tuner	Active Test	Audio and video signal test
Macan	TV tuner	Active Test	Transport mode
Macan	TV tuner	Active Test	Video signal for reversing camera
Panamera	A/C compressor	ECU Information	
Panamera	A/C compressor	Read Codes	
Panamera	A/C compressor	Clear Codes	
Panamera	A/C compressor	Live Data	
Panamera	A/C compressor	Active Test	Reset adaption values

Panamera	Adaptive cruise control	ECU Information	
Panamera	Adaptive cruise control	Read Codes	
Panamera	Adaptive cruise control	Clear Codes	
Panamera	Adaptive cruise control	Live Data	
Panamera	Adaptive cruise control	Active Test	Control unit reset
Panamera	Adaptive cruise control	Active Test	Lens heater
Panamera	Adaptive cruise control	Special Functions	Adjust adaptive cruise control
Panamera	Additional instrument-clock	ECU Information	
Panamera	Additional instrument-clock	Read Codes	
Panamera	Additional instrument-clock	Clear Codes	
Panamera	Additional instrument-clock	Live Data	
Panamera	Additional instrument-clock	Active Test	Control unit reset
Panamera	Additional instrument-clock	Active Test	Lighting
Panamera	Additional instrument-clock	Active Test	Pointer test
Panamera	Additional instrument-clock	Active Test	Self-test
Panamera	Additional instrument-clock	Active Test	Test segment display
Panamera	Air conditioner	ECU Information	
Panamera	Air conditioner	Read Codes	
Panamera	Air conditioner	Clear Codes	
Panamera	Air conditioner	Live Data	
Panamera	Air conditioner	Active Test	Center nozzle drive link test stratification
Panamera	Air conditioner	Active Test	Compressor break - in,E-compressor(hybrid)
Panamera	Air conditioner	Active Test	Compressor break-in reset
Panamera	Air conditioner	Active Test	Compressor break-in
Panamera	Air conditioner	Active Test	Control unit reset
Panamera	Air conditioner	Active Test	Defroster flap drive link test
Panamera	Air conditioner	Active Test	Display test
Panamera	Air conditioner	Active Test	Erase fault memory after control unit replacement or coding
Panamera	Air conditioner	Active Test	Extended ventilation field drive link test
Panamera	Air conditioner	Active Test	Fresh-air blower
Panamera	Air conditioner	Active Test	Front left center nozzle drive link test
Panamera	Air conditioner	Active Test	Front left footwell drive link test
Panamera	Air conditioner	Active Test	Front left seat heater
Panamera	Air conditioner	Active Test	Front left seat ventilation
Panamera	Air conditioner	Active Test	Front left side vent blower drive link test
Panamera	Air conditioner	Active Test	Front left temperature mixing valve drive link test
Panamera	Air conditioner	Active Test	Front right center nozzle drive link test
Panamera	Air conditioner	Active Test	Front right footwell drive link test
Panamera	Air conditioner	Active Test	Front right seat heater
Panamera	Air conditioner	Active Test	Front right seat ventilation
Panamera	Air conditioner	Active Test	Front right side vent blower drive link test
Panamera	Air conditioner	Active Test	Front right temperature mixing valve drive link test
Panamera	Air conditioner	Active Test	LIN automatic addressing servo motors
Panamera	Air conditioner	Active Test	LIN control motors measurement run
Panamera	Air conditioner	Active Test	LIN control motors verification run
Panamera	Air conditioner	Active Test	Ram air flap drive link test
Panamera	Air conditioner	Active Test	Rear left air flow drive link test
Panamera	Air conditioner	Active Test	Rear left B-pillar footwell drive link test
Panamera	Air conditioner	Active Test	Rear left seat heating
Panamera	Air conditioner	Active Test	Rear left seat ventilation
Panamera	Air conditioner	Active Test	Rear left temperature mixing valve drive link test
Panamera	Air conditioner	Active Test	Rear right air flow drive link test
Panamera	Air conditioner	Active Test	Rear right B-pillar footwell drive link test
Panamera	Air conditioner	Active Test	Rear right seat heating
Panamera	Air conditioner	Active Test	Rear right seat ventilation
Panamera	Air conditioner	Active Test	Rear right temperature mixing valve drive link test
Panamera	Air conditioner	Active Test	Recirculation valve drive link test
Panamera	Air conditioner	Active Test	Water pump relay
Panamera	Air conditioner	Active Test	Water valve
Panamera	Air conditioner	Special Functions	LIN control motors measurement run
Panamera	Air conditioner	Special Functions	Teach-in:LIN automatic addressing
Panamera	Airbag	ECU Information	
Panamera	Airbag	Read Codes	
Panamera	Airbag	Clear Codes	
Panamera	Airbag	Live Data	
Panamera	Airbag	Active Test	Airbag warning light
Panamera	Airbag	Active Test	Passenger Airbag Off light
Panamera	Airbag	Active Test	Reset passenger occupant detection teaching values
Panamera	Airbag	Active Test	Re-teach passenger occupant detection
Panamera	Airbag	Hot Functions(HOT)	Oil Reset
Panamera	Airbag	Hot Functions(HOT)	Reset with tool
Panamera	Auxiliary heating	ECU Information	
Panamera	Auxiliary heating	Read Codes	
Panamera	Auxiliary heating	Clear Codes	
Panamera	Auxiliary heating	Live Data	
Panamera	Auxiliary heating	Active Test	Combustion blower
Panamera	Auxiliary heating	Active Test	Glow pin
Panamera	Auxiliary heating	Active Test	Hand-held transmitter teach-in for receiver
Panamera	Auxiliary heating	Active Test	Metering pump
Panamera	Auxiliary heating	Active Test	Test start
Panamera	DME	ECU Information	
Panamera	DME	Read Codes	
Panamera	DME	Clear Codes	
Panamera	DME	Live Data	
Panamera	DME	Active Test	Acoustic simulator
Panamera	DME	Active Test	Air cleaner flaps
Panamera	DME	Active Test	Bank 1 camshaft adjustment - exhaust
Panamera	DME	Active Test	Bank 2 camshaft adjustment - exhaust
Panamera	DME	Active Test	Camshaft adjustment, bank 1 - intake

Panamera	DME	Active Test	Camshaft adjustment, bank 2 - intake
Panamera	DME	Active Test	Cycle valve for boost pressure control
Panamera	DME	Active Test	Disable function
Panamera	DME	Active Test	Diverter valve
Panamera	DME	Active Test	Drain the tank
Panamera	DME	Active Test	Electric fuel pump
Panamera	DME	Active Test	Exhaust gas flaps
Panamera	DME	Active Test	Intake pipe switch-over valve
Panamera	DME	Active Test	Leakage diagnostic pump (tank)
Panamera	DME	Active Test	Oil pressure control valve
Panamera	DME	Active Test	Quantity control valve (high-pressure pump)
Panamera	DME	Active Test	Radiator fans
Panamera	DME	Active Test	Request restart
Panamera	DME	Active Test	Request stop
Panamera	DME	Active Test	Secondary air pump
Panamera	DME	Active Test	Tank vent valve
Panamera	DME	Active Test	Thermostat
Panamera	DME	Active Test	Valve lift control, bank 1
Panamera	DME	Active Test	Valve lift control, bank 2
Panamera	DME	Special Functions	Adaptations
Panamera	DME	Special Functions	Delete adaptation data
Panamera	DME	Special Functions	First start
Panamera	DME	Special Functions	Read permanent fault memory
Panamera	DME	Special Functions	Ready status
Panamera	DME	Special Functions	Short tests
Panamera	DME	Special Functions	System tests
Panamera	Driver's Door	ECU Information	
Panamera	Driver's Door	Read Codes	
Panamera	Driver's Door	Clear Codes	
Panamera	Driver's Door	Live Data	
Panamera	Driver's Door	Active Test	Central locking functions
Panamera	Driver's Door	Active Test	Close the windows
Panamera	Driver's Door	Active Test	Exterior mirror heating
Panamera	Driver's Door	Active Test	Fold-in door mirrors
Panamera	Driver's Door	Active Test	Lighting
Panamera	Driver's Door	Active Test	Mirror adjustment
Panamera	Driver's Door	Active Test	Unfold door mirrors
Panamera	Driver's Door	Active Test	Window open
Panamera	Driver-side seat memory	ECU Information	
Panamera	Driver-side seat memory	Read Codes	
Panamera	Driver-side seat memory	Clear Codes	
Panamera	Driver-side seat memory	Live Data	
Panamera	Driver-side seat memory	Active Test	Backrest angle adjustment
Panamera	Driver-side seat memory	Active Test	Backrest width, LBR
Panamera	Driver-side seat memory	Active Test	Lower lumbar blister, LBU
Panamera	Driver-side seat memory	Active Test	Seat angle adjustment (SNV)
Panamera	Driver-side seat memory	Active Test	Seat depth adjustment
Panamera	Driver-side seat memory	Active Test	Seat fore/aft adjustment
Panamera	Driver-side seat memory	Active Test	Seat height adjustment, SHV
Panamera	Driver-side seat memory	Active Test	Seat width, SBR
Panamera	Driver-side seat memory	Active Test	Upper lumbar blister, LBO
Panamera	Driver-side seat memory	Special Functions	Normalize seat motors
Panamera	External amplifier	ECU Information	
Panamera	External amplifier	Read Codes	
Panamera	External amplifier	Clear Codes	
Panamera	External amplifier	Live Data	
Panamera	External amplifier	Active Test	3dB reduction
Panamera	External amplifier	Active Test	Self-Test
Panamera	External amplifier	Active Test	Transport mode
Panamera	Front camera	ECU Information	
Panamera	Front camera	Read Codes	
Panamera	Front camera	Clear Codes	
Panamera	Front camera	Live Data	
Panamera	Front camera	Active Test	Activation of high beam
Panamera	Front camera	Active Test	Green display for the lane departure warning
Panamera	Front camera	Active Test	Lane departure warning
Panamera	Front camera	Active Test	Terminal 30 reset
Panamera	Front camera	Active Test	Traffic-sign display
Panamera	Front camera	Active Test	Windshield heater
Panamera	Front camera	Active Test	Yellow display for the lane departure warning
Panamera	Front-end electronics	ECU Information	
Panamera	Front-end electronics	Read Codes	
Panamera	Front-end electronics	Clear Codes	
Panamera	Front-end electronics	Live Data	
Panamera	Front-end electronics	Active Test	Actuation of headlamp switchable covers (halogen)
Panamera	Front-end electronics	Active Test	Antenna test
Panamera	Front-end electronics	Active Test	Calibration, axle sensor for HBA (halogen headlight)
Panamera	Front-end electronics	Active Test	Dipped beam actuation
Panamera	Front-end electronics	Active Test	Engine-compartment light activation
Panamera	Front-end electronics	Active Test	Footwell light actuation
Panamera	Front-end electronics	Active Test	Front marker light actuation
Panamera	Front-end electronics	Active Test	Garage door opener - Delete all assigned buttons
Panamera	Front-end electronics	Active Test	Hazard warning lights button LED actuation
Panamera	Front-end electronics	Active Test	Headlight cleaning system pump actuation
Panamera	Front-end electronics	Active Test	Key identification
Panamera	Front-end electronics	Active Test	Left direction indicator actuation in general
Panamera	Front-end electronics	Active Test	Lighting activation of electronic ignition switch
Panamera	Front-end electronics	Active Test	Main beam actuation
Panamera	Front-end electronics	Active Test	Right direction indicator actuation in general

Panamera	Front-end electronics	Active Test	Self test
Panamera	Front-end electronics	Active Test	Steering column adjustment actuation
Panamera	Front-end electronics	Active Test	Switch rear left proximity sensor on/off
Panamera	Front-end electronics	Active Test	Tank cap locking element activation
Panamera	Front-end electronics	Active Test	Teach-in process for garage door opener receiver
Panamera	Front-end electronics	Active Test	Two-tone horn actuation
Panamera	Front-end electronics	Active Test	Windshield washer-system pump actuation
Panamera	Front-end electronics	Active Test	Windshield wiper actuation
Panamera	Front-end electronics	Special Functions	Display central locking history
Panamera	Front-end electronics	Special Functions	Analysis of Kessy functions
Panamera	Front-end electronics	Special Functions	Display Servotronic emergency operation counter
Panamera	Front-end electronics	Special Functions	HBA calibration
Panamera	Front-end electronics	Special Functions	Steering column adjustment normalizing run
Panamera	Front-end electronics	Hot Functions(HOT)	Battery
Panamera	Gateway	ECU Information	
Panamera	Gateway	Read Codes	
Panamera	Gateway	Clear Codes	
Panamera	Gateway	Live Data	
Panamera	Gateway	Active Test	Control unit reset
Panamera	Gateway	Active Test	Generator setpoint voltage
Panamera	Gateway	Active Test	Idle speed increase
Panamera	Gateway	Active Test	Relay terminal 30f actuation
Panamera	Gateway	Active Test	Relay terminal 30sd actuation
Panamera	Gateway	Active Test	Reset switch-off stage
Panamera	Gateway	Special Functions	Actual/specified configuration
Panamera	Gateway	Special Functions	Battery change
Panamera	High-voltage battery	ECU Information	
Panamera	High-voltage battery	Read Codes	
Panamera	High-voltage battery	Clear Codes	
Panamera	High-voltage battery	Live Data	
Panamera	High-voltage battery	Active Test	Control unit reset
Panamera	High-voltage battery	Active Test	Fan control, high-voltage battery
Panamera	High-voltage battery	Active Test	High-voltage battery coolant pump
Panamera	High-voltage battery	Special Functions	Battery classification
Panamera	High-voltage battery	Special Functions	High-voltage battery charging
Panamera	High-voltage charger	ECU Information	
Panamera	High-voltage charger	Read Codes	
Panamera	High-voltage charger	Clear Codes	
Panamera	High-voltage charger	Live Data	
Panamera	High-voltage charger	Active Test	Charging socket - button LEDs
Panamera	High-voltage charger	Active Test	Charging socket - charging socket lid
Panamera	High-voltage charger	Active Test	Charging socket - lock test
Panamera	High-voltage charger	Active Test	Charging socket LEDs
Panamera	High-voltage charger	Active Test	Control unit reset
Panamera	High-voltage power electronics	ECU Information	
Panamera	High-voltage power electronics	Read Codes	
Panamera	High-voltage power electronics	Clear Codes	
Panamera	High-voltage power electronics	Live Data	
Panamera	High-voltage power electronics	Active Test	Control unit reset
Panamera	Instrument cluster	ECU Information	
Panamera	Instrument cluster	Read Codes	
Panamera	Instrument cluster	Clear Codes	
Panamera	Instrument cluster	Live Data	
Panamera	Instrument cluster	Active Test	Actuate gear display
Panamera	Instrument cluster	Active Test	Actuate individual light test
Panamera	Instrument cluster	Active Test	Actuate TFT display
Panamera	Instrument cluster	Active Test	Control unit reset
Panamera	Instrument cluster	Active Test	Light test
Panamera	Instrument cluster	Active Test	Pointer test
Panamera	Instrument cluster	Active Test	Reset on-board computer values
Panamera	Instrument cluster	Active Test	Steering wheel dimming
Panamera	Instrument cluster	Active Test	Test segment display
Panamera	Instrument cluster	Active Test	Test warnings
Panamera	Instrument cluster	Special Functions	Calibrate fuel-level sensor
Panamera	Instrument cluster	Special Functions	Reset maintenance interval
Panamera	Instrument cluster	Special Functions	Restore fuel level sensor comparison values to Rear-end electronics control unit
Panamera	Instrument cluster	Special Functions	Save fuel level sensor comparison values to Rear-end electronics control unit
Panamera	Instrument cluster	Special Functions	Set total mileage
Panamera	Instrument cluster	Hot Functions(HOT)	Electric Parking Brake
Panamera	Lane Change Assist	ECU Information	
Panamera	Lane Change Assist	Read Codes	
Panamera	Lane Change Assist	Clear Codes	
Panamera	Lane Change Assist	Live Data	
Panamera	Left headlight	ECU Information	
Panamera	Left headlight	Read Codes	
Panamera	Left headlight	Clear Codes	
Panamera	Left headlight	Live Data	
Panamera	Left headlight	Active Test	Activate variable light distribution
Panamera	Left headlight	Active Test	Actuate static cornering light
Panamera	Left headlight	Active Test	Adaptive light reference run
Panamera	Left headlight	Active Test	Dynamic cornering light reference run
Panamera	Left headlight	Active Test	HBA calibration
Panamera	Left headlight	Active Test	HBA reference run
Panamera	Left headlight	Active Test	Headlight beam adjustment and cornering light,synchronous
Panamera	Left headlight	Active Test	Move cornering light
Panamera	Left headlight	Active Test	Move headlight beam adjustment
Panamera	Left headlight	Active Test	Staring adaptive light distribution
Panamera	Left headlight	Active Test	Synchronous operation of headlight beam adjustment and cornering light
Panamera	Level control/PASMA	ECU Information	

Panamera	Level control/PASM	Read Codes	
Panamera	Level control/PASM	Clear Codes	
Panamera	Level control/PASM	Live Data	
Panamera	Level control/PASM	Active Test	Activate/deactivate level control
Panamera	Level control/PASM	Active Test	Adjust vehicle to normal level
Panamera	Level control/PASM	Active Test	Complete diagnostic session
Panamera	Level control/PASM	Active Test	Complete initial start-up
Panamera	Level control/PASM	Active Test	Compressor,air spring and change-over valves drive link test
Panamera	Level control/PASM	Active Test	Damper drive link test
Panamera	Level control/PASM	Active Test	Drive link test additional volume valves
Panamera	Level control/PASM	Active Test	Drive-link test, bypass valve
Panamera	Level control/PASM	Active Test	New determination of system air flow
Panamera	Level control/PASM	Special Functions	Height sensor system calibration
Panamera	Level control/PASM	Special Functions	Height sensor system component test
Panamera	Level control/PASM	Special Functions	Replacement of an air spring
Panamera	Level control/PASM	Special Functions	Replacement of several components or replacement of the pressure accumulator
Panamera	Park Assist	ECU Information	
Panamera	Park Assist	Read Codes	
Panamera	Park Assist	Clear Codes	
Panamera	Park Assist	Live Data	
Panamera	Park Assist	Active Test	Indicator lamp on button for Park Assist
Panamera	Park Assist	Active Test	Park Assist buzzer, front
Panamera	Park Assist	Active Test	ParkAssist buzzer
Panamera	Park Assist	Active Test	Rear Park Assist buzzer
Panamera	Park Assist	Active Test	System function test (All sensors)
Panamera	Parking brake	ECU Information	
Panamera	Parking brake	Read Codes	
Panamera	Parking brake	Clear Codes	
Panamera	Parking brake	Live Data	
Panamera	Parking brake	Active Test	Clamp
Panamera	Parking brake	Active Test	Confirm actuator replacement
Panamera	Parking brake	Active Test	Light test
Panamera	Parking brake	Active Test	Move to installation position
Panamera	Parking brake	Active Test	Release
Panamera	Parking brake	Special Functions	Calibration
Panamera	Parking brake	Special Functions	Check basic setting of parking-brake
Panamera	Parking brake	Special Functions	Grinding - in
Panamera	Parking brake	Special Functions	Replace brake pads (operating guide)
Panamera	Parking brake	Hot Functions(HOT)	Tire Pressure Monitoring System
Panamera	Passenger's Door	ECU Information	
Panamera	Passenger's Door	Read Codes	
Panamera	Passenger's Door	Clear Codes	
Panamera	Passenger's Door	Live Data	
Panamera	Passenger's Door	Active Test	Central locking functions
Panamera	Passenger's Door	Active Test	Close the windows
Panamera	Passenger's Door	Active Test	Exterior mirror heating
Panamera	Passenger's Door	Active Test	Fold-in door mirrors
Panamera	Passenger's Door	Active Test	Lighting
Panamera	Passenger's Door	Active Test	Mirror adjustment
Panamera	Passenger's Door	Active Test	Unfold door mirrors
Panamera	Passenger's Door	Active Test	Window open
Panamera	Passenger-side seat memory	ECU Information	
Panamera	Passenger-side seat memory	Read Codes	
Panamera	Passenger-side seat memory	Clear Codes	
Panamera	Passenger-side seat memory	Live Data	
Panamera	Passenger-side seat memory	Active Test	Backrest angle adjustment
Panamera	Passenger-side seat memory	Active Test	Backrest width, LBR
Panamera	Passenger-side seat memory	Active Test	Lower lumbar blister, LBU
Panamera	Passenger-side seat memory	Active Test	Seat angle adjustment (SNV)
Panamera	Passenger-side seat memory	Active Test	Seat depth adjustment
Panamera	Passenger-side seat memory	Active Test	Seat fore/aft adjustment
Panamera	Passenger-side seat memory	Active Test	Seat height adjustment, SHV
Panamera	Passenger-side seat memory	Active Test	Seat width, SBR
Panamera	Passenger-side seat memory	Active Test	Upper lumbar blister, LBO
Panamera	Passenger-side seat memory	Special Functions	Normalize seat motors
Panamera	PCM/CDR	ECU Information	
Panamera	PCM/CDR	Read Codes	
Panamera	PCM/CDR	Clear Codes	
Panamera	PCM/CDR	Live Data	
Panamera	PCM/CDR	Active Test	3dB reduction
Panamera	PCM/CDR	Active Test	Button test
Panamera	PCM/CDR	Active Test	CD/DVD Eject
Panamera	PCM/CDR	Active Test	Developer menu
Panamera	PCM/CDR	Active Test	Digital radio (DAB) - antenna voltage
Panamera	PCM/CDR	Active Test	Digital radio (DAB), current field strength
Panamera	PCM/CDR	Active Test	Display test
Panamera	PCM/CDR	Active Test	Factory setting
Panamera	PCM/CDR	Active Test	Loudspeaker test
Panamera	PCM/CDR	Active Test	Satellite antenna, current power consumption
Panamera	PCM/CDR	Active Test	Teach-in telephone handset
Panamera	PCM/CDR	Active Test	Terminal 30 reset
Panamera	PCM/CDR	Active Test	Test tone
Panamera	PCM/CDR	Active Test	Transport mode
Panamera	PCM/CDR	Active Test	Tuner antenna, current power consumption
Panamera	PCM/CDR	Active Test	UMS
Panamera	PCM/CDR	Special Functions	AM field strength
Panamera	PCM/CDR	Special Functions	Current FM field strength
Panamera	PCM/CDR	Special Functions	FM field strength
Panamera	PCM/CDR	Special Functions	Function enable

Panamera	PCM/CDR	Special Functions	Multimedia interface test
Panamera	PCM/CDR	Special Functions	PCM self-test
Panamera	PDCC	ECU Information	
Panamera	PDCC	Read Codes	
Panamera	PDCC	Clear Codes	
Panamera	PDCC	Live Data	
Panamera	PDCC	Active Test	Control unit reset
Panamera	PDCC	Special Functions	Pressure sensor calibration
Panamera	PDCC	Special Functions	Valve actuation
Panamera	PSM	ECU Information	
Panamera	PSM	Read Codes	
Panamera	PSM	Clear Codes	
Panamera	PSM	Live Data	
Panamera	PSM	Active Test	Self-Test
Panamera	PSM	Active Test	Static test
Panamera	PSM	Special Functions	Bleed the brakes
Panamera	PSM	Special Functions	Calibration of combination sensor
Panamera	PSM	Special Functions	Rolling test mode
Panamera	PSM	Special Functions	Speed sensor test
Panamera	PSM	Special Functions	Static test
Panamera	Rear left door	ECU Information	
Panamera	Rear left door	Read Codes	
Panamera	Rear left door	Clear Codes	
Panamera	Rear left door	Live Data	
Panamera	Rear left door	Active Test	Central locking functions
Panamera	Rear left door	Active Test	Close the windows
Panamera	Rear left door	Active Test	Lighting
Panamera	Rear left door	Active Test	Lower side-window sun blinds
Panamera	Rear left door	Active Test	Raise side-window sun blinds
Panamera	Rear left door	Active Test	Window open
Panamera	Rear lid	ECU Information	
Panamera	Rear lid	Read Codes	
Panamera	Rear lid	Clear Codes	
Panamera	Rear lid	Live Data	
Panamera	Rear lid	Active Test	Activate beeper
Panamera	Rear lid	Active Test	Close rear lid by x%
Panamera	Rear lid	Active Test	Close rear lid
Panamera	Rear lid	Special Functions	Calibration
Panamera	Rear right door	ECU Information	
Panamera	Rear right door	Read Codes	
Panamera	Rear right door	Clear Codes	
Panamera	Rear right door	Live Data	
Panamera	Rear right door	Active Test	Central locking functions
Panamera	Rear right door	Active Test	Close the windows
Panamera	Rear right door	Active Test	Lighting
Panamera	Rear right door	Active Test	Lower side-window sun blinds
Panamera	Rear right door	Active Test	Raise side-window sun blinds
Panamera	Rear right door	Active Test	Window open
Panamera	Rear-differential lock	ECU Information	
Panamera	Rear-differential lock	Read Codes	
Panamera	Rear-differential lock	Clear Codes	
Panamera	Rear-differential lock	Live Data	
Panamera	Rear-differential lock	Hot Functions(HOT)	Diesel Particle Filter
Panamera	Rear-end electronics	ECU Information	
Panamera	Rear-end electronics	Read Codes	
Panamera	Rear-end electronics	Clear Codes	
Panamera	Rear-end electronics	Live Data	
Panamera	Rear-end electronics	Active Test	Alarm horn actuation
Panamera	Rear-end electronics	Active Test	Alarm siren actuation
Panamera	Rear-end electronics	Active Test	Brake light actuation
Panamera	Rear-end electronics	Active Test	Central locking LED actuation
Panamera	Rear-end electronics	Active Test	Closing aid actuation
Panamera	Rear-end electronics	Active Test	Daytime driving lights actuation
Panamera	Rear-end electronics	Active Test	Exhaust flaps actuation
Panamera	Rear-end electronics	Active Test	Front interior lights/reading light actuation
Panamera	Rear-end electronics	Active Test	LED garage door opener button actuation
Panamera	Rear-end electronics	Active Test	Luggage compartment light actuation
Panamera	Rear-end electronics	Active Test	Numer plate light actuation
Panamera	Rear-end electronics	Active Test	Orientation light actuation
Panamera	Rear-end electronics	Active Test	Passenger compartment monitoring/tilt sensor button LED actuation
Panamera	Rear-end electronics	Active Test	PVTS - Resetting wake-up counters
Panamera	Rear-end electronics	Active Test	Rear fog light actuation
Panamera	Rear-end electronics	Active Test	Rear window heater actuation
Panamera	Rear-end electronics	Active Test	Rear window roller blind actuation
Panamera	Rear-end electronics	Active Test	Rear wiper actuation
Panamera	Rear-end electronics	Active Test	Reversing lights actuation
Panamera	Rear-end electronics	Active Test	Roof console interior light actuation
Panamera	Rear-end electronics	Active Test	Sliding sunroof actuation
Panamera	Rear-end electronics	Active Test	Sliding sunroof normalization process
Panamera	Rear-end electronics	Active Test	Spoiler actuation
Panamera	Rear-end electronics	Active Test	Spoiler normalizing run
Panamera	Rear-end electronics	Active Test	Tail lights actuation
Panamera	Rear-end electronics	Active Test	Teach roof console
Panamera	Rear-end electronics	Active Test	Vanity mirror/glove box light actuation
Panamera	Rear-end electronics	Special Functions	Display history memory for anti-theft alarm system
Panamera	Rear-end electronics	Special Functions	Sliding-roof standardization
Panamera	Reversing camera	ECU Information	
Panamera	Reversing camera	Read Codes	
Panamera	Reversing camera	Clear Codes	

Panamera	Reversing camera	Live Data	
Panamera	Reversing camera	Active Test	Button function LED
Panamera	Reversing camera	Active Test	Control unit reset
Panamera	Right headlight	ECU Information	
Panamera	Right headlight	Read Codes	
Panamera	Right headlight	Clear Codes	
Panamera	Right headlight	Live Data	
Panamera	Right headlight	Active Test	Activate variable light distribution
Panamera	Right headlight	Active Test	Actuate static cornering light
Panamera	Right headlight	Active Test	Adaptive light reference run
Panamera	Right headlight	Active Test	Dynamic cornering light reference run
Panamera	Right headlight	Active Test	HBA calibration
Panamera	Right headlight	Active Test	HBA reference run
Panamera	Right headlight	Active Test	Headlight beam adjustment and cornering light,synchronous
Panamera	Right headlight	Active Test	Move cornering light
Panamera	Right headlight	Active Test	Move headlight beam adjustment
Panamera	Right headlight	Active Test	Staring adaptive light distribution
Panamera	Right headlight	Active Test	Synchronous operation of headlight beam adjustment and cornering light
Panamera	Selector lever	ECU Information	
Panamera	Selector lever	Read Codes	
Panamera	Selector lever	Clear Codes	
Panamera	Selector lever	Live Data	
Panamera	Selector lever	Active Test	Terminal 30 reset
Panamera	Selector lever	Active Test	Transport mode
Panamera	Steering aid	ECU Information	
Panamera	Steering aid	Read Codes	
Panamera	Steering aid	Clear Codes	
Panamera	Steering aid	Live Data	
Panamera	Steering aid	Active Test	Astuator test
Panamera	Steering aid	Active Test	Self test
Panamera	Steering aid	Hot Functions(HOT)	Steering Angle Sensor
Panamera	Steering wheel electronics	ECU Information	
Panamera	Steering wheel electronics	Read Codes	
Panamera	Steering wheel electronics	Clear Codes	
Panamera	Steering wheel electronics	Live Data	
Panamera	Steering wheel electronics	Active Test	Activation of horn
Panamera	Steering wheel electronics	Active Test	Activation of Launch display
Panamera	Steering wheel electronics	Active Test	Activation of steering wheel heating
Panamera	Steering wheel electronics	Active Test	Activation of steering-wheel lighting brightness
Panamera	Steering wheel electronics	Active Test	Increase volume
Panamera	Steering wheel electronics	Active Test	Mute volume
Panamera	Steering wheel electronics	Active Test	Reduce volume
Panamera	Steering wheel electronics	Special Functions	Function enable
Panamera	Steering wheel electronics	Special Functions	Steering-angle sensor calibration
Panamera	Tire Pressure Monitoring System	ECU Information	
Panamera	Tire Pressure Monitoring System	Read Codes	
Panamera	Tire Pressure Monitoring System	Clear Codes	
Panamera	Tire Pressure Monitoring System	Live Data	
Panamera	Tire Pressure Monitoring System	Active Test	Control unit reset
Panamera	Tire Pressure Monitoring System	Active Test	Save manually taught wheel IDs
Panamera	Tire Pressure Monitoring System	Special Functions	System adaption
Panamera	Tire Pressure Monitoring System	Special Functions	Teach wheel IDs
Panamera	Trailer hitch	ECU Information	
Panamera	Trailer hitch	Read Codes	
Panamera	Trailer hitch	Clear Codes	
Panamera	Trailer hitch	Live Data	
Panamera	Trailer hitch	Active Test	Brake light (trailer)
Panamera	Trailer hitch	Active Test	Left direction indicator (trailer)
Panamera	Trailer hitch	Active Test	Left tail light(trailer)
Panamera	Trailer hitch	Active Test	Locator lighting control switch
Panamera	Trailer hitch	Active Test	Rear fog light, trailer
Panamera	Trailer hitch	Active Test	Reversing lights (trailer)
Panamera	Trailer hitch	Active Test	Right direction indicator light (trailer)
Panamera	Trailer hitch	Active Test	Right tail light (trailer)
Panamera	Trailer hitch	Active Test	Swivel in trailer hitch
Panamera	Trailer hitch	Active Test	Swivel out trailer hitch
Panamera	Trailer hitch	Active Test	Swivel-in operating switch function light
Panamera	Trailer hitch	Active Test	Swivel-out operating switch function light
Panamera	Trailer hitch	Active Test	Trailer control unit initializing
Panamera	Transmission control	ECU Information	
Panamera	Transmission control	Read Codes	
Panamera	Transmission control	Clear Codes	
Panamera	Transmission control	Live Data	
Panamera	Transmission control	Active Test	Oil fill mode
Panamera	Transmission control	Active Test	Reset adaptation values
Panamera	Transmission control	Special Functions	Read permanent fault memory
Panamera	TV tuner	ECU Information	
Panamera	TV tuner	Read Codes	
Panamera	TV tuner	Clear Codes	
Panamera	TV tuner	Live Data	
Panamera	TV tuner	Active Test	Antenna reception current setting
Panamera	TV tuner	Active Test	Antenna reception via channel specification
Panamera	TV tuner	Active Test	Antenna road test via frequency specification
Panamera	TV tuner	Active Test	Antenna statistics
Panamera	TV tuner	Active Test	Antenna wiring
Panamera	TV tuner	Active Test	Audio and video signal Rear seat Entertainment
Panamera	TV tuner	Active Test	Transport mode
Panamera	TV tuner	Active Test	Video signal for reversing camera