

Vehicle and Chassis	System	Function Name	SubFunction Name	Version
A (176)	ME - Motor electronics	ECU Information		V1.00.001 or higher
A (176)	ME - Motor electronics	Read Codes		V1.00.001 or higher
A (176)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
A (176)	ME - Motor electronics	Live Data		V1.00.001 or higher
A (176)	ME - Motor electronics	Active Test		V1.00.001 or higher
A (176)	ME - Motor electronics	Control unit adaptations	Configuration	V1.00.001 or higher
A (176)	ME - Motor electronics	Control unit adaptations	Teach-in processes	V1.00.001 or higher
A (176)	CDI-Motor electronics	ECU Information		V1.00.001 or higher
A (176)	CDI-Motor electronics	Read Codes		V1.00.001 or higher
A (176)	CDI-Motor electronics	Erase Codes		V1.00.001 or higher
A (176)	CDI-Motor electronics	Live Data		V1.00.001 or higher
A (176)	CDI-Motor electronics	Active Test		V1.00.001 or higher
A (176)	DKG-Electronic transmission control for double-plate clutch transmission	ECU Information		V1.00.001 or higher
A (176)	DKG-Electronic transmission control for double-plate clutch transmission	Read Codes		V1.00.001 or higher
A (176)	DKG-Electronic transmission control for double-plate clutch transmission	Erase Codes		V1.00.001 or higher

A (176)	DKG-Electronic transmission control for double-plate clutch transmission	Live Data		V1.00.001 or higher
A (176)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
A (176)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
A (176)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
A (176)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
A (176)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
A (176)	VG - All-wheel drive	ECU Information		V1.00.001 or higher
A (176)	VG - All-wheel drive	Read Codes		V1.00.001 or higher
A (176)	VG - All-wheel drive	Erase Codes		V1.00.001 or higher
A (176)	PTCU-Common powertrain controller	ECU Information		V1.00.001 or higher
A (176)	PTCU-Common powertrain controller	Read Codes		V1.00.001 or higher
A (176)	PTCU-Common powertrain controller	Erase Codes		V1.00.001 or higher
A (176)	PTCU-Common powertrain controller	Live Data		V1.00.001 or higher
A (176)	PTCU-Common powertrain controller	ECU Information		V1.00.001 or higher
A (176)	PTCU-Common powertrain controller	Read Codes		V1.00.001 or higher
A (176)	PTCU-Common powertrain controller	Erase Codes		V1.00.001 or higher
A (176)	PTCU-Common powertrain controller	Live Data		V1.00.001 or higher
A (176)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher

A (176)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
A (176)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
A (176)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
A (176)	EFB-Electronic parking brake	ECU Information		V1.00.001 or higher
A (176)	EFB-Electronic parking brake	Read Codes		V1.00.001 or higher
A (176)	EFB-Electronic parking brake	Erase Codes		V1.00.001 or higher
A (176)	EFB-Electronic parking brake	Live Data		V1.00.001 or higher
A (176)	EFB-Electronic parking brake	Active Test		V1.00.001 or higher
A (176)	EFB-Electronic parking brake	Control unit adaptations	Calibration of control unit 'N128 (Electric parking brake control unit)'	V1.00.001 or higher
A (176)	ES-Electrical power steering	ECU Information		V1.00.001 or higher
A (176)	ES-Electrical power steering	Read Codes		V1.00.001 or higher
A (176)	ES-Electrical power steering	Erase Codes		V1.00.001 or higher
A (176)	ES-Electrical power steering	Live Data		V1.00.001 or higher
A (176)	DTR-DISTRONIC	ECU Information		V1.00.001 or higher
A (176)	DTR-DISTRONIC	Read Codes		V1.00.001 or higher
A (176)	DTR-DISTRONIC	Erase Codes		V1.00.001 or higher
A (176)	DTR-DISTRONIC	Live Data		V1.00.001 or higher
A (176)	SRS-Supplemental restraint system	ECU Information		V1.00.001 or higher
A (176)	SRS-Supplemental restraint system	Read Codes		V1.00.001 or higher
A (176)	SRS-Supplemental restraint system	Erase Codes		V1.00.001 or higher

A (176)	SRS-Supplemental restraint system	Live Data		V1.00.001 or higher
A (176)	SRS-Supplemental restraint system	Active Test		V1.00.001 or higher
A (176)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher
A (176)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
A (176)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
A (176)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
A (176)	SCM-Steering column module	ECU Information		V1.00.001 or higher
A (176)	SCM-Steering column module	Read Codes		V1.00.001 or higher
A (176)	SCM-Steering column module	Erase Codes		V1.00.001 or higher
A (176)	SCM-Steering column module	Live Data		V1.00.001 or higher
A (176)	SCM-Steering column module	Active Test		V1.00.001 or higher
A (176)	ATA-ATA[EDW]/tow-away protection/interior protection	ECU Information		V1.00.001 or higher
A (176)	ATA-ATA[EDW]/tow-away protection/interior protection	Read Codes		V1.00.001 or higher
A (176)	ATA-ATA[EDW]/tow-away protection/interior protection	Erase Codes		V1.00.001 or higher
A (176)	ATA-ATA[EDW]/tow-away protection/interior protection	Live Data		V1.00.001 or higher
A (176)	Multifunction control unit-Multifunction control unit	ECU Information		V1.00.001 or higher

A (176)	Multifunction control unit- Multifunction control unit	Read Codes		V1.00.001 or higher
A (176)	Multifunction control unit- Multifunction control unit	Erase Codes		V1.00.001 or higher
A (176)	Multifunction control unit- Multifunction control unit	Live Data		V1.00.001 or higher
A (176)	Multifunction control unit- Multifunction control unit	Active Test		V1.00.001 or higher
A (176)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
A (176)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
A (176)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
A (176)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
A (176)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
A (176)	PSD-Control module 'Panoramic sliding roof '	ECU Information		V1.00.001 or higher
A (176)	PSD-Control module 'Panoramic sliding roof '	Read Codes		V1.00.001 or higher
A (176)	PSD-Control module 'Panoramic sliding roof '	Erase Codes		V1.00.001 or higher
A (176)	PSD-Control module 'Panoramic sliding roof '	Live Data		V1.00.001 or higher
A (176)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher

A (176)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
A (176)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
A (176)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
A (176)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
A (176)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
A (176)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
A (176)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
A (176)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
A (176)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher

A (176)	Trailer recognition module - Trailer recognition	ECU Information		V1.00.001 or higher
A (176)	Trailer recognition module - Trailer recognition	Read Codes		V1.00.001 or higher
A (176)	Trailer recognition module - Trailer recognition	Erase Codes		V1.00.001 or higher
A (176)	Trailer recognition module - Trailer recognition	Live Data		V1.00.001 or higher
A (176)	Trailer recognition module - Trailer recognition	Active Test		V1.00.001 or higher
A (176)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher
A (176)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
A (176)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
A (176)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
A (176)	SG-SW-Control unit 'Headlamp'	ECU Information		V1.00.001 or higher
A (176)	SG-SW-Control unit 'Headlamp'	Read Codes		V1.00.001 or higher
A (176)	SG-SW-Control unit 'Headlamp'	Erase Codes		V1.00.001 or higher
A (176)	SG-SW-Control unit 'Headlamp'	Live Data		V1.00.001 or higher

A (176)	SG-SW-Control unit 'Headlamp'	Active Test		V1.00.001 or higher
A (176)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
A (176)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
A (176)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
A (176)	IC - Instrument cluster	Live Data		V1.00.001 or higher
A (176)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
A (176)	IC - Instrument cluster	Active Test		V1.00.001 or higher
A (176)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher
A (176)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Read Codes		V1.00.001 or higher
A (176)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
A (176)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
A (176)	NAV-Navigation module	ECU Information		V1.00.001 or higher
A (176)	NAV-Navigation module	Read Codes		V1.00.001 or higher
A (176)	NAV-Navigation module	Erase Codes		V1.00.001 or higher
A (176)	NAV-Navigation module	Live Data		V1.00.001 or higher
A (176)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher



A (176)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher
A (176)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher
A (176)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
A (176)	SOUND - Sound system	ECU Information		V1.00.001 or higher
A (176)	SOUND - Sound system	Read Codes		V1.00.001 or higher
A (176)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
A (176)	SOUND - Sound system	Live Data		V1.00.001 or higher
A (176)	TV - TV tuner	ECU Information		V1.00.001 or higher
A (176)	TV - TV tuner	Read Codes		V1.00.001 or higher
A (176)	TV - TV tuner	Erase Codes		V1.00.001 or higher
A (176)	TV - TV tuner	Live Data		V1.00.001 or higher
A (176)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
A (176)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
A (176)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
A (176)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
A (176)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
A (176)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
A (176)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
A (176)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher

A (176)	Drive Kit Plus - Drive kit for iPhone	ECU Information		V1.00.001 or higher
A (176)	Drive Kit Plus - Drive kit for iPhone	Read Codes		V1.00.001 or higher
A (176)	Drive Kit Plus - Drive kit for iPhone	Erase Codes		V1.00.001 or higher
A (176)	Drive Kit Plus - Drive kit for iPhone	Live Data		V1.00.001 or higher
A (176)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
A (176)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
A (176)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
A (176)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
A (176)	MIF - Media interface	ECU Information		V1.00.001 or higher
A (176)	MIF - Media interface	Read Codes		V1.00.001 or higher
A (176)	MIF - Media interface	Erase Codes		V1.00.001 or higher
A (176)	MIF - Media interface	Live Data		V1.00.001 or higher
A (176)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
A (176)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
A (176)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
A (176)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
A (176)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher

A (176)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
A (176)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
A (176)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
A (176)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
A (176)	PARK - Parking system	ECU Information		V1.00.001 or higher
A (176)	PARK - Parking system	Read Codes		V1.00.001 or higher
A (176)	PARK - Parking system	Erase Codes		V1.00.001 or higher
A (176)	PARK - Parking system	Live Data		V1.00.001 or higher
A (176)	PARK - Parking system	Active Test		V1.00.001 or higher
A (176)	DSI-DIRECT SELECT interface	ECU Information		V1.00.001 or higher
A (176)	DSI-DIRECT SELECT interface	Read Codes		V1.00.001 or higher
A (176)	DSI-DIRECT SELECT interface	Erase Codes		V1.00.001 or higher
A (176)	DSI-DIRECT SELECT interface	Live Data		V1.00.001 or higher
A (176)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	ECU Information		V1.00.001 or higher
A (176)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Read Codes		V1.00.001 or higher
A (176)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Erase Codes		V1.00.001 or higher

A (176)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Live Data		V1.00.001 or higher
A (176)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	ECU Information		V1.00.001 or higher
A (176)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Read Codes		V1.00.001 or higher
A (176)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Erase Codes		V1.00.001 or higher
A (176)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Live Data		V1.00.001 or higher
A (176)	DCU-LF-Left front door	ECU Information		V1.00.001 or higher
A (176)	DCU-LF-Left front door	Read Codes		V1.00.001 or higher
A (176)	DCU-LF-Left front door	Erase Codes		V1.00.001 or higher
A (176)	DCU-LF-Left front door	Live Data		V1.00.001 or higher
A (176)	DCU-RF-Right front door	ECU Information		V1.00.001 or higher
A (176)	DCU-RF-Right front door	Read Codes		V1.00.001 or higher
A (176)	DCU-RF-Right front door	Erase Codes		V1.00.001 or higher

A (176)	DCU-RF-Right front door	Live Data		V1.00.001 or higher
A (176)	AAC-Air conditioning	ECU Information		V1.00.001 or higher
A (176)	AAC-Air conditioning	Read Codes		V1.00.001 or higher
A (176)	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
A (176)	AAC-Air conditioning	Live Data		V1.00.001 or higher
A (176)	STH-Stationary heater	ECU Information		V1.00.001 or higher
A (176)	STH-Stationary heater	Read Codes		V1.00.001 or higher
A (176)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
A (176)	STH-Stationary heater	Live Data		V1.00.001 or higher
A (176)	TPM-Tire pressure monitor	ECU Information		V1.00.001 or higher
A (176)	TPM-Tire pressure monitor	Read Codes		V1.00.001 or higher
A (176)	TPM-Tire pressure monitor	Erase Codes		V1.00.001 or higher
A (176)	TPM-Tire pressure monitor	Live Data		V1.00.001 or higher
A (176)	TPM-Tire pressure monitor	Active Test		V1.00.001 or higher
A (176)	TPM-Tire pressure monitor	Control unit adaptations	Teach-in processes	V1.00.001 or higher
A (176)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	ECU Information		V1.00.001 or higher
A (176)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Read Codes		V1.00.001 or higher
A (176)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Erase Codes		V1.00.001 or higher
A (176)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Live Data		V1.00.001 or higher

A (176)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Active Test		V1.00.001 or higher
A (176)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
A (176)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
A (176)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
A (176)	IRS-HRA - Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
A (176)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
A (176)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
A (176)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
A (176)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
A (176)	DTR-DISTRONIC	ECU Information		V1.00.001 or higher
A (176)	DTR-DISTRONIC	Read Codes		V1.00.001 or higher
A (176)	DTR-DISTRONIC	Erase Codes		V1.00.001 or higher
A (176)	DTR-DISTRONIC	Live Data		V1.00.001 or higher
A (176)	RFK - Backup camera	ECU Information		V1.00.001 or higher
A (176)	RFK - Backup camera	Read Codes		V1.00.001 or higher

A (176)	RFK - Backup camera	Erase Codes		V1.00.001 or higher
A (176)	RFK - Backup camera	Live Data		V1.00.001 or higher
A (176)	RFK - Backup camera	Active Test		V1.00.001 or higher
A (176)	PARK - Parking system	ECU Information		V1.00.001 or higher
A (176)	PARK - Parking system	Read Codes		V1.00.001 or higher
A (176)	PARK - Parking system	Erase Codes		V1.00.001 or higher
A (176)	PARK - Parking system	Live Data		V1.00.001 or higher
A (176)	PARK - Parking system	Active Test		V1.00.001 or higher
A (169)	ME-SFI-Gasoline engine control	ECU Information		V1.00.001 or higher
A (169)	ME-SFI-Gasoline engine control	Read Codes		V1.00.001 or higher
A (169)	ME-SFI-Gasoline engine control	Erase Codes		V1.00.001 or higher
A (169)	ME-SFI-Gasoline engine control	Live Data		V1.00.001 or higher
A (169)	ME-SFI-Gasoline engine control	Active Test		V1.00.001 or higher
A (169)	ME-SFI-Gasoline engine control	Control unit adaptations	Learning processes	V1.00.001 or higher
A (169)	ME-SFI-Gasoline engine control	Control unit adaptations	Correction programming	V1.00.001 or higher
A (169)	FCVT-Continuously variable automatic transmission	ECU Information		V1.00.001 or higher
A (169)	FCVT-Continuously variable automatic transmission	Read Codes		V1.00.001 or higher
A (169)	FCVT-Continuously variable automatic transmission	Erase Codes		V1.00.001 or higher

A (169)	FCVT-Continuously variable automatic transmission	Live Data		V1.00.001 or higher
A (169)	FCVT-Continuously variable automatic transmission	Special functions	Diagnosis routines	V1.00.001 or higher
A (169)	FCVT-Continuously variable automatic transmission	Special functions	Initial test/Oil condition check/Oil level check	V1.00.001 or higher
A (169)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
A (169)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
A (169)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
A (169)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
A (169)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
A (169)	ESM-Electronic selector module	Control unit adaptations	Operational check	V1.00.001 or higher
A (169)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
A (169)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
A (169)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
A (169)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
A (169)	ESP-Electronic stability program	Control unit adaptations	Standstill Test	V1.00.001 or higher
A (169)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
A (169)	ESP-Electronic stability program	Control unit adaptations	Tire pressure loss warner	V1.00.001 or higher
A (169)	ES-Electrical power steering	ECU Information		V1.00.001 or higher
A (169)	ES-Electrical power steering	Read Codes		V1.00.001 or higher
A (169)	ES-Electrical power steering	Erase Codes		V1.00.001 or higher



A (169)	ES-Electrical power steering	Live Data		V1.00.001 or higher
A (169)	AB-Airbag	ECU Information		V1.00.001 or higher
A (169)	AB-Airbag	Read Codes		V1.00.001 or higher
A (169)	AB-Airbag	Erase Codes		V1.00.001 or higher
A (169)	AB-Airbag	Live Data		V1.00.001 or higher
A (169)	CGW-Central gateway	ECU Information		V1.00.001 or higher
A (169)	CGW-Central gateway	Read Codes		V1.00.001 or higher
A (169)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
A (169)	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher
A (169)	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher
A (169)	CGW-Central gateway	Special functions	All codes	V1.00.001 or higher
A (169)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
A (169)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
A (169)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
A (169)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
A (169)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher
A (169)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher
A (169)	EZS-Electronic ignition switch	Control unit adaptations	Program the replacement keys.	V1.00.001 or higher
A (169)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N73 (Electronic Ignition Switch (EIS/EZS) control module)'. Activate the control module 'N73 (Electronic Ignition Switch (EIS/EZS) control module)'.	V1.00.001 or higher

A (169)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N26/5 (Electric steering lock control module)'. Writing of the VIN	V1.00.001 or higher
A (169)	EZS-Electronic ignition switch	Control unit adaptations	Writing of the VIN	V1.00.001 or higher
A (169)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
A (169)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
A (169)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
A (169)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
A (169)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
A (169)	ATA-Anti-theft alarm system	ECU Information		V1.00.001 or higher
A (169)	ATA-Anti-theft alarm system	Read Codes		V1.00.001 or higher
A (169)	ATA-Anti-theft alarm system	Erase Codes		V1.00.001 or higher
A (169)	ATA-Anti-theft alarm system	Live Data		V1.00.001 or higher
A (169)	ATA-Anti-theft alarm system	Active Test		V1.00.001 or higher
A (169)	SAM-Signal acquisition and actuation module	ECU Information		V1.00.001 or higher
A (169)	SAM-Signal acquisition and actuation module	Read Codes		V1.00.001 or higher
A (169)	SAM-Signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
A (169)	SAM-Signal acquisition and actuation module	Live Data		V1.00.001 or higher
A (169)	SAM-Signal acquisition and actuation module	Active Test		V1.00.001 or higher

A (169)	SAM-Signal acquisition and actuation module	Control unit adaptations	Reset the control module.	V1.00.001 or higher
A (169)	AHE-Trailer recognition	ECU Information		V1.00.001 or higher
A (169)	AHE-Trailer recognition	Read Codes		V1.00.001 or higher
A (169)	AHE-Trailer recognition	Erase Codes		V1.00.001 or higher
A (169)	AHE-Trailer recognition	Live Data		V1.00.001 or higher
A (169)	AHE-Trailer recognition	Active Test		V1.00.001 or higher
A (169)	MSS-Special vehicle multifunction control module	ECU Information		V1.00.001 or higher
A (169)	MSS-Special vehicle multifunction control module	Read Codes		V1.00.001 or higher
A (169)	MSS-Special vehicle multifunction control module	Erase Codes		V1.00.001 or higher
A (169)	MSS-Special vehicle multifunction control module	Live Data		V1.00.001 or higher
A (169)	MSS-Special vehicle multifunction control module	Active Test		V1.00.001 or higher
A (169)	MSS-Special vehicle multifunction control module	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
A (169)	HRA-FL-Front left headlamp range control	ECU Information		V1.00.001 or higher
A (169)	HRA-FL-Front left headlamp range control	Read Codes		V1.00.001 or higher
A (169)	HRA-FL-Front left headlamp range control	Erase Codes		V1.00.001 or higher

A (169)	HRA-FL-Front left headlamp range control	Live Data		V1.00.001 or higher
A (169)	HRA-FL-Front left headlamp range control	Active Test		V1.00.001 or higher
A (169)	HRA-FL-Front left headlamp range control	Control unit adaptations	Zero position adjustment	V1.00.001 or higher
A (169)	HRA-FR-Front right headlamp range control	ECU Information		V1.00.001 or higher
A (169)	HRA-FR-Front right headlamp range control	Read Codes		V1.00.001 or higher
A (169)	HRA-FR-Front right headlamp range control	Erase Codes		V1.00.001 or higher
A (169)	HRA-FR-Front right headlamp range control	Live Data		V1.00.001 or higher
A (169)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
A (169)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
A (169)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
A (169)	IC-Instrument cluster	ECU Information		V1.00.001 or higher
A (169)	IC-Instrument cluster	Read Codes		V1.00.001 or higher
A (169)	IC-Instrument cluster	Erase Codes		V1.00.001 or higher
A (169)	IC-Instrument cluster	Live Data		V1.00.001 or higher
A (169)	IC-Instrument cluster	ECU Information		V1.00.001 or higher
A (169)	IC-Instrument cluster	Active Test		V1.00.001 or higher
A (169)	IC-Instrument cluster	Control unit adaptations	Set the reading of main odometer.	V1.00.001 or higher
A (169)	IC-Instrument cluster	Control unit adaptations	Setting days since initial registration	V1.00.001 or higher
A (169)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher

A (169)	SCM [MRM]- Steering column module	Read Codes		V1.00.001 or higher
A (169)	SCM [MRM]- Steering column module	Erase Codes		V1.00.001 or higher
A (169)	SCM [MRM]- Steering column module	Live Data		V1.00.001 or higher
A (169)	SCM [MRM]- Steering column module	Active Test		V1.00.001 or higher
A (169)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
A (169)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
A (169)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
A (169)	PTS-Parktronic system	Live Data		V1.00.001 or higher
A (169)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
A (169)	ASSYST-Active Service System	Read Codes		V1.00.001 or higher
A (169)	ASSYST-Active Service System	Erase Codes		V1.00.001 or higher
A (169)	ASSYST-Active Service System	Live Data		V1.00.001 or higher
A (169)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
A (169)	ASSYST-Active Service System	Control unit adaptations	ASSYST settings	V1.00.001 or higher
A (169)	ASSYST-Active Service System	Initial startup	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
A (169)	ASSYST-Active Service System	Initial startup	Initial start-up with manual settings input for new control module(For example: The previous control module cannot be read any longer.)	V1.00.001 or higher

A (169)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
A (169)	ASSYST PLUS-PLUS Active Service System	Read Codes		V1.00.001 or higher
A (169)	ASSYST PLUS-PLUS Active Service System	Erase Codes		V1.00.001 or higher
A (169)	ASSYST PLUS-PLUS Active Service System	Live Data		V1.00.001 or higher
A (169)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
A (169)	ASSYST PLUS-PLUS Active Service System	Control unit adaptations	Variant coding	V1.00.001 or higher
A (169)	ASSYST PLUS-PLUS Active Service System	Control unit adaptations	Control module reset	V1.00.001 or higher
A (169)	ASSYST PLUS-PLUS Active Service System	Initial startup	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
A (169)	ASSYST PLUS-PLUS Active Service System	Initial startup	Initial start-up with manual settings input for new control module(For example: The previous control module cannot be read any longer.)	V1.00.001 or higher
A (169)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher

A (169)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher
A (169)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
A (169)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher
A (169)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher
A (169)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
A (169)	COMAND or AUDIO	ECU Information		V1.00.001 or higher
A (169)	COMAND or AUDIO	Read Codes		V1.00.001 or higher
A (169)	COMAND or AUDIO	Erase Codes		V1.00.001 or higher
A (169)	COMAND or AUDIO	Live Data		V1.00.001 or higher
A (169)	COMAND or AUDIO	Active Test		V1.00.001 or higher
A (169)	COMAND or AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher

A (169)	CTEL-Mobile phone adapter with universal interface	ECU Information		V1.00.001 or higher
A (169)	CTEL-Mobile phone adapter with universal interface	Read Codes		V1.00.001 or higher
A (169)	CTEL-Mobile phone adapter with universal interface	Erase Codes		V1.00.001 or higher
A (169)	CTEL-Mobile phone adapter with universal interface	Live Data		V1.00.001 or higher
A (169)	CDC-CD changer	ECU Information		V1.00.001 or higher
A (169)	CDC-CD changer	Read Codes		V1.00.001 or higher
A (169)	CDC-CD changer	Erase Codes		V1.00.001 or higher
A (169)	CDC-CD changer	Live Data		V1.00.001 or higher
A (169)	CDC-CD changer	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
A (169)	VCS-Voice control system	ECU Information		V1.00.001 or higher
A (169)	VCS-Voice control system	Read Codes		V1.00.001 or higher
A (169)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
A (169)	VCS-Voice control system	Active Test		V1.00.001 or higher
A (169)	SOUND- Sound system	ECU Information		V1.00.001 or higher
A (169)	SOUND- Sound system	Read Codes		V1.00.001 or higher
A (169)	SOUND- Sound system	Erase Codes		V1.00.001 or higher
A (169)	SOUND- Sound system	Live Data		V1.00.001 or higher
A (169)	SOUND- Sound system	Active Test		V1.00.001 or higher
A (169)	SOUND- Sound system	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
A (169)	CTEL-Cellular telephone	ECU Information		V1.00.001 or higher



A (169)	CTEL-Cellular telephone	Read Codes		V1.00.001 or higher
A (169)	CTEL-Cellular telephone	Erase Codes		V1.00.001 or higher
A (169)	CTEL-Cellular telephone	Live Data		V1.00.001 or higher
A (169)	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
A (169)	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher
A (169)	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher
A (169)	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher
A (169)	DCM-FL-Door control module front left	Active Test		V1.00.001 or higher
A (169)	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
A (169)	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher
A (169)	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
A (169)	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
A (169)	DCM-FR-Door control module front right	Active Test		V1.00.001 or higher
A (169)	DCM-RL-Door control module rear left	ECU Information		V1.00.001 or higher
A (169)	DCM-RL-Door control module rear left	Read Codes		V1.00.001 or higher
A (169)	DCM-RL-Door control module rear left	Erase Codes		V1.00.001 or higher
A (169)	DCM-RL-Door control module rear left	Live Data		V1.00.001 or higher

A (169)	DCM-RL-Door control module rear left	Active Test		V1.00.001 or higher
A (169)	DCM-RR-Door control module rear right	ECU Information		V1.00.001 or higher
A (169)	DCM-RR-Door control module rear right	Read Codes		V1.00.001 or higher
A (169)	DCM-RR-Door control module rear right	Erase Codes		V1.00.001 or higher
A (169)	DCM-RR-Door control module rear right	Live Data		V1.00.001 or higher
A (169)	DCM-RR-Door control module rear right	Active Test		V1.00.001 or higher
A (169)	C-AAC-Convenience automatic air conditioning/AAC-Automatic air conditioning/HEAT-Automatic heater	ECU Information		V1.00.001 or higher
A (169)	C-AAC-Convenience automatic air conditioning/AAC-Automatic air conditioning/HEAT-Automatic heater	Read Codes		V1.00.001 or higher
A (169)	C-AAC-Convenience automatic air conditioning/AAC-Automatic air conditioning/HEAT-Automatic heater	Erase Codes		V1.00.001 or higher

A (169)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Live Data		V1.00.001 or higher
A (169)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Active Test		V1.00.001 or higher
A (169)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
A (169)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
A (169)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Control unit adaptations	Teach-in of the actuator motors after replacement of actuator motor	V1.00.001 or higher
A (169)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Control unit adaptations	Break-in procedure after replacement of refrigerant compressor	V1.00.001 or higher

A (169)	CDI-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Extension of run-on time	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Replace the component 'Diesel Particulate Filter'.	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Diesel Particulate Filter Used Program	V1.00.001 or higher
A (169)	ME-SFI-Gasoline engine control	ECU Information		V1.00.001 or higher
A (169)	ME-SFI-Gasoline engine control	Read Codes		V1.00.001 or higher

A (169)	ME-SFI-Gasoline engine control	Erase Codes		V1.00.001 or higher
A (169)	ME-SFI-Gasoline engine control	Live Data		V1.00.001 or higher
A (169)	ME-SFI-Gasoline engine control	Active Test		V1.00.001 or higher
A (169)	BSA-Belt-driven starter/alternator	ECU Information		V1.00.001 or higher
A (169)	BSA-Belt-driven starter/alternator	Read Codes		V1.00.001 or higher
A (169)	BSA-Belt-driven starter/alternator	Erase Codes		V1.00.001 or higher
A (169)	BSA-Belt-driven starter/alternator	Live Data		V1.00.001 or higher
A (169)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
A (169)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
A (169)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
A (169)	PTS-Parktronic system	Live Data		V1.00.001 or higher
A (169)	PTS-Parktronic system	Active Test		V1.00.001 or higher
A (169)	AUDIO	ECU Information		V1.00.001 or higher
A (169)	AUDIO	Read Codes		V1.00.001 or higher
A (169)	AUDIO	Erase Codes		V1.00.001 or higher
A (169)	AUDIO	Live Data		V1.00.001 or higher
A (169)	AUDIO	Active Test		V1.00.001 or higher
A (169)	AUDIO	Control unit adaptations	Changing the language version(Linguatronic)	V1.00.001 or higher
A (169)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher
A (169)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
A (169)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher

A (169)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher
A (169)	Sound system (Main amplifier)	Active Test		V1.00.001 or higher
A (169)	UCI-Media interface	ECU Information		V1.00.001 or higher
A (169)	UCI-Media interface	Read Codes		V1.00.001 or higher
A (169)	UCI-Media interface	Erase Codes		V1.00.001 or higher
A (169)	DAB-Digital radio	ECU Information		V1.00.001 or higher
A (169)	DAB-Digital radio	Read Codes		V1.00.001 or higher
A (169)	DAB-Digital radio	Erase Codes		V1.00.001 or higher
A (169)	DAB-Digital radio	Live Data		V1.00.001 or higher
A (169)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
A (169)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
A (169)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
A (169)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
A (169)	SDAR-Satellite radio(Valid for USA)	Active Test		V1.00.001 or higher
A (169)	TV-TV tuner	ECU Information		V1.00.001 or higher
A (169)	TV-TV tuner	Read Codes		V1.00.001 or higher
A (169)	TV-TV tuner	Erase Codes		V1.00.001 or higher
A (169)	CTEL-Cellular telephone(JAPAN)	ECU Information		V1.00.001 or higher
A (169)	CTEL-Cellular telephone(JAPAN)	Read Codes		V1.00.001 or higher
A (169)	CTEL-Cellular telephone(JAPAN)	Erase Codes		V1.00.001 or higher

A (169)	CTEL-Cellular telephone(JAPAN)	Live Data		V1.00.001 or higher
A (169)	CTEL-Cellular telephone(JAPAN)	Active Test		V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel Particulate Filter'	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher

A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Diesel Particulate Filter (DPF) after replacement of ECM without transfer of values	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B28/8 (Diesel Particulate Filter (DPF) differential pressure sensor)'	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'G3/1 (Oxygen sensor downstream of the Three Way Catalyst (TWC/KAT))'	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y74 (Pressure control valve)'	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y100/2 (Boost pressure regulator)'	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Activate the fuel pump.	V1.00.001 or higher



A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
A (169)	CDI-Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
A (169)	VP-Vacuum pump brake booster	ECU Information		V1.00.001 or higher
A (169)	VP-Vacuum pump brake booster	Read Codes		V1.00.001 or higher
A (169)	VP-Vacuum pump brake booster	Erase Codes		V1.00.001 or higher
A (169)	VP-Vacuum pump brake booster	Live Data		V1.00.001 or higher
A (169)	VP-Vacuum pump brake booster	Active Test		V1.00.001 or higher
A (169)	N93/4 (Vehicle gateway control unit)	ECU Information		V1.00.001 or higher
A (169)	N93/4 (Vehicle gateway control unit)	Read Codes		V1.00.001 or higher
A (169)	N93/4 (Vehicle gateway control unit)	Erase Codes		V1.00.001 or higher
A (169)	EKMK-Electric refrigerant compressor	ECU Information		V1.00.001 or higher
A (169)	EKMK-Electric refrigerant compressor	Read Codes		V1.00.001 or higher

A (169)	EKMK-Electric refrigerant compressor	Erase Codes		V1.00.001 or higher
A (169)	EKMK-Electric refrigerant compressor	Live Data		V1.00.001 or higher
A (169)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	ECU Information		V1.00.001 or higher
A (169)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Read Codes		V1.00.001 or higher
A (169)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Erase Codes		V1.00.001 or higher
A (169)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Live Data		V1.00.001 or higher
A (169)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Active Test		V1.00.001 or higher
A (168)	ECM-Engine control monolith	ECU Information		V1.00.001 or higher

A (168)	ECM-Engine control monolith	Read Codes		V1.00.001 or higher
A (168)	ECM-Engine control monolith	Erase Codes		V1.00.001 or higher
A (168)	ECM-Engine control monolith	Live Data		V1.00.001 or higher
A (168)	Transmission	ECU Information		V1.00.001 or higher
A (168)	Transmission	Read Codes		V1.00.001 or higher
A (168)	Transmission	Erase Codes		V1.00.001 or higher
A (168)	Transmission	Live Data		V1.00.001 or higher
A (168)	ACS-Automatic clutch system	ECU Information		V1.00.001 or higher
A (168)	ACS-Automatic clutch system	Read Codes		V1.00.001 or higher
A (168)	ACS-Automatic clutch system	Erase Codes		V1.00.001 or higher
A (168)	ACS-Automatic clutch system	Live Data		V1.00.001 or higher
A (168)	GRM-Gear recognition module	ECU Information		V1.00.001 or higher
A (168)	GRM-Gear recognition module	Read Codes		V1.00.001 or higher
A (168)	GRM-Gear recognition module	Erase Codes		V1.00.001 or higher
A (168)	GRM-Gear recognition module	Live Data		V1.00.001 or higher
A (168)	GRM-Gear recognition module	Active Test		V1.00.001 or higher
A (168)	Traction systems ABS,ASR,ETS,ESP	ECU Information		V1.00.001 or higher
A (168)	Traction systems ABS,ASR,ETS,ESP	Read Codes		V1.00.001 or higher
A (168)	Traction systems ABS,ASR,ETS,ESP	Erase Codes		V1.00.001 or higher
A (168)	Traction systems ABS,ASR,ETS,ESP	Live Data		V1.00.001 or higher
A (168)	Traction systems ABS,ASR,ETS,ESP	Active Test		V1.00.001 or higher

A (168)	Traction systems ABS,ASR,ETS,ESP	Control unit adaptations	Program brake assist	V1.00.001 or higher
A (168)	AB-Airbag	ECU Information		V1.00.001 or higher
A (168)	AB-Airbag	Read Codes		V1.00.001 or higher
A (168)	AB-Airbag	Erase Codes		V1.00.001 or higher
A (168)	AB-Airbag	Live Data		V1.00.001 or higher
A (168)	RFL-Radio frequency locking/electric central locking	ECU Information		V1.00.001 or higher
A (168)	RFL-Radio frequency locking/electric central locking	Read Codes		V1.00.001 or higher
A (168)	RFL-Radio frequency locking/electric central locking	Erase Codes		V1.00.001 or higher
A (168)	RFL-Radio frequency locking/electric central locking	Live Data		V1.00.001 or higher
A (168)	LCP-Lower control panel	ECU Information		V1.00.001 or higher
A (168)	LCP-Lower control panel	Read Codes		V1.00.001 or higher
A (168)	LCP-Lower control panel	Erase Codes		V1.00.001 or higher
A (168)	LCP-Lower control panel	Live Data		V1.00.001 or higher
A (168)	ATA-Anti-theft alarm system	ECU Information		V1.00.001 or higher
A (168)	ATA-Anti-theft alarm system	Read Codes		V1.00.001 or higher
A (168)	ATA-Anti-theft alarm system	Erase Codes		V1.00.001 or higher
A (168)	ATA-Anti-theft alarm system	Live Data		V1.00.001 or higher
A (168)	APS-Auto pilot system	ECU Information		V1.00.001 or higher
A (168)	APS-Auto pilot system	Read Codes		V1.00.001 or higher
A (168)	APS-Auto pilot system	Erase Codes		V1.00.001 or higher

A (168)	APS-Auto pilot system	Live Data		V1.00.001 or higher
A (168)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
A (168)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
A (168)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
A (168)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
A (168)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
A (168)	AUDIO	ECU Information		V1.00.001 or higher
A (168)	AUDIO	Read Codes		V1.00.001 or higher
A (168)	AUDIO	Erase Codes		V1.00.001 or higher
A (168)	AUDIO	Live Data		V1.00.001 or higher
A (168)	AUDIO	Active Test		V1.00.001 or higher
A (168)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	ECU Information		V1.00.001 or higher
A (168)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Read Codes		V1.00.001 or higher
A (168)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Erase Codes		V1.00.001 or higher

A (168)	CDC-CD changer	ECU Information		V1.00.001 or higher
A (168)	CDC-CD changer	Read Codes		V1.00.001 or higher
A (168)	CDC-CD changer	Erase Codes		V1.00.001 or higher
A (168)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
A (168)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
A (168)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
A (168)	PTS-Parktronic system	Live Data		V1.00.001 or higher
A (168)	PTS-Parktronic system	Active Test		V1.00.001 or higher
A (168)	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
A (168)	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher
A (168)	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher
A (168)	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher
A (168)	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
A (168)	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher
A (168)	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
A (168)	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
A (168)	DCM-RL-Door control module rear left	ECU Information		V1.00.001 or higher
A (168)	DCM-RL-Door control module rear left	Read Codes		V1.00.001 or higher

A (168)	DCM-RL-Door control module rear left	Erase Codes		V1.00.001 or higher
A (168)	DCM-RL-Door control module rear left	Live Data		V1.00.001 or higher
A (168)	DCM-RR-Door control module rear right	ECU Information		V1.00.001 or higher
A (168)	DCM-RR-Door control module rear right	Read Codes		V1.00.001 or higher
A (168)	DCM-RR-Door control module rear right	Erase Codes		V1.00.001 or higher
A (168)	DCM-RR-Door control module rear right	Live Data		V1.00.001 or higher
A (168)	STH-Stationary heater	ECU Information		V1.00.001 or higher
A (168)	STH-Stationary heater	Read Codes		V1.00.001 or higher
A (168)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
A (168)	STH-Stationary heater	Live Data		V1.00.001 or higher
A (168)	STH-Stationary heater	Active Test		V1.00.001 or higher
A (168)	STH-Stationary heater	Control unit adaptations	CO2 setting	V1.00.001 or higher
A (168)	TAC-Automatic temperature control	ECU Information		V1.00.001 or higher
A (168)	TAC-Automatic temperature control	Read Codes		V1.00.001 or higher
A (168)	TAC-Automatic temperature control	Erase Codes		V1.00.001 or higher
A (168)	TAC-Automatic temperature control	Live Data		V1.00.001 or higher
A (168)	TAC-Automatic temperature control	Active Test		V1.00.001 or higher
A (168)	CDI-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher

A (168)	CDI-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
A (168)	CDI-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
A (168)	CDI-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
A (168)	CDI-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
A (168)	CDI-Common Rail Diesel Injection	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
A (168)	STH-Stationary heater	ECU Information		V1.00.001 or higher
A (168)	STH-Stationary heater	Read Codes		V1.00.001 or higher
A (168)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
B (242, 246)	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'	ECU Information		V1.00.001 or higher
B (242, 246)	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'	Read Codes		V1.00.001 or higher
B (242, 246)	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'	Erase Codes		V1.00.001 or higher
B (242, 246)	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'	Live Data		V1.00.001 or higher
B (242, 246)	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'	Active Test		V1.00.001 or higher



B (242, 246)	ME - Motro electronics CNGCM246 for combustion engine 379CNG	ECU Information		V1.00.001 or higher
B (242, 246)	ME - Motro electronics CNGCM246 for combustion engine 379CNG	Read Codes		V1.00.001 or higher
B (242, 246)	ME - Motro electronics CNGCM246 for combustion engine 379CNG	Erase Codes		V1.00.001 or higher
B (242, 246)	ME - Motro electronics CNGCM246 for combustion engine 379CNG	Live Data		V1.00.001 or higher
B (242, 246)	ISM-Shift module	ECU Information		V1.00.001 or higher
B (242, 246)	ISM-Shift module	Read Codes		V1.00.001 or higher
B (242, 246)	ISM-Shift module	Erase Codes		V1.00.001 or higher
B (242, 246)	ISM-Shift module	Live Data		V1.00.001 or higher
B (242, 246)	ISM-Shift module	Active Test		V1.00.001 or higher
B (242, 246)	FSCU07 - Control unit Fuel pump	ECU Information		V1.00.001 or higher
B (242, 246)	FSCU07 - Control unit Fuel pump	Read Codes		V1.00.001 or higher
B (242, 246)	FSCU07 - Control unit Fuel pump	Erase Codes		V1.00.001 or higher
B (242, 246)	FSCU07 - Control unit Fuel pump	Live Data		V1.00.001 or higher
B (242, 246)	FSCU07 - Control unit Fuel pump	Active Test		V1.00.001 or higher
B (242, 246)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
B (242, 246)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
B (242, 246)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
B (242, 246)	ESP-Electronic stability program	Live Data		V1.00.001 or higher

B (242, 246)	EFB-Electronic parking brake	ECU Information		V1.00.001 or higher
B (242, 246)	EFB-Electronic parking brake	Read Codes		V1.00.001 or higher
B (242, 246)	EFB-Electronic parking brake	Erase Codes		V1.00.001 or higher
B (242, 246)	EFB-Electronic parking brake	Live Data		V1.00.001 or higher
B (242, 246)	EFB-Electronic parking brake	Active Test		V1.00.001 or higher
B (242, 246)	EFB-Electronic parking brake	Control unit adaptations	Calibration of control unit 'N128 (Electric parking brake control unit)'	V1.00.001 or higher
B (242, 246)	ES-Electrical power steering	ECU Information		V1.00.001 or higher
B (242, 246)	ES-Electrical power steering	Read Codes		V1.00.001 or higher
B (242, 246)	ES-Electrical power steering	Erase Codes		V1.00.001 or higher
B (242, 246)	ES-Electrical power steering	Live Data		V1.00.001 or higher
B (242, 246)	DTR-DISTRONIC	ECU Information		V1.00.001 or higher
B (242, 246)	DTR-DISTRONIC	Read Codes		V1.00.001 or higher
B (242, 246)	DTR-DISTRONIC	Erase Codes		V1.00.001 or higher
B (242, 246)	DTR-DISTRONIC	Live Data		V1.00.001 or higher
B (242, 246)	SRS-Supplemental restraint system	ECU Information		V1.00.001 or higher
B (242, 246)	SRS-Supplemental restraint system	Read Codes		V1.00.001 or higher
B (242, 246)	SRS-Supplemental restraint system	Erase Codes		V1.00.001 or higher
B (242, 246)	SRS-Supplemental restraint system	Live Data		V1.00.001 or higher
B (242, 246)	SRS-Supplemental restraint system	Active Test		V1.00.001 or higher
B (242, 246)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher

B (242, 246)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
B (242, 246)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
B (242, 246)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
B (242, 246)	SCM-Steering column module	ECU Information		V1.00.001 or higher
B (242, 246)	SCM-Steering column module	Read Codes		V1.00.001 or higher
B (242, 246)	SCM-Steering column module	Erase Codes		V1.00.001 or higher
B (242, 246)	SCM-Steering column module	Live Data		V1.00.001 or higher
B (242, 246)	SCM-Steering column module	Active Test		V1.00.001 or higher
B (242, 246)	ATA-ATA[EDW]/tow-away protection/interior protection	ECU Information		V1.00.001 or higher
B (242, 246)	ATA-ATA[EDW]/tow-away protection/interior protection	Read Codes		V1.00.001 or higher
B (242, 246)	ATA-ATA[EDW]/tow-away protection/interior protection	Erase Codes		V1.00.001 or higher
B (242, 246)	ATA-ATA[EDW]/tow-away protection/interior protection	Live Data		V1.00.001 or higher
B (242, 246)	Multifunction control unit-Multifunction control unit	ECU Information		V1.00.001 or higher
B (242, 246)	Multifunction control unit-Multifunction control unit	Read Codes		V1.00.001 or higher
B (242, 246)	Multifunction control unit-Multifunction control unit	Erase Codes		V1.00.001 or higher

B (242, 246)	Multifunction control unit- Multifunction control unit	Live Data		V1.00.001 or higher
B (242, 246)	Multifunction control unit- Multifunction control unit	Active Test		V1.00.001 or higher
B (242, 246)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
B (242, 246)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
B (242, 246)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
B (242, 246)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
B (242, 246)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
B (242, 246)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
B (242, 246)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
B (242, 246)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
B (242, 246)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
B (242, 246)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
B (242, 246)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher

B (242, 246)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
B (242, 246)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
B (242, 246)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
B (242, 246)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
B (242, 246)	Trailer recognition module-Trailer recognition	ECU Information		V1.00.001 or higher
B (242, 246)	Trailer recognition module-Trailer recognition	Read Codes		V1.00.001 or higher
B (242, 246)	Trailer recognition module-Trailer recognition	Erase Codes		V1.00.001 or higher
B (242, 246)	Trailer recognition module-Trailer recognition	Live Data		V1.00.001 or higher
B (242, 246)	Trailer recognition module-Trailer recognition	Active Test		V1.00.001 or higher
B (242, 246)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher

B (242, 246)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
B (242, 246)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
B (242, 246)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
B (242, 246)	SG-SW-Control unit 'Headlamp'	ECU Information		V1.00.001 or higher
B (242, 246)	SG-SW-Control unit 'Headlamp'	Read Codes		V1.00.001 or higher
B (242, 246)	SG-SW-Control unit 'Headlamp'	Erase Codes		V1.00.001 or higher
B (242, 246)	SG-SW-Control unit 'Headlamp'	Live Data		V1.00.001 or higher
B (242, 246)	SG-SW-Control unit 'Headlamp'	Active Test		V1.00.001 or higher
B (242, 246)	SG-SW-L - Left headlamp	ECU Information		V1.00.001 or higher
B (242, 246)	SG-SW-L - Left headlamp	Read Codes		V1.00.001 or higher
B (242, 246)	SG-SW-L - Left headlamp	Erase Codes		V1.00.001 or higher
B (242, 246)	SG-SW-L - Left headlamp	Live Data		V1.00.001 or higher
B (242, 246)	SG-SW-L - Left headlamp	Active Test		V1.00.001 or higher
B (242, 246)	SG-SW-R - Right headlamp	ECU Information		V1.00.001 or higher
B (242, 246)	SG-SW-R - Right headlamp	Read Codes		V1.00.001 or higher
B (242, 246)	SG-SW-R - Right headlamp	Erase Codes		V1.00.001 or higher
B (242, 246)	SG-SW-R - Right headlamp	Live Data		V1.00.001 or higher
B (242, 246)	SG-SW-R - Right headlamp	Active Test		V1.00.001 or higher
B (242, 246)	IC - Instrument cluster	ECU Information		V1.00.001 or higher

B (242, 246)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
B (242, 246)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
B (242, 246)	IC - Instrument cluster	Live Data		V1.00.001 or higher
B (242, 246)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
B (242, 246)	IC - Instrument cluster	Active Test		V1.00.001 or higher
B (242, 246)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher
B (242, 246)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Read Codes		V1.00.001 or higher
B (242, 246)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
B (242, 246)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
B (242, 246)	NAV-Navigation module	ECU Information		V1.00.001 or higher
B (242, 246)	NAV-Navigation module	Read Codes		V1.00.001 or higher
B (242, 246)	NAV-Navigation module	Erase Codes		V1.00.001 or higher
B (242, 246)	NAV-Navigation module	Live Data		V1.00.001 or higher
B (242, 246)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
B (242, 246)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher
B (242, 246)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher

B (242, 246)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
B (242, 246)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher
B (242, 246)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
B (242, 246)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher
B (242, 246)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher
B (242, 246)	TV - TV tuner	ECU Information		V1.00.001 or higher
B (242, 246)	TV - TV tuner	Read Codes		V1.00.001 or higher
B (242, 246)	TV - TV tuner	Erase Codes		V1.00.001 or higher
B (242, 246)	TV - TV tuner	Live Data		V1.00.001 or higher
B (242, 246)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
B (242, 246)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
B (242, 246)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
B (242, 246)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
B (242, 246)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
B (242, 246)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
B (242, 246)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
B (242, 246)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
B (242, 246)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
B (242, 246)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher



B (242, 246)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
B (242, 246)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
B (242, 246)	MIF - Media interface	ECU Information		V1.00.001 or higher
B (242, 246)	MIF - Media interface	Read Codes		V1.00.001 or higher
B (242, 246)	MIF - Media interface	Erase Codes		V1.00.001 or higher
B (242, 246)	MIF - Media interface	Live Data		V1.00.001 or higher
B (242, 246)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
B (242, 246)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
B (242, 246)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
B (242, 246)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
B (242, 246)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher
B (242, 246)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
B (242, 246)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
B (242, 246)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
B (242, 246)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
B (242, 246)	PTS-PARKTRONIC	ECU Information		V1.00.001 or higher
B (242, 246)	PTS-PARKTRONIC	Read Codes		V1.00.001 or higher
B (242, 246)	PTS-PARKTRONIC	Erase Codes		V1.00.001 or higher

B (242, 246)	PTS-PARKTRONIC	Live Data		V1.00.001 or higher
B (242, 246)	PTS-PARKTRONIC	Active Test		V1.00.001 or higher
B (242, 246)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	ECU Information		V1.00.001 or higher
B (242, 246)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Read Codes		V1.00.001 or higher
B (242, 246)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Erase Codes		V1.00.001 or higher
B (242, 246)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Live Data		V1.00.001 or higher
B (242, 246)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	ECU Information		V1.00.001 or higher
B (242, 246)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Read Codes		V1.00.001 or higher
B (242, 246)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Erase Codes		V1.00.001 or higher

B (242, 246)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Live Data		V1.00.001 or higher
B (242, 246)	DCU-LF-Left front door	ECU Information		V1.00.001 or higher
B (242, 246)	DCU-LF-Left front door	Read Codes		V1.00.001 or higher
B (242, 246)	DCU-LF-Left front door	Erase Codes		V1.00.001 or higher
B (242, 246)	DCU-LF-Left front door	Live Data		V1.00.001 or higher
B (242, 246)	DCU-RF-Right front door	ECU Information		V1.00.001 or higher
B (242, 246)	DCU-RF-Right front door	Read Codes		V1.00.001 or higher
B (242, 246)	DCU-RF-Right front door	Erase Codes		V1.00.001 or higher
B (242, 246)	DCU-RF-Right front door	Live Data		V1.00.001 or higher
B (242, 246)	AAC-Air conditioning	ECU Information		V1.00.001 or higher
B (242, 246)	AAC-Air conditioning	Read Codes		V1.00.001 or higher
B (242, 246)	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
B (242, 246)	AAC-Air conditioning	Live Data		V1.00.001 or higher
B (242, 246)	STH-Stationary heater	ECU Information		V1.00.001 or higher
B (242, 246)	STH-Stationary heater	Read Codes		V1.00.001 or higher
B (242, 246)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
B (242, 246)	STH-Stationary heater	Live Data		V1.00.001 or higher
B (242, 246)	TPM-Tire pressure monitor	ECU Information		V1.00.001 or higher
B (242, 246)	TPM-Tire pressure monitor	Read Codes		V1.00.001 or higher
B (242, 246)	TPM-Tire pressure monitor	Erase Codes		V1.00.001 or higher
B (242, 246)	TPM-Tire pressure monitor	Live Data		V1.00.001 or higher

B (242, 246)	TPM-Tire pressure monitor	Active Test		V1.00.001 or higher
B (242, 246)	TPM-Tire pressure monitor	Control unit adaptations	Teach-in processes	V1.00.001 or higher
B (242, 246)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	ECU Information		V1.00.001 or higher
B (242, 246)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Read Codes		V1.00.001 or higher
B (242, 246)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Erase Codes		V1.00.001 or higher
B (242, 246)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Live Data		V1.00.001 or higher
B (242, 246)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Active Test		V1.00.001 or higher
B (242, 246)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
B (242, 246)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
B (242, 246)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
B (242, 246)	IRS-HRA - Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
B (242, 246)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
B (242, 246)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher

B (242, 246)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
B (242, 246)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
B (242, 246)	DTR-DISTRONIC	ECU Information		V1.00.001 or higher
B (242, 246)	DTR-DISTRONIC	Read Codes		V1.00.001 or higher
B (242, 246)	DTR-DISTRONIC	Erase Codes		V1.00.001 or higher
B (242, 246)	DTR-DISTRONIC	Live Data		V1.00.001 or higher
B (242, 246)	RFK - Backup camera	ECU Information		V1.00.001 or higher
B (242, 246)	RFK - Backup camera	Read Codes		V1.00.001 or higher
B (242, 246)	RFK - Backup camera	Erase Codes		V1.00.001 or higher
B (242, 246)	RFK - Backup camera	Live Data		V1.00.001 or higher
B (242, 246)	ME-Motor electronics 'MED40' for combustion engine 'M270'	ECU Information		V1.00.001 or higher
B (242, 246)	ME-Motor electronics 'MED40' for combustion engine 'M270'	Read Codes		V1.00.001 or higher
B (242, 246)	ME-Motor electronics 'MED40' for combustion engine 'M270'	Erase Codes		V1.00.001 or higher
B (242, 246)	ME-Motor electronics 'MED40' for combustion engine 'M270'	Live Data		V1.00.001 or higher

B (242, 246)	ME-Motor electronics 'MED40' for combustion engine 'M270'	Active Test		V1.00.001 or higher
B (242, 246)	ME-Motor electronics 'MED40' for combustion engine 'M270'	Control unit adaptations	Configuration	V1.00.001 or higher
B (242, 246)	ME-Motor electronics 'MED40' for combustion engine 'M270'	Control unit adaptations	Teach-in processes	V1.00.001 or higher
B (242, 246)	CDI-Motor electronics	ECU Information		V1.00.001 or higher
B (242, 246)	CDI-Motor electronics	Read Codes		V1.00.001 or higher
B (242, 246)	CDI-Motor electronics	Erase Codes		V1.00.001 or higher
B (242, 246)	CDI-Motor electronics	Live Data		V1.00.001 or higher
B (242, 246)	CDI-Motor electronics	Active Test		V1.00.001 or higher
B (242, 246)	DKG-Electronic transmission control for double-plate clutch transmission	ECU Information		V1.00.001 or higher
B (242, 246)	DKG-Electronic transmission control for double-plate clutch transmission	Read Codes		V1.00.001 or higher
B (242, 246)	DKG-Electronic transmission control for double-plate clutch transmission	Erase Codes		V1.00.001 or higher

B (242, 246)	DKG-Electronic transmission control for double-plate clutch transmission	Live Data		V1.00.001 or higher
B (242, 246)	FSCU05 - Control unit Fuel pump	ECU Information		V1.00.001 or higher
B (242, 246)	FSCU05 - Control unit Fuel pump	Read Codes		V1.00.001 or higher
B (242, 246)	FSCU05 - Control unit Fuel pump	Erase Codes		V1.00.001 or higher
B (242, 246)	FSCU05 - Control unit Fuel pump	Live Data		V1.00.001 or higher
B (242, 246)	FSCU05 - Control unit Fuel pump	Active Test		V1.00.001 or higher
B (242, 246)	VG - All-wheel drive	ECU Information		V1.00.001 or higher
B (242, 246)	VG - All-wheel drive	Read Codes		V1.00.001 or higher
B (242, 246)	VG - All-wheel drive	Erase Codes		V1.00.001 or higher
B (242, 246)	PTCU - Drivertrain	ECU Information		V1.00.001 or higher
B (242, 246)	PTCU - Drivertrain	Read Codes		V1.00.001 or higher
B (242, 246)	PTCU - Drivertrain	Erase Codes		V1.00.001 or higher
B (242, 246)	PTCU - Drivertrain	Live Data		V1.00.001 or higher
B (242, 246)	SG-SOGE-E - Sound generator for electric vehicle	ECU Information		V1.00.001 or higher
B (242, 246)	SG-SOGE-E - Sound generator for electric vehicle	Read Codes		V1.00.001 or higher
B (242, 246)	SG-SOGE-E - Sound generator for electric vehicle	Erase Codes		V1.00.001 or higher
B (242, 246)	SG-SOGE-E - Sound generator for electric vehicle	Live Data		V1.00.001 or higher

B (242, 246)	Trailer recognition module-Trailer recognition	ECU Information		V1.00.001 or higher
B (242, 246)	Trailer recognition module-Trailer recognition	Read Codes		V1.00.001 or higher
B (242, 246)	Trailer recognition module-Trailer recognition	Erase Codes		V1.00.001 or higher
B (242, 246)	Trailer recognition module-Trailer recognition	Live Data		V1.00.001 or higher
B (242, 246)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
B (242, 246)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher
B (242, 246)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher
B (242, 246)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
B (242, 246)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher
B (242, 246)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
B (242, 246)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher
B (242, 246)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher
B (242, 246)	TV - TV tuner	ECU Information		V1.00.001 or higher
B (242, 246)	TV - TV tuner	Read Codes		V1.00.001 or higher
B (242, 246)	TV - TV tuner	Erase Codes		V1.00.001 or higher
B (242, 246)	TV - TV tuner	Live Data		V1.00.001 or higher
B (242, 246)	DAB-Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
B (242, 246)	DAB-Digital Audio Broadcasting	Read Codes		V1.00.001 or higher



B (242, 246)	DAB-Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
B (242, 246)	DAB-Digital Audio Broadcasting	Live Data		V1.00.001 or higher
B (242, 246)	Drive Kit Plus - Drive kit for iPhone	ECU Information		V1.00.001 or higher
B (242, 246)	Drive Kit Plus - Drive kit for iPhone	Read Codes		V1.00.001 or higher
B (242, 246)	Drive Kit Plus - Drive kit for iPhone	Erase Codes		V1.00.001 or higher
B (242, 246)	Drive Kit Plus - Drive kit for iPhone	Live Data		V1.00.001 or higher
B (242, 246)	Head-up display - Head-up display	ECU Information		V1.00.001 or higher
B (242, 246)	Head-up display - Head-up display	Read Codes		V1.00.001 or higher
B (242, 246)	Head-up display - Head-up display	Erase Codes		V1.00.001 or higher
B (242, 246)	Head-up display - Head-up display	Live Data		V1.00.001 or higher
B (242, 246)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
B (242, 246)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
B (242, 246)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
B (242, 246)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
B (242, 246)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher
B (242, 246)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
B (242, 246)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher

B (242, 246)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
B (242, 246)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
B (242, 246)	RFK - Backup camera	ECU Information		V1.00.001 or higher
B (242, 246)	RFK - Backup camera	Read Codes		V1.00.001 or higher
B (242, 246)	RFK - Backup camera	Erase Codes		V1.00.001 or higher
B (242, 246)	RFK - Backup camera	Live Data		V1.00.001 or higher
B (242, 246)	RFK - Backup camera	Active Test		V1.00.001 or higher
B (242, 246)	PARK - Parking system	ECU Information		V1.00.001 or higher
B (242, 246)	PARK - Parking system	Read Codes		V1.00.001 or higher
B (242, 246)	PARK - Parking system	Erase Codes		V1.00.001 or higher
B (242, 246)	PARK - Parking system	Live Data		V1.00.001 or higher
B (242, 246)	PARK - Parking system	Active Test		V1.00.001 or higher
B (245)	ME-SFI-Gasoline engine control	ECU Information		V1.00.001 or higher
B (245)	ME-SFI-Gasoline engine control	Read Codes		V1.00.001 or higher
B (245)	ME-SFI-Gasoline engine control	Erase Codes		V1.00.001 or higher
B (245)	ME-SFI-Gasoline engine control	Live Data		V1.00.001 or higher
B (245)	ME-SFI-Gasoline engine control	Active Test		V1.00.001 or higher
B (245)	ME-SFI-Gasoline engine control	Control unit adaptations	Learning processes	V1.00.001 or higher
B (245)	ME-SFI-Gasoline engine control	Control unit adaptations	Correction programming	V1.00.001 or higher
B (245)	FCVT-Continuously variable automatic transmission	ECU Information		V1.00.001 or higher

B (245)	FCVT-Continuously variable automatic transmission	Read Codes		V1.00.001 or higher
B (245)	FCVT-Continuously variable automatic transmission	Erase Codes		V1.00.001 or higher
B (245)	FCVT-Continuously variable automatic transmission	Live Data		V1.00.001 or higher
B (245)	FCVT-Continuously variable automatic transmission	Special functions	Diagnosis routines	V1.00.001 or higher
B (245)	FCVT-Continuously variable automatic transmission	Special functions	Initial test/Oil condition check/Oil level check	V1.00.001 or higher
B (245)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
B (245)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
B (245)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
B (245)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
B (245)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
B (245)	ESM-Electronic selector module	Control unit adaptations	Operational check	V1.00.001 or higher
B (245)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
B (245)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
B (245)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
B (245)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
B (245)	ESP-Electronic stability program	Control unit adaptations	Standstill Test	V1.00.001 or higher

B (245)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
B (245)	ESP-Electronic stability program	Control unit adaptations	Tire pressure loss warner	V1.00.001 or higher
B (245)	ES-Electrical power steering	ECU Information		V1.00.001 or higher
B (245)	ES-Electrical power steering	Read Codes		V1.00.001 or higher
B (245)	ES-Electrical power steering	Erase Codes		V1.00.001 or higher
B (245)	ES-Electrical power steering	Live Data		V1.00.001 or higher
B (245)	AB-Airbag	ECU Information		V1.00.001 or higher
B (245)	AB-Airbag	Read Codes		V1.00.001 or higher
B (245)	AB-Airbag	Erase Codes		V1.00.001 or higher
B (245)	AB-Airbag	Live Data		V1.00.001 or higher
B (245)	CGW-Central gateway	ECU Information		V1.00.001 or higher
B (245)	CGW-Central gateway	Read Codes		V1.00.001 or higher
B (245)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
B (245)	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher
B (245)	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher
B (245)	CGW-Central gateway	Special functions	All codes	V1.00.001 or higher
B (245)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
B (245)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
B (245)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
B (245)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
B (245)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher
B (245)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher

B (245)	EZS-Electronic ignition switch	Control unit adaptations	Program the replacement keys.	V1.00.001 or higher
B (245)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N73 (Electronic Ignition Switch (EIS/EZS) control module)'. '.	V1.00.001 or higher
B (245)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N26/5 (Electric steering lock control module)'. '.	V1.00.001 or higher
B (245)	EZS-Electronic ignition switch	Control unit adaptations	Writing of the VIN	V1.00.001 or higher
B (245)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
B (245)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
B (245)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
B (245)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
B (245)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
B (245)	ATA-Anti-theft alarm system	ECU Information		V1.00.001 or higher
B (245)	ATA-Anti-theft alarm system	Read Codes		V1.00.001 or higher
B (245)	ATA-Anti-theft alarm system	Erase Codes		V1.00.001 or higher
B (245)	ATA-Anti-theft alarm system	Live Data		V1.00.001 or higher
B (245)	ATA-Anti-theft alarm system	Active Test		V1.00.001 or higher
B (245)	SAM-Signal acquisition and actuation module	ECU Information		V1.00.001 or higher
B (245)	SAM-Signal acquisition and actuation module	Read Codes		V1.00.001 or higher

B (245)	SAM-Signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
B (245)	SAM-Signal acquisition and actuation module	Live Data		V1.00.001 or higher
B (245)	SAM-Signal acquisition and actuation module	Active Test		V1.00.001 or higher
B (245)	SAM-Signal acquisition and actuation module	Control unit adaptations	Reset the control module.	V1.00.001 or higher
B (245)	AHE-Trailer recognition	ECU Information		V1.00.001 or higher
B (245)	AHE-Trailer recognition	Read Codes		V1.00.001 or higher
B (245)	AHE-Trailer recognition	Erase Codes		V1.00.001 or higher
B (245)	AHE-Trailer recognition	Live Data		V1.00.001 or higher
B (245)	AHE-Trailer recognition	Active Test		V1.00.001 or higher
B (245)	MSS-Special vehicle multifunction control module	ECU Information		V1.00.001 or higher
B (245)	MSS-Special vehicle multifunction control module	Read Codes		V1.00.001 or higher
B (245)	MSS-Special vehicle multifunction control module	Erase Codes		V1.00.001 or higher
B (245)	MSS-Special vehicle multifunction control module	Live Data		V1.00.001 or higher
B (245)	MSS-Special vehicle multifunction control module	Active Test		V1.00.001 or higher

B (245)	MSS-Special vehicle multifunction control module	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
B (245)	XALWA-L-Xenon headlamp, left	ECU Information		V1.00.001 or higher
B (245)	XALWA-L-Xenon headlamp, left	Read Codes		V1.00.001 or higher
B (245)	XALWA-L-Xenon headlamp, left	Erase Codes		V1.00.001 or higher
B (245)	XALWA-L-Xenon headlamp, left	Live Data		V1.00.001 or higher
B (245)	XALWA-L-Xenon headlamp, left	Active Test		V1.00.001 or higher
B (245)	XALWA-R-Xenon headlamp, right	ECU Information		V1.00.001 or higher
B (245)	XALWA-R-Xenon headlamp, right	Read Codes		V1.00.001 or higher
B (245)	XALWA-R-Xenon headlamp, right	Erase Codes		V1.00.001 or higher
B (245)	XALWA-R-Xenon headlamp, right	Live Data		V1.00.001 or higher
B (245)	XALWA-R-Xenon headlamp, right	Active Test		V1.00.001 or higher
B (245)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
B (245)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
B (245)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
B (245)	IC-Instrument cluster	ECU Information		V1.00.001 or higher
B (245)	IC-Instrument cluster	Read Codes		V1.00.001 or higher
B (245)	IC-Instrument cluster	Erase Codes		V1.00.001 or higher
B (245)	IC-Instrument cluster	Live Data		V1.00.001 or higher
B (245)	IC-Instrument cluster	ECU Information		V1.00.001 or higher
B (245)	IC-Instrument cluster	Active Test		V1.00.001 or higher
B (245)	IC-Instrument cluster	Control unit adaptations	Set the reading of main odometer.	V1.00.001 or higher
B (245)	IC-Instrument cluster	Control unit adaptations	Setting days since initial registration	V1.00.001 or higher

B (245)	SCM [MRM]- Steering column module	ECU Information		V1.00.001 or higher
B (245)	SCM [MRM]- Steering column module	Read Codes		V1.00.001 or higher
B (245)	SCM [MRM]- Steering column module	Erase Codes		V1.00.001 or higher
B (245)	SCM [MRM]- Steering column module	Live Data		V1.00.001 or higher
B (245)	SCM [MRM]- Steering column module	Active Test		V1.00.001 or higher
B (245)	CM-Compass module	ECU Information		V1.00.001 or higher
B (245)	CM-Compass module	Read Codes		V1.00.001 or higher
B (245)	CM-Compass module	Erase Codes		V1.00.001 or higher
B (245)	CM-Compass module	Live Data		V1.00.001 or higher
B (245)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
B (245)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
B (245)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
B (245)	PTS-Parktronic system	Live Data		V1.00.001 or higher
B (245)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
B (245)	ASSYST-Active Service System	Read Codes		V1.00.001 or higher
B (245)	ASSYST-Active Service System	Erase Codes		V1.00.001 or higher
B (245)	ASSYST-Active Service System	Live Data		V1.00.001 or higher
B (245)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
B (245)	ASSYST-Active Service System	Control unit adaptations	ASSYST settings	V1.00.001 or higher



B (245)	ASSYST-Active Service System	Initial startup	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
B (245)	ASSYST-Active Service System	Initial startup	Initial start-up with manual settings input for new control module(For example: The previous control module cannot be read any longer.)	V1.00.001 or higher
B (245)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
B (245)	ASSYST PLUS-PLUS Active Service System	Read Codes		V1.00.001 or higher
B (245)	ASSYST PLUS-PLUS Active Service System	Erase Codes		V1.00.001 or higher
B (245)	ASSYST PLUS-PLUS Active Service System	Live Data		V1.00.001 or higher
B (245)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
B (245)	ASSYST PLUS-PLUS Active Service System	Control unit adaptations	Variant coding	V1.00.001 or higher
B (245)	ASSYST PLUS-PLUS Active Service System	Control unit adaptations	Control module reset	V1.00.001 or higher
B (245)	ASSYST PLUS-PLUS Active Service System	Initial startup	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher

B (245)	ASSYST PLUS-PLUS Active Service System	Initial startup	Initial start-up with manual settings input for new control module (For example: The previous control module cannot be read any longer.)	V1.00.001 or higher
B (245)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher
B (245)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher
B (245)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
B (245)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher
B (245)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher

B (245)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
B (245)	COMAND or AUDIO	ECU Information		V1.00.001 or higher
B (245)	COMAND or AUDIO	Read Codes		V1.00.001 or higher
B (245)	COMAND or AUDIO	Erase Codes		V1.00.001 or higher
B (245)	COMAND or AUDIO	Live Data		V1.00.001 or higher
B (245)	COMAND or AUDIO	Active Test		V1.00.001 or higher
B (245)	COMAND or AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
B (245)	CTEL-Mobile phone adapter with universal interface	ECU Information		V1.00.001 or higher
B (245)	CTEL-Mobile phone adapter with universal interface	Read Codes		V1.00.001 or higher
B (245)	CTEL-Mobile phone adapter with universal interface	Erase Codes		V1.00.001 or higher
B (245)	CTEL-Mobile phone adapter with universal interface	Live Data		V1.00.001 or higher
B (245)	CDC-CD changer	ECU Information		V1.00.001 or higher
B (245)	CDC-CD changer	Read Codes		V1.00.001 or higher
B (245)	CDC-CD changer	Erase Codes		V1.00.001 or higher
B (245)	CDC-CD changer	Live Data		V1.00.001 or higher
B (245)	CDC-CD changer	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
B (245)	VCS-Voice control system	ECU Information		V1.00.001 or higher

B (245)	VCS-Voice control system	Read Codes		V1.00.001 or higher
B (245)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
B (245)	VCS-Voice control system	Active Test		V1.00.001 or higher
B (245)	SOUND- Sound system	ECU Information		V1.00.001 or higher
B (245)	SOUND- Sound system	Read Codes		V1.00.001 or higher
B (245)	SOUND- Sound system	Erase Codes		V1.00.001 or higher
B (245)	SOUND- Sound system	Live Data		V1.00.001 or higher
B (245)	SOUND- Sound system	Active Test		V1.00.001 or higher
B (245)	SOUND- Sound system	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
B (245)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
B (245)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
B (245)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
B (245)	SDAR-Satellite radio	Live Data		V1.00.001 or higher
B (245)	NAVI-Navigation system	ECU Information		V1.00.001 or higher
B (245)	NAVI-Navigation system	Read Codes		V1.00.001 or higher
B (245)	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
B (245)	NAVI-Navigation system	Live Data		V1.00.001 or higher
B (245)	NAVI-Navigation system	Active Test		V1.00.001 or higher
B (245)	CTEL-Cellular telephone	ECU Information		V1.00.001 or higher
B (245)	CTEL-Cellular telephone	Read Codes		V1.00.001 or higher
B (245)	CTEL-Cellular telephone	Erase Codes		V1.00.001 or higher
B (245)	CTEL-Cellular telephone	Live Data		V1.00.001 or higher
B (245)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
B (245)	TELE AID-Control unit	Read Codes		V1.00.001 or higher

B (245)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
B (245)	TELE AID-Control unit	Live Data		V1.00.001 or higher
B (245)	TELE AID-Telematic services Emergency call	ECU Information		V1.00.001 or higher
B (245)	TELE AID-Telematic services Emergency call	Read Codes		V1.00.001 or higher
B (245)	TELE AID-Telematic services Emergency call	Erase Codes		V1.00.001 or higher
B (245)	TELE AID-Telematic services Emergency call	Live Data		V1.00.001 or higher
B (245)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
B (245)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
B (245)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
B (245)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher

B (245)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher
B (245)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
B (245)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
B (245)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher
B (245)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher
B (245)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
B (245)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
B (245)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher
B (245)	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
B (245)	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher

B (245)	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher
B (245)	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher
B (245)	DCM-FL-Door control module front left	Active Test		V1.00.001 or higher
B (245)	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
B (245)	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher
B (245)	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
B (245)	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
B (245)	DCM-FR-Door control module front right	Active Test		V1.00.001 or higher
B (245)	DCM-RL-Door control module rear left	ECU Information		V1.00.001 or higher
B (245)	DCM-RL-Door control module rear left	Read Codes		V1.00.001 or higher
B (245)	DCM-RL-Door control module rear left	Erase Codes		V1.00.001 or higher
B (245)	DCM-RL-Door control module rear left	Live Data		V1.00.001 or higher
B (245)	DCM-RL-Door control module rear left	Active Test		V1.00.001 or higher
B (245)	DCM-RR-Door control module rear right	ECU Information		V1.00.001 or higher
B (245)	DCM-RR-Door control module rear right	Read Codes		V1.00.001 or higher
B (245)	DCM-RR-Door control module rear right	Erase Codes		V1.00.001 or higher

B (245)	DCM-RR-Door control module rear right	Live Data		V1.00.001 or higher
B (245)	DCM-RR-Door control module rear right	Active Test		V1.00.001 or higher
B (245)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	ECU Information		V1.00.001 or higher
B (245)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Read Codes		V1.00.001 or higher
B (245)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Erase Codes		V1.00.001 or higher
B (245)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Live Data		V1.00.001 or higher
B (245)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Active Test		V1.00.001 or higher



B (245)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
B (245)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
B (245)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Control unit adaptations	Teach-in of the actuator motors after replacement of actuator motor	V1.00.001 or higher
B (245)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Control unit adaptations	Break-in procedure after replacement of refrigerant compressor	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Active Test		V1.00.001 or higher

B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Extension of run-on time	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Replace the component 'Diesel Particulate Filter'.	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Diesel Particulate Filter Used Program	V1.00.001 or higher
B (245)	ME-SFI-Gasoline engine control	ECU Information		V1.00.001 or higher
B (245)	ME-SFI-Gasoline engine control	Read Codes		V1.00.001 or higher
B (245)	ME-SFI-Gasoline engine control	Erase Codes		V1.00.001 or higher
B (245)	ME-SFI-Gasoline engine control	Live Data		V1.00.001 or higher
B (245)	ME-SFI-Gasoline engine control	Active Test		V1.00.001 or higher
B (245)	BSA-Belt-driven starter/alternator	ECU Information		V1.00.001 or higher
B (245)	BSA-Belt-driven starter/alternator	Read Codes		V1.00.001 or higher
B (245)	BSA-Belt-driven starter/alternator	Erase Codes		V1.00.001 or higher

B (245)	BSA-Belt-driven starter/alternator	Live Data		V1.00.001 or higher
B (245)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
B (245)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
B (245)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
B (245)	PTS-Parktronic system	Live Data		V1.00.001 or higher
B (245)	PTS-Parktronic system	Active Test		V1.00.001 or higher
B (245)	AUDIO	ECU Information		V1.00.001 or higher
B (245)	AUDIO	Read Codes		V1.00.001 or higher
B (245)	AUDIO	Erase Codes		V1.00.001 or higher
B (245)	AUDIO	Live Data		V1.00.001 or higher
B (245)	AUDIO	Active Test		V1.00.001 or higher
B (245)	AUDIO	Control unit adaptations	Changing the language version(Linguatronic)	V1.00.001 or higher
B (245)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher
B (245)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
B (245)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher
B (245)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher
B (245)	Sound system (Main amplifier)	Active Test		V1.00.001 or higher
B (245)	UCI-Media interface	ECU Information		V1.00.001 or higher
B (245)	UCI-Media interface	Read Codes		V1.00.001 or higher
B (245)	UCI-Media interface	Erase Codes		V1.00.001 or higher
B (245)	DAB-Digital radio	ECU Information		V1.00.001 or higher
B (245)	DAB-Digital radio	Read Codes		V1.00.001 or higher

B (245)	DAB-Digital radio	Erase Codes		V1.00.001 or higher
B (245)	DAB-Digital radio	Live Data		V1.00.001 or higher
B (245)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
B (245)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
B (245)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
B (245)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
B (245)	SDAR-Satellite radio(Valid for USA)	Active Test		V1.00.001 or higher
B (245)	TV-TV tuner	ECU Information		V1.00.001 or higher
B (245)	TV-TV tuner	Read Codes		V1.00.001 or higher
B (245)	TV-TV tuner	Erase Codes		V1.00.001 or higher
B (245)	CTEL-Cellular telephone(JAPAN)	ECU Information		V1.00.001 or higher
B (245)	CTEL-Cellular telephone(JAPAN)	Read Codes		V1.00.001 or higher
B (245)	CTEL-Cellular telephone(JAPAN)	Erase Codes		V1.00.001 or higher
B (245)	CTEL-Cellular telephone(JAPAN)	Live Data		V1.00.001 or higher
B (245)	CTEL-Cellular telephone(JAPAN)	Active Test		V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher

B (245)	CDI-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel Particulate Filter'	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Diesel Particulate Filter (DPF) after replacement of ECM without transfer of values	V1.00.001 or higher

B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B28/8 (Diesel Particulate Filter (DPF) differential pressure sensor)'	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'G3/1 (Oxygen sensor downstream of the Three Way Catalyst (TWC/KAT))'	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y74 (Pressure control valve)'	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y100/2 (Boost pressure regulator)'	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Activate the fuel pump.	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher

B (245)	CDI-Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
B (245)	TPC-Tire pressure monitor	ECU Information		V1.00.001 or higher
B (245)	TPC-Tire pressure monitor	Read Codes		V1.00.001 or higher
B (245)	TPC-Tire pressure monitor	Erase Codes		V1.00.001 or higher
B (245)	TPC-Tire pressure monitor	Live Data		V1.00.001 or higher
B (245)	TPC-Tire pressure monitor	Active Test		V1.00.001 or higher
B (245)	TPC-Tire pressure monitor	Special functions	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
B (245)	TPC-Tire pressure monitor	Special functions	Initial start-up with manual settings input for new control module- For example: The previous control module cannot be read any longer.	V1.00.001 or higher
B (245)	VP-Vacuum pump brake booster	ECU Information		V1.00.001 or higher
B (245)	VP-Vacuum pump brake booster	Read Codes		V1.00.001 or higher
B (245)	VP-Vacuum pump brake booster	Erase Codes		V1.00.001 or higher
B (245)	VP-Vacuum pump brake booster	Live Data		V1.00.001 or higher
B (245)	VP-Vacuum pump brake booster	Active Test		V1.00.001 or higher

B (245)	N93/4 (Vehicle gateway control unit)	ECU Information		V1.00.001 or higher
B (245)	N93/4 (Vehicle gateway control unit)	Read Codes		V1.00.001 or higher
B (245)	N93/4 (Vehicle gateway control unit)	Erase Codes		V1.00.001 or higher
B (245)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
B (245)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
B (245)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
B (245)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
B (245)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	ECU Information		V1.00.001 or higher
B (245)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Read Codes		V1.00.001 or higher
B (245)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Erase Codes		V1.00.001 or higher



B (245)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Live Data		V1.00.001 or higher
B (245)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Active Test		V1.00.001 or higher
B (245)	EKMK-Electric refrigerant compressor	ECU Information		V1.00.001 or higher
B (245)	EKMK-Electric refrigerant compressor	Read Codes		V1.00.001 or higher
B (245)	EKMK-Electric refrigerant compressor	Erase Codes		V1.00.001 or higher
B (245)	EKMK-Electric refrigerant compressor	Live Data		V1.00.001 or higher
C (205)	ME - Motor electronics	ECU Information		V1.00.001 or higher
C (205)	ME - Motor electronics	Read Codes		V1.00.001 or higher
C (205)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
C (205)	ME - Motor electronics	Live Data		V1.00.001 or higher
C (205)	ME - Motor electronics	Active Test		V1.00.001 or higher
C (205)	CDI-Motor electronics	ECU Information		V1.00.001 or higher
C (205)	CDI-Motor electronics	Read Codes		V1.00.001 or higher
C (205)	CDI-Motor electronics	Erase Codes		V1.00.001 or higher
C (205)	CDI-Motor electronics	Live Data		V1.00.001 or higher
C (205)	CDI-Motor electronics	Active Test		V1.00.001 or higher

C (205)	VGS - Transmission control	ECU Information		V1.00.001 or higher
C (205)	VGS - Transmission control	Read Codes		V1.00.001 or higher
C (205)	VGS - Transmission control	Erase Codes		V1.00.001 or higher
C (205)	VGS - Transmission control	Live Data		V1.00.001 or higher
C (205)	VGS - Transmission control	Active Test		V1.00.001 or higher
C (205)	ISM - Shift module	ECU Information		V1.00.001 or higher
C (205)	ISM - Shift module	Read Codes		V1.00.001 or higher
C (205)	ISM - Shift module	Erase Codes		V1.00.001 or higher
C (205)	ISM - Shift module	Live Data		V1.00.001 or higher
C (205)	FSCU08 - Control unit Fuel pump	ECU Information		V1.00.001 or higher
C (205)	FSCU08 - Control unit Fuel pump	Read Codes		V1.00.001 or higher
C (205)	FSCU08 - Control unit Fuel pump	Erase Codes		V1.00.001 or higher
C (205)	FSCU08 - Control unit Fuel pump	Live Data		V1.00.001 or higher
C (205)	SCR - Selective catalytic reduction	ECU Information		V1.00.001 or higher
C (205)	SCR - Selective catalytic reduction	Read Codes		V1.00.001 or higher
C (205)	SCR - Selective catalytic reduction	Erase Codes		V1.00.001 or higher
C (205)	SCR - Selective catalytic reduction	Live Data		V1.00.001 or higher
C (205)	PTCU - Control unit powertrain	ECU Information		V1.00.001 or higher
C (205)	PTCU - Control unit powertrain	Read Codes		V1.00.001 or higher

C (205)	PTCU - Control unit powertrain	Erase Codes		V1.00.001 or higher
C (205)	PTCU - Control unit powertrain	Live Data		V1.00.001 or higher
C (205)	ESP - Electric stability program	ECU Information		V1.00.001 or higher
C (205)	ESP - Electric stability program	Read Codes		V1.00.001 or higher
C (205)	ESP - Electric stability program	Erase Codes		V1.00.001 or higher
C (205)	ESP - Electric stability program	Active Test		V1.00.001 or higher
C (205)	EFB - Electric parking brake	ECU Information		V1.00.001 or higher
C (205)	EFB - Electric parking brake	Read Codes		V1.00.001 or higher
C (205)	EFB - Electric parking brake	Erase Codes		V1.00.001 or higher
C (205)	EFB - Electric parking brake	Live Data		V1.00.001 or higher
C (205)	EFB - Electric parking brake	Active Test		V1.00.001 or higher
C (205)	AIRMATIC - AIRMATIC	ECU Information		V1.00.001 or higher
C (205)	AIRMATIC - AIRMATIC	Read Codes		V1.00.001 or higher
C (205)	AIRMATIC - AIRMATIC	Erase Codes		V1.00.001 or higher
C (205)	AIRMATIC - AIRMATIC	Live Data		V1.00.001 or higher
C (205)	ES - Electric power steering	ECU Information		V1.00.001 or higher
C (205)	ES - Electric power steering	Read Codes		V1.00.001 or higher
C (205)	ES - Electric power steering	Erase Codes		V1.00.001 or higher
C (205)	SRS - Supplemental restraint system	ECU Information		V1.00.001 or higher
C (205)	SRS - Supplemental restraint system	Read Codes		V1.00.001 or higher
C (205)	SRS - Supplemental restraint system	Erase Codes		V1.00.001 or higher
C (205)	SRS - Supplemental restraint system	Live Data		V1.00.001 or higher

C (205)	SRS - Supplemental restraint system	Active Test		V1.00.001 or higher
C (205)	SG-FOND - Rear control unit	ECU Information		V1.00.001 or higher
C (205)	SG-FOND - Rear control unit	Read Codes		V1.00.001 or higher
C (205)	SG-FOND - Rear control unit	Erase Codes		V1.00.001 or higher
C (205)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher
C (205)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
C (205)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
C (205)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
C (205)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher
C (205)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
C (205)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
C (205)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
C (205)	Rear SAM - Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
C (205)	Rear SAM - Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher

C (205)	Rear SAM - Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
C (205)	Rear SAM - Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
C (205)	ATA - ATA[EDW]/tow-away protection/interior protection	ECU Information		V1.00.001 or higher
C (205)	ATA - ATA[EDW]/tow-away protection/interior protection	Read Codes		V1.00.001 or higher
C (205)	ATA - ATA[EDW]/tow-away protection/interior protection	Erase Codes		V1.00.001 or higher
C (205)	ATA - ATA[EDW]/tow-away protection/interior protection	Live Data		V1.00.001 or higher
C (205)	Trailer recognition module - Trailer recognition	ECU Information		V1.00.001 or higher
C (205)	Trailer recognition module - Trailer recognition	Read Codes		V1.00.001 or higher
C (205)	Trailer recognition module - Trailer recognition	Erase Codes		V1.00.001 or higher
C (205)	Trailer recognition module - Trailer recognition	Live Data		V1.00.001 or higher

C (205)	Multifunction control unit - Multifunction control unit	ECU Information		V1.00.001 or higher
C (205)	Multifunction control unit - Multifunction control unit	Read Codes		V1.00.001 or higher
C (205)	Multifunction control unit - Multifunction control unit	Erase Codes		V1.00.001 or higher
C (205)	Multifunction control unit - Multifunction control unit	Live Data		V1.00.001 or higher
C (205)	SD - Control module Silding roof	ECU Information		V1.00.001 or higher
C (205)	SD - Control module Silding roof	Read Codes		V1.00.001 or higher
C (205)	SD - Control module Silding roof	Erase Codes		V1.00.001 or higher
C (205)	SD - Control module Silding roof	Live Data		V1.00.001 or higher
C (205)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
C (205)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
C (205)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
C (205)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
C (205)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
C (205)	RevETR-LF - Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
C (205)	RevETR-LF - Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher

C (205)	RevETR-LF - Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
C (205)	RevETR-LF - Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
C (205)	RevETR-RF - Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
C (205)	RevETR-RF - Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
C (205)	RevETR-RF - Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
C (205)	RevETR-RF - Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
C (205)	SOGESTAR2 - Sound generator for electric vehicle	ECU Information		V1.00.001 or higher
C (205)	SOGESTAR2 - Sound generator for electric vehicle	Read Codes		V1.00.001 or higher
C (205)	SOGESTAR2 - Sound generator for electric vehicle	Erase Codes		V1.00.001 or higher

C (205)	SOGESTAR2 - Sound generator for electric vehicle	Live Data		V1.00.001 or higher
C (205)	SG-SW-L - Left headlamp	ECU Information		V1.00.001 or higher
C (205)	SG-SW-L - Left headlamp	Read Codes		V1.00.001 or higher
C (205)	SG-SW-L - Left headlamp	Erase Codes		V1.00.001 or higher
C (205)	SG-SW-L - Left headlamp	Live Data		V1.00.001 or higher
C (205)	SG-SW-R - Right headlamp	ECU Information		V1.00.001 or higher
C (205)	SG-SW-R - Right headlamp	Read Codes		V1.00.001 or higher
C (205)	SG-SW-R - Right headlamp	Erase Codes		V1.00.001 or higher
C (205)	SG-SW-R - Right headlamp	Live Data		V1.00.001 or higher
C (205)	SG-LG - Charger	ECU Information		V1.00.001 or higher
C (205)	SG-LG - Charger	Read Codes		V1.00.001 or higher
C (205)	SG-LG - Charger	Erase Codes		V1.00.001 or higher
C (205)	SG-LG - Charger	Live Data		V1.00.001 or higher
C (205)	SCM - Steering column module	ECU Information		V1.00.001 or higher
C (205)	SCM - Steering column module	Read Codes		V1.00.001 or higher
C (205)	SCM - Steering column module	Erase Codes		V1.00.001 or higher
C (205)	SCM - Steering column module	Live Data		V1.00.001 or higher
C (205)	BMS - Battery management system	ECU Information		V1.00.001 or higher
C (205)	BMS - Battery management system	Read Codes		V1.00.001 or higher
C (205)	BMS - Battery management system	Erase Codes		V1.00.001 or higher
C (205)	BMS - Battery management system	Live Data		V1.00.001 or higher



C (205)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
C (205)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
C (205)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
C (205)	IC - Instrument cluster	Live Data		V1.00.001 or higher
C (205)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
C (205)	IC - Instrument cluster	Active Test		V1.00.001 or higher
C (205)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher
C (205)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Read Codes		V1.00.001 or higher
C (205)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
C (205)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
C (205)	TPAD - Touchpad	ECU Information		V1.00.001 or higher
C (205)	TPAD - Touchpad	Read Codes		V1.00.001 or higher
C (205)	TPAD - Touchpad	Erase Codes		V1.00.001 or higher
C (205)	TPAD - Touchpad	Live Data		V1.00.001 or higher
C (205)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
C (205)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher

C (205)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher
C (205)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
C (205)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
C (205)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
C (205)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
C (205)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
C (205)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
C (205)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
C (205)	Head-up display - Head-up display	ECU Information		V1.00.001 or higher
C (205)	Head-up display - Head-up display	Read Codes		V1.00.001 or higher
C (205)	Head-up display - Head-up display	Erase Codes		V1.00.001 or higher
C (205)	Head-up display - Head-up display	Live Data		V1.00.001 or higher
C (205)	TB5 - TV tuner Tuner unit	ECU Information		V1.00.001 or higher
C (205)	TB5 - TV tuner Tuner unit	Read Codes		V1.00.001 or higher
C (205)	TB5 - TV tuner Tuner unit	Erase Codes		V1.00.001 or higher
C (205)	TB5 - TV tuner Tuner unit	Live Data		V1.00.001 or higher
C (205)	SOUND - Sound system	ECU Information		V1.00.001 or higher
C (205)	SOUND - Sound system	Read Codes		V1.00.001 or higher
C (205)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
C (205)	SOUND - Sound system	Live Data		V1.00.001 or higher
C (205)	DAB - Digital radio Tuner unit	ECU Information		V1.00.001 or higher

C (205)	DAB - Digital radio Tuner unit	Read Codes		V1.00.001 or higher
C (205)	DAB - Digital radio Tuner unit	Erase Codes		V1.00.001 or higher
C (205)	DAB - Digital radio Tuner unit	Live Data		V1.00.001 or higher
C (205)	DCU-LF - Left front door	ECU Information		V1.00.001 or higher
C (205)	DCU-LF - Left front door	Read Codes		V1.00.001 or higher
C (205)	DCU-LF - Left front door	Erase Codes		V1.00.001 or higher
C (205)	DCU-LF - Left front door	Live Data		V1.00.001 or higher
C (205)	DCU-RF - Right front door	ECU Information		V1.00.001 or higher
C (205)	DCU-RF - Right front door	Read Codes		V1.00.001 or higher
C (205)	DCU-RF - Right front door	Erase Codes		V1.00.001 or higher
C (205)	DCU-RF - Right front door	Live Data		V1.00.001 or higher
C (205)	DCU-LR - Left rear door	ECU Information		V1.00.001 or higher
C (205)	DCU-LR - Left rear door	Read Codes		V1.00.001 or higher
C (205)	DCU-LR - Left rear door	Erase Codes		V1.00.001 or higher
C (205)	DCU-LR - Left rear door	Live Data		V1.00.001 or higher
C (205)	DCU-RR - Right rear door	ECU Information		V1.00.001 or higher
C (205)	DCU-RR - Right rear door	Read Codes		V1.00.001 or higher
C (205)	DCU-RR - Right rear door	Erase Codes		V1.00.001 or higher
C (205)	DCU-RR - Right rear door	Live Data		V1.00.001 or higher
C (205)	ESA Driver - Electric seat adjustmnet Driver with memory function	ECU Information		V1.00.001 or higher
C (205)	ESA Driver - Electric seat adjustmnet Driver with memory function	Read Codes		V1.00.001 or higher

C (205)	ESA Driver - Electric seat adjustmnet Driver with memory function	Erase Codes		V1.00.001 or higher
C (205)	ESA Driver - Electric seat adjustmnet Driver with memory function	Live Data		V1.00.001 or higher
C (205)	ESA Front passenger - Electric seat adjustment Front passenger with memory function	ECU Information		V1.00.001 or higher
C (205)	ESA Front passenger - Electric seat adjustment Front passenger with memory function	Read Codes		V1.00.001 or higher
C (205)	ESA Front passenger - Electric seat adjustment Front passenger with memory function	Erase Codes		V1.00.001 or higher
C (205)	ESA Front passenger - Electric seat adjustment Front passenger with memory function	Live Data		V1.00.001 or higher
C (205)	HKS - Trunk lid control	ECU Information		V1.00.001 or higher
C (205)	HKS - Trunk lid control	Read Codes		V1.00.001 or higher
C (205)	HKS - Trunk lid control	Erase Codes		V1.00.001 or higher
C (205)	HKS - Trunk lid control	Live Data		V1.00.001 or higher
C (205)	AAC - Ari conditioning	ECU Information		V1.00.001 or higher
C (205)	AAC - Ari conditioning	Read Codes		V1.00.001 or higher
C (205)	AAC - Ari conditioning	Erase Codes		V1.00.001 or higher

C (205)	AAC - Ari conditioning	Live Data		V1.00.001 or higher
C (205)	SG-EM - Power electronics	ECU Information		V1.00.001 or higher
C (205)	SG-EM - Power electronics	Read Codes		V1.00.001 or higher
C (205)	SG-EM - Power electronics	Erase Codes		V1.00.001 or higher
C (205)	SG-EM - Power electronics	Live Data		V1.00.001 or higher
C (205)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
C (205)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
C (205)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
C (205)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
C (205)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
C (205)	KAB - Control unit Camera cover	ECU Information		V1.00.001 or higher
C (205)	KAB - Control unit Camera cover	Read Codes		V1.00.001 or higher
C (205)	KAB - Control unit Camera cover	Erase Codes		V1.00.001 or higher
C (205)	KAB - Control unit Camera cover	Live Data		V1.00.001 or higher
C (205)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
C (205)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
C (205)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
C (205)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher

C (205)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
C (205)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
C (205)	RFK/360 - camera	ECU Information		V1.00.001 or higher
C (205)	RFK/360 - camera	Read Codes		V1.00.001 or higher
C (205)	RFK/360 - camera	Erase Codes		V1.00.001 or higher
C (205)	RFK/360 - camera	Live Data		V1.00.001 or higher
C (205)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
C (205)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
C (205)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
C (205)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
C (205)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	ECU Information		V1.00.001 or higher
C (205)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	Read Codes		V1.00.001 or higher
C (205)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	Erase Codes		V1.00.001 or higher
C (205)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	Live Data		V1.00.001 or higher
C (205)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
C (205)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher

C (205)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
C (205)	DTR - DISTRONIC	Live Data		V1.00.001 or higher
C (205)	SGR - Radar sensors control unit	ECU Information		V1.00.001 or higher
C (205)	SGR - Radar sensors control unit	Read Codes		V1.00.001 or higher
C (205)	SGR - Radar sensors control unit	Erase Codes		V1.00.001 or higher
C (205)	SGR - Radar sensors control unit	Live Data		V1.00.001 or higher
C (205)	PARK - Parking system	ECU Information		V1.00.001 or higher
C (205)	PARK - Parking system	Read Codes		V1.00.001 or higher
C (205)	PARK - Parking system	Erase Codes		V1.00.001 or higher
C (205)	PARK - Parking system	Live Data		V1.00.001 or higher
C (204)	ME - Motor electronics	ECU Information		V1.00.001 or higher
C (204)	ME - Motor electronics	Read Codes		V1.00.001 or higher
C (204)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
C (204)	ME - Motor electronics	Live Data		V1.00.001 or higher
C (204)	ME - Motor electronics	Active Test		V1.00.001 or higher
C (204)	ME - Motor electronics	Special functions	Variant coding	V1.00.001 or higher
C (204)	CDI-Motor electronics	ECU Information		V1.00.001 or higher
C (204)	CDI-Motor electronics	Read Codes		V1.00.001 or higher
C (204)	CDI-Motor electronics	Erase Codes		V1.00.001 or higher
C (204)	CDI-Motor electronics	Live Data		V1.00.001 or higher
C (204)	CDI-Motor electronics	Active Test		V1.00.001 or higher

C (204)	VGS - Transmission control	ECU Information		V1.00.001 or higher
C (204)	VGS - Transmission control	Read Codes		V1.00.001 or higher
C (204)	VGS - Transmission control	Erase Codes		V1.00.001 or higher
C (204)	VGS - Transmission control	Live Data		V1.00.001 or higher
C (204)	VGS - Transmission control	Active Test		V1.00.001 or higher
C (204)	VGS - Transmission control	Special functions	Standard- Fehlercode/Stan dard- Fehlercode/Stan dard-Fehlercode	V1.00.001 or higher
C (204)	VGS - Transmission control	Special functions	Standard- Fehlercode	V1.00.001 or higher
C (204)	VGS - Transmission control	Special functions	Communication with the alarm siren is not possible during the diagnosis session.	V1.00.001 or higher
C (204)	VGS - Transmission control	Special functions	Precautionary measures when working on high- voltage on-board electrical systems	V1.00.001 or higher
C (204)	SG-SOGE-AGA - Sound generator for exhaust system	ECU Information		V1.00.001 or higher
C (204)	SG-SOGE-AGA - Sound generator for exhaust system	Read Codes		V1.00.001 or higher
C (204)	SG-SOGE-AGA - Sound generator for exhaust system	Erase Codes		V1.00.001 or higher



C (204)	SG-SOGE-AGA - Sound generator for exhaust system	Live Data		V1.00.001 or higher
C (204)	SG-SOGE-AGA - Sound generator for exhaust system	Active Test		V1.00.001 or higher
C (204)	ISM-Shift module	ECU Information		V1.00.001 or higher
C (204)	ISM-Shift module	Read Codes		V1.00.001 or higher
C (204)	ISM-Shift module	Erase Codes		V1.00.001 or higher
C (204)	ISM-Shift module	Live Data		V1.00.001 or higher
C (204)	ISM-Shift module	Active Test		V1.00.001 or higher
C (204)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
C (204)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
C (204)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
C (204)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
C (204)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
C (204)	FSCU04 - Left fuel pump	ECU Information		V1.00.001 or higher
C (204)	FSCU04 - Left fuel pump	Read Codes		V1.00.001 or higher
C (204)	FSCU04 - Left fuel pump	Erase Codes		V1.00.001 or higher
C (204)	FSCU04 - Left fuel pump	Live Data		V1.00.001 or higher
C (204)	FSCU04 - Left fuel pump	Active Test		V1.00.001 or higher
C (204)	ESM[EWM] - Electronic selector module	ECU Information		V1.00.001 or higher
C (204)	ESM[EWM] - Electronic selector module	Read Codes		V1.00.001 or higher
C (204)	ESM[EWM] - Electronic selector module	Erase Codes		V1.00.001 or higher

C (204)	ESM[EWM] - Electronic selector module	Live Data		V1.00.001 or higher
C (204)	ESM[EWM] - Electronic selector module	Active Test		V1.00.001 or higher
C (204)	FSCU04 - Right fuel pump	ECU Information		V1.00.001 or higher
C (204)	FSCU04 - Right fuel pump	Read Codes		V1.00.001 or higher
C (204)	FSCU04 - Right fuel pump	Erase Codes		V1.00.001 or higher
C (204)	FSCU04 - Right fuel pump	Live Data		V1.00.001 or higher
C (204)	SCR-Selective Catalytic Reduction	ECU Information		V1.00.001 or higher
C (204)	SCR-Selective Catalytic Reduction	Read Codes		V1.00.001 or higher
C (204)	SCR-Selective Catalytic Reduction	Erase Codes		V1.00.001 or higher
C (204)	SCR-Selective Catalytic Reduction	Live Data		V1.00.001 or higher
C (204)	SCR-Selective Catalytic Reduction	Active Test		V1.00.001 or higher
C (204)	PTCU-Common powertrain controller	ECU Information		V1.00.001 or higher
C (204)	PTCU-Common powertrain controller	Read Codes		V1.00.001 or higher
C (204)	PTCU-Common powertrain controller	Erase Codes		V1.00.001 or higher
C (204)	PTCU-Common powertrain controller	Live Data		V1.00.001 or higher
C (204)	ESP - Electric stability program	ECU Information		V1.00.001 or higher
C (204)	ESP - Electric stability program	Read Codes		V1.00.001 or higher
C (204)	ESP - Electric stability program	Erase Codes		V1.00.001 or higher

C (204)	ESP - Electric stability program	Live Data		V1.00.001 or higher
C (204)	ESP - Electric stability program	Active Test		V1.00.001 or higher
C (204)	AMG DRVU-AMG DRIVE UNIT	ECU Information		V1.00.001 or higher
C (204)	AMG DRVU-AMG DRIVE UNIT	Read Codes		V1.00.001 or higher
C (204)	AMG DRVU-AMG DRIVE UNIT	Erase Codes		V1.00.001 or higher
C (204)	AMG DRVU-AMG DRIVE UNIT	Live Data		V1.00.001 or higher
C (204)	AMG DRVU-AMG DRIVE UNIT	Active Test		V1.00.001 or higher
C (204)	ADS - Adaptive damping system	ECU Information		V1.00.001 or higher
C (204)	ADS - Adaptive damping system	Read Codes		V1.00.001 or higher
C (204)	ADS - Adaptive damping system	Erase Codes		V1.00.001 or higher
C (204)	ADS - Adaptive damping system	Live Data		V1.00.001 or higher
C (204)	ADS - Adaptive damping system	Active Test		V1.00.001 or higher
C (204)	EHPS - Electorhydraulic power sreeting	ECU Information		V1.00.001 or higher
C (204)	EHPS - Electorhydraulic power sreeting	Read Codes		V1.00.001 or higher
C (204)	EHPS - Electorhydraulic power sreeting	Erase Codes		V1.00.001 or higher
C (204)	EHPS - Electorhydraulic power sreeting	Live Data		V1.00.001 or higher
C (204)	ES - Electric power steering	ECU Information		V1.00.001 or higher
C (204)	ES - Electric power steering	Read Codes		V1.00.001 or higher
C (204)	ES - Electric power steering	Erase Codes		V1.00.001 or higher
C (204)	ES - Electric power steering	Live Data		V1.00.001 or higher
C (204)	SRS - Supplemental restraint system	ECU Information		V1.00.001 or higher

C (204)	SRS - Supplemental restraint system	Read Codes		V1.00.001 or higher
C (204)	SRS - Supplemental restraint system	Erase Codes		V1.00.001 or higher
C (204)	SRS - Supplemental restraint system	Live Data		V1.00.001 or higher
C (204)	CGW-Central gateway	ECU Information		V1.00.001 or higher
C (204)	CGW-Central gateway	Read Codes		V1.00.001 or higher
C (204)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
C (204)	CGW-Central gateway	Live Data		V1.00.001 or higher
C (204)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher
C (204)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
C (204)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
C (204)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
C (204)	SCM - Steering column module	ECU Information		V1.00.001 or higher
C (204)	SCM - Steering column module	Read Codes		V1.00.001 or higher
C (204)	SCM - Steering column module	Erase Codes		V1.00.001 or higher
C (204)	SCM - Steering column module	Live Data		V1.00.001 or higher
C (204)	SCM - Steering column module	Active Test		V1.00.001 or higher
C (204)	Multifunction control unit - Multifunction control unit	ECU Information		V1.00.001 or higher
C (204)	Multifunction control unit - Multifunction control unit	Read Codes		V1.00.001 or higher
C (204)	Multifunction control unit - Multifunction control unit	Erase Codes		V1.00.001 or higher

C (204)	Multifunction control unit - Multifunction control unit	Live Data		V1.00.001 or higher
C (204)	Multifunction control unit - Multifunction control unit	Active Test		V1.00.001 or higher
C (204)	KG - KEYLESS GO	ECU Information		V1.00.001 or higher
C (204)	KG - KEYLESS GO	Read Codes		V1.00.001 or higher
C (204)	KG - KEYLESS GO	Erase Codes		V1.00.001 or higher
C (204)	KG - KEYLESS GO	Live Data		V1.00.001 or higher
C (204)	KG - KEYLESS GO	Active Test		V1.00.001 or higher
C (204)	HKS-Tailgate control (N121/1)	ECU Information		V1.00.001 or higher
C (204)	HKS-Tailgate control (N121/1)	Read Codes		V1.00.001 or higher
C (204)	HKS-Tailgate control (N121/1)	Erase Codes		V1.00.001 or higher
C (204)	HKS-Tailgate control (N121/1)	Live Data		V1.00.001 or higher
C (204)	HKS-Tailgate control (N121/1)	Active Test		V1.00.001 or higher
C (204)	PSD - Panoramic sliding sunroof	ECU Information		V1.00.001 or higher
C (204)	PSD - Panoramic sliding sunroof	Read Codes		V1.00.001 or higher
C (204)	PSD - Panoramic sliding sunroof	Erase Codes		V1.00.001 or higher
C (204)	PSD - Panoramic sliding sunroof	Live Data		V1.00.001 or higher
C (204)	PSD - Panoramic sliding sunroof	Active Test		V1.00.001 or higher
C (204)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
C (204)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher

C (204)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
C (204)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
C (204)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
C (204)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
C (204)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
C (204)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
C (204)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
C (204)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
C (204)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
C (204)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
C (204)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
C (204)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher

C (204)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
C (204)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
C (204)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
C (204)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
C (204)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
C (204)	Trailer recognition module - Trailer recognition	ECU Information		V1.00.001 or higher
C (204)	Trailer recognition module - Trailer recognition	Read Codes		V1.00.001 or higher
C (204)	Trailer recognition module - Trailer recognition	Erase Codes		V1.00.001 or higher
C (204)	Trailer recognition module - Trailer recognition	Live Data		V1.00.001 or higher
C (204)	Trailer recognition module - Trailer recognition	Active Test		V1.00.001 or higher
C (204)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher
C (204)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
C (204)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher

C (204)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
C (204)	Driver-side SAM - Front signal acquisition and actuation module	Active Test		V1.00.001 or higher
C (204)	Rear SAM - Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
C (204)	Rear SAM - Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
C (204)	Rear SAM - Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
C (204)	Rear SAM - Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
C (204)	Rear SAM - Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
C (204)	SG-SW-L - Left headlamp	ECU Information		V1.00.001 or higher
C (204)	SG-SW-L - Left headlamp	Read Codes		V1.00.001 or higher
C (204)	SG-SW-L - Left headlamp	Erase Codes		V1.00.001 or higher
C (204)	SG-SW-L - Left headlamp	Live Data		V1.00.001 or higher
C (204)	SG-SW-L - Left headlamp	Active Test		V1.00.001 or higher
C (204)	SG-SW-R - Right headlamp	ECU Information		V1.00.001 or higher



C (204)	SG-SW-R - Right headlamp	Read Codes		V1.00.001 or higher
C (204)	SG-SW-R - Right headlamp	Erase Codes		V1.00.001 or higher
C (204)	SG-SW-R - Right headlamp	Live Data		V1.00.001 or higher
C (204)	SG-SW-R - Right headlamp	Active Test		V1.00.001 or higher
C (204)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
C (204)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
C (204)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
C (204)	IC - Instrument cluster	Live Data		V1.00.001 or higher
C (204)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
C (204)	IC - Instrument cluster	Active Test		V1.00.001 or higher
C (204)	ICI-InCar Internet	ECU Information		V1.00.001 or higher
C (204)	ICI-InCar Internet	Read Codes		V1.00.001 or higher
C (204)	ICI-InCar Internet	Erase Codes		V1.00.001 or higher
C (204)	ICI-InCar Internet	Live Data		V1.00.001 or higher
C (204)	AVE-H - Controller unit Rear entertainment system	ECU Information		V1.00.001 or higher
C (204)	AVE-H - Controller unit Rear entertainment system	Read Codes		V1.00.001 or higher
C (204)	AVE-H - Controller unit Rear entertainment system	Erase Codes		V1.00.001 or higher
C (204)	AVE-H - Controller unit Rear entertainment system	Live Data		V1.00.001 or higher

C (204)	AVE-H - Controller unit Rear entertainment system	Active Test		V1.00.001 or higher
C (204)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher
C (204)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Read Codes		V1.00.001 or higher
C (204)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
C (204)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
C (204)	AMG PM-AMG Performance Media	ECU Information		V1.00.001 or higher
C (204)	AMG PM-AMG Performance Media	Read Codes		V1.00.001 or higher
C (204)	AMG PM-AMG Performance Media	Erase Codes		V1.00.001 or higher
C (204)	AMG PM-AMG Performance Media	Live Data		V1.00.001 or higher
C (204)	NAV - Navigation module	ECU Information		V1.00.001 or higher
C (204)	NAV - Navigation module	Read Codes		V1.00.001 or higher
C (204)	NAV - Navigation module	Erase Codes		V1.00.001 or higher

C (204)	NAV - Navigation module	Live Data		V1.00.001 or higher
C (204)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
C (204)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher
C (204)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher
C (204)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
C (204)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher
C (204)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
C (204)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher
C (204)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher
C (204)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
C (204)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
C (204)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
C (204)	TELE AID-Control unit	Live Data		V1.00.001 or higher
C (204)	PTS - PARKTRONIC	ECU Information		V1.00.001 or higher
C (204)	PTS - PARKTRONIC	Read Codes		V1.00.001 or higher
C (204)	PTS - PARKTRONIC	Erase Codes		V1.00.001 or higher
C (204)	PTS - PARKTRONIC	Live Data		V1.00.001 or higher
C (204)	PTS - PARKTRONIC	Active Test		V1.00.001 or higher
C (204)	TV - TV tuner	ECU Information		V1.00.001 or higher
C (204)	TV - TV tuner	Read Codes		V1.00.001 or higher
C (204)	TV - TV tuner	Erase Codes		V1.00.001 or higher
C (204)	TV - TV tuner	Live Data		V1.00.001 or higher
C (204)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher

C (204)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
C (204)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
C (204)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
C (204)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
C (204)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
C (204)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
C (204)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
C (204)	Drive Kit Plus - Drive kit for iPhone	ECU Information		V1.00.001 or higher
C (204)	Drive Kit Plus - Drive kit for iPhone	Read Codes		V1.00.001 or higher
C (204)	Drive Kit Plus - Drive kit for iPhone	Erase Codes		V1.00.001 or higher
C (204)	Drive Kit Plus - Drive kit for iPhone	Live Data		V1.00.001 or higher
C (204)	Head-up display - Head-up display	ECU Information		V1.00.001 or higher
C (204)	Head-up display - Head-up display	Read Codes		V1.00.001 or higher
C (204)	Head-up display - Head-up display	Erase Codes		V1.00.001 or higher
C (204)	Head-up display - Head-up display	Live Data		V1.00.001 or higher
C (204)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
C (204)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher

C (204)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
C (204)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
C (204)	MIF - Media interface	ECU Information		V1.00.001 or higher
C (204)	MIF - Media interface	Read Codes		V1.00.001 or higher
C (204)	MIF - Media interface	Erase Codes		V1.00.001 or higher
C (204)	MIF - Media interface	Live Data		V1.00.001 or higher
C (204)	D-FOL - Display in left rear passenger compartment	ECU Information		V1.00.001 or higher
C (204)	D-FOL - Display in left rear passenger compartment	Read Codes		V1.00.001 or higher
C (204)	D-FOL - Display in left rear passenger compartment	Erase Codes		V1.00.001 or higher
C (204)	D-FOL - Display in left rear passenger compartment	Live Data		V1.00.001 or higher
C (204)	D-FOL - Display in left rear passenger compartment	Active Test		V1.00.001 or higher
C (204)	D-FOR - Display in right rear passenger compartment	ECU Information		V1.00.001 or higher
C (204)	D-FOR - Display in right rear passenger compartment	Read Codes		V1.00.001 or higher
C (204)	D-FOR - Display in right rear passenger compartment	Erase Codes		V1.00.001 or higher

C (204)	D-FOR - Display in right rear passenger compartment	Live Data		V1.00.001 or higher
C (204)	D-FOR - Display in right rear passenger compartment	Active Test		V1.00.001 or higher
C (204)	TELE AID-Telematic service Emergency call	ECU Information		V1.00.001 or higher
C (204)	TELE AID-Telematic service Emergency call	Read Codes		V1.00.001 or higher
C (204)	TELE AID-Telematic service Emergency call	Erase Codes		V1.00.001 or higher
C (204)	TELE AID-Telematic service Emergency call	Live Data		V1.00.001 or higher
C (204)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
C (204)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
C (204)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher

C (204)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
C (204)	TELE AID- Telematic services Remote door unlocking	ECU Information		V1.00.001 or higher
C (204)	TELE AID- Telematic services Remote door unlocking	Read Codes		V1.00.001 or higher
C (204)	TELE AID- Telematic services Remote door unlocking	Erase Codes		V1.00.001 or higher
C (204)	TELE AID- Telematic services Remote door unlocking	Live Data		V1.00.001 or higher
C (204)	TELE AID- Telematic service Stolen vehicle tracking	ECU Information		V1.00.001 or higher
C (204)	TELE AID- Telematic service Stolen vehicle tracking	Read Codes		V1.00.001 or higher
C (204)	TELE AID- Telematic service Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
C (204)	TELE AID- Telematic service Stolen vehicle tracking	Live Data		V1.00.001 or higher
C (204)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
C (204)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
C (204)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher

C (204)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
C (204)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher
C (204)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
C (204)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
C (204)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
C (204)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
C (204)	CTEL - Mobile phone	ECU Information		V1.00.001 or higher
C (204)	CTEL - Mobile phone	Read Codes		V1.00.001 or higher
C (204)	CTEL - Mobile phone	Erase Codes		V1.00.001 or higher
C (204)	CTEL - Mobile phone	Live Data		V1.00.001 or higher
C (204)	ESA Driver - Electric seat adjustmnet Driver	ECU Information		V1.00.001 or higher
C (204)	ESA Driver - Electric seat adjustmnet Driver	Read Codes		V1.00.001 or higher
C (204)	ESA Driver - Electric seat adjustmnet Driver	Erase Codes		V1.00.001 or higher
C (204)	ESA Driver - Electric seat adjustmnet Driver	Live Data		V1.00.001 or higher
C (204)	ESA Driver - Electric seat adjustmnet Driver	Active Test		V1.00.001 or higher



C (204)	ESA Front passenger - Electric seat adjustment Front passenger	ECU Information		V1.00.001 or higher
C (204)	ESA Front passenger - Electric seat adjustment Front passenger	Read Codes		V1.00.001 or higher
C (204)	ESA Front passenger - Electric seat adjustment Front passenger	Erase Codes		V1.00.001 or higher
C (204)	ESA Front passenger - Electric seat adjustment Front passenger	Live Data		V1.00.001 or higher
C (204)	ESA Front passenger - Electric seat adjustment Front passenger	Active Test		V1.00.001 or higher
C (204)	DCU-LF - Left front door	ECU Information		V1.00.001 or higher
C (204)	DCU-LF - Left front door	Read Codes		V1.00.001 or higher
C (204)	DCU-LF - Left front door	Erase Codes		V1.00.001 or higher
C (204)	DCU-LF - Left front door	Live Data		V1.00.001 or higher
C (204)	DCU-LF - Left front door	Active Test		V1.00.001 or higher
C (204)	DCU-RF - Right front door	ECU Information		V1.00.001 or higher
C (204)	DCU-RF - Right front door	Read Codes		V1.00.001 or higher
C (204)	DCU-RF - Right front door	Erase Codes		V1.00.001 or higher
C (204)	DCU-RF - Right front door	Live Data		V1.00.001 or higher
C (204)	DCU-RF - Right front door	Active Test		V1.00.001 or higher
C (204)	DCU-LR - Left rear door	ECU Information		V1.00.001 or higher

C (204)	DCU-LR - Left rear door	Read Codes		V1.00.001 or higher
C (204)	DCU-LR - Left rear door	Erase Codes		V1.00.001 or higher
C (204)	DCU-LR - Left rear door	Live Data		V1.00.001 or higher
C (204)	DCU-LR - Left rear door	Active Test		V1.00.001 or higher
C (204)	DCU-RR - Right rear door	ECU Information		V1.00.001 or higher
C (204)	DCU-RR - Right rear door	Read Codes		V1.00.001 or higher
C (204)	DCU-RR - Right rear door	Erase Codes		V1.00.001 or higher
C (204)	DCU-RR - Right rear door	Live Data		V1.00.001 or higher
C (204)	DCU-RR - Right rear door	Active Test		V1.00.001 or higher
C (204)	AAC-Air conditioning	ECU Information		V1.00.001 or higher
C (204)	AAC-Air conditioning	Read Codes		V1.00.001 or higher
C (204)	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
C (204)	AAC-Air conditioning	Live Data		V1.00.001 or higher
C (204)	AAC-Air conditioning	Active Test		V1.00.001 or higher
C (204)	STH - Stationary heater	ECU Information		V1.00.001 or higher
C (204)	STH - Stationary heater	Read Codes		V1.00.001 or higher
C (204)	STH - Stationary heater	Erase Codes		V1.00.001 or higher
C (204)	STH - Stationary heater	Live Data		V1.00.001 or higher
C (204)	STH - Stationary heater	Active Test		V1.00.001 or higher
C (204)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
C (204)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
C (204)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
C (204)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
C (204)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher

C (204)	TPM - Tire pressure monitor	Special functions	Write the wheel electronics ID number.	V1.00.001 or higher
C (204)	SGR - Radar sensors control unit	ECU Information		V1.00.001 or higher
C (204)	SGR - Radar sensors control unit	Read Codes		V1.00.001 or higher
C (204)	SGR - Radar sensors control unit	Erase Codes		V1.00.001 or higher
C (204)	SGR - Radar sensors control unit	Live Data		V1.00.001 or higher
C (204)	SGR - Radar sensors control unit	Active Test		V1.00.001 or higher
C (204)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
C (204)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
C (204)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
C (204)	IRS-HRA - Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
C (204)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
C (204)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
C (204)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher

C (204)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
C (204)	PTS - PARKTRONIC	ECU Information		V1.00.001 or higher
C (204)	PTS - PARKTRONIC	Read Codes		V1.00.001 or higher
C (204)	PTS - PARKTRONIC	Erase Codes		V1.00.001 or higher
C (204)	PTS - PARKTRONIC	Live Data		V1.00.001 or higher
C (204)	PTS - PARKTRONIC	Active Test		V1.00.001 or higher
C (204)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
C (204)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
C (204)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
C (204)	DTR - DISTRONIC	Live Data		V1.00.001 or higher
C (204)	RFK - Backup camera	ECU Information		V1.00.001 or higher
C (204)	RFK - Backup camera	Read Codes		V1.00.001 or higher
C (204)	RFK - Backup camera	Erase Codes		V1.00.001 or higher
C (204)	RFK - Backup camera	Live Data		V1.00.001 or higher
C (204)	RFK - Backup camera	Active Test		V1.00.001 or higher
C (203)	ME-SFI-Motor electronics	ECU Information		V1.00.001 or higher
C (203)	ME-SFI-Motor electronics	Read Codes		V1.00.001 or higher
C (203)	ME-SFI-Motor electronics	Erase Codes		V1.00.001 or higher
C (203)	ME-SFI-Motor electronics	Live Data		V1.00.001 or higher
C (203)	ME-SFI-Motor electronics	Active Test		V1.00.001 or higher
C (203)	ME-SFI-Motor electronics	Control unit adaptations	Learning processes	V1.00.001 or higher
C (203)	ME-SFI-Motor electronics	Control unit adaptations	Correction programming	V1.00.001 or higher
C (203)	Transmission	ECU Information		V1.00.001 or higher

C (203)	Transmission	Read Codes		V1.00.001 or higher
C (203)	Transmission	Erase Codes		V1.00.001 or higher
C (203)	Transmission	Live Data		V1.00.001 or higher
C (203)	Transmission	Active Test		V1.00.001 or higher
C (203)	Transmission	Control unit adaptations	Definition	V1.00.001 or higher
C (203)	Transmission	Control unit adaptations	Display adaption data.	V1.00.001 or higher
C (203)	Transmission	Control unit adaptations	Limit values of adaptation with additional information	V1.00.001 or higher
C (203)	Transmission	Control unit adaptations	Resetting of the adaptation data	V1.00.001 or higher
C (203)	Transmission	Control unit adaptations	Performing adaptation when transmission is replaced or repaired	V1.00.001 or higher
C (203)	Transmission	Control unit adaptations	Performing adaptation in the event of shift quality complaints	V1.00.001 or higher
C (203)	Transmission	Control unit adaptations	Read the coding.	V1.00.001 or higher
C (203)	Transmission	Special functions	Transmission oil condition	V1.00.001 or higher
C (203)	Transmission	Special functions	Operational check	V1.00.001 or higher
C (203)	Transmission	Special functions	Emergency running	V1.00.001 or higher
C (203)	Transmission	Special functions	Diagnosis routines	V1.00.001 or higher
C (203)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
C (203)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
C (203)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
C (203)	ESM-Electronic selector module	Live Data		V1.00.001 or higher

C (203)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
C (203)	ESM-Electronic selector module	Control unit adaptations	Operational check	V1.00.001 or higher
C (203)	DTR-Distronic	ECU Information		V1.00.001 or higher
C (203)	DTR-Distronic	Read Codes		V1.00.001 or higher
C (203)	DTR-Distronic	Erase Codes		V1.00.001 or higher
C (203)	DTR-Distronic	Live Data		V1.00.001 or higher
C (203)	DTR-Distronic	Control unit adaptations	•	V1.00.001 or higher
C (203)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
C (203)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
C (203)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
C (203)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
C (203)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
C (203)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
C (203)	ESP-Electronic stability program	Control unit adaptations	Clear the zero point offset error of the component 'N49 (Steering Angle Sensor (SAS))'.	V1.00.001 or higher
C (203)	BAS-Brake assist	ECU Information		V1.00.001 or higher
C (203)	BAS-Brake assist	Read Codes		V1.00.001 or higher
C (203)	BAS-Brake assist	Erase Codes		V1.00.001 or higher
C (203)	BAS-Brake assist	Live Data		V1.00.001 or higher
C (203)	BAS-Brake assist	Active Test		V1.00.001 or higher
C (203)	VP-Vacuum pump brake booster	ECU Information		V1.00.001 or higher
C (203)	VP-Vacuum pump brake booster	Read Codes		V1.00.001 or higher

C (203)	VP-Vacuum pump brake booster	Erase Codes		V1.00.001 or higher
C (203)	VP-Vacuum pump brake booster	Live Data		V1.00.001 or higher
C (203)	VP-Vacuum pump brake booster	Active Test		V1.00.001 or higher
C (203)	AB-Airbag	ECU Information		V1.00.001 or higher
C (203)	AB-Airbag	Read Codes		V1.00.001 or higher
C (203)	AB-Airbag	Erase Codes		V1.00.001 or higher
C (203)	AB-Airbag	Live Data		V1.00.001 or higher
C (203)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
C (203)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
C (203)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
C (203)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
C (203)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher
C (203)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track with the workshop key.	V1.00.001 or higher
C (203)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher
C (203)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N73 (Electronic Ignition Switch (EIS/EZS) control module)'. Activate the control module 'N26/5 (Electric steering lock control module)'.	V1.00.001 or higher
C (203)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N26/5 (Electric steering lock control module)'.	V1.00.001 or higher

C (203)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
C (203)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
C (203)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
C (203)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
C (203)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
C (203)	OCP-Overhead control panel	Control unit adaptations	Rain/Light Sensor	V1.00.001 or higher
C (203)	OCP-Overhead control panel	Control unit adaptations	SR/SHD (Tilting/Sliding Sunroof)	V1.00.001 or higher
C (203)	LCP-Lower control panel	ECU Information		V1.00.001 or higher
C (203)	LCP-Lower control panel	Read Codes		V1.00.001 or higher
C (203)	LCP-Lower control panel	Erase Codes		V1.00.001 or higher
C (203)	LCP-Lower control panel	Live Data		V1.00.001 or higher
C (203)	LCP-Lower control panel	Active Test		V1.00.001 or higher
C (203)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
C (203)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
C (203)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
C (203)	UCP-Upper control panel	Live Data		V1.00.001 or higher
C (203)	UCP-Upper control panel	Active Test		V1.00.001 or higher
C (203)	SAM-F-Signal acquisition and actuation module front	ECU Information		V1.00.001 or higher
C (203)	SAM-F-Signal acquisition and actuation module front	Read Codes		V1.00.001 or higher
C (203)	SAM-F-Signal acquisition and actuation module front	Erase Codes		V1.00.001 or higher



C (203)	SAM-F-Signal acquisition and actuation module front	Live Data		V1.00.001 or higher
C (203)	SAM-F-Signal acquisition and actuation module front	Active Test		V1.00.001 or higher
C (203)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
C (203)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
C (203)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
C (203)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
C (203)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
C (203)	AHE-Trailer recognition	ECU Information		V1.00.001 or higher
C (203)	AHE-Trailer recognition	Read Codes		V1.00.001 or higher
C (203)	AHE-Trailer recognition	Erase Codes		V1.00.001 or higher
C (203)	AHE-Trailer recognition	Live Data		V1.00.001 or higher
C (203)	AHE-Trailer recognition	Active Test		V1.00.001 or higher
C (203)	MSS-Special vehicle multifunction control module	ECU Information		V1.00.001 or higher

C (203)	MSS-Special vehicle multifunction control module	Read Codes		V1.00.001 or higher
C (203)	MSS-Special vehicle multifunction control module	Erase Codes		V1.00.001 or higher
C (203)	MSS-Special vehicle multifunction control module	Live Data		V1.00.001 or higher
C (203)	MSS-Special vehicle multifunction control module	Active Test		V1.00.001 or higher
C (203)	MSS-Special vehicle multifunction control module	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
C (203)	HRA-FR-Front right headlamp range control	ECU Information		V1.00.001 or higher
C (203)	HRA-FR-Front right headlamp range control	Read Codes		V1.00.001 or higher
C (203)	HRA-FR-Front right headlamp range control	Erase Codes		V1.00.001 or higher
C (203)	HRA-FR-Front right headlamp range control	Live Data		V1.00.001 or higher
C (203)	HRA-FR-Front right headlamp range control	Active Test		V1.00.001 or higher
C (203)	HRA-FR-Front right headlamp range control	Control unit adaptations	Zero position adjustment	V1.00.001 or higher
C (203)	HRA-FL-Front left headlamp range control	ECU Information		V1.00.001 or higher
C (203)	HRA-FL-Front left headlamp range control	Read Codes		V1.00.001 or higher
C (203)	HRA-FL-Front left headlamp range control	Erase Codes		V1.00.001 or higher

C (203)	HRA-FL-Front left headlamp range control	Live Data		V1.00.001 or higher
C (203)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
C (203)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
C (203)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
C (203)	ICM-Instrument cluster with maintenance interval display	Live Data		V1.00.001 or higher
C (203)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
C (203)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
C (203)	ICM-Instrument cluster with maintenance interval display	Control unit adaptations	Settings	V1.00.001 or higher
C (203)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
C (203)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
C (203)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
C (203)	PTS-Parktronic system	Live Data		V1.00.001 or higher
C (203)	PTS-Parktronic system	Active Test		V1.00.001 or higher
C (203)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
C (203)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher

C (203)	SCM [MRM]- Steering column module	Erase Codes		V1.00.001 or higher
C (203)	SCM [MRM]- Steering column module	Live Data		V1.00.001 or higher
C (203)	SCM [MRM]- Steering column module	Active Test		V1.00.001 or higher
C (203)	SCM [MRM]- Steering column module	Initial startup	●	V1.00.001 or higher
C (203)	TV-TV tuner	ECU Information		V1.00.001 or higher
C (203)	TV-TV tuner	Read Codes		V1.00.001 or higher
C (203)	TV-TV tuner	Erase Codes		V1.00.001 or higher
C (203)	TV-TV tuner	Live Data		V1.00.001 or higher
C (203)	TV-TV tuner	Active Test		V1.00.001 or higher
C (203)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	ECU Information		V1.00.001 or higher
C (203)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Read Codes		V1.00.001 or higher
C (203)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Erase Codes		V1.00.001 or higher
C (203)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Live Data		V1.00.001 or higher
C (203)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Active Test		V1.00.001 or higher

C (203)	D2B-COMAND, MCS or AUDIO	ECU Information		V1.00.001 or higher
C (203)	D2B-COMAND, MCS or AUDIO	Read Codes		V1.00.001 or higher
C (203)	D2B-COMAND, MCS or AUDIO	Erase Codes		V1.00.001 or higher
C (203)	D2B-COMAND, MCS or AUDIO	Live Data		V1.00.001 or higher
C (203)	D2B-COMAND, MCS or AUDIO	Active Test		V1.00.001 or higher
C (203)	CDC-CD changer	ECU Information		V1.00.001 or higher
C (203)	CDC-CD changer	Read Codes		V1.00.001 or higher
C (203)	CDC-CD changer	Erase Codes		V1.00.001 or higher
C (203)	VCS-Voice control system	ECU Information		V1.00.001 or higher
C (203)	VCS-Voice control system	Read Codes		V1.00.001 or higher
C (203)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
C (203)	SOUND- Sound system	ECU Information		V1.00.001 or higher
C (203)	SOUND- Sound system	Read Codes		V1.00.001 or higher
C (203)	SOUND- Sound system	Erase Codes		V1.00.001 or higher
C (203)	SOUND- Sound system	Live Data		V1.00.001 or higher
C (203)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	ECU Information		V1.00.001 or higher
C (203)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Read Codes		V1.00.001 or higher
C (203)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Erase Codes		V1.00.001 or higher

C (203)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Live Data		V1.00.001 or higher
C (203)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Active Test		V1.00.001 or higher
C (203)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
C (203)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
C (203)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
C (203)	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
C (203)	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher
C (203)	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher
C (203)	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher
C (203)	DCM-FL-Door control module front left	Active Test		V1.00.001 or higher
C (203)	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
C (203)	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher
C (203)	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
C (203)	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
C (203)	DCM-FR-Door control module front right	Active Test		V1.00.001 or higher

C (203)	DCM-RL-Door control module rear left	ECU Information		V1.00.001 or higher
C (203)	DCM-RL-Door control module rear left	Read Codes		V1.00.001 or higher
C (203)	DCM-RL-Door control module rear left	Erase Codes		V1.00.001 or higher
C (203)	DCM-RL-Door control module rear left	Live Data		V1.00.001 or higher
C (203)	DCM-RL-Door control module rear left	Active Test		V1.00.001 or higher
C (203)	DCM-RR-Door control module rear right	ECU Information		V1.00.001 or higher
C (203)	DCM-RR-Door control module rear right	Read Codes		V1.00.001 or higher
C (203)	DCM-RR-Door control module rear right	Erase Codes		V1.00.001 or higher
C (203)	DCM-RR-Door control module rear right	Live Data		V1.00.001 or higher
C (203)	DCM-RR-Door control module rear right	Active Test		V1.00.001 or higher
C (203)	ESA passenger-Electric seat adjustment passenger	ECU Information		V1.00.001 or higher
C (203)	ESA passenger-Electric seat adjustment passenger	Read Codes		V1.00.001 or higher
C (203)	ESA passenger-Electric seat adjustment passenger	Erase Codes		V1.00.001 or higher
C (203)	ESA passenger-Electric seat adjustment passenger	Live Data		V1.00.001 or higher

C (203)	ESA passenger- Electric seat adjustment passenger	Active Test		V1.00.001 or higher
C (203)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
C (203)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher
C (203)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher
C (203)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
C (203)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
C (203)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	ECU Information		V1.00.001 or higher
C (203)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Read Codes		V1.00.001 or higher
C (203)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Erase Codes		V1.00.001 or higher
C (203)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Live Data		V1.00.001 or higher



C (203)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Active Test		V1.00.001 or higher
C (203)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
C (203)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
C (203)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
C (203)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
C (203)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
C (203)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
C (203)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
C (203)	AAC-Automatic air conditioning	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
C (203)	AAC-Automatic air conditioning	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
C (203)	STH-Stationary heater	ECU Information		V1.00.001 or higher
C (203)	STH-Stationary heater	Read Codes		V1.00.001 or higher
C (203)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
C (203)	STH-Stationary heater	Live Data		V1.00.001 or higher
C (203)	STH-Stationary heater	Active Test		V1.00.001 or higher
C (203)	STH-Stationary heater	Control unit adaptations	CO2 setting (cold setting of combustion air blower)	V1.00.001 or higher

C (203)	STH-Stationary heater	Control unit adaptations	Learning component 'A8/3 (Stationary Heater (STH) radio remote control transmitter)'	V1.00.001 or higher
C (203)	ME-SFI-Motor electronics	ECU Information		V1.00.001 or higher
C (203)	ME-SFI-Motor electronics	Read Codes		V1.00.001 or higher
C (203)	ME-SFI-Motor electronics	Erase Codes		V1.00.001 or higher
C (203)	ME-SFI-Motor electronics	Live Data		V1.00.001 or higher
C (203)	ME-SFI-Motor electronics	Active Test		V1.00.001 or higher
C (203)	ME-SFI-Motor electronics	Control unit adaptations	Learning processes	V1.00.001 or higher
C (203)	ME-SFI-Motor electronics	Control unit adaptations	Correction programming	V1.00.001 or higher
C (203)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
C (203)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
C (203)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
C (203)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
C (203)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
C (203)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
C (203)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
C (203)	ME2-SFI-Motor electronics 2	Special functions	Fault path tests are carried out.	V1.00.001 or higher
C (203)	CDI 2-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
C (203)	CDI 2-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
C (203)	CDI 2-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher

C (203)	CDI 2-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
C (203)	CDI 2-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
C (203)	CDI 2-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
C (203)	CDI 2-Common Rail Diesel Injection	Control unit adaptations	Extension of run-on time Drive Authorization System (DAS/FBS) 3	V1.00.001 or higher
C (203)	CDI 3-Common Rail Diesel Injection3	ECU Information		V1.00.001 or higher
C (203)	CDI 3-Common Rail Diesel Injection3	Read Codes		V1.00.001 or higher
C (203)	CDI 3-Common Rail Diesel Injection3	Erase Codes		V1.00.001 or higher
C (203)	CDI 3-Common Rail Diesel Injection3	Live Data		V1.00.001 or higher
C (203)	CDI 3-Common Rail Diesel Injection3	Active Test		V1.00.001 or higher
C (203)	CDI 2-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
C (203)	CDI 2-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
C (203)	CDI 2-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
C (203)	CDI 2-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
C (203)	CDI 2-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
C (203)	CDI 2-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher

C (203)	CDI 2-Common Rail Diesel Injection	Control unit adaptations	Extension of run-on time Drive Authorization System (DAS/FBS) 3	V1.00.001 or higher
C (203)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Control unit adaptations	Detach the transport protection of control module 'ETC', personalize or activate the control module.	V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Control unit adaptations	Learning process: Y3/8s1 (Selection range sensor)	V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Control unit adaptations	Learning to the Drive Authorization System (DAS/FBS)	V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Special functions	Turn off the incline recognition for dynamometer mode.	V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Special functions	Transmission adaptation	V1.00.001 or higher
C (203)	AB-Airbag	ECU Information		V1.00.001 or higher
C (203)	AB-Airbag	Read Codes		V1.00.001 or higher

C (203)	AB-Airbag	Erase Codes		V1.00.001 or higher
C (203)	AB-Airbag	Live Data		V1.00.001 or higher
C (203)	CGW-Central gateway	ECU Information		V1.00.001 or higher
C (203)	CGW-Central gateway	Read Codes		V1.00.001 or higher
C (203)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
C (203)	CGW-Central gateway	Live Data		V1.00.001 or higher
C (203)	CGW-Central gateway	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
C (203)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
C (203)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
C (203)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
C (203)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
C (203)	WSS-Weight sensing system	Control unit adaptations	•	V1.00.001 or higher
C (203)	WSS-Weight sensing system	Initial startup	Initial start-up	V1.00.001 or higher
C (203)	AHE-Trailer recognition	ECU Information		V1.00.001 or higher
C (203)	AHE-Trailer recognition	Read Codes		V1.00.001 or higher
C (203)	AHE-Trailer recognition	Erase Codes		V1.00.001 or higher
C (203)	AHE-Trailer recognition	Live Data		V1.00.001 or higher
C (203)	AHE-Trailer recognition	Active Test		V1.00.001 or higher
C (203)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
C (203)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
C (203)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
C (203)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher

C (203)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
C (203)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
C (203)	ICM-Instrument cluster with maintenance interval display	Live Data		V1.00.001 or higher
C (203)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
C (203)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
C (203)	ICM-Instrument cluster with maintenance interval display	Control unit adaptations	Instrument Cluster (IC) settings	V1.00.001 or higher
C (203)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
C (203)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
C (203)	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher
C (203)	SCM [MRM]-Steering column module	Live Data		V1.00.001 or higher
C (203)	SCM [MRM]-Steering column module	Active Test		V1.00.001 or higher
C (203)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher

C (203)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher
C (203)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
C (203)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher
C (203)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher
C (203)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
C (203)	COMAND or AUDIO	ECU Information		V1.00.001 or higher
C (203)	COMAND or AUDIO	Read Codes		V1.00.001 or higher
C (203)	COMAND or AUDIO	Erase Codes		V1.00.001 or higher
C (203)	COMAND or AUDIO	Live Data		V1.00.001 or higher
C (203)	COMAND or AUDIO	Active Test		V1.00.001 or higher
C (203)	COMAND or AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher

C (203)	CTEL-Mobile phone adapter with universal interface	ECU Information		V1.00.001 or higher
C (203)	CTEL-Mobile phone adapter with universal interface	Read Codes		V1.00.001 or higher
C (203)	CTEL-Mobile phone adapter with universal interface	Erase Codes		V1.00.001 or higher
C (203)	CTEL-Mobile phone adapter with universal interface	Live Data		V1.00.001 or higher
C (203)	CDC-CD changer	ECU Information		V1.00.001 or higher
C (203)	CDC-CD changer	Read Codes		V1.00.001 or higher
C (203)	CDC-CD changer	Erase Codes		V1.00.001 or higher
C (203)	CDC-CD changer	Live Data		V1.00.001 or higher
C (203)	CDC-CD changer	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
C (203)	VCS-Voice control system	ECU Information		V1.00.001 or higher
C (203)	VCS-Voice control system	Read Codes		V1.00.001 or higher
C (203)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
C (203)	VCS-Voice control system	Active Test		V1.00.001 or higher
C (203)	SOUND- Sound system	ECU Information		V1.00.001 or higher
C (203)	SOUND- Sound system	Read Codes		V1.00.001 or higher
C (203)	SOUND- Sound system	Erase Codes		V1.00.001 or higher
C (203)	SOUND- Sound system	Live Data		V1.00.001 or higher
C (203)	SOUND- Sound system	Active Test		V1.00.001 or higher
C (203)	SOUND- Sound system	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
C (203)	TV-TV tuner	ECU Information		V1.00.001 or higher



C (203)	TV-TV tuner	Read Codes		V1.00.001 or higher
C (203)	TV-TV tuner	Erase Codes		V1.00.001 or higher
C (203)	TV-TV tuner	Live Data		V1.00.001 or higher
C (203)	TV-TV tuner	Active Test		V1.00.001 or higher
C (203)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
C (203)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
C (203)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
C (203)	SDAR-Satellite radio	Live Data		V1.00.001 or higher
C (203)	NAVI-Navigation system	ECU Information		V1.00.001 or higher
C (203)	NAVI-Navigation system	Read Codes		V1.00.001 or higher
C (203)	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
C (203)	NAVI-Navigation system	Live Data		V1.00.001 or higher
C (203)	NAVI-Navigation system	Active Test		V1.00.001 or higher
C (203)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
C (203)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
C (203)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
C (203)	TELE AID-Control unit	Live Data		V1.00.001 or higher
C (203)	TELE AID-Telematic services Emergency call	ECU Information		V1.00.001 or higher
C (203)	TELE AID-Telematic services Emergency call	Read Codes		V1.00.001 or higher
C (203)	TELE AID-Telematic services Emergency call	Erase Codes		V1.00.001 or higher

C (203)	TELE AID- Telematic services Emergency call	Live Data		V1.00.001 or higher
C (203)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
C (203)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
C (203)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
C (203)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
C (203)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher
C (203)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
C (203)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
C (203)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher

C (203)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher
C (203)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
C (203)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
C (203)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher
C (203)	CTEL-Cellular telephone	ECU Information		V1.00.001 or higher
C (203)	CTEL-Cellular telephone	Read Codes		V1.00.001 or higher
C (203)	CTEL-Cellular telephone	Erase Codes		V1.00.001 or higher
C (203)	CTEL-Cellular telephone	Live Data		V1.00.001 or higher
C (203)	STH-Stationary heater	ECU Information		V1.00.001 or higher
C (203)	STH-Stationary heater	Read Codes		V1.00.001 or higher
C (203)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
C (203)	STH-Stationary heater	Live Data		V1.00.001 or higher
C (203)	STH-Stationary heater	Active Test		V1.00.001 or higher

C (203)	STH-Stationary heater	Control unit adaptations	Learning component 'A8/3 (Stationary Heater (STH) radio remote control transmitter)'	V1.00.001 or higher
C (203)	ME 9.7-Motor electronics 9.7	ECU Information		V1.00.001 or higher
C (203)	ME 9.7-Motor electronics 9.7	Read Codes		V1.00.001 or higher
C (203)	ME 9.7-Motor electronics 9.7	Erase Codes		V1.00.001 or higher
C (203)	ME 9.7-Motor electronics 9.7	Live Data		V1.00.001 or higher
C (203)	ME 9.7-Motor electronics 9.7	Active Test		V1.00.001 or higher
C (203)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Learning processes	V1.00.001 or higher
C (203)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Correction programming	V1.00.001 or higher
C (203)	ME 9.7-Motor electronics 9.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
C (203)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
C (203)	ME 9.7-Motor electronics 9.7	Special functions	Variant coding	V1.00.001 or higher
C (203)	CDI 4-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
C (203)	CDI 4-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
C (203)	CDI 4-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
C (203)	CDI 4-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
C (203)	CDI 4-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
C (203)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher

C (203)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Active Test		V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Control unit adaptations	Definition	V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Control unit adaptations	Performing adaptation	V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Special functions	Warranty or goodwill processing	V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Special functions	Diagnosis routines	V1.00.001 or higher
C (203)	ETC-Electronic transmission control	Special functions	Initial start-up	V1.00.001 or higher
C (203)	XALWA-L-Xenon headlamp, left	ECU Information		V1.00.001 or higher
C (203)	XALWA-L-Xenon headlamp, left	Read Codes		V1.00.001 or higher
C (203)	XALWA-L-Xenon headlamp, left	Erase Codes		V1.00.001 or higher
C (203)	XALWA-L-Xenon headlamp, left	Live Data		V1.00.001 or higher
C (203)	XALWA-L-Xenon headlamp, left	Active Test		V1.00.001 or higher

C (203)	XALWA-L-Xenon headlamp, left	Control unit adaptations	Zero position adjustment	V1.00.001 or higher
C (203)	XALWA-R-Xenon headlamp, right	ECU Information		V1.00.001 or higher
C (203)	XALWA-R-Xenon headlamp, right	Read Codes		V1.00.001 or higher
C (203)	XALWA-R-Xenon headlamp, right	Erase Codes		V1.00.001 or higher
C (203)	XALWA-R-Xenon headlamp, right	Live Data		V1.00.001 or higher
C (203)	XALWA-R-Xenon headlamp, right	Active Test		V1.00.001 or higher
C (203)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
C (203)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
C (203)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
C (203)	PTS-Parktronic system	Live Data		V1.00.001 or higher
C (203)	PTS-Parktronic system	Active Test		V1.00.001 or higher
C (203)	AUDIO	ECU Information		V1.00.001 or higher
C (203)	AUDIO	Read Codes		V1.00.001 or higher
C (203)	AUDIO	Erase Codes		V1.00.001 or higher
C (203)	AUDIO	Live Data		V1.00.001 or higher
C (203)	AUDIO	Active Test		V1.00.001 or higher
C (203)	AUDIO	Control unit adaptations	Changing the language version(Linguatronic)	V1.00.001 or higher
C (203)	NAVI-Navigation system	ECU Information		V1.00.001 or higher
C (203)	NAVI-Navigation system	Read Codes		V1.00.001 or higher
C (203)	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
C (203)	NAVI-Navigation system	Live Data		V1.00.001 or higher
C (203)	NAVI-Navigation system	Active Test		V1.00.001 or higher
C (203)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher

C (203)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
C (203)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher
C (203)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher
C (203)	Sound system (Main amplifier)	Active Test		V1.00.001 or higher
C (203)	UCI-Media interface	ECU Information		V1.00.001 or higher
C (203)	UCI-Media interface	Read Codes		V1.00.001 or higher
C (203)	UCI-Media interface	Erase Codes		V1.00.001 or higher
C (203)	DAB-Digital radio	ECU Information		V1.00.001 or higher
C (203)	DAB-Digital radio	Read Codes		V1.00.001 or higher
C (203)	DAB-Digital radio	Erase Codes		V1.00.001 or higher
C (203)	DAB-Digital radio	Live Data		V1.00.001 or higher
C (203)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
C (203)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
C (203)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
C (203)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
C (203)	SDAR-Satellite radio(Valid for USA)	Active Test		V1.00.001 or higher
C (203)	CTEL-Cellular telephone(JAPAN)	ECU Information		V1.00.001 or higher
C (203)	CTEL-Cellular telephone(JAPAN)	Read Codes		V1.00.001 or higher
C (203)	CTEL-Cellular telephone(JAPAN)	Erase Codes		V1.00.001 or higher

C (203)	CTEL-Cellular telephone(JAPAN)	Live Data		V1.00.001 or higher
C (203)	CTEL-Cellular telephone(JAPAN)	Active Test		V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	Control unit adaptations	Correction programming	V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	Control unit adaptations	Self-adaptation	V1.00.001 or higher
C (202)	Transmission	ECU Information		V1.00.001 or higher
C (202)	Transmission	Read Codes		V1.00.001 or higher
C (202)	Transmission	Erase Codes		V1.00.001 or higher
C (202)	Transmission	Live Data		V1.00.001 or higher
C (202)	Transmission	Active Test		V1.00.001 or higher
C (202)	Transmission	Control unit adaptations	●	V1.00.001 or higher
C (202)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
C (202)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
C (202)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
C (202)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
C (202)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
C (202)	Traction systems ABS,ASR,ETS,ESP	ECU Information		V1.00.001 or higher
C (202)	Traction systems ABS,ASR,ETS,ESP	Read Codes		V1.00.001 or higher
C (202)	Traction systems ABS,ASR,ETS,ESP	Erase Codes		V1.00.001 or higher



C (202)	Traction systems ABS,ASR,ETS,ESP	Live Data		V1.00.001 or higher
C (202)	Traction systems ABS,ASR,ETS,ESP	Active Test		V1.00.001 or higher
C (202)	BAS-Brake assist	ECU Information		V1.00.001 or higher
C (202)	BAS-Brake assist	Read Codes		V1.00.001 or higher
C (202)	BAS-Brake assist	Erase Codes		V1.00.001 or higher
C (202)	BAS-Brake assist	Live Data		V1.00.001 or higher
C (202)	BAS-Brake assist	Active Test		V1.00.001 or higher
C (202)	AB-Airbag	ECU Information		V1.00.001 or higher
C (202)	AB-Airbag	Read Codes		V1.00.001 or higher
C (202)	AB-Airbag	Erase Codes		V1.00.001 or higher
C (202)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
C (202)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
C (202)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
C (202)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
C (202)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
C (202)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
C (202)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
C (202)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
C (202)	LCP-Lower control panel	ECU Information		V1.00.001 or higher
C (202)	LCP-Lower control panel	Read Codes		V1.00.001 or higher
C (202)	LCP-Lower control panel	Erase Codes		V1.00.001 or higher
C (202)	LCP-Lower control panel	Live Data		V1.00.001 or higher
C (202)	PSE-Pneumatic system equipment	ECU Information		V1.00.001 or higher

C (202)	PSE-Pneumatic system equipment	Read Codes		V1.00.001 or higher
C (202)	PSE-Pneumatic system equipment	Erase Codes		V1.00.001 or higher
C (202)	PSE-Pneumatic system equipment	Live Data		V1.00.001 or higher
C (202)	SAM-Signal acquisition and actuation module	ECU Information		V1.00.001 or higher
C (202)	SAM-Signal acquisition and actuation module	Read Codes		V1.00.001 or higher
C (202)	SAM-Signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
C (202)	SAM-Signal acquisition and actuation module	Live Data		V1.00.001 or higher
C (202)	MSS-Special vehicle multifunction control module	ECU Information		V1.00.001 or higher
C (202)	MSS-Special vehicle multifunction control module	Read Codes		V1.00.001 or higher
C (202)	MSS-Special vehicle multifunction control module	Erase Codes		V1.00.001 or higher
C (202)	MSS-Special vehicle multifunction control module	Live Data		V1.00.001 or higher
C (202)	HRA-Headlamp range adjustment	ECU Information		V1.00.001 or higher
C (202)	HRA-Headlamp range adjustment	Read Codes		V1.00.001 or higher

C (202)	HRA-Headlamp range adjustment	Erase Codes		V1.00.001 or higher
C (202)	APS-Auto pilot system	ECU Information		V1.00.001 or higher
C (202)	APS-Auto pilot system	Read Codes		V1.00.001 or higher
C (202)	APS-Auto pilot system	Erase Codes		V1.00.001 or higher
C (202)	APS-Auto pilot system	Live Data		V1.00.001 or higher
C (202)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
C (202)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
C (202)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
C (202)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
C (202)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
C (202)	AUDIO	ECU Information		V1.00.001 or higher
C (202)	AUDIO	Read Codes		V1.00.001 or higher
C (202)	AUDIO	Erase Codes		V1.00.001 or higher
C (202)	AUDIO	Live Data		V1.00.001 or higher
C (202)	AUDIO	Active Test		V1.00.001 or higher
C (202)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	ECU Information		V1.00.001 or higher

C (202)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Read Codes		V1.00.001 or higher
C (202)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Erase Codes		V1.00.001 or higher
C (202)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Live Data		V1.00.001 or higher
C (202)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Active Test		V1.00.001 or higher
C (202)	VCS-Voice control system	ECU Information		V1.00.001 or higher
C (202)	VCS-Voice control system	Read Codes		V1.00.001 or higher
C (202)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
C (202)	CDC-CD changer	ECU Information		V1.00.001 or higher
C (202)	CDC-CD changer	Read Codes		V1.00.001 or higher
C (202)	CDC-CD changer	Erase Codes		V1.00.001 or higher
C (202)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
C (202)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
C (202)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
C (202)	PTS-Parktronic system	Live Data		V1.00.001 or higher
C (202)	PTS-Parktronic system	Active Test		V1.00.001 or higher
C (202)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	ECU Information		V1.00.001 or higher

C (202)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Read Codes		V1.00.001 or higher
C (202)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Erase Codes		V1.00.001 or higher
C (202)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Live Data		V1.00.001 or higher
C (202)	DN-Dynamic navigation by means of CTEL	ECU Information		V1.00.001 or higher
C (202)	DN-Dynamic navigation by means of CTEL	Read Codes		V1.00.001 or higher
C (202)	DN-Dynamic navigation by means of CTEL	Erase Codes		V1.00.001 or higher
C (202)	DN-Dynamic navigation by means of CTEL	Live Data		V1.00.001 or higher
C (202)	DCM1-Door control module front driver side	ECU Information		V1.00.001 or higher
C (202)	DCM1-Door control module front driver side	Read Codes		V1.00.001 or higher
C (202)	DCM1-Door control module front driver side	Erase Codes		V1.00.001 or higher
C (202)	DCM1-Door control module front driver side	Live Data		V1.00.001 or higher
C (202)	DCM2-Door control module front passenger side	ECU Information		V1.00.001 or higher
C (202)	DCM2-Door control module front passenger side	Read Codes		V1.00.001 or higher

C (202)	DCM2-Door control module front passenger side	Erase Codes		V1.00.001 or higher
C (202)	DCM2-Door control module front passenger side	Live Data		V1.00.001 or higher
C (202)	DCM3-Door control module rear driver side	ECU Information		V1.00.001 or higher
C (202)	DCM3-Door control module rear driver side	Read Codes		V1.00.001 or higher
C (202)	DCM3-Door control module rear driver side	Erase Codes		V1.00.001 or higher
C (202)	DCM3-Door control module rear driver side	Live Data		V1.00.001 or higher
C (202)	DCM4-Door control module rear passenger side	ECU Information		V1.00.001 or higher
C (202)	DCM4-Door control module rear passenger side	Read Codes		V1.00.001 or higher
C (202)	DCM4-Door control module rear passenger side	Erase Codes		V1.00.001 or higher
C (202)	DCM4-Door control module rear passenger side	Live Data		V1.00.001 or higher
C (202)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
C (202)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
C (202)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
C (202)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
C (202)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
C (202)	AAC-Automatic air conditioning	Special functions	Version coding	V1.00.001 or higher

C (202)	STH-Stationary heater	ECU Information		V1.00.001 or higher
C (202)	STH-Stationary heater	Read Codes		V1.00.001 or higher
C (202)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
C (202)	STH-Stationary heater	Live Data		V1.00.001 or higher
C (202)	STH-Stationary heater	Active Test		V1.00.001 or higher
C (202)	STH-Stationary heater	Control unit adaptations	CO2 setting	V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
C (202)	ME2-SFI-Motor electronics 2	Special functions	Fault path tests are carried out.	V1.00.001 or higher
C (202)	CDI-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
C (202)	CDI-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
C (202)	CDI-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
C (202)	CDI-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
C (202)	CDI-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
C (202)	CDI-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
C (202)	STH-Stationary heater	ECU Information		V1.00.001 or higher

C (202)	STH-Stationary heater	Read Codes		V1.00.001 or higher
C (202)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
C (202)	ME-SFI-Motor electronics	ECU Information		V1.00.001 or higher
C (202)	ME-SFI-Motor electronics	Read Codes		V1.00.001 or higher
C (202)	ME-SFI-Motor electronics	Erase Codes		V1.00.001 or higher
C (202)	ME-SFI-Motor electronics	Live Data		V1.00.001 or higher
C (202)	ME-SFI-Motor electronics	Active Test		V1.00.001 or higher
C (202)	ME-SFI-Motor electronics	Control unit adaptations	Learning processes	V1.00.001 or higher
C (202)	ME-SFI-Motor electronics	Control unit adaptations	Correction programming	V1.00.001 or higher
C (202)	VP-Vacuum pump brake booster	ECU Information		V1.00.001 or higher
C (202)	VP-Vacuum pump brake booster	Read Codes		V1.00.001 or higher
C (202)	VP-Vacuum pump brake booster	Erase Codes		V1.00.001 or higher
C (202)	VP-Vacuum pump brake booster	Live Data		V1.00.001 or higher
C (202)	VP-Vacuum pump brake booster	Active Test		V1.00.001 or higher
E (212)	ME - Motor electronics	ECU Information		V1.00.001 or higher
E (212)	ME - Motor electronics	Read Codes		V1.00.001 or higher
E (212)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
E (212)	ME - Motor electronics	Live Data		V1.00.001 or higher
E (212)	ME - Motor electronics	Active Test		V1.00.001 or higher
E (212)	ME - Motor electronics	Special functions	Variant coding	V1.00.001 or higher
E (212)	CDI-Motor electronics	ECU Information		V1.00.001 or higher



E (212)	CDI-Motor electronics	Read Codes		V1.00.001 or higher
E (212)	CDI-Motor electronics	Erase Codes		V1.00.001 or higher
E (212)	CDI-Motor electronics	Live Data		V1.00.001 or higher
E (212)	CDI-Motor electronics	Active Test		V1.00.001 or higher
E (212)	VGS - Transmission control	ECU Information		V1.00.001 or higher
E (212)	VGS - Transmission control	Read Codes		V1.00.001 or higher
E (212)	VGS - Transmission control	Erase Codes		V1.00.001 or higher
E (212)	VGS - Transmission control	Live Data		V1.00.001 or higher
E (212)	VGS - Transmission control	Active Test		V1.00.001 or higher
E (212)	VGS - Transmission control	Special functions	Standard-Fehlercode/Standard-Fehlercode/Standard-Fehlercode	V1.00.001 or higher
E (212)	VGS - Transmission control	Special functions	Standard-Fehlercode	V1.00.001 or higher
E (212)	VGS - Transmission control	Special functions	Communication with the alarm siren is not possible during the diagnosis session.	V1.00.001 or higher
E (212)	VGS - Transmission control	Special functions	Precautionary measures when working on high-voltage on-board electrical systems	V1.00.001 or higher
E (212)	ME - Motro electronics CNGCM246 for combustion engine 379CNG	ECU Information		V1.00.001 or higher

E (212)	ME - Motro electronics CNGCM246 for combustion engine 379CNG	Read Codes		V1.00.001 or higher
E (212)	ME - Motro electronics CNGCM246 for combustion engine 379CNG	Erase Codes		V1.00.001 or higher
E (212)	ME - Motro electronics CNGCM246 for combustion engine 379CNG	Live Data		V1.00.001 or higher
E (212)	ISM-Shift module	ECU Information		V1.00.001 or higher
E (212)	ISM-Shift module	Read Codes		V1.00.001 or higher
E (212)	ISM-Shift module	Erase Codes		V1.00.001 or higher
E (212)	ISM-Shift module	Live Data		V1.00.001 or higher
E (212)	ISM-Shift module	Active Test		V1.00.001 or higher
E (212)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
E (212)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
E (212)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
E (212)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
E (212)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
E (212)	ESM[EWM] - Electronic selector module	ECU Information		V1.00.001 or higher
E (212)	ESM[EWM] - Electronic selector module	Read Codes		V1.00.001 or higher
E (212)	ESM[EWM] - Electronic selector module	Erase Codes		V1.00.001 or higher
E (212)	ESM[EWM] - Electronic selector module	Live Data		V1.00.001 or higher

E (212)	ESM[EWM] - Electronic selector module	Active Test		V1.00.001 or higher
E (212)	SCR - Selective catalytic reduction	ECU Information		V1.00.001 or higher
E (212)	SCR - Selective catalytic reduction	Read Codes		V1.00.001 or higher
E (212)	SCR - Selective catalytic reduction	Erase Codes		V1.00.001 or higher
E (212)	SCR - Selective catalytic reduction	Live Data		V1.00.001 or higher
E (212)	SCR - Selective catalytic reduction	Active Test		V1.00.001 or higher
E (212)	SG-EM-Power electronics	ECU Information		V1.00.001 or higher
E (212)	SG-EM-Power electronics	Read Codes		V1.00.001 or higher
E (212)	SG-EM-Power electronics	Erase Codes		V1.00.001 or higher
E (212)	SG-EM-Power electronics	Live Data		V1.00.001 or higher
E (212)	SG-EM-Power electronics	Active Test		V1.00.001 or higher
E (212)	ESP - Electric stability program	ECU Information		V1.00.001 or higher
E (212)	ESP - Electric stability program	Read Codes		V1.00.001 or higher
E (212)	ESP - Electric stability program	Erase Codes		V1.00.001 or higher
E (212)	ESP - Electric stability program	Live Data		V1.00.001 or higher
E (212)	ESP - Electric stability program	Active Test		V1.00.001 or higher
E (212)	ESP - Electric stability program	Control unit adaptations	Teach-in processes	V1.00.001 or higher
E (212)	ESP - Electric stability program	Special functions	Display of SCN	V1.00.001 or higher
E (212)	ESP - Electric stability program	Special functions	Display of CVN	V1.00.001 or higher
E (212)	AMG DRVU-AMG DRIVE UNIT	ECU Information		V1.00.001 or higher
E (212)	AMG DRVU-AMG DRIVE UNIT	Read Codes		V1.00.001 or higher

E (212)	AMG DRVU-AMG DRIVE UNIT	Erase Codes		V1.00.001 or higher
E (212)	AMG DRVU-AMG DRIVE UNIT	Live Data		V1.00.001 or higher
E (212)	AMG DRVU-AMG DRIVE UNIT	Active Test		V1.00.001 or higher
E (212)	ADS - Adaptive damping system/ELC - Electronic level control	ECU Information		V1.00.001 or higher
E (212)	ADS - Adaptive damping system/ELC - Electronic level control	Read Codes		V1.00.001 or higher
E (212)	ADS - Adaptive damping system/ELC - Electronic level control	Erase Codes		V1.00.001 or higher
E (212)	ADS - Adaptive damping system/ELC - Electronic level control	Live Data		V1.00.001 or higher
E (212)	ADS - Adaptive damping system/ELC - Electronic level control	Active Test		V1.00.001 or higher
E (212)	ES - Electric power steering	ECU Information		V1.00.001 or higher
E (212)	ES - Electric power steering	Read Codes		V1.00.001 or higher
E (212)	ES - Electric power steering	Erase Codes		V1.00.001 or higher
E (212)	ES - Electric power steering	Live Data		V1.00.001 or higher
E (212)	FWGW-Chassis gateway	ECU Information		V1.00.001 or higher
E (212)	FWGW-Chassis gateway	Read Codes		V1.00.001 or higher
E (212)	FWGW-Chassis gateway	Erase Codes		V1.00.001 or higher
E (212)	FWGW-Chassis gateway	Live Data		V1.00.001 or higher

E (212)	SRS - Supplemental restraint system	ECU Information		V1.00.001 or higher
E (212)	SRS - Supplemental restraint system	Read Codes		V1.00.001 or higher
E (212)	SRS - Supplemental restraint system	Erase Codes		V1.00.001 or higher
E (212)	SRS - Supplemental restraint system	Live Data		V1.00.001 or higher
E (212)	CGW-Central gateway	ECU Information		V1.00.001 or higher
E (212)	CGW-Central gateway	Read Codes		V1.00.001 or higher
E (212)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
E (212)	CGW-Central gateway	Live Data		V1.00.001 or higher
E (212)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher
E (212)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
E (212)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
E (212)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
E (212)	SCM - Steering column module	ECU Information		V1.00.001 or higher
E (212)	SCM - Steering column module	Read Codes		V1.00.001 or higher
E (212)	SCM - Steering column module	Erase Codes		V1.00.001 or higher
E (212)	SCM - Steering column module	Live Data		V1.00.001 or higher
E (212)	SCM - Steering column module	Active Test		V1.00.001 or higher
E (212)	Multifunction control unit- Multifunction control unit	ECU Information		V1.00.001 or higher
E (212)	Multifunction control unit- Multifunction control unit	Read Codes		V1.00.001 or higher

E (212)	Multifunction control unit- Multifunction control unit	Erase Codes		V1.00.001 or higher
E (212)	Multifunction control unit- Multifunction control unit	Live Data		V1.00.001 or higher
E (212)	Multifunction control unit- Multifunction control unit	Active Test		V1.00.001 or higher
E (212)	KG - KEYLESS GO	ECU Information		V1.00.001 or higher
E (212)	KG - KEYLESS GO	Read Codes		V1.00.001 or higher
E (212)	KG - KEYLESS GO	Erase Codes		V1.00.001 or higher
E (212)	KG - KEYLESS GO	Live Data		V1.00.001 or higher
E (212)	KG - KEYLESS GO	Active Test		V1.00.001 or higher
E (212)	HKS-Tailgate control (N121/1)	ECU Information		V1.00.001 or higher
E (212)	HKS-Tailgate control (N121/1)	Read Codes		V1.00.001 or higher
E (212)	HKS-Tailgate control (N121/1)	Erase Codes		V1.00.001 or higher
E (212)	HKS-Tailgate control (N121/1)	Live Data		V1.00.001 or higher
E (212)	HKS-Tailgate control (N121/1)	Active Test		V1.00.001 or higher
E (212)	PSD-Control mudule 'Panoramic sliding roof'	ECU Information		V1.00.001 or higher
E (212)	PSD-Control mudule 'Panoramic sliding roof'	Read Codes		V1.00.001 or higher
E (212)	PSD-Control mudule 'Panoramic sliding roof'	Erase Codes		V1.00.001 or higher
E (212)	PSD-Control mudule 'Panoramic sliding roof'	Live Data		V1.00.001 or higher

E (212)	PSD-Control mudule 'Panoramic sliding roof'	Active Test		V1.00.001 or higher
E (212)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
E (212)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
E (212)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
E (212)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
E (212)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
E (212)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
E (212)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
E (212)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
E (212)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
E (212)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
E (212)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher

E (212)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
E (212)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
E (212)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
E (212)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
E (212)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
E (212)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
E (212)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
E (212)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
E (212)	Trailer recognition module	ECU Information		V1.00.001 or higher
E (212)	Trailer recognition module	Read Codes		V1.00.001 or higher
E (212)	Trailer recognition module	Erase Codes		V1.00.001 or higher
E (212)	Trailer recognition module	Live Data		V1.00.001 or higher
E (212)	Trailer recognition module	Active Test		V1.00.001 or higher
E (212)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher



E (212)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
E (212)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
E (212)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
E (212)	Driver-side SAM - Front signal acquisition and actuation module	Active Test		V1.00.001 or higher
E (212)	Rear SAM - Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
E (212)	Rear SAM - Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
E (212)	Rear SAM - Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
E (212)	Rear SAM - Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
E (212)	Rear SAM - Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
E (212)	SG-SW-L - Left headlamp	ECU Information		V1.00.001 or higher

E (212)	SG-SW-L - Left headlamp	Read Codes		V1.00.001 or higher
E (212)	SG-SW-L - Left headlamp	Erase Codes		V1.00.001 or higher
E (212)	SG-SW-L - Left headlamp	Live Data		V1.00.001 or higher
E (212)	SG-SW-L - Left headlamp	Active Test		V1.00.001 or higher
E (212)	SG-SW-R - Right headlamp	ECU Information		V1.00.001 or higher
E (212)	SG-SW-R - Right headlamp	Read Codes		V1.00.001 or higher
E (212)	SG-SW-R - Right headlamp	Erase Codes		V1.00.001 or higher
E (212)	SG-SW-R - Right headlamp	Live Data		V1.00.001 or higher
E (212)	SG-SW-R - Right headlamp	Active Test		V1.00.001 or higher
E (212)	BMS - Battery management system	ECU Information		V1.00.001 or higher
E (212)	BMS - Battery management system	Read Codes		V1.00.001 or higher
E (212)	BMS - Battery management system	Erase Codes		V1.00.001 or higher
E (212)	BMS - Battery management system	Live Data		V1.00.001 or higher
E (212)	BMS - Battery management system	Active Test		V1.00.001 or higher
E (212)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
E (212)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
E (212)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
E (212)	IC - Instrument cluster	Live Data		V1.00.001 or higher
E (212)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
E (212)	IC - Instrument cluster	Active Test		V1.00.001 or higher
E (212)	ICI-InCar Internet	ECU Information		V1.00.001 or higher

E (212)	ICI-InCar Internet	Read Codes		V1.00.001 or higher
E (212)	ICI-InCar Internet	Erase Codes		V1.00.001 or higher
E (212)	ICI-InCar Internet	Live Data		V1.00.001 or higher
E (212)	AVE-H - Controller unit Rear entertainment system	ECU Information		V1.00.001 or higher
E (212)	AVE-H - Controller unit Rear entertainment system	Read Codes		V1.00.001 or higher
E (212)	AVE-H - Controller unit Rear entertainment system	Erase Codes		V1.00.001 or higher
E (212)	AVE-H - Controller unit Rear entertainment system	Live Data		V1.00.001 or higher
E (212)	AVE-H - Controller unit Rear entertainment system	Active Test		V1.00.001 or higher
E (212)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher
E (212)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Read Codes		V1.00.001 or higher

E (212)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
E (212)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
E (212)	NAV - Navigation module	ECU Information		V1.00.001 or higher
E (212)	NAV - Navigation module	Read Codes		V1.00.001 or higher
E (212)	NAV - Navigation module	Erase Codes		V1.00.001 or higher
E (212)	NAV - Navigation module	Live Data		V1.00.001 or higher
E (212)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
E (212)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher
E (212)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher
E (212)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
E (212)	SOUND - Sound system	ECU Information		V1.00.001 or higher
E (212)	SOUND - Sound system	Read Codes		V1.00.001 or higher
E (212)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
E (212)	SOUND - Sound system	Live Data		V1.00.001 or higher
E (212)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
E (212)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
E (212)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
E (212)	TELE AID-Control unit	Live Data		V1.00.001 or higher
E (212)	TV - TV tuner	ECU Information		V1.00.001 or higher
E (212)	TV - TV tuner	Read Codes		V1.00.001 or higher

E (212)	TV - TV tuner	Erase Codes		V1.00.001 or higher
E (212)	TV - TV tuner	Live Data		V1.00.001 or higher
E (212)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
E (212)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
E (212)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
E (212)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
E (212)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
E (212)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
E (212)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
E (212)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
E (212)	Drive Kit Plus - Drive kit for iPhone	ECU Information		V1.00.001 or higher
E (212)	Drive Kit Plus - Drive kit for iPhone	Read Codes		V1.00.001 or higher
E (212)	Drive Kit Plus - Drive kit for iPhone	Erase Codes		V1.00.001 or higher
E (212)	Drive Kit Plus - Drive kit for iPhone	Live Data		V1.00.001 or higher
E (212)	Head-up display - Head-up display	ECU Information		V1.00.001 or higher
E (212)	Head-up display - Head-up display	Read Codes		V1.00.001 or higher
E (212)	Head-up display - Head-up display	Erase Codes		V1.00.001 or higher
E (212)	Head-up display - Head-up display	Live Data		V1.00.001 or higher

E (212)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
E (212)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
E (212)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
E (212)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
E (212)	MIF - Media interface	ECU Information		V1.00.001 or higher
E (212)	MIF - Media interface	Read Codes		V1.00.001 or higher
E (212)	MIF - Media interface	Erase Codes		V1.00.001 or higher
E (212)	MIF - Media interface	Live Data		V1.00.001 or higher
E (212)	D-FOL - Display in left rear passenger compartment	ECU Information		V1.00.001 or higher
E (212)	D-FOL - Display in left rear passenger compartment	Read Codes		V1.00.001 or higher
E (212)	D-FOL - Display in left rear passenger compartment	Erase Codes		V1.00.001 or higher
E (212)	D-FOL - Display in left rear passenger compartment	Live Data		V1.00.001 or higher
E (212)	D-FOL - Display in left rear passenger compartment	Active Test		V1.00.001 or higher
E (212)	D-FOR - Display in right rear passenger compartment	ECU Information		V1.00.001 or higher
E (212)	D-FOR - Display in right rear passenger compartment	Read Codes		V1.00.001 or higher

E (212)	D-FOR - Display in right rear passenger compartment	Erase Codes		V1.00.001 or higher
E (212)	D-FOR - Display in right rear passenger compartment	Live Data		V1.00.001 or higher
E (212)	D-FOR - Display in right rear passenger compartment	Active Test		V1.00.001 or higher
E (212)	TELE AID- Telematic service Emergency call	ECU Information		V1.00.001 or higher
E (212)	TELE AID- Telematic service Emergency call	Read Codes		V1.00.001 or higher
E (212)	TELE AID- Telematic service Emergency call	Erase Codes		V1.00.001 or higher
E (212)	TELE AID- Telematic service Emergency call	Live Data		V1.00.001 or higher
E (212)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
E (212)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher

E (212)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
E (212)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
E (212)	TELE AID- Telematic services Remote door unlocking	ECU Information		V1.00.001 or higher
E (212)	TELE AID- Telematic services Remote door unlocking	Read Codes		V1.00.001 or higher
E (212)	TELE AID- Telematic services Remote door unlocking	Erase Codes		V1.00.001 or higher
E (212)	TELE AID- Telematic services Remote door unlocking	Live Data		V1.00.001 or higher
E (212)	TELE AID- Telematic service Stolen vehicle tracking	ECU Information		V1.00.001 or higher
E (212)	TELE AID- Telematic service Stolen vehicle tracking	Read Codes		V1.00.001 or higher
E (212)	TELE AID- Telematic service Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
E (212)	TELE AID- Telematic service Stolen vehicle tracking	Live Data		V1.00.001 or higher



E (212)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
E (212)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
E (212)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
E (212)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
E (212)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher
E (212)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
E (212)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
E (212)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
E (212)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
E (212)	CTEL - Mobile phone	ECU Information		V1.00.001 or higher
E (212)	CTEL - Mobile phone	Read Codes		V1.00.001 or higher
E (212)	CTEL - Mobile phone	Erase Codes		V1.00.001 or higher
E (212)	CTEL - Mobile phone	Live Data		V1.00.001 or higher
E (212)	PARK - Parking system	ECU Information		V1.00.001 or higher
E (212)	PARK - Parking system	Read Codes		V1.00.001 or higher
E (212)	PARK - Parking system	Erase Codes		V1.00.001 or higher
E (212)	PARK - Parking system	Live Data		V1.00.001 or higher
E (212)	PARK - Parking system	Active Test		V1.00.001 or higher
E (212)	DSI-DIRECT SELECT interface	ECU Information		V1.00.001 or higher

E (212)	DSI-DIRECT SELECT interface	Read Codes		V1.00.001 or higher
E (212)	DSI-DIRECT SELECT interface	Erase Codes		V1.00.001 or higher
E (212)	DSI-DIRECT SELECT interface	Live Data		V1.00.001 or higher
E (212)	PPAMKS - Pneumatic pump for multicontour seat	ECU Information		V1.00.001 or higher
E (212)	PPAMKS - Pneumatic pump for multicontour seat	Read Codes		V1.00.001 or higher
E (212)	PPAMKS - Pneumatic pump for multicontour seat	Erase Codes		V1.00.001 or higher
E (212)	PPAMKS - Pneumatic pump for multicontour seat	Live Data		V1.00.001 or higher
E (212)	PPAMKS - Pneumatic pump for multicontour seat	Active Test		V1.00.001 or higher
E (212)	AMKS-LF-Active multicontour seat	ECU Information		V1.00.001 or higher
E (212)	AMKS-LF-Active multicontour seat	Read Codes		V1.00.001 or higher
E (212)	AMKS-LF-Active multicontour seat	Erase Codes		V1.00.001 or higher
E (212)	AMKS-LF-Active multicontour seat	Live Data		V1.00.001 or higher
E (212)	AMKS-LF-Active multicontour seat	Active Test		V1.00.001 or higher
E (212)	AMKS-RF-Active multicontour seat	ECU Information		V1.00.001 or higher
E (212)	AMKS-RF-Active multicontour seat	Read Codes		V1.00.001 or higher

E (212)	AMKS-RF-Active multicontour seat	Erase Codes		V1.00.001 or higher
E (212)	AMKS-RF-Active multicontour seat	Live Data		V1.00.001 or higher
E (212)	AMKS-RF-Active multicontour seat	Active Test		V1.00.001 or higher
E (212)	ESA Driver - Electric seat adjustmnet Driver	ECU Information		V1.00.001 or higher
E (212)	ESA Driver - Electric seat adjustmnet Driver	Read Codes		V1.00.001 or higher
E (212)	ESA Driver - Electric seat adjustmnet Driver	Erase Codes		V1.00.001 or higher
E (212)	ESA Driver - Electric seat adjustmnet Driver	Live Data		V1.00.001 or higher
E (212)	ESA Driver - Electric seat adjustmnet Driver	Active Test		V1.00.001 or higher
E (212)	ESA Front passenger - Electric seat adjustment Front passenger	ECU Information		V1.00.001 or higher
E (212)	ESA Front passenger - Electric seat adjustment Front passenger	Read Codes		V1.00.001 or higher
E (212)	ESA Front passenger - Electric seat adjustment Front passenger	Erase Codes		V1.00.001 or higher

E (212)	ESA Front passenger - Electric seat adjustment Front passenger	Live Data		V1.00.001 or higher
E (212)	ESA Front passenger - Electric seat adjustment Front passenger	Active Test		V1.00.001 or higher
E (212)	DCU-LF-Left front door	ECU Information		V1.00.001 or higher
E (212)	DCU-LF-Left front door	Read Codes		V1.00.001 or higher
E (212)	DCU-LF-Left front door	Erase Codes		V1.00.001 or higher
E (212)	DCU-LF-Left front door	Live Data		V1.00.001 or higher
E (212)	DCU-LF-Left front door	Active Test		V1.00.001 or higher
E (212)	DCU-RF-Right front door	ECU Information		V1.00.001 or higher
E (212)	DCU-RF-Right front door	Read Codes		V1.00.001 or higher
E (212)	DCU-RF-Right front door	Erase Codes		V1.00.001 or higher
E (212)	DCU-RF-Right front door	Live Data		V1.00.001 or higher
E (212)	DCU-RF-Right front door	Active Test		V1.00.001 or higher
E (212)	DCU-LR-Left rear door	ECU Information		V1.00.001 or higher
E (212)	DCU-LR-Left rear door	Read Codes		V1.00.001 or higher
E (212)	DCU-LR-Left rear door	Erase Codes		V1.00.001 or higher
E (212)	DCU-LR-Left rear door	Live Data		V1.00.001 or higher
E (212)	DCU-LR-Left rear door	Active Test		V1.00.001 or higher
E (212)	DCU-RR-Right rear door	ECU Information		V1.00.001 or higher
E (212)	DCU-RR-Right rear door	Read Codes		V1.00.001 or higher
E (212)	DCU-RR-Right rear door	Erase Codes		V1.00.001 or higher
E (212)	DCU-RR-Right rear door	Live Data		V1.00.001 or higher

E (212)	DCU-RR-Right rear door	Active Test		V1.00.001 or higher
E (212)	SIH-FOND-Rear passenger compartment seat heater	ECU Information		V1.00.001 or higher
E (212)	SIH-FOND-Rear passenger compartment seat heater	Read Codes		V1.00.001 or higher
E (212)	SIH-FOND-Rear passenger compartment seat heater	Erase Codes		V1.00.001 or higher
E (212)	SIH-FOND-Rear passenger compartment seat heater	Live Data		V1.00.001 or higher
E (212)	SIH-FOND-Rear passenger compartment seat heater	Active Test		V1.00.001 or higher
E (212)	LRH-Steering wheel heater	ECU Information		V1.00.001 or higher
E (212)	LRH-Steering wheel heater	Read Codes		V1.00.001 or higher
E (212)	LRH-Steering wheel heater	Erase Codes		V1.00.001 or higher
E (212)	LRH-Steering wheel heater	Live Data		V1.00.001 or higher
E (212)	AAC-Air conditioning	ECU Information		V1.00.001 or higher
E (212)	AAC-Air conditioning	Read Codes		V1.00.001 or higher
E (212)	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
E (212)	AAC-Air conditioning	Live Data		V1.00.001 or higher
E (212)	AAC-Air conditioning	Active Test		V1.00.001 or higher
E (212)	AAC-Air conditioning	Control unit adaptations	Normalization of actuator motors	V1.00.001 or higher
E (212)	AAC-Air conditioning	Control unit adaptations	Teach-in of actuator motors	V1.00.001 or higher
E (212)	AAC-Air conditioning	Control unit adaptations	Breaking-in of refrigerant compressor	V1.00.001 or higher

E (212)	STH - Stationary heater	ECU Information		V1.00.001 or higher
E (212)	STH - Stationary heater	Read Codes		V1.00.001 or higher
E (212)	STH - Stationary heater	Erase Codes		V1.00.001 or higher
E (212)	STH - Stationary heater	Live Data		V1.00.001 or higher
E (212)	STH - Stationary heater	Active Test		V1.00.001 or higher
E (212)	EKMK-Electric refrigerant compressor	ECU Information		V1.00.001 or higher
E (212)	EKMK-Electric refrigerant compressor	Read Codes		V1.00.001 or higher
E (212)	EKMK-Electric refrigerant compressor	Erase Codes		V1.00.001 or higher
E (212)	EKMK-Electric refrigerant compressor	Live Data		V1.00.001 or higher
E (212)	EKMK-Electric refrigerant compressor	Active Test		V1.00.001 or higher
E (212)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
E (212)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
E (212)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
E (212)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
E (212)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
E (212)	TPM - Tire pressure monitor	Special functions	Write the wheel electronics ID number.	V1.00.001 or higher
E (212)	SGR - Radar sensors control unit	ECU Information		V1.00.001 or higher
E (212)	SGR - Radar sensors control unit	Read Codes		V1.00.001 or higher
E (212)	SGR - Radar sensors control unit	Erase Codes		V1.00.001 or higher

E (212)	SGR - Radar sensors control unit	Live Data		V1.00.001 or higher
E (212)	SGR - Radar sensors control unit	Active Test		V1.00.001 or higher
E (212)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	ECU Information		V1.00.001 or higher
E (212)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Read Codes		V1.00.001 or higher
E (212)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Erase Codes		V1.00.001 or higher
E (212)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Live Data		V1.00.001 or higher
E (212)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Active Test		V1.00.001 or higher
E (212)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
E (212)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
E (212)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
E (212)	IRS-HRA - Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
E (212)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher

E (212)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
E (212)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
E (212)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
E (212)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
E (212)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
E (212)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
E (212)	DTR - DISTRONIC	Live Data		V1.00.001 or higher
E (212)	NSA - Night View Assist	ECU Information		V1.00.001 or higher
E (212)	NSA - Night View Assist	Read Codes		V1.00.001 or higher
E (212)	NSA - Night View Assist	Erase Codes		V1.00.001 or higher
E (212)	NSA - Night View Assist	Live Data		V1.00.001 or higher
E (212)	RFK - Backup camera	ECU Information		V1.00.001 or higher
E (212)	RFK - Backup camera	Read Codes		V1.00.001 or higher
E (212)	RFK - Backup camera	Erase Codes		V1.00.001 or higher
E (212)	RFK - Backup camera	Live Data		V1.00.001 or higher
E (212)	RFK - Backup camera	Active Test		V1.00.001 or higher
E (212)	PARK - Parking system	ECU Information		V1.00.001 or higher
E (212)	PARK - Parking system	Read Codes		V1.00.001 or higher
E (212)	PARK - Parking system	Erase Codes		V1.00.001 or higher
E (212)	PARK - Parking system	Live Data		V1.00.001 or higher
E (212)	PARK - Parking system	Active Test		V1.00.001 or higher



E (211)	ME-SFI-Motor electronics	ECU Information		V1.00.001 or higher
E (211)	ME-SFI-Motor electronics	Read Codes		V1.00.001 or higher
E (211)	ME-SFI-Motor electronics	Erase Codes		V1.00.001 or higher
E (211)	ME-SFI-Motor electronics	Live Data		V1.00.001 or higher
E (211)	ME-SFI-Motor electronics	Active Test		V1.00.001 or higher
E (211)	ME-SFI-Motor electronics	Control unit adaptations	Learning processes	V1.00.001 or higher
E (211)	ME-SFI-Motor electronics	Control unit adaptations	Correction programming	V1.00.001 or higher
E (211)	Transmission	ECU Information		V1.00.001 or higher
E (211)	Transmission	Read Codes		V1.00.001 or higher
E (211)	Transmission	Erase Codes		V1.00.001 or higher
E (211)	Transmission	Live Data		V1.00.001 or higher
E (211)	Transmission	Active Test		V1.00.001 or higher
E (211)	Transmission	Control unit adaptations	Definition	V1.00.001 or higher
E (211)	Transmission	Control unit adaptations	Assignment of the hydraulic shift elements	V1.00.001 or higher
E (211)	Transmission	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
E (211)	Transmission	Control unit adaptations	Important information on the combination possibilities for adaptation end stop values	V1.00.001 or higher
E (211)	Transmission	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
E (211)	Transmission	Control unit adaptations	Performing adaptation	V1.00.001 or higher
E (211)	Transmission	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher

E (211)	Transmission	Special functions	Warranty or goodwill processing	V1.00.001 or higher
E (211)	Transmission	Special functions	Diagnosis routines	V1.00.001 or higher
E (211)	Transmission	Initial startup	Initial start-up with manual settings input for new control module	V1.00.001 or higher
E (211)	DTR-Distronic	ECU Information		V1.00.001 or higher
E (211)	DTR-Distronic	Read Codes		V1.00.001 or higher
E (211)	DTR-Distronic	Erase Codes		V1.00.001 or higher
E (211)	DTR-Distronic	Live Data		V1.00.001 or higher
E (211)	DTR-Distronic	Control unit adaptations	•	V1.00.001 or higher
E (211)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
E (211)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
E (211)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
E (211)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
E (211)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
E (211)	ESM-Electronic selector module	Control unit adaptations	Operational check	V1.00.001 or higher
E (211)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
E (211)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
E (211)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
E (211)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
E (211)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
E (211)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
E (211)	SBC-Sensotronic Brake Control	ECU Information		V1.00.001 or higher
E (211)	SBC-Sensotronic Brake Control	Read Codes		V1.00.001 or higher

E (211)	SBC-Sensotronic Brake Control	Erase Codes		V1.00.001 or higher
E (211)	SBC-Sensotronic Brake Control	Live Data		V1.00.001 or higher
E (211)	SBC-Sensotronic Brake Control	Special functions	•	V1.00.001 or higher
E (211)	TPC-Tire pressure monitor	ECU Information		V1.00.001 or higher
E (211)	TPC-Tire pressure monitor	Read Codes		V1.00.001 or higher
E (211)	TPC-Tire pressure monitor	Erase Codes		V1.00.001 or higher
E (211)	TPC-Tire pressure monitor	Live Data		V1.00.001 or higher
E (211)	TPC-Tire pressure monitor	Active Test		V1.00.001 or higher
E (211)	TPC-Tire pressure monitor	Control unit adaptations	•	V1.00.001 or higher
E (211)	Suspension	ECU Information		V1.00.001 or higher
E (211)	Suspension	Read Codes		V1.00.001 or higher
E (211)	Suspension	Erase Codes		V1.00.001 or higher
E (211)	Suspension	Live Data		V1.00.001 or higher
E (211)	Suspension	Active Test		V1.00.001 or higher
E (211)	Suspension	Special functions	Initial start-up	V1.00.001 or higher
E (211)	Suspension	Special functions	Pneumatic tests	V1.00.001 or higher
E (211)	AB-Airbag	ECU Information		V1.00.001 or higher
E (211)	AB-Airbag	Read Codes		V1.00.001 or higher
E (211)	AB-Airbag	Erase Codes		V1.00.001 or higher
E (211)	AB-Airbag	Live Data		V1.00.001 or higher
E (211)	CGW-Central gateway	ECU Information		V1.00.001 or higher
E (211)	CGW-Central gateway	Read Codes		V1.00.001 or higher
E (211)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
E (211)	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher

E (211)	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher
E (211)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
E (211)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
E (211)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
E (211)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
E (211)	EZS-Electronic ignition switch	Active Test		V1.00.001 or higher
E (211)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher
E (211)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher
E (211)	EZS-Electronic ignition switch	Control unit adaptations	Program the replacement keys.	V1.00.001 or higher
E (211)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N73 (Electronic Ignition Switch (EIS/EZS) control module)'. .	V1.00.001 or higher
E (211)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N26/5 (Electric steering lock control module)'. .	V1.00.001 or higher
E (211)	EZS-Electronic ignition switch	Control unit adaptations	Key assignment or key track assignment to a memory block number	V1.00.001 or higher
E (211)	EZS-Electronic ignition switch	Control unit adaptations	Writing of the VIN	V1.00.001 or higher
E (211)	EZS-Electronic ignition switch	Control unit adaptations	Telematic service 'Remote door unlocking' (TELE AID)	V1.00.001 or higher

E (211)	EZS-Electronic ignition switch	Initial startup	Initial start-up of the control module 'Electronic Ignition Switch (EIS/EZS)'	V1.00.001 or higher
E (211)	EZS-Electronic ignition switch	Initial startup	Initial start-up of the control module 'ESL'	V1.00.001 or higher
E (211)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
E (211)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
E (211)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
E (211)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
E (211)	WSS-Weight sensing system	Control unit adaptations	•	V1.00.001 or higher
E (211)	WSS-Weight sensing system	Initial startup	Initial start-up	V1.00.001 or higher
E (211)	BCM-Battery control module	ECU Information		V1.00.001 or higher
E (211)	BCM-Battery control module	Read Codes		V1.00.001 or higher
E (211)	BCM-Battery control module	Erase Codes		V1.00.001 or higher
E (211)	BCM-Battery control module	Live Data		V1.00.001 or higher
E (211)	BCM-Battery control module	Active Test		V1.00.001 or higher
E (211)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
E (211)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
E (211)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
E (211)	Dr-side SAM- Driver signal acquisition and actuation module	ECU Information		V1.00.001 or higher
E (211)	Dr-side SAM- Driver signal acquisition and actuation module	Read Codes		V1.00.001 or higher

E (211)	Dr-side SAM- Driver signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
E (211)	Dr-side SAM- Driver signal acquisition and actuation module	Live Data		V1.00.001 or higher
E (211)	Dr-side SAM- Driver signal acquisition and actuation module	Active Test		V1.00.001 or higher
E (211)	Pass-side SAM- Passenger-side signal acquisition and actuation module	ECU Information		V1.00.001 or higher
E (211)	Pass-side SAM- Passenger-side signal acquisition and actuation module	Read Codes		V1.00.001 or higher
E (211)	Pass-side SAM- Passenger-side signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
E (211)	Pass-side SAM- Passenger-side signal acquisition and actuation module	Live Data		V1.00.001 or higher
E (211)	Pass-side SAM- Passenger-side signal acquisition and actuation module	Active Test		V1.00.001 or higher

E (211)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
E (211)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
E (211)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
E (211)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
E (211)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
E (211)	AHE-Trailer recognition	ECU Information		V1.00.001 or higher
E (211)	AHE-Trailer recognition	Read Codes		V1.00.001 or higher
E (211)	AHE-Trailer recognition	Erase Codes		V1.00.001 or higher
E (211)	AHE-Trailer recognition	Live Data		V1.00.001 or higher
E (211)	AHE-Trailer recognition	Active Test		V1.00.001 or higher
E (211)	MSS-Special vehicle multifunction control module	ECU Information		V1.00.001 or higher
E (211)	MSS-Special vehicle multifunction control module	Read Codes		V1.00.001 or higher
E (211)	MSS-Special vehicle multifunction control module	Erase Codes		V1.00.001 or higher

E (211)	MSS-Special vehicle multifunction control module	Live Data		V1.00.001 or higher
E (211)	MSS-Special vehicle multifunction control module	Active Test		V1.00.001 or higher
E (211)	MSS-Special vehicle multifunction control module	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
E (211)	LCP-Lower control panel	ECU Information		V1.00.001 or higher
E (211)	LCP-Lower control panel	Read Codes		V1.00.001 or higher
E (211)	LCP-Lower control panel	Erase Codes		V1.00.001 or higher
E (211)	LCP-Lower control panel	Live Data		V1.00.001 or higher
E (211)	LCP-Lower control panel	Active Test		V1.00.001 or higher
E (211)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
E (211)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
E (211)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
E (211)	UCP-Upper control panel	Live Data		V1.00.001 or higher
E (211)	UCP-Upper control panel	Active Test		V1.00.001 or higher
E (211)	UCP-Upper control panel	Initial startup	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
E (211)	UCP-Upper control panel	Initial startup	Initial start-up with manual settings input for new control module(For example: The previous control module cannot be read any longer.)	V1.00.001 or higher



E (211)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
E (211)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
E (211)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
E (211)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
E (211)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
E (211)	OCP-Overhead control panel	Control unit adaptations	Rain/Light Sensor	V1.00.001 or higher
E (211)	OCP-Overhead control panel	Control unit adaptations	SR/SHD (Tilting/Sliding Sunroof)	V1.00.001 or higher
E (211)	OCP-Overhead control panel	Control unit adaptations	Adaptation of the light sensor amplification factor	V1.00.001 or higher
E (211)	OCP-Overhead control panel	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
E (211)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
E (211)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
E (211)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
E (211)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
E (211)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher

E (211)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
E (211)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
E (211)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
E (211)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
E (211)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
E (211)	HRA-Automatic headlamp range adjustment and headlamp control	ECU Information		V1.00.001 or higher
E (211)	HRA-Automatic headlamp range adjustment and headlamp control	Read Codes		V1.00.001 or higher
E (211)	HRA-Automatic headlamp range adjustment and headlamp control	Erase Codes		V1.00.001 or higher
E (211)	HRA-Automatic headlamp range adjustment and headlamp control	Live Data		V1.00.001 or higher

E (211)	HRA-Automatic headlamp range adjustment and headlamp control	Active Test		V1.00.001 or higher
E (211)	HRA-Automatic headlamp range adjustment and headlamp control	Control unit adaptations	Zero position adjustment of axle or level sensors	V1.00.001 or higher
E (211)	On board electrical system(voltage supply)	ECU Information		V1.00.001 or higher
E (211)	On board electrical system(voltage supply)	Read Codes		V1.00.001 or higher
E (211)	On board electrical system(voltage supply)	Erase Codes		V1.00.001 or higher
E (211)	On board electrical system(voltage supply)	Live Data		V1.00.001 or higher
E (211)	IC-Instrument cluster	ECU Information		V1.00.001 or higher
E (211)	IC-Instrument cluster	Read Codes		V1.00.001 or higher
E (211)	IC-Instrument cluster	Erase Codes		V1.00.001 or higher
E (211)	IC-Instrument cluster	Live Data		V1.00.001 or higher
E (211)	IC-Instrument cluster	Active Test		V1.00.001 or higher
E (211)	IC-Instrument cluster	Control unit adaptations	Setting the main odometer forward and back	V1.00.001 or higher
E (211)	IC-Instrument cluster	Control unit adaptations	Setting days since initial registration	V1.00.001 or higher
E (211)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
E (211)	PTS-Parktronic system	Read Codes		V1.00.001 or higher

E (211)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
E (211)	PTS-Parktronic system	Live Data		V1.00.001 or higher
E (211)	PTS-Parktronic system	Active Test		V1.00.001 or higher
E (211)	SCM-Steering column module	ECU Information		V1.00.001 or higher
E (211)	SCM-Steering column module	Read Codes		V1.00.001 or higher
E (211)	SCM-Steering column module	Erase Codes		V1.00.001 or higher
E (211)	SCM-Steering column module	Live Data		V1.00.001 or higher
E (211)	SCM-Steering column module	Active Test		V1.00.001 or higher
E (211)	SCM-Steering column module	Initial startup	•	V1.00.001 or higher
E (211)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
E (211)	ASSYST-Active Service System	Read Codes		V1.00.001 or higher
E (211)	ASSYST-Active Service System	Erase Codes		V1.00.001 or higher
E (211)	ASSYST-Active Service System	Live Data		V1.00.001 or higher
E (211)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
E (211)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
E (211)	ASSYST PLUS-PLUS Active Service System	Read Codes		V1.00.001 or higher
E (211)	ASSYST PLUS-PLUS Active Service System	Erase Codes		V1.00.001 or higher
E (211)	ASSYST PLUS-PLUS Active Service System	Live Data		V1.00.001 or higher
E (211)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
E (211)	ASSYST PLUS-PLUS Active Service System	Control unit adaptations	Current brake lining thickness	V1.00.001 or higher

E (211)	ASSYST PLUS-PLUS Active Service System	Control unit adaptations	Internal ASSYST Plus data	V1.00.001 or higher
E (211)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher
E (211)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher
E (211)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
E (211)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher
E (211)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher
E (211)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Special functions	Read the coding and change as necessary.	V1.00.001 or higher

E (211)	CTEL-Control unit Telecommunicatio n for telematics services	ECU Information		V1.00.001 or higher
E (211)	CTEL-Control unit Telecommunicatio n for telematics services	Read Codes		V1.00.001 or higher
E (211)	CTEL-Control unit Telecommunicatio n for telematics services	Erase Codes		V1.00.001 or higher
E (211)	CTEL-Control unit Telecommunicatio n for telematics services	Live Data		V1.00.001 or higher
E (211)	COMAND or AUDIO	ECU Information		V1.00.001 or higher
E (211)	COMAND or AUDIO	Read Codes		V1.00.001 or higher
E (211)	COMAND or AUDIO	Erase Codes		V1.00.001 or higher
E (211)	COMAND or AUDIO	Live Data		V1.00.001 or higher
E (211)	COMAND or AUDIO	Active Test		V1.00.001 or higher
E (211)	COMAND or AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
E (211)	NAVI-Navigation system	ECU Information		V1.00.001 or higher
E (211)	NAVI-Navigation system	Read Codes		V1.00.001 or higher
E (211)	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
E (211)	NAVI-Navigation system	Live Data		V1.00.001 or higher
E (211)	NAVI-Navigation system	Active Test		V1.00.001 or higher
E (211)	CDC-CD changer	ECU Information		V1.00.001 or higher
E (211)	CDC-CD changer	Read Codes		V1.00.001 or higher

E (211)	CDC-CD changer	Erase Codes		V1.00.001 or higher
E (211)	CDC-CD changer	Live Data		V1.00.001 or higher
E (211)	CDC-CD changer	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
E (211)	VCS-Voice control system	ECU Information		V1.00.001 or higher
E (211)	VCS-Voice control system	Read Codes		V1.00.001 or higher
E (211)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
E (211)	VCS-Voice control system	Active Test		V1.00.001 or higher
E (211)	TV-TV tuner	ECU Information		V1.00.001 or higher
E (211)	TV-TV tuner	Read Codes		V1.00.001 or higher
E (211)	TV-TV tuner	Erase Codes		V1.00.001 or higher
E (211)	TV-TV tuner	Live Data		V1.00.001 or higher
E (211)	TV-TV tuner	Active Test		V1.00.001 or higher
E (211)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
E (211)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
E (211)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
E (211)	SDAR-Satellite radio	Live Data		V1.00.001 or higher
E (211)	Control unit TELE AID	ECU Information		V1.00.001 or higher
E (211)	Control unit TELE AID	Read Codes		V1.00.001 or higher
E (211)	Control unit TELE AID	Erase Codes		V1.00.001 or higher
E (211)	Control unit TELE AID	Live Data		V1.00.001 or higher
E (211)	TELE AID-Telematic services Emergency call	ECU Information		V1.00.001 or higher
E (211)	TELE AID-Telematic services Emergency call	Read Codes		V1.00.001 or higher

E (211)	TELE AID- Telematic services Emergency call	Erase Codes		V1.00.001 or higher
E (211)	TELE AID- Telematic services Emergency call	Live Data		V1.00.001 or higher
E (211)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
E (211)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
E (211)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
E (211)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
E (211)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher
E (211)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
E (211)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher



E (211)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher
E (211)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher
E (211)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
E (211)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
E (211)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher
E (211)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	ECU Information		V1.00.001 or higher
E (211)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Read Codes		V1.00.001 or higher
E (211)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Erase Codes		V1.00.001 or higher
E (211)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Live Data		V1.00.001 or higher

E (211)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Active Test		V1.00.001 or higher
E (211)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Parameterize the Easy Entry/Exit.	V1.00.001 or higher
E (211)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
E (211)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher
E (211)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher
E (211)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
E (211)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
E (211)	ESA passenger- Electric seat adjustment passenger	ECU Information		V1.00.001 or higher
E (211)	ESA passenger- Electric seat adjustment passenger	Read Codes		V1.00.001 or higher
E (211)	ESA passenger- Electric seat adjustment passenger	Erase Codes		V1.00.001 or higher

E (211)	ESA passenger- Electric seat adjustment passenger	Live Data		V1.00.001 or higher
E (211)	ESA passenger- Electric seat adjustment passenger	Active Test		V1.00.001 or higher
E (211)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
E (211)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher
E (211)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher
E (211)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
E (211)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
E (211)	DS-LF-Left front dynamic seat	ECU Information		V1.00.001 or higher
E (211)	DS-LF-Left front dynamic seat	Read Codes		V1.00.001 or higher
E (211)	DS-LF-Left front dynamic seat	Erase Codes		V1.00.001 or higher
E (211)	DS-LF-Left front dynamic seat	Live Data		V1.00.001 or higher
E (211)	DS-LF-Left front dynamic seat	Active Test		V1.00.001 or higher
E (211)	DS-LF-Left front dynamic seat	Control unit adaptations	Air cushion calibration	V1.00.001 or higher
E (211)	DS-RF-Right front dynamic seat	ECU Information		V1.00.001 or higher
E (211)	DS-RF-Right front dynamic seat	Read Codes		V1.00.001 or higher
E (211)	DS-RF-Right front dynamic seat	Erase Codes		V1.00.001 or higher
E (211)	DS-RF-Right front dynamic seat	Live Data		V1.00.001 or higher

E (211)	DS-RF-Right front dynamic seat	Active Test		V1.00.001 or higher
E (211)	DS-RF-Right front dynamic seat	Control unit adaptations	Air cushion calibration	V1.00.001 or higher
E (211)	DSP-Pneumatic pump for dynamic seat	ECU Information		V1.00.001 or higher
E (211)	DSP-Pneumatic pump for dynamic seat	Read Codes		V1.00.001 or higher
E (211)	DSP-Pneumatic pump for dynamic seat	Erase Codes		V1.00.001 or higher
E (211)	DSP-Pneumatic pump for dynamic seat	Live Data		V1.00.001 or higher
E (211)	DSP-Pneumatic pump for dynamic seat	Active Test		V1.00.001 or higher
E (211)	HS-Seat heater	ECU Information		V1.00.001 or higher
E (211)	HS-Seat heater	Read Codes		V1.00.001 or higher
E (211)	HS-Seat heater	Erase Codes		V1.00.001 or higher
E (211)	HS-Seat heater	Live Data		V1.00.001 or higher
E (211)	HS-Seat heater	Active Test		V1.00.001 or higher
E (211)	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
E (211)	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher
E (211)	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher
E (211)	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher
E (211)	DCM-FL-Door control module front left	Active Test		V1.00.001 or higher
E (211)	DCM-FL-Door control module front left	Control unit adaptations	Short stroke parameter "	V1.00.001 or higher

E (211)	DCM-FL-Door control module front left	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
E (211)	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
E (211)	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher
E (211)	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
E (211)	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
E (211)	DCM-FR-Door control module front right	Active Test		V1.00.001 or higher
E (211)	DCM-FR-Door control module front right	Control unit adaptations	Short stroke parameter "	V1.00.001 or higher
E (211)	DCM-FR-Door control module front right	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
E (211)	DCM-RL-Door control module rear left	ECU Information		V1.00.001 or higher
E (211)	DCM-RL-Door control module rear left	Read Codes		V1.00.001 or higher
E (211)	DCM-RL-Door control module rear left	Erase Codes		V1.00.001 or higher
E (211)	DCM-RL-Door control module rear left	Live Data		V1.00.001 or higher
E (211)	DCM-RL-Door control module rear left	Active Test		V1.00.001 or higher
E (211)	DCM-RL-Door control module rear left	Control unit adaptations	Short stroke parameter "	V1.00.001 or higher
E (211)	DCM-RL-Door control module rear left	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
E (211)	DCM-RR-Door control module rear right	ECU Information		V1.00.001 or higher

E (211)	DCM-RR-Door control module rear right	Read Codes		V1.00.001 or higher
E (211)	DCM-RR-Door control module rear right	Erase Codes		V1.00.001 or higher
E (211)	DCM-RR-Door control module rear right	Live Data		V1.00.001 or higher
E (211)	DCM-RR-Door control module rear right	Active Test		V1.00.001 or higher
E (211)	DCM-RR-Door control module rear right	Control unit adaptations	Short stroke parameter "	V1.00.001 or higher
E (211)	DCM-RR-Door control module rear right	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
E (211)	TLC-Trunk lid control	ECU Information		V1.00.001 or higher
E (211)	TLC-Trunk lid control	Read Codes		V1.00.001 or higher
E (211)	TLC-Trunk lid control	Erase Codes		V1.00.001 or higher
E (211)	TLC-Trunk lid control	Live Data		V1.00.001 or higher
E (211)	TLC-Trunk lid control	Active Test		V1.00.001 or higher
E (211)	LAE [LAA]-Loading floor automatically extendable	ECU Information		V1.00.001 or higher
E (211)	LAE [LAA]-Loading floor automatically extendable	Read Codes		V1.00.001 or higher
E (211)	LAE [LAA]-Loading floor automatically extendable	Erase Codes		V1.00.001 or higher
E (211)	LAE [LAA]-Loading floor automatically extendable	Live Data		V1.00.001 or higher
E (211)	LAE [LAA]-Loading floor automatically extendable	Active Test		V1.00.001 or higher

E (211)	RWT-Rear-end door control module	ECU Information		V1.00.001 or higher
E (211)	RWT-Rear-end door control module	Read Codes		V1.00.001 or higher
E (211)	RWT-Rear-end door control module	Erase Codes		V1.00.001 or higher
E (211)	RWT-Rear-end door control module	Live Data		V1.00.001 or higher
E (211)	RWT-Rear-end door control module	Active Test		V1.00.001 or higher
E (211)	RWT-Rear-end door control module	Control unit adaptations	Rear wiper	V1.00.001 or higher
E (211)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
E (211)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
E (211)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
E (211)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
E (211)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
E (211)	AAC-Automatic air conditioning	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
E (211)	AAC-Automatic air conditioning	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
E (211)	AAC-Automatic air conditioning	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
E (211)	HSW-Heated steering wheel	ECU Information		V1.00.001 or higher
E (211)	HSW-Heated steering wheel	Read Codes		V1.00.001 or higher
E (211)	HSW-Heated steering wheel	Erase Codes		V1.00.001 or higher
E (211)	HSW-Heated steering wheel	Live Data		V1.00.001 or higher

E (211)	HSW-Heated steering wheel	Active Test		V1.00.001 or higher
E (211)	HSW-Heated steering wheel	Control unit adaptations	Read the coding and change as necessary.	V1.00.001 or higher
E (211)	HSW-Heated steering wheel	Initial startup	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
E (211)	HSW-Heated steering wheel	Initial startup	Initial start-up with manual settings input for new control module(For example: The previous control module cannot be read any longer.)	V1.00.001 or higher
E (211)	STH-Stationary heater	ECU Information		V1.00.001 or higher
E (211)	STH-Stationary heater	Read Codes		V1.00.001 or higher
E (211)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
E (211)	STH-Stationary heater	Live Data		V1.00.001 or higher
E (211)	STH-Stationary heater	Active Test		V1.00.001 or higher
E (211)	STH-Stationary heater	Control unit adaptations	Learning component 'A8/3 (Stationary Heater (STH) radio remote control transmitter)'	V1.00.001 or higher
E (211)	ME 9.7-Motor electronics 9.7	ECU Information		V1.00.001 or higher
E (211)	ME 9.7-Motor electronics 9.7	Read Codes		V1.00.001 or higher
E (211)	ME 9.7-Motor electronics 9.7	Erase Codes		V1.00.001 or higher
E (211)	ME 9.7-Motor electronics 9.7	Live Data		V1.00.001 or higher



E (211)	ME 9.7-Motor electronics 9.7	Active Test		V1.00.001 or higher
E (211)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Learning processes	V1.00.001 or higher
E (211)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Correction programming	V1.00.001 or higher
E (211)	ME 9.7-Motor electronics 9.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
E (211)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
E (211)	ME 9.7-Motor electronics 9.7	Special functions	Variant coding	V1.00.001 or higher
E (211)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
E (211)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
E (211)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
E (211)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
E (211)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
E (211)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
E (211)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
E (211)	ME2-SFI-Motor electronics 2	Special functions	Fault path tests are carried out.	V1.00.001 or higher
E (211)	CDI 3-Common Rail Diesel Injection3	ECU Information		V1.00.001 or higher
E (211)	CDI 3-Common Rail Diesel Injection3	Read Codes		V1.00.001 or higher
E (211)	CDI 3-Common Rail Diesel Injection3	Erase Codes		V1.00.001 or higher
E (211)	CDI 3-Common Rail Diesel Injection3	Live Data		V1.00.001 or higher
E (211)	CDI 3-Common Rail Diesel Injection3	Active Test		V1.00.001 or higher
E (211)	CDID-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher

E (211)	CDID-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
E (211)	CDID-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
E (211)	CDID-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
E (211)	CDID-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
E (211)	CDID-Common Rail Diesel Injection	Control unit adaptations	Replace the component 'Diesel Particulate Filter'.	V1.00.001 or higher
E (211)	CDID-Common Rail Diesel Injection	Control unit adaptations	Reprogram diesel particulate filter in control unit N3/9 (Common-rail Diesel Injection (CDI) control module).	V1.00.001 or higher
E (211)	CDID-Common Rail Diesel Injection	Control unit adaptations	Learning processes	V1.00.001 or higher
E (211)	CDID-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF)	V1.00.001 or higher
E (211)	CDID-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
E (211)	CDID-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
E (211)	CDID-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
E (211)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher

E (211)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
E (211)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
E (211)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher
E (211)	ETC-Electronic transmission control	Active Test		V1.00.001 or higher
E (211)	ETC-Electronic transmission control	Control unit adaptations	Definition	V1.00.001 or higher
E (211)	ETC-Electronic transmission control	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
E (211)	ETC-Electronic transmission control	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
E (211)	ETC-Electronic transmission control	Control unit adaptations	Performing adaptation	V1.00.001 or higher
E (211)	ETC-Electronic transmission control	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
E (211)	ETC-Electronic transmission control	Special functions	Warranty or goodwill processing	V1.00.001 or higher
E (211)	ETC-Electronic transmission control	Special functions	Diagnosis routines	V1.00.001 or higher
E (211)	ETC-Electronic transmission control	Special functions	Initial start-up	V1.00.001 or higher
E (211)	ABR-Adaptive Brake	ECU Information		V1.00.001 or higher
E (211)	ABR-Adaptive Brake	Read Codes		V1.00.001 or higher
E (211)	ABR-Adaptive Brake	Erase Codes		V1.00.001 or higher
E (211)	ABR-Adaptive Brake	Live Data		V1.00.001 or higher
E (211)	ABR-Adaptive Brake	Active Test		V1.00.001 or higher

E (211)	ABR-Adaptive Brake	Control unit adaptations	Road test	V1.00.001 or higher
E (211)	ABR-Adaptive Brake	Control unit adaptations	Tire pressure loss warner(Activating)	V1.00.001 or higher
E (211)	ABR-Adaptive Brake	Control unit adaptations	Speed-sensitive Power Steering (SPS/PML)	V1.00.001 or higher
E (211)	XALWA-L-Xenon headlamp, left	ECU Information		V1.00.001 or higher
E (211)	XALWA-L-Xenon headlamp, left	Read Codes		V1.00.001 or higher
E (211)	XALWA-L-Xenon headlamp, left	Erase Codes		V1.00.001 or higher
E (211)	XALWA-L-Xenon headlamp, left	Live Data		V1.00.001 or higher
E (211)	XALWA-L-Xenon headlamp, left	Active Test		V1.00.001 or higher
E (211)	XALWA-L-Xenon headlamp, left	Control unit adaptations	Zero position adjustment	V1.00.001 or higher
E (211)	XALWA-L-Xenon headlamp, left	Control unit adaptations	Tourist mode(Symmetrical light distribution)	V1.00.001 or higher
E (211)	XALWA-L-Xenon headlamp, left	Control unit adaptations	EP: Reset the operating hours counter.	V1.00.001 or higher
E (211)	XALWA-R-Xenon headlamp, right	ECU Information		V1.00.001 or higher
E (211)	XALWA-R-Xenon headlamp, right	Read Codes		V1.00.001 or higher
E (211)	XALWA-R-Xenon headlamp, right	Erase Codes		V1.00.001 or higher
E (211)	XALWA-R-Xenon headlamp, right	Live Data		V1.00.001 or higher
E (211)	XALWA-R-Xenon headlamp, right	Active Test		V1.00.001 or higher
E (211)	XALWA-R-Xenon headlamp, right	Control unit adaptations	Tourist mode(Symmetrical light distribution)	V1.00.001 or higher
E (211)	XALWA-R-Xenon headlamp, right	Control unit adaptations	EP: Reset the operating hours counter.	V1.00.001 or higher
E (211)	PTS-Parktronic system	ECU Information		V1.00.001 or higher

E (211)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
E (211)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
E (211)	PTS-Parktronic system	Live Data		V1.00.001 or higher
E (211)	PTS-Parktronic system	Active Test		V1.00.001 or higher
E (211)	AUDIO	ECU Information		V1.00.001 or higher
E (211)	AUDIO	Read Codes		V1.00.001 or higher
E (211)	AUDIO	Erase Codes		V1.00.001 or higher
E (211)	AUDIO	Live Data		V1.00.001 or higher
E (211)	AUDIO	Active Test		V1.00.001 or higher
E (211)	AUDIO	Control unit adaptations	Changing the language version(Linguatronic)	V1.00.001 or higher
E (211)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher
E (211)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
E (211)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher
E (211)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher
E (211)	Sound system (Main amplifier)	Active Test		V1.00.001 or higher
E (211)	UCI-Media interface	ECU Information		V1.00.001 or higher
E (211)	UCI-Media interface	Read Codes		V1.00.001 or higher
E (211)	UCI-Media interface	Erase Codes		V1.00.001 or higher
E (211)	DAB-Digital radio	ECU Information		V1.00.001 or higher
E (211)	DAB-Digital radio	Read Codes		V1.00.001 or higher
E (211)	DAB-Digital radio	Erase Codes		V1.00.001 or higher
E (211)	DAB-Digital radio	Live Data		V1.00.001 or higher

E (211)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
E (211)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
E (211)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
E (211)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
E (211)	SDAR-Satellite radio(Valid for USA)	Active Test		V1.00.001 or higher
E (211)	TV-TV tuner	ECU Information		V1.00.001 or higher
E (211)	TV-TV tuner	Read Codes		V1.00.001 or higher
E (211)	TV-TV tuner	Erase Codes		V1.00.001 or higher
E (211)	TV-TV tuner	Live Data		V1.00.001 or higher
E (211)	CTEL-Cellular telephone(JAPAN)	ECU Information		V1.00.001 or higher
E (211)	CTEL-Cellular telephone(JAPAN)	Read Codes		V1.00.001 or higher
E (211)	CTEL-Cellular telephone(JAPAN)	Erase Codes		V1.00.001 or higher
E (211)	CTEL-Cellular telephone(JAPAN)	Live Data		V1.00.001 or higher
E (211)	CTEL-Cellular telephone(JAPAN)	Active Test		V1.00.001 or higher
E (211)	CDI-V-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
E (211)	CDI-V-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
E (211)	CDI-V-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher

E (211)	CDI-V-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
E (211)	CDI-V-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
E (211)	CDI-V-Common Rail Diesel Injection	Control unit adaptations	Extension of run-on time	V1.00.001 or higher
E (211)	CDI-V-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
E (211)	TLC-Trunk lid control	ECU Information		V1.00.001 or higher
E (211)	TLC-Trunk lid control	Read Codes		V1.00.001 or higher
E (211)	TLC-Trunk lid control	Erase Codes		V1.00.001 or higher
E (211)	TLC-Trunk lid control	Live Data		V1.00.001 or higher
E (211)	TLC-Trunk lid control	Active Test		V1.00.001 or higher
E (211)	TLC-Trunk lid control	Control unit adaptations	Voltage threshold value for vehicle power supply Emergency mode	V1.00.001 or higher
E (211)	TLC-Trunk lid control	Control unit adaptations	Intermediate position " Tailgate	V1.00.001 or higher
E (211)	CDI-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
E (211)	CDI-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
E (211)	CDI-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
E (211)	CDI-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
E (211)	CDI-Common Rail Diesel Injection	Active Test		V1.00.001 or higher

E (211)	CDI 5-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Learning of the throttle valve stop	V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Drive Authorization System (DAS/FBS)	V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Purge control Diesel Particulate Filter	V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Replace the component 'Diesel Particulate Filter'.	V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher



E (211)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Replace the component 'Y74 (Pressure control valve)'.	V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Teaching in the ECM after replacement of an exhaust-relevant component	V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Prevention of regeneration	V1.00.001 or higher
E (211)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Rapid teach-in of zero quantity calibration values	V1.00.001 or higher
E (211)	TLC-Trunk lid control	ECU Information		V1.00.001 or higher
E (211)	TLC-Trunk lid control	Read Codes		V1.00.001 or higher
E (211)	TLC-Trunk lid control	Erase Codes		V1.00.001 or higher
E (211)	TLC-Trunk lid control	Live Data		V1.00.001 or higher
E (211)	TLC-Trunk lid control	Active Test		V1.00.001 or higher
E (211)	ME-SFI-Motor electronics	ECU Information		V1.00.001 or higher
E (211)	ME-SFI-Motor electronics	Read Codes		V1.00.001 or higher

E (211)	ME-SFI-Motor electronics	Erase Codes		V1.00.001 or higher
E (211)	ME-SFI-Motor electronics	Live Data		V1.00.001 or higher
E (211)	ME-SFI-Motor electronics	Active Test		V1.00.001 or higher
E (211)	ME-SFI-Motor electronics	Control unit adaptations	Learning processes	V1.00.001 or higher
E (211)	ME-SFI-Motor electronics	Control unit adaptations	Correction programming	V1.00.001 or higher
E (211)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	ECU Information		V1.00.001 or higher
E (211)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Read Codes		V1.00.001 or higher
E (211)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Erase Codes		V1.00.001 or higher
E (211)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Live Data		V1.00.001 or higher
E (211)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Active Test		V1.00.001 or higher
E (211)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Control unit adaptations	Learning processes	V1.00.001 or higher
E (211)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Control unit adaptations	Correction programming	V1.00.001 or higher
E (211)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
E (211)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher

E (211)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Special functions	Variant coding	V1.00.001 or higher
E (211)	FSCU Right- Control unit 'Right fuel pump'	ECU Information		V1.00.001 or higher
E (211)	FSCU Right- Control unit 'Right fuel pump'	Read Codes		V1.00.001 or higher
E (211)	FSCU Right- Control unit 'Right fuel pump'	Erase Codes		V1.00.001 or higher
E (211)	FSCU Left-Control unit 'Left fuel pump'	ECU Information		V1.00.001 or higher
E (211)	FSCU Left-Control unit 'Left fuel pump'	Read Codes		V1.00.001 or higher
E (211)	FSCU Left-Control unit 'Left fuel pump'	Erase Codes		V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	Control unit adaptations	Correction programming	V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	Control unit adaptations	Self-adaptation	V1.00.001 or higher
E (210)	Transmission	ECU Information		V1.00.001 or higher
E (210)	Transmission	Read Codes		V1.00.001 or higher
E (210)	Transmission	Erase Codes		V1.00.001 or higher
E (210)	Transmission	Live Data		V1.00.001 or higher
E (210)	Transmission	Active Test		V1.00.001 or higher
E (210)	Transmission	Control unit adaptations	•	V1.00.001 or higher

E (210)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
E (210)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
E (210)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
E (210)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
E (210)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
E (210)	Traction systems ABS,ASR,ETS,ESP	ECU Information		V1.00.001 or higher
E (210)	Traction systems ABS,ASR,ETS,ESP	Read Codes		V1.00.001 or higher
E (210)	Traction systems ABS,ASR,ETS,ESP	Erase Codes		V1.00.001 or higher
E (210)	Traction systems ABS,ASR,ETS,ESP	Live Data		V1.00.001 or higher
E (210)	Traction systems ABS,ASR,ETS,ESP	Active Test		V1.00.001 or higher
E (210)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
E (210)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
E (210)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
E (210)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
E (210)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
E (210)	TPM - Tire pressure monitor	Control unit adaptations	•	V1.00.001 or higher
E (210)	TPM - Tire pressure monitor	Initial startup	•	V1.00.001 or higher
E (210)	BAS-Brake assist	ECU Information		V1.00.001 or higher
E (210)	BAS-Brake assist	Read Codes		V1.00.001 or higher
E (210)	BAS-Brake assist	Erase Codes		V1.00.001 or higher
E (210)	BAS-Brake assist	Live Data		V1.00.001 or higher
E (210)	BAS-Brake assist	Active Test		V1.00.001 or higher
E (210)	SPS-Speed-sensitive power steering	ECU Information		V1.00.001 or higher

E (210)	SPS-Speed-sensitive power steering	Read Codes		V1.00.001 or higher
E (210)	SPS-Speed-sensitive power steering	Erase Codes		V1.00.001 or higher
E (210)	SPS-Speed-sensitive power steering	Live Data		V1.00.001 or higher
E (210)	AB-Airbag	ECU Information		V1.00.001 or higher
E (210)	AB-Airbag	Read Codes		V1.00.001 or higher
E (210)	AB-Airbag	Erase Codes		V1.00.001 or higher
E (210)	AB-Airbag	Live Data		V1.00.001 or higher
E (210)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
E (210)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
E (210)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
E (210)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
E (210)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
E (210)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
E (210)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
E (210)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
E (210)	LCP-Lower control panel	ECU Information		V1.00.001 or higher
E (210)	LCP-Lower control panel	Read Codes		V1.00.001 or higher
E (210)	LCP-Lower control panel	Erase Codes		V1.00.001 or higher
E (210)	LCP-Lower control panel	Live Data		V1.00.001 or higher
E (210)	PSE-Pneumatic system equipment	ECU Information		V1.00.001 or higher
E (210)	PSE-Pneumatic system equipment	Read Codes		V1.00.001 or higher

E (210)	PSE-Pneumatic system equipment	Erase Codes		V1.00.001 or higher
E (210)	PSE-Pneumatic system equipment	Live Data		V1.00.001 or higher
E (210)	SAM-Signal acquisition and actuation module	ECU Information		V1.00.001 or higher
E (210)	SAM-Signal acquisition and actuation module	Read Codes		V1.00.001 or higher
E (210)	SAM-Signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
E (210)	SAM-Signal acquisition and actuation module	Live Data		V1.00.001 or higher
E (210)	MSS-Special vehicle multifunction control module	ECU Information		V1.00.001 or higher
E (210)	MSS-Special vehicle multifunction control module	Read Codes		V1.00.001 or higher
E (210)	MSS-Special vehicle multifunction control module	Erase Codes		V1.00.001 or higher
E (210)	MSS-Special vehicle multifunction control module	Live Data		V1.00.001 or higher
E (210)	HRA-Headlamp range adjustment	ECU Information		V1.00.001 or higher
E (210)	HRA-Headlamp range adjustment	Read Codes		V1.00.001 or higher
E (210)	HRA-Headlamp range adjustment	Erase Codes		V1.00.001 or higher

E (210)	HRA-Headlamp range adjustment	Live Data		V1.00.001 or higher
E (210)	APS-Auto pilot system	ECU Information		V1.00.001 or higher
E (210)	APS-Auto pilot system	Read Codes		V1.00.001 or higher
E (210)	APS-Auto pilot system	Erase Codes		V1.00.001 or higher
E (210)	APS-Auto pilot system	Live Data		V1.00.001 or higher
E (210)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
E (210)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
E (210)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
E (210)	ICM-Instrument cluster with maintenance interval display	Live Data		V1.00.001 or higher
E (210)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
E (210)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
E (210)	D2B-COMAND, MCS or AUDIO	ECU Information		V1.00.001 or higher
E (210)	D2B-COMAND, MCS or AUDIO	Read Codes		V1.00.001 or higher
E (210)	D2B-COMAND, MCS or AUDIO	Erase Codes		V1.00.001 or higher
E (210)	D2B-COMAND, MCS or AUDIO	Live Data		V1.00.001 or higher
E (210)	D2B-COMAND, MCS or AUDIO	Active Test		V1.00.001 or higher

E (210)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	ECU Information		V1.00.001 or higher
E (210)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Read Codes		V1.00.001 or higher
E (210)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Erase Codes		V1.00.001 or higher
E (210)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Live Data		V1.00.001 or higher
E (210)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Active Test		V1.00.001 or higher
E (210)	VCS-Voice control system	ECU Information		V1.00.001 or higher
E (210)	VCS-Voice control system	Read Codes		V1.00.001 or higher
E (210)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
E (210)	CDC-CD changer	ECU Information		V1.00.001 or higher
E (210)	CDC-CD changer	Read Codes		V1.00.001 or higher
E (210)	CDC-CD changer	Erase Codes		V1.00.001 or higher
E (210)	ICS-Information and communication system	ECU Information		V1.00.001 or higher
E (210)	ICS-Information and communication system	Read Codes		V1.00.001 or higher



E (210)	ICS-Information and communication system	Erase Codes		V1.00.001 or higher
E (210)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
E (210)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
E (210)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
E (210)	PTS-Parktronic system	Live Data		V1.00.001 or higher
E (210)	PTS-Parktronic system	Active Test		V1.00.001 or higher
E (210)	TV-TV tuner	ECU Information		V1.00.001 or higher
E (210)	TV-TV tuner	Read Codes		V1.00.001 or higher
E (210)	TV-TV tuner	Erase Codes		V1.00.001 or higher
E (210)	TV-TV tuner	Live Data		V1.00.001 or higher
E (210)	TV-TV tuner	Active Test		V1.00.001 or higher
E (210)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	ECU Information		V1.00.001 or higher
E (210)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Read Codes		V1.00.001 or higher
E (210)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Erase Codes		V1.00.001 or higher
E (210)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Live Data		V1.00.001 or higher
E (210)	DN-Dynamic navigation by means of CTEL	ECU Information		V1.00.001 or higher

E (210)	DN-Dynamic navigation by means of CTEL	Read Codes		V1.00.001 or higher
E (210)	DN-Dynamic navigation by means of CTEL	Erase Codes		V1.00.001 or higher
E (210)	DN-Dynamic navigation by means of CTEL	Live Data		V1.00.001 or higher
E (210)	DCM1-Door control module front driver side	ECU Information		V1.00.001 or higher
E (210)	DCM1-Door control module front driver side	Read Codes		V1.00.001 or higher
E (210)	DCM1-Door control module front driver side	Erase Codes		V1.00.001 or higher
E (210)	DCM1-Door control module front driver side	Live Data		V1.00.001 or higher
E (210)	DCM2-Door control module front passenger side	ECU Information		V1.00.001 or higher
E (210)	DCM2-Door control module front passenger side	Read Codes		V1.00.001 or higher
E (210)	DCM2-Door control module front passenger side	Erase Codes		V1.00.001 or higher
E (210)	DCM2-Door control module front passenger side	Live Data		V1.00.001 or higher
E (210)	DCM3-Door control module rear driver side	ECU Information		V1.00.001 or higher
E (210)	DCM3-Door control module rear driver side	Read Codes		V1.00.001 or higher
E (210)	DCM3-Door control module rear driver side	Erase Codes		V1.00.001 or higher

E (210)	DCM3-Door control module rear driver side	Live Data		V1.00.001 or higher
E (210)	DCM4-Door control module rear passenger side	ECU Information		V1.00.001 or higher
E (210)	DCM4-Door control module rear passenger side	Read Codes		V1.00.001 or higher
E (210)	DCM4-Door control module rear passenger side	Erase Codes		V1.00.001 or higher
E (210)	DCM4-Door control module rear passenger side	Live Data		V1.00.001 or higher
E (210)	ESA-FL-Electric seat adjustment front left	ECU Information		V1.00.001 or higher
E (210)	ESA-FL-Electric seat adjustment front left	Read Codes		V1.00.001 or higher
E (210)	ESA-FL-Electric seat adjustment front left	Erase Codes		V1.00.001 or higher
E (210)	ESA-FL-Electric seat adjustment front left	Live Data		V1.00.001 or higher
E (210)	ESA-FR-Electric seat adjustment front right	ECU Information		V1.00.001 or higher
E (210)	ESA-FR-Electric seat adjustment front right	Read Codes		V1.00.001 or higher
E (210)	ESA-FR-Electric seat adjustment front right	Erase Codes		V1.00.001 or higher
E (210)	ESA-FR-Electric seat adjustment front right	Live Data		V1.00.001 or higher
E (210)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
E (210)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher

E (210)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
E (210)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
E (210)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
E (210)	AAC-Automatic air conditioning	Special functions	Version coding	V1.00.001 or higher
E (210)	STH-Stationary heater	ECU Information		V1.00.001 or higher
E (210)	STH-Stationary heater	Read Codes		V1.00.001 or higher
E (210)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
E (210)	STH-Stationary heater	Live Data		V1.00.001 or higher
E (210)	STH-Stationary heater	Active Test		V1.00.001 or higher
E (210)	STH-Stationary heater	Control unit adaptations	CO2 setting	V1.00.001 or higher
E (210)	ME-SFI-Motor electronics	ECU Information		V1.00.001 or higher
E (210)	ME-SFI-Motor electronics	Read Codes		V1.00.001 or higher
E (210)	ME-SFI-Motor electronics	Erase Codes		V1.00.001 or higher
E (210)	ME-SFI-Motor electronics	Live Data		V1.00.001 or higher
E (210)	ME-SFI-Motor electronics	Active Test		V1.00.001 or higher
E (210)	ME-SFI-Motor electronics	Control unit adaptations	Learning processes	V1.00.001 or higher
E (210)	ME-SFI-Motor electronics	Control unit adaptations	Correction programming	V1.00.001 or higher
E (210)	VP-Vacuum pump brake booster	ECU Information		V1.00.001 or higher
E (210)	VP-Vacuum pump brake booster	Read Codes		V1.00.001 or higher
E (210)	VP-Vacuum pump brake booster	Erase Codes		V1.00.001 or higher
E (210)	VP-Vacuum pump brake booster	Live Data		V1.00.001 or higher

E (210)	VP-Vacuum pump brake booster	Active Test		V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
E (210)	ME2-SFI-Motor electronics 2	Special functions	Fault path tests are carried out.	V1.00.001 or higher
E (210)	CDI-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
E (210)	CDI-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
E (210)	CDI-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
E (210)	STH-Stationary heater	ECU Information		V1.00.001 or higher
E (210)	STH-Stationary heater	Read Codes		V1.00.001 or higher
E (210)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
E (210)	CDI-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
E (210)	CDI-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
E (210)	CDI-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
E (210)	CDI-Common Rail Diesel Injection	Live Data		V1.00.001 or higher

E (210)	CDI-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
E (207)	ME - Motor electronics	ECU Information		V1.00.001 or higher
E (207)	ME - Motor electronics	Read Codes		V1.00.001 or higher
E (207)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
E (207)	ME - Motor electronics	Live Data		V1.00.001 or higher
E (207)	ME - Motor electronics	Active Test		V1.00.001 or higher
E (207)	ME - Motor electronics	Special functions	Variant coding	V1.00.001 or higher
E (207)	CDI-Motor electronics	ECU Information		V1.00.001 or higher
E (207)	CDI-Motor electronics	Read Codes		V1.00.001 or higher
E (207)	CDI-Motor electronics	Erase Codes		V1.00.001 or higher
E (207)	CDI-Motor electronics	Live Data		V1.00.001 or higher
E (207)	CDI-Motor electronics	Active Test		V1.00.001 or higher
E (207)	VGS - Transmission control	ECU Information		V1.00.001 or higher
E (207)	VGS - Transmission control	Read Codes		V1.00.001 or higher
E (207)	VGS - Transmission control	Erase Codes		V1.00.001 or higher
E (207)	VGS - Transmission control	Live Data		V1.00.001 or higher
E (207)	VGS - Transmission control	Active Test		V1.00.001 or higher
E (207)	VGS - Transmission control	Special functions	Standard-Fehlercode/Standard-Fehlercode/Standard-Fehlercode	V1.00.001 or higher
E (207)	VGS - Transmission control	Special functions	Standard-Fehlercode	V1.00.001 or higher

E (207)	VGS - Transmission control	Special functions	Communication with the alarm siren is not possible during the diagnosis session.	V1.00.001 or higher
E (207)	VGS - Transmission control	Special functions	Precautionary measures when working on high- voltage on-board electrical systems	V1.00.001 or higher
E (207)	ISM-Shift module	ECU Information		V1.00.001 or higher
E (207)	ISM-Shift module	Read Codes		V1.00.001 or higher
E (207)	ISM-Shift module	Erase Codes		V1.00.001 or higher
E (207)	ISM-Shift module	Live Data		V1.00.001 or higher
E (207)	ISM-Shift module	Active Test		V1.00.001 or higher
E (207)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
E (207)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
E (207)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
E (207)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
E (207)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
E (207)	ESM[EWM] - Electronic selector module	ECU Information		V1.00.001 or higher
E (207)	ESM[EWM] - Electronic selector module	Read Codes		V1.00.001 or higher
E (207)	ESM[EWM] - Electronic selector module	Erase Codes		V1.00.001 or higher
E (207)	ESM[EWM] - Electronic selector module	Live Data		V1.00.001 or higher
E (207)	ESM[EWM] - Electronic selector module	Active Test		V1.00.001 or higher

E (207)	SCR - Selective catalytic reduction	ECU Information		V1.00.001 or higher
E (207)	SCR - Selective catalytic reduction	Read Codes		V1.00.001 or higher
E (207)	SCR - Selective catalytic reduction	Erase Codes		V1.00.001 or higher
E (207)	SCR - Selective catalytic reduction	Live Data		V1.00.001 or higher
E (207)	SCR - Selective catalytic reduction	Active Test		V1.00.001 or higher
E (207)	ESP - Electric stability program	ECU Information		V1.00.001 or higher
E (207)	ESP - Electric stability program	Read Codes		V1.00.001 or higher
E (207)	ESP - Electric stability program	Erase Codes		V1.00.001 or higher
E (207)	ESP - Electric stability program	Live Data		V1.00.001 or higher
E (207)	ESP - Electric stability program	Active Test		V1.00.001 or higher
E (207)	AMG DRVU-AMG DRIVE UNIT	ECU Information		V1.00.001 or higher
E (207)	AMG DRVU-AMG DRIVE UNIT	Read Codes		V1.00.001 or higher
E (207)	AMG DRVU-AMG DRIVE UNIT	Erase Codes		V1.00.001 or higher
E (207)	AMG DRVU-AMG DRIVE UNIT	Live Data		V1.00.001 or higher
E (207)	AMG DRVU-AMG DRIVE UNIT	Active Test		V1.00.001 or higher
E (207)	ADS - Adaptive damping system	ECU Information		V1.00.001 or higher
E (207)	ADS - Adaptive damping system	Read Codes		V1.00.001 or higher
E (207)	ADS - Adaptive damping system	Erase Codes		V1.00.001 or higher
E (207)	ADS - Adaptive damping system	Live Data		V1.00.001 or higher
E (207)	ADS - Adaptive damping system	Active Test		V1.00.001 or higher
E (207)	ES - Electric power steering	ECU Information		V1.00.001 or higher



E (207)	ES - Electric power steering	Read Codes		V1.00.001 or higher
E (207)	ES - Electric power steering	Erase Codes		V1.00.001 or higher
E (207)	ES - Electric power steering	Live Data		V1.00.001 or higher
E (207)	FWGW-Chassis gateway	ECU Information		V1.00.001 or higher
E (207)	FWGW-Chassis gateway	Read Codes		V1.00.001 or higher
E (207)	FWGW-Chassis gateway	Erase Codes		V1.00.001 or higher
E (207)	FWGW-Chassis gateway	Live Data		V1.00.001 or higher
E (207)	SRS - Supplemental restraint system	ECU Information		V1.00.001 or higher
E (207)	SRS - Supplemental restraint system	Read Codes		V1.00.001 or higher
E (207)	SRS - Supplemental restraint system	Erase Codes		V1.00.001 or higher
E (207)	SRS - Supplemental restraint system	Live Data		V1.00.001 or higher
E (207)	CGW-Central gateway	ECU Information		V1.00.001 or higher
E (207)	CGW-Central gateway	Read Codes		V1.00.001 or higher
E (207)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
E (207)	CGW-Central gateway	Live Data		V1.00.001 or higher
E (207)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher
E (207)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
E (207)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
E (207)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
E (207)	SCM - Steering column module	ECU Information		V1.00.001 or higher
E (207)	SCM - Steering column module	Read Codes		V1.00.001 or higher
E (207)	SCM - Steering column module	Erase Codes		V1.00.001 or higher

E (207)	SCM - Steering column module	Live Data		V1.00.001 or higher
E (207)	SCM - Steering column module	Active Test		V1.00.001 or higher
E (207)	Multifunction control unit- Multifunction control unit	ECU Information		V1.00.001 or higher
E (207)	Multifunction control unit- Multifunction control unit	Read Codes		V1.00.001 or higher
E (207)	Multifunction control unit- Multifunction control unit	Erase Codes		V1.00.001 or higher
E (207)	Multifunction control unit- Multifunction control unit	Live Data		V1.00.001 or higher
E (207)	Multifunction control unit- Multifunction control unit	Active Test		V1.00.001 or higher
E (207)	KG - KEYLESS GO	ECU Information		V1.00.001 or higher
E (207)	KG - KEYLESS GO	Read Codes		V1.00.001 or higher
E (207)	KG - KEYLESS GO	Erase Codes		V1.00.001 or higher
E (207)	KG - KEYLESS GO	Live Data		V1.00.001 or higher
E (207)	KG - KEYLESS GO	Active Test		V1.00.001 or higher
E (207)	HKS-Tailgate control (N121/1)	ECU Information		V1.00.001 or higher
E (207)	HKS-Tailgate control (N121/1)	Read Codes		V1.00.001 or higher
E (207)	HKS-Tailgate control (N121/1)	Erase Codes		V1.00.001 or higher
E (207)	HKS-Tailgate control (N121/1)	Live Data		V1.00.001 or higher
E (207)	HKS-Tailgate control (N121/1)	Active Test		V1.00.001 or higher
E (207)	PSD-Control mudule 'Panoramic sliding roof'	ECU Information		V1.00.001 or higher

E (207)	PSD-Control mudule 'Panoramic sliding roof'	Read Codes		V1.00.001 or higher
E (207)	PSD-Control mudule 'Panoramic sliding roof'	Erase Codes		V1.00.001 or higher
E (207)	PSD-Control mudule 'Panoramic sliding roof'	Live Data		V1.00.001 or higher
E (207)	PSD-Control mudule 'Panoramic sliding roof'	Active Test		V1.00.001 or higher
E (207)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
E (207)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
E (207)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
E (207)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
E (207)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
E (207)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
E (207)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
E (207)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher

E (207)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
E (207)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
E (207)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
E (207)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
E (207)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
E (207)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
E (207)	Trailer recognition module	ECU Information		V1.00.001 or higher
E (207)	Trailer recognition module	Read Codes		V1.00.001 or higher
E (207)	Trailer recognition module	Erase Codes		V1.00.001 or higher
E (207)	Trailer recognition module	Live Data		V1.00.001 or higher
E (207)	Trailer recognition module	Active Test		V1.00.001 or higher
E (207)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher

E (207)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
E (207)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
E (207)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
E (207)	Driver-side SAM - Front signal acquisition and actuation module	Active Test		V1.00.001 or higher
E (207)	Rear SAM - Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
E (207)	Rear SAM - Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
E (207)	Rear SAM - Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
E (207)	Rear SAM - Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
E (207)	Rear SAM - Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
E (207)	AIRSCARF-AIRSCARF system	ECU Information		V1.00.001 or higher

E (207)	AIRSCARF- AIRSCARF system	Read Codes		V1.00.001 or higher
E (207)	AIRSCARF- AIRSCARF system	Erase Codes		V1.00.001 or higher
E (207)	AIRSCARF- AIRSCARF system	Live Data		V1.00.001 or higher
E (207)	AIRSCARF- AIRSCARF system	Active Test		V1.00.001 or higher
E (207)	SG-SW-L - Left headlamp	ECU Information		V1.00.001 or higher
E (207)	SG-SW-L - Left headlamp	Read Codes		V1.00.001 or higher
E (207)	SG-SW-L - Left headlamp	Erase Codes		V1.00.001 or higher
E (207)	SG-SW-L - Left headlamp	Live Data		V1.00.001 or higher
E (207)	SG-SW-L - Left headlamp	Active Test		V1.00.001 or higher
E (207)	SG-SW-R - Right headlamp	ECU Information		V1.00.001 or higher
E (207)	SG-SW-R - Right headlamp	Read Codes		V1.00.001 or higher
E (207)	SG-SW-R - Right headlamp	Erase Codes		V1.00.001 or higher
E (207)	SG-SW-R - Right headlamp	Live Data		V1.00.001 or higher
E (207)	SG-SW-R - Right headlamp	Active Test		V1.00.001 or higher
E (207)	BMS-Battery management system	ECU Information		V1.00.001 or higher
E (207)	BMS-Battery management system	Read Codes		V1.00.001 or higher
E (207)	BMS-Battery management system	Erase Codes		V1.00.001 or higher
E (207)	BMS-Battery management system	Live Data		V1.00.001 or higher
E (207)	BMS-Battery management system	Active Test		V1.00.001 or higher

E (207)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
E (207)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
E (207)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
E (207)	IC - Instrument cluster	Live Data		V1.00.001 or higher
E (207)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
E (207)	IC - Instrument cluster	Active Test		V1.00.001 or higher
E (207)	ICI-InCar Internet	ECU Information		V1.00.001 or higher
E (207)	ICI-InCar Internet	Read Codes		V1.00.001 or higher
E (207)	ICI-InCar Internet	Erase Codes		V1.00.001 or higher
E (207)	ICI-InCar Internet	Live Data		V1.00.001 or higher
E (207)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher
E (207)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Read Codes		V1.00.001 or higher
E (207)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
E (207)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
E (207)	NAV - Navigation module	ECU Information		V1.00.001 or higher
E (207)	NAV - Navigation module	Read Codes		V1.00.001 or higher

E (207)	NAV - Navigation module	Erase Codes		V1.00.001 or higher
E (207)	NAV - Navigation module	Live Data		V1.00.001 or higher
E (207)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
E (207)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher
E (207)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher
E (207)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
E (207)	SOUND - Sound system	ECU Information		V1.00.001 or higher
E (207)	SOUND - Sound system	Read Codes		V1.00.001 or higher
E (207)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
E (207)	SOUND - Sound system	Live Data		V1.00.001 or higher
E (207)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
E (207)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
E (207)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
E (207)	TELE AID-Control unit	Live Data		V1.00.001 or higher
E (207)	TV - TV tuner	ECU Information		V1.00.001 or higher
E (207)	TV - TV tuner	Read Codes		V1.00.001 or higher
E (207)	TV - TV tuner	Erase Codes		V1.00.001 or higher
E (207)	TV - TV tuner	Live Data		V1.00.001 or higher
E (207)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
E (207)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
E (207)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
E (207)	MFK - Multifunction camera	Live Data		V1.00.001 or higher



E (207)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
E (207)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
E (207)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
E (207)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
E (207)	Drive Kit Plus - Drive kit for iPhone	ECU Information		V1.00.001 or higher
E (207)	Drive Kit Plus - Drive kit for iPhone	Read Codes		V1.00.001 or higher
E (207)	Drive Kit Plus - Drive kit for iPhone	Erase Codes		V1.00.001 or higher
E (207)	Drive Kit Plus - Drive kit for iPhone	Live Data		V1.00.001 or higher
E (207)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
E (207)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
E (207)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
E (207)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
E (207)	MIF - Media interface	ECU Information		V1.00.001 or higher
E (207)	MIF - Media interface	Read Codes		V1.00.001 or higher
E (207)	MIF - Media interface	Erase Codes		V1.00.001 or higher
E (207)	MIF - Media interface	Live Data		V1.00.001 or higher
E (207)	D-FOL - Display in left rear passenger compartment	ECU Information		V1.00.001 or higher

E (207)	D-FOL - Display in left rear passenger compartment	Read Codes		V1.00.001 or higher
E (207)	D-FOL - Display in left rear passenger compartment	Erase Codes		V1.00.001 or higher
E (207)	D-FOL - Display in left rear passenger compartment	Live Data		V1.00.001 or higher
E (207)	D-FOL - Display in left rear passenger compartment	Active Test		V1.00.001 or higher
E (207)	D-FOL - Display in left rear passenger compartment	ECU Information		V1.00.001 or higher
E (207)	D-FOL - Display in left rear passenger compartment	Read Codes		V1.00.001 or higher
E (207)	D-FOL - Display in left rear passenger compartment	Erase Codes		V1.00.001 or higher
E (207)	D-FOL - Display in left rear passenger compartment	Live Data		V1.00.001 or higher
E (207)	D-FOR - Display in right rear passenger compartment	ECU Information		V1.00.001 or higher
E (207)	D-FOR - Display in right rear passenger compartment	Read Codes		V1.00.001 or higher
E (207)	D-FOR - Display in right rear passenger compartment	Erase Codes		V1.00.001 or higher
E (207)	D-FOR - Display in right rear passenger compartment	Live Data		V1.00.001 or higher

E (207)	D-FOR - Display in right rear passenger compartment	Active Test		V1.00.001 or higher
E (207)	TELE AID- Telematic service Emergency call	ECU Information		V1.00.001 or higher
E (207)	TELE AID- Telematic service Emergency call	Read Codes		V1.00.001 or higher
E (207)	TELE AID- Telematic service Emergency call	Erase Codes		V1.00.001 or higher
E (207)	TELE AID- Telematic service Emergency call	Live Data		V1.00.001 or higher
E (207)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
E (207)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
E (207)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
E (207)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher

E (207)	TELE AID- Telematic services Remote door unlocking	ECU Information		V1.00.001 or higher
E (207)	TELE AID- Telematic services Remote door unlocking	Read Codes		V1.00.001 or higher
E (207)	TELE AID- Telematic services Remote door unlocking	Erase Codes		V1.00.001 or higher
E (207)	TELE AID- Telematic services Remote door unlocking	Live Data		V1.00.001 or higher
E (207)	SG-FOND-Rear control unit	ECU Information		V1.00.001 or higher
E (207)	SG-FOND-Rear control unit	Read Codes		V1.00.001 or higher
E (207)	SG-FOND-Rear control unit	Erase Codes		V1.00.001 or higher
E (207)	SG-FOND-Rear control unit	Live Data		V1.00.001 or higher
E (207)	SG-FOND-Rear control unit	Active Test		V1.00.001 or higher
E (207)	TELE AID- Telematic service Stolen vehicle tracking	ECU Information		V1.00.001 or higher
E (207)	TELE AID- Telematic service Stolen vehicle tracking	Read Codes		V1.00.001 or higher
E (207)	TELE AID- Telematic service Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
E (207)	TELE AID- Telematic service Stolen vehicle tracking	Live Data		V1.00.001 or higher
E (207)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
E (207)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher

E (207)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
E (207)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
E (207)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher
E (207)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
E (207)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
E (207)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
E (207)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
E (207)	AVE-H - DVD player	ECU Information		V1.00.001 or higher
E (207)	AVE-H - DVD player	Read Codes		V1.00.001 or higher
E (207)	AVE-H - DVD player	Erase Codes		V1.00.001 or higher
E (207)	AVE-H - DVD player	Live Data		V1.00.001 or higher
E (207)	AVE-H - DVD player	Active Test		V1.00.001 or higher
E (207)	CTEL - Mobile phone	ECU Information		V1.00.001 or higher
E (207)	CTEL - Mobile phone	Read Codes		V1.00.001 or higher
E (207)	CTEL - Mobile phone	Erase Codes		V1.00.001 or higher
E (207)	CTEL - Mobile phone	Live Data		V1.00.001 or higher
E (207)	PARK - Parking system	ECU Information		V1.00.001 or higher
E (207)	PARK - Parking system	Read Codes		V1.00.001 or higher
E (207)	PARK - Parking system	Erase Codes		V1.00.001 or higher
E (207)	PARK - Parking system	Live Data		V1.00.001 or higher

E (207)	PARK - Parking system	Active Test		V1.00.001 or higher
E (207)	DSI-DIRECT SELECT interface	ECU Information		V1.00.001 or higher
E (207)	DSI-DIRECT SELECT interface	Read Codes		V1.00.001 or higher
E (207)	DSI-DIRECT SELECT interface	Erase Codes		V1.00.001 or higher
E (207)	DSI-DIRECT SELECT interface	Live Data		V1.00.001 or higher
E (207)	ESA Driver - Electric seat adjustmnet Driver	ECU Information		V1.00.001 or higher
E (207)	ESA Driver - Electric seat adjustmnet Driver	Read Codes		V1.00.001 or higher
E (207)	ESA Driver - Electric seat adjustmnet Driver	Erase Codes		V1.00.001 or higher
E (207)	ESA Driver - Electric seat adjustmnet Driver	Live Data		V1.00.001 or higher
E (207)	ESA Driver - Electric seat adjustmnet Driver	Active Test		V1.00.001 or higher
E (207)	ESA Front passenger - Electric seat adjustment Front passenger	ECU Information		V1.00.001 or higher
E (207)	ESA Front passenger - Electric seat adjustment Front passenger	Read Codes		V1.00.001 or higher
E (207)	ESA Front passenger - Electric seat adjustment Front passenger	Erase Codes		V1.00.001 or higher

E (207)	ESA Front passenger - Electric seat adjustment Front passenger	Live Data		V1.00.001 or higher
E (207)	ESA Front passenger - Electric seat adjustment Front passenger	Active Test		V1.00.001 or higher
E (207)	DCU-LF-Left front door	ECU Information		V1.00.001 or higher
E (207)	DCU-LF-Left front door	Read Codes		V1.00.001 or higher
E (207)	DCU-LF-Left front door	Erase Codes		V1.00.001 or higher
E (207)	DCU-LF-Left front door	Live Data		V1.00.001 or higher
E (207)	DCU-LF-Left front door	Active Test		V1.00.001 or higher
E (207)	DCU-RF-Right front door	ECU Information		V1.00.001 or higher
E (207)	DCU-RF-Right front door	Read Codes		V1.00.001 or higher
E (207)	DCU-RF-Right front door	Erase Codes		V1.00.001 or higher
E (207)	DCU-RF-Right front door	Live Data		V1.00.001 or higher
E (207)	DCU-RF-Right front door	Active Test		V1.00.001 or higher
E (207)	SIH-FOND-Rear passenger compartment seat heater	ECU Information		V1.00.001 or higher
E (207)	SIH-FOND-Rear passenger compartment seat heater	Read Codes		V1.00.001 or higher
E (207)	SIH-FOND-Rear passenger compartment seat heater	Erase Codes		V1.00.001 or higher
E (207)	SIH-FOND-Rear passenger compartment seat heater	Live Data		V1.00.001 or higher

E (207)	SIH-FOND-Rear passenger compartment seat heater	Active Test		V1.00.001 or higher
E (207)	AAC-Air conditioning	ECU Information		V1.00.001 or higher
E (207)	AAC-Air conditioning	Read Codes		V1.00.001 or higher
E (207)	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
E (207)	AAC-Air conditioning	Live Data		V1.00.001 or higher
E (207)	AAC-Air conditioning	Active Test		V1.00.001 or higher
E (207)	AAC-Air conditioning	Control unit adaptations	Normalization of actuator motors	V1.00.001 or higher
E (207)	AAC-Air conditioning	Control unit adaptations	Teach-in of actuator motors	V1.00.001 or higher
E (207)	AAC-Air conditioning	Control unit adaptations	Breaking-in of refrigerant compressor	V1.00.001 or higher
E (207)	STH - Stationary heater	ECU Information		V1.00.001 or higher
E (207)	STH - Stationary heater	Read Codes		V1.00.001 or higher
E (207)	STH - Stationary heater	Erase Codes		V1.00.001 or higher
E (207)	STH - Stationary heater	Live Data		V1.00.001 or higher
E (207)	STH - Stationary heater	Active Test		V1.00.001 or higher
E (207)	EKMK-Electric refrigerant compressor	ECU Information		V1.00.001 or higher
E (207)	EKMK-Electric refrigerant compressor	Read Codes		V1.00.001 or higher
E (207)	EKMK-Electric refrigerant compressor	Erase Codes		V1.00.001 or higher
E (207)	EKMK-Electric refrigerant compressor	Live Data		V1.00.001 or higher
E (207)	EKMK-Electric refrigerant compressor	Active Test		V1.00.001 or higher



E (207)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
E (207)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
E (207)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
E (207)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
E (207)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
E (207)	TPM - Tire pressure monitor	Special functions	Write the wheel electronics ID number.	V1.00.001 or higher
E (207)	SGR - Radar sensors control unit	ECU Information		V1.00.001 or higher
E (207)	SGR - Radar sensors control unit	Read Codes		V1.00.001 or higher
E (207)	SGR - Radar sensors control unit	Erase Codes		V1.00.001 or higher
E (207)	SGR - Radar sensors control unit	Live Data		V1.00.001 or higher
E (207)	SGR - Radar sensors control unit	Active Test		V1.00.001 or higher
E (207)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	ECU Information		V1.00.001 or higher
E (207)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Read Codes		V1.00.001 or higher
E (207)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Erase Codes		V1.00.001 or higher
E (207)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Live Data		V1.00.001 or higher
E (207)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Active Test		V1.00.001 or higher

E (207)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
E (207)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
E (207)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
E (207)	IRS-HRA - Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
E (207)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
E (207)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
E (207)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
E (207)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
E (207)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
E (207)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
E (207)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
E (207)	DTR - DISTRONIC	Live Data		V1.00.001 or higher
E (207)	NSA-Night View Assist	ECU Information		V1.00.001 or higher
E (207)	NSA-Night View Assist	Read Codes		V1.00.001 or higher
E (207)	NSA-Night View Assist	Erase Codes		V1.00.001 or higher
E (207)	NSA-Night View Assist	Live Data		V1.00.001 or higher

E (207)	RFK - Backup camera	ECU Information		V1.00.001 or higher
E (207)	RFK - Backup camera	Read Codes		V1.00.001 or higher
E (207)	RFK - Backup camera	Erase Codes		V1.00.001 or higher
E (207)	RFK - Backup camera	Live Data		V1.00.001 or higher
E (207)	RFK - Backup camera	Active Test		V1.00.001 or higher
E (207)	PARK - Parking system	ECU Information		V1.00.001 or higher
E (207)	PARK - Parking system	Read Codes		V1.00.001 or higher
E (207)	PARK - Parking system	Erase Codes		V1.00.001 or higher
E (207)	PARK - Parking system	Live Data		V1.00.001 or higher
E (207)	PARK - Parking system	Active Test		V1.00.001 or higher
S (222)	ME - Motor electronics	ECU Information		V1.00.001 or higher
S (222)	ME - Motor electronics	Read Codes		V1.00.001 or higher
S (222)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
S (222)	ME - Motor electronics	Live Data		V1.00.001 or higher
S (222)	ME - Motor electronics	Active Test		V1.00.001 or higher
S (222)	CDI-Motor electronics	ECU Information		V1.00.001 or higher
S (222)	CDI-Motor electronics	Read Codes		V1.00.001 or higher
S (222)	CDI-Motor electronics	Erase Codes		V1.00.001 or higher
S (222)	CDI-Motor electronics	Live Data		V1.00.001 or higher
S (222)	CDI-Motor electronics	Active Test		V1.00.001 or higher
S (222)	VGS - Transmission control	ECU Information		V1.00.001 or higher
S (222)	VGS - Transmission control	Read Codes		V1.00.001 or higher

S (222)	VGS - Transmission control	Erase Codes		V1.00.001 or higher
S (222)	VGS - Transmission control	Live Data		V1.00.001 or higher
S (222)	VGS - Transmission control	Active Test		V1.00.001 or higher
S (222)	ISM - Shift module	ECU Information		V1.00.001 or higher
S (222)	ISM - Shift module	Read Codes		V1.00.001 or higher
S (222)	ISM - Shift module	Erase Codes		V1.00.001 or higher
S (222)	ISM - Shift module	Live Data		V1.00.001 or higher
S (222)	FSCU08 - Control unit Fuel pump	ECU Information		V1.00.001 or higher
S (222)	FSCU08 - Control unit Fuel pump	Read Codes		V1.00.001 or higher
S (222)	FSCU08 - Control unit Fuel pump	Erase Codes		V1.00.001 or higher
S (222)	FSCU08 - Control unit Fuel pump	Live Data		V1.00.001 or higher
S (222)	SCR - Selective catalytic reduction	ECU Information		V1.00.001 or higher
S (222)	SCR - Selective catalytic reduction	Read Codes		V1.00.001 or higher
S (222)	SCR - Selective catalytic reduction	Erase Codes		V1.00.001 or higher
S (222)	SCR - Selective catalytic reduction	Live Data		V1.00.001 or higher
S (222)	PTCU - Control unit powertrain	ECU Information		V1.00.001 or higher
S (222)	PTCU - Control unit powertrain	Read Codes		V1.00.001 or higher
S (222)	PTCU - Control unit powertrain	Erase Codes		V1.00.001 or higher
S (222)	PTCU - Control unit powertrain	Live Data		V1.00.001 or higher
S (222)	SG-EM - Power electronics	ECU Information		V1.00.001 or higher

S (222)	SG-EM - Power electronics	Read Codes		V1.00.001 or higher
S (222)	SG-EM - Power electronics	Erase Codes		V1.00.001 or higher
S (222)	SG-EM - Power electronics	Live Data		V1.00.001 or higher
S (222)	ESP - Electric stability program	ECU Information		V1.00.001 or higher
S (222)	ESP - Electric stability program	Read Codes		V1.00.001 or higher
S (222)	ESP - Electric stability program	Erase Codes		V1.00.001 or higher
S (222)	ESP - Electric stability program	Live Data		V1.00.001 or higher
S (222)	ESP - Electric stability program	Active Test		V1.00.001 or higher
S (222)	EFB - Electric parking brake	ECU Information		V1.00.001 or higher
S (222)	EFB - Electric parking brake	Read Codes		V1.00.001 or higher
S (222)	EFB - Electric parking brake	Erase Codes		V1.00.001 or higher
S (222)	EFB - Electric parking brake	Live Data		V1.00.001 or higher
S (222)	EFB - Electric parking brake	Active Test		V1.00.001 or higher
S (222)	ADS - Adaptive damping system	ECU Information		V1.00.001 or higher
S (222)	ADS - Adaptive damping system	Read Codes		V1.00.001 or higher
S (222)	ADS - Adaptive damping system	Erase Codes		V1.00.001 or higher
S (222)	ADS - Adaptive damping system	Live Data		V1.00.001 or higher
S (222)	ES - Electric power steering	ECU Information		V1.00.001 or higher
S (222)	ES - Electric power steering	Read Codes		V1.00.001 or higher
S (222)	ES - Electric power steering	Erase Codes		V1.00.001 or higher
S (222)	ES - Electric power steering	Live Data		V1.00.001 or higher
S (222)	SRS - Supplemental restraint system	ECU Information		V1.00.001 or higher
S (222)	SRS - Supplemental restraint system	Read Codes		V1.00.001 or higher

S (222)	SRS - Supplemental restraint system	Erase Codes		V1.00.001 or higher
S (222)	SRS - Supplemental restraint system	Live Data		V1.00.001 or higher
S (222)	SRS - Supplemental restraint system	Active Test		V1.00.001 or higher
S (222)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher
S (222)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
S (222)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
S (222)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
S (222)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher
S (222)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
S (222)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
S (222)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
S (222)	Rear SAM - Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
S (222)	Rear SAM - Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher

S (222)	Rear SAM - Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
S (222)	Rear SAM - Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
S (222)	ATA - ATA[EDW]/tow-away protection/interior protection	ECU Information		V1.00.001 or higher
S (222)	ATA - ATA[EDW]/tow-away protection/interior protection	Read Codes		V1.00.001 or higher
S (222)	ATA - ATA[EDW]/tow-away protection/interior protection	Erase Codes		V1.00.001 or higher
S (222)	ATA - ATA[EDW]/tow-away protection/interior protection	Live Data		V1.00.001 or higher
S (222)	Trailer recognition module - Trailer recognition	ECU Information		V1.00.001 or higher
S (222)	Trailer recognition module - Trailer recognition	Read Codes		V1.00.001 or higher
S (222)	Trailer recognition module - Trailer recognition	Erase Codes		V1.00.001 or higher
S (222)	Trailer recognition module - Trailer recognition	Live Data		V1.00.001 or higher

S (222)	Multifunction control unit - Multifunction control unit	ECU Information		V1.00.001 or higher
S (222)	Multifunction control unit - Multifunction control unit	Read Codes		V1.00.001 or higher
S (222)	Multifunction control unit - Multifunction control unit	Erase Codes		V1.00.001 or higher
S (222)	Multifunction control unit - Multifunction control unit	Live Data		V1.00.001 or higher
S (222)	AGS - Active bell buckle	ECU Information		V1.00.001 or higher
S (222)	AGS - Active bell buckle	Read Codes		V1.00.001 or higher
S (222)	AGS - Active bell buckle	Erase Codes		V1.00.001 or higher
S (222)	AGS - Active bell buckle	Live Data		V1.00.001 or higher
S (222)	PSD - Control module Panoramic sliding roof	ECU Information		V1.00.001 or higher
S (222)	PSD - Control module Panoramic sliding roof	Read Codes		V1.00.001 or higher
S (222)	PSD - Control module Panoramic sliding roof	Erase Codes		V1.00.001 or higher
S (222)	PSD - Control module Panoramic sliding roof	Live Data		V1.00.001 or higher
S (222)	MSC - MAGIC SKY CONTROL	ECU Information		V1.00.001 or higher
S (222)	MSC - MAGIC SKY CONTROL	Read Codes		V1.00.001 or higher
S (222)	MSC - MAGIC SKY CONTROL	Erase Codes		V1.00.001 or higher
S (222)	MSC - MAGIC SKY CONTROL	Live Data		V1.00.001 or higher



S (222)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
S (222)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
S (222)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
S (222)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
S (222)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
S (222)	RevETR-LF - Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
S (222)	RevETR-LF - Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
S (222)	RevETR-LF - Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
S (222)	RevETR-LF - Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
S (222)	RevETR-RF - Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
S (222)	RevETR-RF - Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
S (222)	RevETR-RF - Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher

S (222)	RevETR-RF - Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
S (222)	SOGESTAR2 - Sound generator for electric vehicle	ECU Information		V1.00.001 or higher
S (222)	SOGESTAR2 - Sound generator for electric vehicle	Read Codes		V1.00.001 or higher
S (222)	SOGESTAR2 - Sound generator for electric vehicle	Erase Codes		V1.00.001 or higher
S (222)	SOGESTAR2 - Sound generator for electric vehicle	Live Data		V1.00.001 or higher
S (222)	SG-SW-L - Left headlamp	ECU Information		V1.00.001 or higher
S (222)	SG-SW-L - Left headlamp	Read Codes		V1.00.001 or higher
S (222)	SG-SW-L - Left headlamp	Erase Codes		V1.00.001 or higher
S (222)	SG-SW-L - Left headlamp	Live Data		V1.00.001 or higher
S (222)	SG-SW-R - Right headlamp	ECU Information		V1.00.001 or higher
S (222)	SG-SW-R - Right headlamp	Read Codes		V1.00.001 or higher
S (222)	SG-SW-R - Right headlamp	Erase Codes		V1.00.001 or higher
S (222)	SG-SW-R - Right headlamp	Live Data		V1.00.001 or higher
S (222)	SG-LG - Charger	ECU Information		V1.00.001 or higher
S (222)	SG-LG - Charger	Read Codes		V1.00.001 or higher
S (222)	SG-LG - Charger	Erase Codes		V1.00.001 or higher
S (222)	SG-LG - Charger	Live Data		V1.00.001 or higher
S (222)	DC/DC - DC/DC converter	ECU Information		V1.00.001 or higher

S (222)	DC/DC - DC/DC converter	Read Codes		V1.00.001 or higher
S (222)	DC/DC - DC/DC converter	Erase Codes		V1.00.001 or higher
S (222)	DC/DC - DC/DC converter	Live Data		V1.00.001 or higher
S (222)	SCM - Steering column module	ECU Information		V1.00.001 or higher
S (222)	SCM - Steering column module	Read Codes		V1.00.001 or higher
S (222)	SCM - Steering column module	Erase Codes		V1.00.001 or higher
S (222)	SCM - Steering column module	Live Data		V1.00.001 or higher
S (222)	Fire extinguishing system and emergency fresh air system (FLANFS) - Fire extinguishing system and emergency fresh air system	ECU Information		V1.00.001 or higher
S (222)	Fire extinguishing system and emergency fresh air system (FLANFS) - Fire extinguishing system and emergency fresh air system	Read Codes		V1.00.001 or higher
S (222)	Fire extinguishing system and emergency fresh air system (FLANFS) - Fire extinguishing system and emergency fresh air system	Erase Codes		V1.00.001 or higher

S (222)	Fire extinguishing system and emergency fresh air system (FLANFS) - Fire extinguishing system and emergency fresh air system	Live Data		V1.00.001 or higher
S (222)	BMS - Battery management system	ECU Information		V1.00.001 or higher
S (222)	BMS - Battery management system	Read Codes		V1.00.001 or higher
S (222)	BMS - Battery management system	Erase Codes		V1.00.001 or higher
S (222)	BMS - Battery management system	Live Data		V1.00.001 or higher
S (222)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
S (222)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
S (222)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
S (222)	IC - Instrument cluster	Live Data		V1.00.001 or higher
S (222)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
S (222)	IC - Instrument cluster	Active Test		V1.00.001 or higher
S (222)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher
S (222)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Read Codes		V1.00.001 or higher

S (222)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
S (222)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
S (222)	TPAD - Touchpad	ECU Information		V1.00.001 or higher
S (222)	TPAD - Touchpad	Read Codes		V1.00.001 or higher
S (222)	TPAD - Touchpad	Erase Codes		V1.00.001 or higher
S (222)	TPAD - Touchpad	Live Data		V1.00.001 or higher
S (222)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
S (222)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher
S (222)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher
S (222)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
S (222)	D-FOL - Display in left rear passenger compartment	ECU Information		V1.00.001 or higher
S (222)	D-FOL - Display in left rear passenger compartment	Read Codes		V1.00.001 or higher
S (222)	D-FOL - Display in left rear passenger compartment	Erase Codes		V1.00.001 or higher
S (222)	D-FOL - Display in left rear passenger compartment	Live Data		V1.00.001 or higher
S (222)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher

S (222)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
S (222)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
S (222)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
S (222)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
S (222)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
S (222)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
S (222)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
S (222)	D-FOR - Display in right rear passenger compartment	ECU Information		V1.00.001 or higher
S (222)	D-FOR - Display in right rear passenger compartment	Read Codes		V1.00.001 or higher
S (222)	D-FOR - Display in right rear passenger compartment	Erase Codes		V1.00.001 or higher
S (222)	D-FOR - Display in right rear passenger compartment	Live Data		V1.00.001 or higher
S (222)	Head-up display - Head-up display	ECU Information		V1.00.001 or higher
S (222)	Head-up display - Head-up display	Read Codes		V1.00.001 or higher
S (222)	Head-up display - Head-up display	Erase Codes		V1.00.001 or higher
S (222)	Head-up display - Head-up display	Live Data		V1.00.001 or higher
S (222)	TB5 - TV tuner Tuner unit	ECU Information		V1.00.001 or higher

S (222)	TB5 - TV tuner Tuner unit	Read Codes		V1.00.001 or higher
S (222)	TB5 - TV tuner Tuner unit	Erase Codes		V1.00.001 or higher
S (222)	TB5 - TV tuner Tuner unit	Live Data		V1.00.001 or higher
S (222)	SOUND - Sound system	ECU Information		V1.00.001 or higher
S (222)	SOUND - Sound system	Read Codes		V1.00.001 or higher
S (222)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
S (222)	SOUND - Sound system	Live Data		V1.00.001 or higher
S (222)	AVE-H - Controller unit Rear entertainment system	ECU Information		V1.00.001 or higher
S (222)	AVE-H - Controller unit Rear entertainment system	Read Codes		V1.00.001 or higher
S (222)	AVE-H - Controller unit Rear entertainment system	Erase Codes		V1.00.001 or higher
S (222)	AVE-H - Controller unit Rear entertainment system	Live Data		V1.00.001 or higher
S (222)	DAB - Digital radio Tuner unit	ECU Information		V1.00.001 or higher
S (222)	DAB - Digital radio Tuner unit	Read Codes		V1.00.001 or higher
S (222)	DAB - Digital radio Tuner unit	Erase Codes		V1.00.001 or higher
S (222)	DAB - Digital radio Tuner unit	Live Data		V1.00.001 or higher
S (222)	DCU-LF - Left front door	ECU Information		V1.00.001 or higher
S (222)	DCU-LF - Left front door	Read Codes		V1.00.001 or higher
S (222)	DCU-LF - Left front door	Erase Codes		V1.00.001 or higher

S (222)	DCU-LF - Left front door	Live Data		V1.00.001 or higher
S (222)	DCU-RF - Right front door	ECU Information		V1.00.001 or higher
S (222)	DCU-RF - Right front door	Read Codes		V1.00.001 or higher
S (222)	DCU-RF - Right front door	Erase Codes		V1.00.001 or higher
S (222)	DCU-RF - Right front door	Live Data		V1.00.001 or higher
S (222)	DCU-LR - Left rear door	ECU Information		V1.00.001 or higher
S (222)	DCU-LR - Left rear door	Read Codes		V1.00.001 or higher
S (222)	DCU-LR - Left rear door	Erase Codes		V1.00.001 or higher
S (222)	DCU-LR - Left rear door	Live Data		V1.00.001 or higher
S (222)	DCU-RR - Right rear door	ECU Information		V1.00.001 or higher
S (222)	DCU-RR - Right rear door	Read Codes		V1.00.001 or higher
S (222)	DCU-RR - Right rear door	Erase Codes		V1.00.001 or higher
S (222)	DCU-RR - Right rear door	Live Data		V1.00.001 or higher
S (222)	ESA Driver - Electric seat adjustmnet Driver with memory function	ECU Information		V1.00.001 or higher
S (222)	ESA Driver - Electric seat adjustmnet Driver with memory function	Read Codes		V1.00.001 or higher
S (222)	ESA Driver - Electric seat adjustmnet Driver with memory function	Erase Codes		V1.00.001 or higher
S (222)	ESA Driver - Electric seat adjustmnet Driver with memory function	Live Data		V1.00.001 or higher



S (222)	Left rear ESE - Left rear electrical seat adjustment	ECU Information		V1.00.001 or higher
S (222)	Left rear ESE - Left rear electrical seat adjustment	Read Codes		V1.00.001 or higher
S (222)	Left rear ESE - Left rear electrical seat adjustment	Erase Codes		V1.00.001 or higher
S (222)	Left rear ESE - Left rear electrical seat adjustment	Live Data		V1.00.001 or higher
S (222)	ESA Front passenger - Electric seat adjustment Front passenger with memory function	ECU Information		V1.00.001 or higher
S (222)	ESA Front passenger - Electric seat adjustment Front passenger with memory function	Read Codes		V1.00.001 or higher
S (222)	ESA Front passenger - Electric seat adjustment Front passenger with memory function	Erase Codes		V1.00.001 or higher
S (222)	ESA Front passenger - Electric seat adjustment Front passenger with memory function	Live Data		V1.00.001 or higher
S (222)	Right rear ESE - Right rear electrical seat adjustment	ECU Information		V1.00.001 or higher
S (222)	Right rear ESE - Right rear electrical seat adjustment	Read Codes		V1.00.001 or higher

S (222)	Right rear ESE - Right rear electrical seat adjustment	Erase Codes		V1.00.001 or higher
S (222)	Right rear ESE - Right rear electrical seat adjustment	Live Data		V1.00.001 or higher
S (222)	MKS-LF - Left front multicontour seat	ECU Information		V1.00.001 or higher
S (222)	MKS-LF - Left front multicontour seat	Read Codes		V1.00.001 or higher
S (222)	MKS-LF - Left front multicontour seat	Erase Codes		V1.00.001 or higher
S (222)	MKS-LF - Left front multicontour seat	Live Data		V1.00.001 or higher
S (222)	MKS-RF - Right front multicontour seat	ECU Information		V1.00.001 or higher
S (222)	MKS-RF - Right front multicontour seat	Read Codes		V1.00.001 or higher
S (222)	MKS-RF - Right front multicontour seat	Erase Codes		V1.00.001 or higher
S (222)	MKS-RF - Right front multicontour seat	Live Data		V1.00.001 or higher
S (222)	MKS-LF - Left rear multicontour seat	ECU Information		V1.00.001 or higher
S (222)	MKS-LF - Left rear multicontour seat	Read Codes		V1.00.001 or higher

S (222)	MKS-LF - Left rear multicontour seat	Erase Codes		V1.00.001 or higher
S (222)	MKS-LF - Left rear multicontour seat	Live Data		V1.00.001 or higher
S (222)	HKS - Trunk lid control	ECU Information		V1.00.001 or higher
S (222)	HKS - Trunk lid control	Read Codes		V1.00.001 or higher
S (222)	HKS - Trunk lid control	Erase Codes		V1.00.001 or higher
S (222)	HKS - Trunk lid control	Live Data		V1.00.001 or higher
S (222)	MKS-RF - Right rear multicontour seat	ECU Information		V1.00.001 or higher
S (222)	MKS-RF - Right rear multicontour seat	Read Codes		V1.00.001 or higher
S (222)	MKS-RF - Right rear multicontour seat	Erase Codes		V1.00.001 or higher
S (222)	MKS-RF - Right rear multicontour seat	Live Data		V1.00.001 or higher
S (222)	PPAMKS - Pneumatic pump for multicontour seat	ECU Information		V1.00.001 or higher
S (222)	PPAMKS - Pneumatic pump for multicontour seat	Read Codes		V1.00.001 or higher
S (222)	PPAMKS - Pneumatic pump for multicontour seat	Erase Codes		V1.00.001 or higher
S (222)	PPAMKS - Pneumatic pump for multicontour seat	Live Data		V1.00.001 or higher
S (222)	AAC - Ari conditioning	ECU Information		V1.00.001 or higher
S (222)	AAC - Ari conditioning	Read Codes		V1.00.001 or higher
S (222)	AAC - Ari conditioning	Erase Codes		V1.00.001 or higher

S (222)	AAC - Ari conditioning	Live Data		V1.00.001 or higher
S (222)	STH - Stationary heater	ECU Information		V1.00.001 or higher
S (222)	STH - Stationary heater	Read Codes		V1.00.001 or higher
S (222)	STH - Stationary heater	Erase Codes		V1.00.001 or higher
S (222)	STH - Stationary heater	Live Data		V1.00.001 or higher
S (222)	SG-EM - Power electronics	ECU Information		V1.00.001 or higher
S (222)	SG-EM - Power electronics	Read Codes		V1.00.001 or higher
S (222)	SG-EM - Power electronics	Erase Codes		V1.00.001 or higher
S (222)	SG-EM - Power electronics	Live Data		V1.00.001 or higher
S (222)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
S (222)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
S (222)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
S (222)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
S (222)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
S (222)	KAB - Control unit Camera cover	ECU Information		V1.00.001 or higher
S (222)	KAB - Control unit Camera cover	Read Codes		V1.00.001 or higher
S (222)	KAB - Control unit Camera cover	Erase Codes		V1.00.001 or higher
S (222)	KAB - Control unit Camera cover	Live Data		V1.00.001 or higher
S (222)	NSA - Night View Assist	ECU Information		V1.00.001 or higher
S (222)	NSA - Night View Assist	Read Codes		V1.00.001 or higher
S (222)	NSA - Night View Assist	Erase Codes		V1.00.001 or higher
S (222)	NSA - Night View Assist	Live Data		V1.00.001 or higher

S (222)	RFK/360 - camera	ECU Information		V1.00.001 or higher
S (222)	RFK/360 - camera	Read Codes		V1.00.001 or higher
S (222)	RFK/360 - camera	Erase Codes		V1.00.001 or higher
S (222)	RFK/360 - camera	Live Data		V1.00.001 or higher
S (222)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
S (222)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
S (222)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
S (222)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
S (222)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	ECU Information		V1.00.001 or higher
S (222)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	Read Codes		V1.00.001 or higher
S (222)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	Erase Codes		V1.00.001 or higher
S (222)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	Live Data		V1.00.001 or higher
S (222)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
S (222)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
S (222)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
S (222)	DTR - DISTRONIC	Live Data		V1.00.001 or higher
S (222)	SGR - Radar sensors control unit	ECU Information		V1.00.001 or higher

S (222)	SGR - Radar sensors control unit	Read Codes		V1.00.001 or higher
S (222)	SGR - Radar sensors control unit	Erase Codes		V1.00.001 or higher
S (222)	SGR - Radar sensors control unit	Live Data		V1.00.001 or higher
S (222)	PARK - Parking system	ECU Information		V1.00.001 or higher
S (222)	PARK - Parking system	Read Codes		V1.00.001 or higher
S (222)	PARK - Parking system	Erase Codes		V1.00.001 or higher
S (222)	PARK - Parking system	Live Data		V1.00.001 or higher
S (221)	ME 9.7-Motor electronics 9.7	ECU Information		V1.00.001 or higher
S (221)	ME 9.7-Motor electronics 9.7	Read Codes		V1.00.001 or higher
S (221)	ME 9.7-Motor electronics 9.7	Erase Codes		V1.00.001 or higher
S (221)	ME 9.7-Motor electronics 9.7	Live Data		V1.00.001 or higher
S (221)	ME 9.7-Motor electronics 9.7	Active Test		V1.00.001 or higher
S (221)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Learning processes	V1.00.001 or higher
S (221)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Correction programming	V1.00.001 or higher
S (221)	ME 9.7-Motor electronics 9.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
S (221)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
S (221)	ME 9.7-Motor electronics 9.7	Special functions	Variant coding	V1.00.001 or higher
S (221)	Transmission	ECU Information		V1.00.001 or higher
S (221)	Transmission	Read Codes		V1.00.001 or higher
S (221)	Transmission	Erase Codes		V1.00.001 or higher
S (221)	Transmission	Live Data		V1.00.001 or higher
S (221)	Transmission	Active Test		V1.00.001 or higher

S (221)	Transmission	Control unit adaptations	Definition	V1.00.001 or higher
S (221)	Transmission	Control unit adaptations	Assignment of the hydraulic shift elements	V1.00.001 or higher
S (221)	Transmission	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
S (221)	Transmission	Control unit adaptations	Important information on the combination possibilities for adaptation end stop values	V1.00.001 or higher
S (221)	Transmission	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
S (221)	Transmission	Control unit adaptations	Performing adaptation	V1.00.001 or higher
S (221)	Transmission	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
S (221)	Transmission	Special functions	Warranty or goodwill processing	V1.00.001 or higher
S (221)	Transmission	Special functions	Diagnosis routines	V1.00.001 or higher
S (221)	ISM-Intelligent servo module	ECU Information		V1.00.001 or higher
S (221)	ISM-Intelligent servo module	Read Codes		V1.00.001 or higher
S (221)	ISM-Intelligent servo module	Erase Codes		V1.00.001 or higher
S (221)	ISM-Intelligent servo module	Live Data		V1.00.001 or higher
S (221)	ISM-Intelligent servo module	Active Test		V1.00.001 or higher
S (221)	ISM-Intelligent servo module	Control unit adaptations	Please calibrate.	V1.00.001 or higher

S (221)	ISM-Intelligent servo module	Control unit adaptations	Detach the transport protection of control module 'Intelligent Servo Module', personalize or activate the control module.	V1.00.001 or higher
S (221)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
S (221)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
S (221)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
S (221)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
S (221)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
S (221)	DTR-Distronic	ECU Information		V1.00.001 or higher
S (221)	DTR-Distronic	Read Codes		V1.00.001 or higher
S (221)	DTR-Distronic	Erase Codes		V1.00.001 or higher
S (221)	DTR-Distronic	Live Data		V1.00.001 or higher
S (221)	DTR-Distronic	Special functions	Initial start-up	V1.00.001 or higher
S (221)	SGR-Radar sensors control unit	ECU Information		V1.00.001 or higher
S (221)	SGR-Radar sensors control unit	Read Codes		V1.00.001 or higher
S (221)	SGR-Radar sensors control unit	Erase Codes		V1.00.001 or higher
S (221)	SGR-Radar sensors control unit	Live Data		V1.00.001 or higher
S (221)	SGR-Radar sensors control unit	Active Test		V1.00.001 or higher
S (221)	Electronic parking brake-Electric parking brake	ECU Information		V1.00.001 or higher



S (221)	Electronic parking brake-Electric parking brake	Read Codes		V1.00.001 or higher
S (221)	Electronic parking brake-Electric parking brake	Erase Codes		V1.00.001 or higher
S (221)	Electronic parking brake-Electric parking brake	Live Data		V1.00.001 or higher
S (221)	Electronic parking brake-Electric parking brake	Active Test		V1.00.001 or higher
S (221)	TPC-Tire pressure monitor	ECU Information		V1.00.001 or higher
S (221)	TPC-Tire pressure monitor	Read Codes		V1.00.001 or higher
S (221)	TPC-Tire pressure monitor	Erase Codes		V1.00.001 or higher
S (221)	TPC-Tire pressure monitor	Live Data		V1.00.001 or higher
S (221)	TPC-Tire pressure monitor	Active Test		V1.00.001 or higher
S (221)	TPC-Tire pressure monitor	Special functions	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
S (221)	TPC-Tire pressure monitor	Special functions	Initial start-up with manual settings input for new control module- For example: The previous control module cannot be read any longer.	V1.00.001 or higher
S (221)	ABR-Adaptive Brake	ECU Information		V1.00.001 or higher
S (221)	ABR-Adaptive Brake	Read Codes		V1.00.001 or higher
S (221)	ABR-Adaptive Brake	Erase Codes		V1.00.001 or higher

S (221)	ABR-Adaptive Brake	Live Data		V1.00.001 or higher
S (221)	ABR-Adaptive Brake	Active Test		V1.00.001 or higher
S (221)	ABR-Adaptive Brake	Control unit adaptations	Road test	V1.00.001 or higher
S (221)	ABR-Adaptive Brake	Control unit adaptations	Tire pressure loss warner(Activating)	V1.00.001 or higher
S (221)	ABR-Adaptive Brake	Control unit adaptations	Clear the zero point offset error of the component 'N49 (Steering Angle Sensor (SAS))'.	V1.00.001 or higher
S (221)	ABR-Adaptive Brake	Control unit adaptations	Calibration of the control module 'Anti-lock Brake System'	V1.00.001 or higher
S (221)	Suspension	ECU Information		V1.00.001 or higher
S (221)	Suspension	Read Codes		V1.00.001 or higher
S (221)	Suspension	Erase Codes		V1.00.001 or higher
S (221)	Suspension	Live Data		V1.00.001 or higher
S (221)	Suspension	Active Test		V1.00.001 or higher
S (221)	Suspension	Special functions	Initial start-up	V1.00.001 or higher
S (221)	Suspension	Special functions	Control module adaptation	V1.00.001 or higher
S (221)	Suspension	Special functions	Pneumatic tests	V1.00.001 or higher
S (221)	EHPS- Electrohydraulic Power Steering	ECU Information		V1.00.001 or higher
S (221)	EHPS- Electrohydraulic Power Steering	Read Codes		V1.00.001 or higher
S (221)	EHPS- Electrohydraulic Power Steering	Erase Codes		V1.00.001 or higher

S (221)	EHPS- Electrohydraulic Power Steering	Live Data		V1.00.001 or higher
S (221)	AB-Airbag	ECU Information		V1.00.001 or higher
S (221)	AB-Airbag	Read Codes		V1.00.001 or higher
S (221)	AB-Airbag	Erase Codes		V1.00.001 or higher
S (221)	AB-Airbag	Live Data		V1.00.001 or higher
S (221)	AB-Airbag	Active Test		V1.00.001 or higher
S (221)	CGW-Central gateway	ECU Information		V1.00.001 or higher
S (221)	CGW-Central gateway	Read Codes		V1.00.001 or higher
S (221)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
S (221)	CGW-Central gateway	Live Data		V1.00.001 or higher
S (221)	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher
S (221)	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher
S (221)	CGW-Central gateway	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
S (221)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
S (221)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
S (221)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
S (221)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
S (221)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher
S (221)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track with the workshop key.	V1.00.001 or higher
S (221)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher

S (221)	EZS-Electronic ignition switch	Control unit adaptations	Program the replacement keys.	V1.00.001 or higher
S (221)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N73 (Electronic Ignition Switch (EIS/EZS) control module)'. '.	V1.00.001 or higher
S (221)	EZS-Electronic ignition switch	Control unit adaptations	Writing of the VIN	V1.00.001 or higher
S (221)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
S (221)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
S (221)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
S (221)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
S (221)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
S (221)	MSS-Special vehicle multifunction control module	ECU Information		V1.00.001 or higher
S (221)	MSS-Special vehicle multifunction control module	Read Codes		V1.00.001 or higher
S (221)	MSS-Special vehicle multifunction control module	Erase Codes		V1.00.001 or higher
S (221)	MSS-Special vehicle multifunction control module	Live Data		V1.00.001 or higher
S (221)	MSS-Special vehicle multifunction control module	Active Test		V1.00.001 or higher
S (221)	MSS-Special vehicle multifunction control module	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
S (221)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher

S (221)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
S (221)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
S (221)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
S (221)	WSS-Weight sensing system	Initial startup	Initial start-up/Recalibration	V1.00.001 or higher
S (221)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
S (221)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
S (221)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
S (221)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
S (221)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
S (221)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
S (221)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
S (221)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
S (221)	UCP-Upper control panel	Live Data		V1.00.001 or higher
S (221)	UCP-Upper control panel	Active Test		V1.00.001 or higher
S (221)	Dr-side SAM-Driver signal acquisition and actuation module	ECU Information		V1.00.001 or higher
S (221)	Dr-side SAM-Driver signal acquisition and actuation module	Read Codes		V1.00.001 or higher
S (221)	Dr-side SAM-Driver signal acquisition and actuation module	Erase Codes		V1.00.001 or higher

S (221)	Dr-side SAM-Driver signal acquisition and actuation module	Live Data		V1.00.001 or higher
S (221)	Dr-side SAM-Driver signal acquisition and actuation module	Active Test		V1.00.001 or higher
S (221)	Dr-side SAM-Driver signal acquisition and actuation module	Control unit adaptations	Initializations	V1.00.001 or higher
S (221)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
S (221)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
S (221)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
S (221)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
S (221)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
S (221)	BNS-Vehicle power supply control module	ECU Information		V1.00.001 or higher
S (221)	BNS-Vehicle power supply control module	Read Codes		V1.00.001 or higher

S (221)	BNS-Vehicle power supply control module	Erase Codes		V1.00.001 or higher
S (221)	BNS-Vehicle power supply control module	Live Data		V1.00.001 or higher
S (221)	BNS-Vehicle power supply control module	Active Test		V1.00.001 or higher
S (221)	AHE-Trailer recognition	ECU Information		V1.00.001 or higher
S (221)	AHE-Trailer recognition	Read Codes		V1.00.001 or higher
S (221)	AHE-Trailer recognition	Erase Codes		V1.00.001 or higher
S (221)	AHE-Trailer recognition	Live Data		V1.00.001 or higher
S (221)	AHE-Trailer recognition	Active Test		V1.00.001 or higher
S (221)	PSD-Panoramic sliding roof(Interior CAN bus)	ECU Information		V1.00.001 or higher
S (221)	PSD-Panoramic sliding roof(Interior CAN bus)	Read Codes		V1.00.001 or higher
S (221)	PSD-Panoramic sliding roof(Interior CAN bus)	Erase Codes		V1.00.001 or higher
S (221)	PSD-Panoramic sliding roof(Interior CAN bus)	Live Data		V1.00.001 or higher
S (221)	PSD-Panoramic sliding roof(Interior CAN bus)	Active Test		V1.00.001 or higher
S (221)	PSD-Panoramic sliding roof(Interior CAN bus)	Control unit adaptations	Teach-in process for the Anti-pinch Protection function of panoramic sliding sunroof/Roller sun blind	V1.00.001 or higher

S (221)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
S (221)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
S (221)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
S (221)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
S (221)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
S (221)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
S (221)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
S (221)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
S (221)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher



S (221)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
S (221)	XALWA-L-Xenon headlamp, left	ECU Information		V1.00.001 or higher
S (221)	XALWA-L-Xenon headlamp, left	Read Codes		V1.00.001 or higher
S (221)	XALWA-L-Xenon headlamp, left	Erase Codes		V1.00.001 or higher
S (221)	XALWA-L-Xenon headlamp, left	Live Data		V1.00.001 or higher
S (221)	XALWA-L-Xenon headlamp, left	Active Test		V1.00.001 or higher
S (221)	XALWA-L-Xenon headlamp, left	Control unit adaptations	Tourist mode-Adaptation of the headlamps from left hand traffic system to right hand traffic system or vice versa.	V1.00.001 or higher
S (221)	XALWA-R-Xenon headlamp, right	ECU Information		V1.00.001 or higher
S (221)	XALWA-R-Xenon headlamp, right	Read Codes		V1.00.001 or higher
S (221)	XALWA-R-Xenon headlamp, right	Erase Codes		V1.00.001 or higher
S (221)	XALWA-R-Xenon headlamp, right	Live Data		V1.00.001 or higher
S (221)	XALWA-R-Xenon headlamp, right	Active Test		V1.00.001 or higher
S (221)	XALWA-R-Xenon headlamp, right	Control unit adaptations	Tourist mode-Adaptation of the headlamps from left hand traffic system to right hand traffic system or vice versa.	V1.00.001 or higher
S (221)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
S (221)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
S (221)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher

S (221)	System diagnosis(CAN)	Live Data		V1.00.001 or higher
S (221)	COU [ZBE]-Central operating unit	ECU Information		V1.00.001 or higher
S (221)	COU [ZBE]-Central operating unit	Read Codes		V1.00.001 or higher
S (221)	COU [ZBE]-Central operating unit	Erase Codes		V1.00.001 or higher
S (221)	COU [ZBE]-Central operating unit	Live Data		V1.00.001 or higher
S (221)	COU [ZBE]-Central operating unit	Active Test		V1.00.001 or higher
S (221)	HBF (Rear control panel)-Rear control field	ECU Information		V1.00.001 or higher
S (221)	HBF (Rear control panel)-Rear control field	Read Codes		V1.00.001 or higher
S (221)	HBF (Rear control panel)-Rear control field	Erase Codes		V1.00.001 or higher
S (221)	HBF (Rear control panel)-Rear control field	Live Data		V1.00.001 or higher
S (221)	HBF (Rear control panel)-Rear control field	Active Test		V1.00.001 or higher
S (221)	IC-Instrument cluster	ECU Information		V1.00.001 or higher
S (221)	IC-Instrument cluster	Read Codes		V1.00.001 or higher
S (221)	IC-Instrument cluster	Erase Codes		V1.00.001 or higher
S (221)	IC-Instrument cluster	Live Data		V1.00.001 or higher
S (221)	IC-Instrument cluster	Active Test		V1.00.001 or higher
S (221)	IC-Instrument cluster	Control unit adaptations	Setting days since initial registration	V1.00.001 or higher

S (221)	IC-Instrument cluster	Control unit adaptations	Resetting the menu settings to manufacturer default settings	V1.00.001 or higher
S (221)	IC-Instrument cluster	Control unit adaptations	Setting the main odometer forward and back	V1.00.001 or higher
S (221)	ICI-InCar Internet	ECU Information		V1.00.001 or higher
S (221)	ICI-InCar Internet	Read Codes		V1.00.001 or higher
S (221)	ICI-InCar Internet	Erase Codes		V1.00.001 or higher
S (221)	ICI-InCar Internet	Live Data		V1.00.001 or higher
S (221)	NSA-Night View Assist	ECU Information		V1.00.001 or higher
S (221)	NSA-Night View Assist	Read Codes		V1.00.001 or higher
S (221)	NSA-Night View Assist	Erase Codes		V1.00.001 or higher
S (221)	NSA-Night View Assist	Live Data		V1.00.001 or higher
S (221)	NSA-Night View Assist	Active Test		V1.00.001 or higher
S (221)	NSA-Night View Assist	Control unit adaptations	Run the Self Test 'B84/2 (Night View Assist camera)'. Calibration Reset	V1.00.001 or higher
S (221)	NSA-Night View Assist	Control unit adaptations	Calibration Reset	V1.00.001 or higher
S (221)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
S (221)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
S (221)	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher
S (221)	SCM [MRM]-Steering column module	Live Data		V1.00.001 or higher
S (221)	SCM [MRM]-Steering column module	Active Test		V1.00.001 or higher

S (221)	SCM [MRM]- Steering column module	Initial startup	•	V1.00.001 or higher
S (221)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
S (221)	ASSYST-Active Service System	Read Codes		V1.00.001 or higher
S (221)	ASSYST-Active Service System	Erase Codes		V1.00.001 or higher
S (221)	ASSYST-Active Service System	Live Data		V1.00.001 or higher
S (221)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
S (221)	ASSYST PLUS	ECU Information		V1.00.001 or higher
S (221)	ASSYST PLUS	Read Codes		V1.00.001 or higher
S (221)	ASSYST PLUS	Erase Codes		V1.00.001 or higher
S (221)	ASSYST PLUS	Live Data		V1.00.001 or higher
S (221)	ASSYST PLUS	ECU Information		V1.00.001 or higher
S (221)	ASSYST PLUS	Control unit adaptations	Internal ASSYST Plus data	V1.00.001 or higher
S (221)	ASSYST PLUS	Control unit adaptations	Average mileage per day	V1.00.001 or higher
S (221)	PTS-Parktronic	ECU Information		V1.00.001 or higher
S (221)	PTS-Parktronic	Read Codes		V1.00.001 or higher
S (221)	PTS-Parktronic	Erase Codes		V1.00.001 or higher
S (221)	PTS-Parktronic	Live Data		V1.00.001 or higher
S (221)	PTS-Parktronic	Active Test		V1.00.001 or higher
S (221)	RFK-Backup camera	ECU Information		V1.00.001 or higher
S (221)	RFK-Backup camera	Read Codes		V1.00.001 or higher
S (221)	RFK-Backup camera	Erase Codes		V1.00.001 or higher
S (221)	RFK-Backup camera	Live Data		V1.00.001 or higher
S (221)	COMAND	ECU Information		V1.00.001 or higher

S (221)	COMAND	Read Codes		V1.00.001 or higher
S (221)	COMAND	Erase Codes		V1.00.001 or higher
S (221)	COMAND	Live Data		V1.00.001 or higher
S (221)	COMAND	Active Test		V1.00.001 or higher
S (221)	Tuner-Standard tuner	ECU Information		V1.00.001 or higher
S (221)	Tuner-Standard tuner	Read Codes		V1.00.001 or higher
S (221)	Tuner-Standard tuner	Erase Codes		V1.00.001 or higher
S (221)	Tuner-Standard tuner	Live Data		V1.00.001 or higher
S (221)	Tuner-Standard tuner	Active Test		V1.00.001 or higher
S (221)	VCS-Voice control	ECU Information		V1.00.001 or higher
S (221)	VCS-Voice control	Read Codes		V1.00.001 or higher
S (221)	VCS-Voice control	Erase Codes		V1.00.001 or higher
S (221)	VCS-Voice control	Live Data		V1.00.001 or higher
S (221)	VCS-Voice control	Active Test		V1.00.001 or higher
S (221)	CTEL-Mobile phone adapter with universal interface	ECU Information		V1.00.001 or higher
S (221)	CTEL-Mobile phone adapter with universal interface	Read Codes		V1.00.001 or higher
S (221)	CTEL-Mobile phone adapter with universal interface	Erase Codes		V1.00.001 or higher
S (221)	CTEL-Mobile phone adapter with universal interface	Live Data		V1.00.001 or higher
S (221)	CTEL-Mobile phone adapter with universal interface	Active Test		V1.00.001 or higher

S (221)	TV-TV tuner(AGW)	ECU Information		V1.00.001 or higher
S (221)	TV-TV tuner(AGW)	Read Codes		V1.00.001 or higher
S (221)	TV-TV tuner(AGW)	Erase Codes		V1.00.001 or higher
S (221)	TV-TV tuner(AGW)	Live Data		V1.00.001 or higher
S (221)	TV-TV tuner(AGW)	Active Test		V1.00.001 or higher
S (221)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
S (221)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
S (221)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
S (221)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
S (221)	DAB-Digital radio	ECU Information		V1.00.001 or higher
S (221)	DAB-Digital radio	Read Codes		V1.00.001 or higher
S (221)	DAB-Digital radio	Erase Codes		V1.00.001 or higher
S (221)	DAB-Digital radio	Live Data		V1.00.001 or higher
S (221)	ZAN-Central display	ECU Information		V1.00.001 or higher
S (221)	ZAN-Central display	Read Codes		V1.00.001 or higher
S (221)	ZAN-Central display	Erase Codes		V1.00.001 or higher
S (221)	ZAN-Central display	Live Data		V1.00.001 or higher
S (221)	ZAN-Central display	Active Test		V1.00.001 or higher
S (221)	AVE-H-Rear audio video unit	ECU Information		V1.00.001 or higher
S (221)	AVE-H-Rear audio video unit	Read Codes		V1.00.001 or higher
S (221)	AVE-H-Rear audio video unit	Erase Codes		V1.00.001 or higher
S (221)	AVE-H-Rear audio video unit	Live Data		V1.00.001 or higher

S (221)	AVE-H-Rear audio video unit	Active Test		V1.00.001 or higher
S (221)	UCI-Media interface	ECU Information		V1.00.001 or higher
S (221)	UCI-Media interface	Read Codes		V1.00.001 or higher
S (221)	UCI-Media interface	Erase Codes		V1.00.001 or higher
S (221)	AVE-H - DVD player	ECU Information		V1.00.001 or higher
S (221)	AVE-H - DVD player	Read Codes		V1.00.001 or higher
S (221)	AVE-H - DVD player	Erase Codes		V1.00.001 or higher
S (221)	AVE-H - DVD player	Live Data		V1.00.001 or higher
S (221)	AVE-H - DVD player	Active Test		V1.00.001 or higher
S (221)	Left rear screen	ECU Information		V1.00.001 or higher
S (221)	Left rear screen	Read Codes		V1.00.001 or higher
S (221)	Left rear screen	Erase Codes		V1.00.001 or higher
S (221)	Left rear screen	Live Data		V1.00.001 or higher
S (221)	Left rear screen	Active Test		V1.00.001 or higher
S (221)	Right rear screen	ECU Information		V1.00.001 or higher
S (221)	Right rear screen	Read Codes		V1.00.001 or higher
S (221)	Right rear screen	Erase Codes		V1.00.001 or higher
S (221)	Right rear screen	Live Data		V1.00.001 or higher
S (221)	Right rear screen	Active Test		V1.00.001 or higher
S (221)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
S (221)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
S (221)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
S (221)	TELE AID-Control unit	Live Data		V1.00.001 or higher

S (221)	TELE AID- Telematic services Emergency call	ECU Information		V1.00.001 or higher
S (221)	TELE AID- Telematic services Emergency call	Read Codes		V1.00.001 or higher
S (221)	TELE AID- Telematic services Emergency call	Erase Codes		V1.00.001 or higher
S (221)	TELE AID- Telematic services Emergency call	Live Data		V1.00.001 or higher
S (221)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
S (221)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
S (221)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
S (221)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
S (221)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher



S (221)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
S (221)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
S (221)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher
S (221)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher
S (221)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
S (221)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
S (221)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher
S (221)	DS-LF-Left front dynamic seat	ECU Information		V1.00.001 or higher
S (221)	DS-LF-Left front dynamic seat	Read Codes		V1.00.001 or higher
S (221)	DS-LF-Left front dynamic seat	Erase Codes		V1.00.001 or higher
S (221)	DS-LF-Left front dynamic seat	Live Data		V1.00.001 or higher
S (221)	DS-LF-Left front dynamic seat	Active Test		V1.00.001 or higher
S (221)	DS-RF-Right front dynamic seat	ECU Information		V1.00.001 or higher

S (221)	DS-RF-Right front dynamic seat	Read Codes		V1.00.001 or higher
S (221)	DS-RF-Right front dynamic seat	Erase Codes		V1.00.001 or higher
S (221)	DS-RF-Right front dynamic seat	Live Data		V1.00.001 or higher
S (221)	DS-RF-Right front dynamic seat	Active Test		V1.00.001 or higher
S (221)	MKL-HL-Rear left multicontour backrest	ECU Information		V1.00.001 or higher
S (221)	MKL-HL-Rear left multicontour backrest	Read Codes		V1.00.001 or higher
S (221)	MKL-HL-Rear left multicontour backrest	Erase Codes		V1.00.001 or higher
S (221)	MKL-HL-Rear left multicontour backrest	Live Data		V1.00.001 or higher
S (221)	MKL-HL-Rear left multicontour backrest	Active Test		V1.00.001 or higher
S (221)	MKL-HR-Rear right multicontour backrest	ECU Information		V1.00.001 or higher
S (221)	MKL-HR-Rear right multicontour backrest	Read Codes		V1.00.001 or higher
S (221)	MKL-HR-Rear right multicontour backrest	Erase Codes		V1.00.001 or higher
S (221)	MKL-HR-Rear right multicontour backrest	Live Data		V1.00.001 or higher
S (221)	MKL-HR-Rear right multicontour backrest	Active Test		V1.00.001 or higher
S (221)	DSP-Pneumatic pump for dynamic seat	ECU Information		V1.00.001 or higher

S (221)	DSP-Pneumatic pump for dynamic seat	Read Codes		V1.00.001 or higher
S (221)	DSP-Pneumatic pump for dynamic seat	Erase Codes		V1.00.001 or higher
S (221)	DSP-Pneumatic pump for dynamic seat	Live Data		V1.00.001 or higher
S (221)	DSP-Pneumatic pump for dynamic seat	Active Test		V1.00.001 or higher
S (221)	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
S (221)	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher
S (221)	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher
S (221)	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher
S (221)	DCM-FL-Door control module front left	Active Test		V1.00.001 or higher
S (221)	DCM-FL-Door control module front left	Control unit adaptations	Initialization of the power closing	V1.00.001 or higher
S (221)	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
S (221)	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher
S (221)	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
S (221)	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
S (221)	DCM-FR-Door control module front right	Active Test		V1.00.001 or higher
S (221)	DCM-FR-Door control module front right	Control unit adaptations	Initialization of the power closing	V1.00.001 or higher

S (221)	DCM-RL-Door control module rear left	ECU Information		V1.00.001 or higher
S (221)	DCM-RL-Door control module rear left	Read Codes		V1.00.001 or higher
S (221)	DCM-RL-Door control module rear left	Erase Codes		V1.00.001 or higher
S (221)	DCM-RL-Door control module rear left	Live Data		V1.00.001 or higher
S (221)	DCM-RL-Door control module rear left	Active Test		V1.00.001 or higher
S (221)	DCM-RL-Door control module rear left	Control unit adaptations	Initialization of the power closing	V1.00.001 or higher
S (221)	DCM-RR-Door control module rear right	ECU Information		V1.00.001 or higher
S (221)	DCM-RR-Door control module rear right	Read Codes		V1.00.001 or higher
S (221)	DCM-RR-Door control module rear right	Erase Codes		V1.00.001 or higher
S (221)	DCM-RR-Door control module rear right	Live Data		V1.00.001 or higher
S (221)	DCM-RR-Door control module rear right	Active Test		V1.00.001 or higher
S (221)	DCM-RR-Door control module rear right	Control unit adaptations	Initialization of the power closing	V1.00.001 or higher
S (221)	ESA-FL-Electric seat adjustment front left	ECU Information		V1.00.001 or higher
S (221)	ESA-FL-Electric seat adjustment front left	Read Codes		V1.00.001 or higher
S (221)	ESA-FL-Electric seat adjustment front left	Erase Codes		V1.00.001 or higher
S (221)	ESA-FL-Electric seat adjustment front left	Live Data		V1.00.001 or higher

S (221)	ESA-FL-Electric seat adjustment front left	Active Test		V1.00.001 or higher
S (221)	ESA-FL-Electric seat adjustment front left	Control unit adaptations	Normalization of all seat adjustment motors	V1.00.001 or higher
S (221)	ESA-FL-Electric seat adjustment front left	Control unit adaptations	Adapt the obstacle protection.	V1.00.001 or higher
S (221)	ESA-FL-Electric seat adjustment front left	Control unit adaptations	Parameterize the Easy Entry/Exit.	V1.00.001 or higher
S (221)	ESA-FR-Electric seat adjustment front right	ECU Information		V1.00.001 or higher
S (221)	ESA-FR-Electric seat adjustment front right	Read Codes		V1.00.001 or higher
S (221)	ESA-FR-Electric seat adjustment front right	Erase Codes		V1.00.001 or higher
S (221)	ESA-FR-Electric seat adjustment front right	Live Data		V1.00.001 or higher
S (221)	ESA-FR-Electric seat adjustment front right	Active Test		V1.00.001 or higher
S (221)	ESA-FR-Electric seat adjustment front right	Control unit adaptations	Normalization of all seat adjustment motors	V1.00.001 or higher
S (221)	ESA-FR-Electric seat adjustment front right	Control unit adaptations	Adapt the obstacle protection.	V1.00.001 or higher
S (221)	ESA-FR-Electric seat adjustment front right	Control unit adaptations	Parameterize the Easy Entry/Exit.	V1.00.001 or higher
S (221)	ESA-R-Electric seat adjustment rear	ECU Information		V1.00.001 or higher
S (221)	ESA-R-Electric seat adjustment rear	Read Codes		V1.00.001 or higher
S (221)	ESA-R-Electric seat adjustment rear	Erase Codes		V1.00.001 or higher

S (221)	ESA-R-Electric seat adjustment rear	Live Data		V1.00.001 or higher
S (221)	ESA-R-Electric seat adjustment rear	Active Test		V1.00.001 or higher
S (221)	ESA-R-Electric seat adjustment rear	Control unit adaptations	Normalization Left rear and right rear	V1.00.001 or higher
S (221)	TLC-Trunk lid control	ECU Information		V1.00.001 or higher
S (221)	TLC-Trunk lid control	Read Codes		V1.00.001 or higher
S (221)	TLC-Trunk lid control	Erase Codes		V1.00.001 or higher
S (221)	TLC-Trunk lid control	Live Data		V1.00.001 or higher
S (221)	TLC-Trunk lid control	Active Test		V1.00.001 or higher
S (221)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
S (221)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
S (221)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
S (221)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
S (221)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
S (221)	AAC-Automatic air conditioning	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
S (221)	AAC-Automatic air conditioning	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
S (221)	AAC-Automatic air conditioning	Control unit adaptations	Teach-in of the actuator motors after replacement of actuator motor	V1.00.001 or higher
S (221)	AAC-Automatic air conditioning	Control unit adaptations	Break-in procedure after replacement of refrigerant compressor	V1.00.001 or higher

S (221)	AAC-Automatic air conditioning	Control unit adaptations	Teach-in of the rotary potentiometers for the air outlets	V1.00.001 or higher
S (221)	STH-Stationary heater with remote control	ECU Information		V1.00.001 or higher
S (221)	STH-Stationary heater with remote control	Read Codes		V1.00.001 or higher
S (221)	STH-Stationary heater with remote control	Erase Codes		V1.00.001 or higher
S (221)	STH-Stationary heater with remote control	Live Data		V1.00.001 or higher
S (221)	STH-Stationary heater with remote control	Active Test		V1.00.001 or higher
S (221)	STH-Stationary heater with remote control	Control unit adaptations	Learning component " A8/3 (Stationary Heater (STH) radio remote control transmitter)	V1.00.001 or higher
S (221)	KBE-H-Rear A/C operating unit	ECU Information		V1.00.001 or higher
S (221)	KBE-H-Rear A/C operating unit	Read Codes		V1.00.001 or higher
S (221)	KBE-H-Rear A/C operating unit	Erase Codes		V1.00.001 or higher
S (221)	KBE-H-Rear A/C operating unit	Live Data		V1.00.001 or higher
S (221)	KBE-H-Rear A/C operating unit	Active Test		V1.00.001 or higher
S (221)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	ECU Information		V1.00.001 or higher
S (221)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Read Codes		V1.00.001 or higher

S (221)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Erase Codes		V1.00.001 or higher
S (221)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Live Data		V1.00.001 or higher
S (221)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Active Test		V1.00.001 or higher
S (221)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Learning processes	V1.00.001 or higher
S (221)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Correction programming	V1.00.001 or higher
S (221)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
S (221)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
S (221)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Special functions	Variant coding	V1.00.001 or higher
S (221)	FSCU-Fuel pump AMG	ECU Information		V1.00.001 or higher
S (221)	FSCU-Fuel pump AMG	Read Codes		V1.00.001 or higher
S (221)	FSCU-Fuel pump AMG	Erase Codes		V1.00.001 or higher
S (221)	FSCU-Fuel pump AMG	Active Test		V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher



S (221)	CDI 5-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Learning of the throttle valve stop	V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Drive Authorization System (DAS/FBS)	V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Purge control Diesel Particulate Filter	V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Replace the component 'Diesel Particulate Filter'.	V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher

S (221)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Replace the component 'Y74 (Pressure control valve)'. Teaching in the ECM after replacement of an exhaust-relevant component	V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Prevention of regeneration	V1.00.001 or higher
S (221)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Rapid teach-in of zero quantity calibration values	V1.00.001 or higher
S (221)	ME 2.7.2-Motor electronics 2.7.2	ECU Information		V1.00.001 or higher
S (221)	ME 2.7.2-Motor electronics 2.7.2	Read Codes		V1.00.001 or higher
S (221)	ME 2.7.2-Motor electronics 2.7.2	Erase Codes		V1.00.001 or higher
S (221)	ME 2.7.2-Motor electronics 2.7.2	Live Data		V1.00.001 or higher
S (221)	ME 2.7.2-Motor electronics 2.7.2	Active Test		V1.00.001 or higher
S (221)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Variant coding	V1.00.001 or higher
S (221)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Learning process	V1.00.001 or higher
S (221)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Correction programming	V1.00.001 or higher
S (221)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Emissions inspection (Not valid for USA)	V1.00.001 or higher

S (221)	ME 2.7.2-Motor electronics 2.7.2	Special functions	OBD I/M check (Valid for USA)	V1.00.001 or higher
S (221)	TSG-ML-Left center door control unit (interior Can bus)	ECU Information		V1.00.001 or higher
S (221)	TSG-ML-Left center door control unit (interior Can bus)	Read Codes		V1.00.001 or higher
S (221)	TSG-ML-Left center door control unit (interior Can bus)	Erase Codes		V1.00.001 or higher
S (221)	TSG-ML-Left center door control unit (interior Can bus)	Live Data		V1.00.001 or higher
S (221)	TSG-ML-Left center door control unit (interior Can bus)	Active Test		V1.00.001 or higher
S (221)	TSG-MR-Right center door control unit (interior Can bus)	ECU Information		V1.00.001 or higher
S (221)	TSG-MR-Right center door control unit (interior Can bus)	Read Codes		V1.00.001 or higher
S (221)	TSG-MR-Right center door control unit (interior Can bus)	Erase Codes		V1.00.001 or higher
S (221)	TSG-MR-Right center door control unit (interior Can bus)	Live Data		V1.00.001 or higher

S (221)	TSG-MR-Right center door control unit (interior Can bus)	Active Test		V1.00.001 or higher
S (221)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
S (221)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
S (221)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
S (221)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
S (221)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
S (221)	TPM - Tire pressure monitor	Special functions	Write the wheel electronics ID number.	V1.00.001 or higher
S (221)	DTR-Distronic	ECU Information		V1.00.001 or higher
S (221)	DTR-Distronic	Read Codes		V1.00.001 or higher
S (221)	DTR-Distronic	Erase Codes		V1.00.001 or higher
S (221)	DTR-Distronic	Live Data		V1.00.001 or higher
S (221)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
S (221)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
S (221)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
S (221)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
S (221)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
S (221)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
S (221)	ESP-Electronic stability program	Control unit adaptations	Tire pressure loss warner(Activating)	V1.00.001 or higher
S (221)	ESP-Electronic stability program	Control unit adaptations	Clear the zero point offset error of the component 'N49 (Steering Angle Sensor (SAS))'.	V1.00.001 or higher

S (221)	ESP-Electronic stability program	Control unit adaptations	Calibration of the control module 'N47-5 (ESP control module)'	V1.00.001 or higher
S (221)	ESP-Electronic stability program	Control unit adaptations	Special functions	V1.00.001 or higher
S (221)	SGR-Radar sensors control unit	ECU Information		V1.00.001 or higher
S (221)	SGR-Radar sensors control unit	Read Codes		V1.00.001 or higher
S (221)	SGR-Radar sensors control unit	Erase Codes		V1.00.001 or higher
S (221)	Trailer recognition module	ECU Information		V1.00.001 or higher
S (221)	Trailer recognition module	Read Codes		V1.00.001 or higher
S (221)	Trailer recognition module	Erase Codes		V1.00.001 or higher
S (221)	Trailer recognition module	Live Data		V1.00.001 or higher
S (221)	Trailer recognition module	Active Test		V1.00.001 or higher
S (221)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
S (221)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
S (221)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher

S (221)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
S (221)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
S (221)	RevETR-LF-Left front reversible emergency tensioning retractor	Control unit adaptations	Reset the control module.	V1.00.001 or higher
S (221)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
S (221)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
S (221)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
S (221)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
S (221)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
S (221)	RevETR-RF-Right front reversible emergency tensioning retractor	Control unit adaptations	Reset the control module.	V1.00.001 or higher
S (221)	XALWA-L-Xenon headlamp, left	ECU Information		V1.00.001 or higher

S (221)	XALWA-L-Xenon headlamp, left	Read Codes		V1.00.001 or higher
S (221)	XALWA-L-Xenon headlamp, left	Erase Codes		V1.00.001 or higher
S (221)	XALWA-L-Xenon headlamp, left	Live Data		V1.00.001 or higher
S (221)	XALWA-L-Xenon headlamp, left	Active Test		V1.00.001 or higher
S (221)	XALWA-L-Xenon headlamp, left	Control unit adaptations	Tourist mode- Adaptation of the headlamps from left hand traffic system to right hand traffic system or vice versa.	V1.00.001 or higher
S (221)	XALWA-L-Xenon headlamp, left	Control unit adaptations	Resetting the operating hours counter	V1.00.001 or higher
S (221)	XALWA-R-Xenon headlamp, right	ECU Information		V1.00.001 or higher
S (221)	XALWA-R-Xenon headlamp, right	Read Codes		V1.00.001 or higher
S (221)	XALWA-R-Xenon headlamp, right	Erase Codes		V1.00.001 or higher
S (221)	XALWA-R-Xenon headlamp, right	Live Data		V1.00.001 or higher
S (221)	XALWA-R-Xenon headlamp, right	Active Test		V1.00.001 or higher
S (221)	XALWA-R-Xenon headlamp, right	Control unit adaptations	Tourist mode- Adaptation of the headlamps from left hand traffic system to right hand traffic system or vice versa.	V1.00.001 or higher
S (221)	XALWA-R-Xenon headlamp, right	Control unit adaptations	Resetting the operating hours counter	V1.00.001 or higher
S (221)	MFK-Multifunction camera	ECU Information		V1.00.001 or higher
S (221)	MFK-Multifunction camera	Read Codes		V1.00.001 or higher

S (221)	MFK-Multifunction camera	Erase Codes		V1.00.001 or higher
S (221)	MFK-Multifunction camera	Live Data		V1.00.001 or higher
S (221)	MFK-Multifunction camera	Control unit adaptations	Calibration	V1.00.001 or higher
S (221)	PTS-PARKTRONIC	ECU Information		V1.00.001 or higher
S (221)	PTS-PARKTRONIC	Read Codes		V1.00.001 or higher
S (221)	PTS-PARKTRONIC	Erase Codes		V1.00.001 or higher
S (221)	PTS-PARKTRONIC	Live Data		V1.00.001 or higher
S (221)	PTS-PARKTRONIC	Active Test		V1.00.001 or higher
S (221)	D2B-COMAND, MCS or AUDIO	ECU Information		V1.00.001 or higher
S (221)	D2B-COMAND, MCS or AUDIO	Read Codes		V1.00.001 or higher
S (221)	D2B-COMAND, MCS or AUDIO	Erase Codes		V1.00.001 or higher
S (221)	D2B-COMAND, MCS or AUDIO	Live Data		V1.00.001 or higher
S (221)	TV-TV tuner(AGW)	ECU Information		V1.00.001 or higher
S (221)	TV-TV tuner(AGW)	Read Codes		V1.00.001 or higher
S (221)	TV-TV tuner(AGW)	Erase Codes		V1.00.001 or higher
S (221)	DS-LF-Left front dynamic seat	ECU Information		V1.00.001 or higher
S (221)	DS-LF-Left front dynamic seat	Read Codes		V1.00.001 or higher
S (221)	DS-LF-Left front dynamic seat	Erase Codes		V1.00.001 or higher
S (221)	DS-LF-Left front dynamic seat	Live Data		V1.00.001 or higher
S (221)	DS-LF-Left front dynamic seat	Active Test		V1.00.001 or higher
S (221)	DS-RF-Right front dynamic seat	ECU Information		V1.00.001 or higher
S (221)	DS-RF-Right front dynamic seat	Read Codes		V1.00.001 or higher



S (221)	DS-RF-Right front dynamic seat	Erase Codes		V1.00.001 or higher
S (221)	DS-RF-Right front dynamic seat	Live Data		V1.00.001 or higher
S (221)	DS-RF-Right front dynamic seat	Active Test		V1.00.001 or higher
S (221)	SGR-Radar sensors control unit	ECU Information		V1.00.001 or higher
S (221)	SGR-Radar sensors control unit	Read Codes		V1.00.001 or higher
S (221)	SGR-Radar sensors control unit	Erase Codes		V1.00.001 or higher
S (221)	SGR-Radar sensors control unit	Live Data		V1.00.001 or higher
S (221)	SGR-Radar sensors control unit	Active Test		V1.00.001 or higher
S (221)	MED 17.7-Motor electronics for direct injection 17.7	ECU Information		V1.00.001 or higher
S (221)	MED 17.7-Motor electronics for direct injection 17.7	Read Codes		V1.00.001 or higher
S (221)	MED 17.7-Motor electronics for direct injection 17.7	Erase Codes		V1.00.001 or higher
S (221)	MED 17.7-Motor electronics for direct injection 17.7	Live Data		V1.00.001 or higher
S (221)	MED 17.7-Motor electronics for direct injection 17.7	Active Test		V1.00.001 or higher
S (221)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	Variant coding	V1.00.001 or higher

S (221)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	Learning processes	V1.00.001 or higher
S (221)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	Correction programming	V1.00.001 or higher
S (221)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
S (221)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
S (221)	ME-SF 17.7-Motor electronics 17.7	ECU Information		V1.00.001 or higher
S (221)	ME-SF 17.7-Motor electronics 17.7	Read Codes		V1.00.001 or higher
S (221)	ME-SF 17.7-Motor electronics 17.7	Erase Codes		V1.00.001 or higher
S (221)	ME-SF 17.7-Motor electronics 17.7	Live Data		V1.00.001 or higher
S (221)	ME-SF 17.7-Motor electronics 17.7	Active Test		V1.00.001 or higher
S (221)	ME-SF 17.7-Motor electronics 17.7	Control unit adaptations	Learning processes	V1.00.001 or higher
S (221)	ME-SF 17.7-Motor electronics 17.7	Control unit adaptations	Correction programming	V1.00.001 or higher
S (221)	ME-SF 17.7-Motor electronics 17.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
S (221)	ME-SF 17.7-Motor electronics 17.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
S (221)	SG-EM - Electric motor control unit	ECU Information		V1.00.001 or higher

S (221)	SG-EM - Electric motor control unit	Read Codes		V1.00.001 or higher
S (221)	SG-EM - Electric motor control unit	Erase Codes		V1.00.001 or higher
S (221)	SG-EM - Electric motor control unit	Live Data		V1.00.001 or higher
S (221)	SG-EM - Electric motor control unit	Active Test		V1.00.001 or higher
S (221)	RBS-Regenerative braking system	ECU Information		V1.00.001 or higher
S (221)	RBS-Regenerative braking system	Read Codes		V1.00.001 or higher
S (221)	RBS-Regenerative braking system	Erase Codes		V1.00.001 or higher
S (221)	RBS-Regenerative braking system	Live Data		V1.00.001 or higher
S (221)	RBS-Regenerative braking system	Control unit adaptations	Road test	V1.00.001 or higher
S (221)	RBS-Regenerative braking system	Control unit adaptations	Clear the zero point offset error of the component 'N49 (Steering Angle Sensor (SAS))'.	V1.00.001 or higher
S (221)	RBS-Regenerative braking system	Control unit adaptations	Calibration of the control module 'RBS'	V1.00.001 or higher
S (221)	RBS-Regenerative braking system	Control unit adaptations	Calibration of the component 'B37/1 (Pedal angle sensor)'	V1.00.001 or higher
S (221)	RBS-Regenerative braking system	Control unit adaptations	Special functions	V1.00.001 or higher
S (221)	SG-BMS - Battery management system control unit	ECU Information		V1.00.001 or higher

S (221)	SG-BMS - Battery management system control unit	Read Codes		V1.00.001 or higher
S (221)	SG-BMS - Battery management system control unit	Erase Codes		V1.00.001 or higher
S (221)	SG-BMS - Battery management system control unit	Live Data		V1.00.001 or higher
S (221)	SG-DDW - DC/DC converter control unit	ECU Information		V1.00.001 or higher
S (221)	SG-DDW - DC/DC converter control unit	Read Codes		V1.00.001 or higher
S (221)	SG-DDW - DC/DC converter control unit	Erase Codes		V1.00.001 or higher
S (221)	SG-DDW - DC/DC converter control unit	Live Data		V1.00.001 or higher
S (221)	CDI 3-Common Rail Diesel Injection3	ECU Information		V1.00.001 or higher
S (221)	CDI 3-Common Rail Diesel Injection3	Read Codes		V1.00.001 or higher
S (221)	CDI 3-Common Rail Diesel Injection3	Erase Codes		V1.00.001 or higher
S (221)	CDI 3-Common Rail Diesel Injection3	Live Data		V1.00.001 or higher
S (221)	CDI 3-Common Rail Diesel Injection3	Active Test		V1.00.001 or higher
S (221)	CDI 3-Common Rail Diesel Injection3	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
S (221)	CDI 3-Common Rail Diesel Injection3	Control unit adaptations	Learning process	V1.00.001 or higher

S (221)	CDI 3-Common Rail Diesel Injection3	Control unit adaptations	Variant coding	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel Particulate Filter'	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher

S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B28/8 (Diesel Particulate Filter (DPF) differential pressure sensor)'	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y74 (Pressure control valve)'	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'G3/2 (Oxygen sensor upstream of the Three Way Catalyst (TWC/KAT))'	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel oxidation catalytic converter'	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Learning of the throttle valve stop	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Activate the fuel pump.	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher

S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Rapid teach-in of zero quantity calibration values	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Selective Catalytic Reduction'-Catalytic converter	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " B16/15 (Temperature sensor upstream of the Selective Catalytic Reduction (SCR) catalytic converter)	V1.00.001 or higher

S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " N37/7b1 (Nitrogen Oxide (NOx) sensor downstream of the Diesel Particulate Filter (DPF))	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " N37/8b1 (Nitrogen Oxide (NOx) sensor downstream of the Selective Catalytic Reduction (SCR) catalytic converter)	V1.00.001 or higher
S (221)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " Y129 (AdBlue metering valve)	V1.00.001 or higher
S (221)	SCR-Selective Catalytic Reduction	ECU Information		V1.00.001 or higher
S (221)	SCR-Selective Catalytic Reduction	Read Codes		V1.00.001 or higher
S (221)	SCR-Selective Catalytic Reduction	Erase Codes		V1.00.001 or higher
S (221)	SCR-Selective Catalytic Reduction	Live Data		V1.00.001 or higher
S (221)	SCR-Selective Catalytic Reduction	Active Test		V1.00.001 or higher
S (221)	SCR-Selective Catalytic Reduction	Control unit adaptations	Refill the AdBlue.	V1.00.001 or higher



S (221)	SCR-Selective Catalytic Reduction	Control unit adaptations	Clearing the adaptation values after replacement of AdBlue fluid	V1.00.001 or higher
S (221)	SCR-Selective Catalytic Reduction	Control unit adaptations	Teach-in process after replacement of component 'Y129 (AdBlue metering valve)'	V1.00.001 or higher
S (220)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
S (220)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
S (220)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
S (220)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
S (220)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
S (220)	ME2-SFI-Motor electronics 2	Special functions	Variant coding	V1.00.001 or higher
S (220)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
S (220)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
S (220)	Transmission	ECU Information		V1.00.001 or higher
S (220)	Transmission	Read Codes		V1.00.001 or higher
S (220)	Transmission	Erase Codes		V1.00.001 or higher
S (220)	Transmission	Live Data		V1.00.001 or higher
S (220)	Transmission	Active Test		V1.00.001 or higher
S (220)	Transmission	Control unit adaptations	Definition	V1.00.001 or higher
S (220)	Transmission	Control unit adaptations	Display adaption data.	V1.00.001 or higher
S (220)	Transmission	Control unit adaptations	Limit values of adaptation with additional information	V1.00.001 or higher
S (220)	Transmission	Control unit adaptations	Resetting of the adaptation data	V1.00.001 or higher

S (220)	Transmission	Control unit adaptations	Performing adaptation when transmission is replaced or repaired	V1.00.001 or higher
S (220)	Transmission	Control unit adaptations	Performing adaptation in the event of shift quality complaints	V1.00.001 or higher
S (220)	Transmission	Control unit adaptations	Read the coding.	V1.00.001 or higher
S (220)	Transmission	Special functions	Transmission oil condition	V1.00.001 or higher
S (220)	Transmission	Special functions	Operational check	V1.00.001 or higher
S (220)	Transmission	Special functions	Emergency running	V1.00.001 or higher
S (220)	Transmission	Special functions	Diagnosis routines	V1.00.001 or higher
S (220)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
S (220)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
S (220)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
S (220)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
S (220)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
S (220)	ESM-Electronic selector module	Control unit adaptations	Detach the transport protection of control module 'N15/5 (Electronic Selector Module (ESM/EWM))', personalize or activate the control module.	V1.00.001 or higher
S (220)	DTR-Distronic	ECU Information		V1.00.001 or higher
S (220)	DTR-Distronic	Read Codes		V1.00.001 or higher
S (220)	DTR-Distronic	Erase Codes		V1.00.001 or higher

S (220)	DTR-Distronic	Live Data		V1.00.001 or higher
S (220)	DTR-Distronic	Control unit adaptations	●	V1.00.001 or higher
S (220)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
S (220)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
S (220)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
S (220)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
S (220)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
S (220)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
S (220)	ESP-Electronic stability program	Control unit adaptations	Learning process	V1.00.001 or higher
S (220)	ESP-Electronic stability program	Control unit adaptations	Resetting of the variant locking	V1.00.001 or higher
S (220)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
S (220)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
S (220)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
S (220)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
S (220)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
S (220)	TPM - Tire pressure monitor	Control unit adaptations	●	V1.00.001 or higher
S (220)	Suspension	ECU Information		V1.00.001 or higher
S (220)	Suspension	Read Codes		V1.00.001 or higher
S (220)	Suspension	Erase Codes		V1.00.001 or higher
S (220)	Suspension	Live Data		V1.00.001 or higher
S (220)	Suspension	Active Test		V1.00.001 or higher
S (220)	Suspension	Special functions	Initial start-up	V1.00.001 or higher
S (220)	Suspension	Special functions	Control module adaptations	V1.00.001 or higher
S (220)	Suspension	Special functions	Pneumatic tests	V1.00.001 or higher

S (220)	AB-Airbag	ECU Information		V1.00.001 or higher
S (220)	AB-Airbag	Read Codes		V1.00.001 or higher
S (220)	AB-Airbag	Erase Codes		V1.00.001 or higher
S (220)	AB-Airbag	Live Data		V1.00.001 or higher
S (220)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
S (220)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
S (220)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
S (220)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
S (220)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher
S (220)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track with the workshop key.	V1.00.001 or higher
S (220)	EZS-Electronic ignition switch	Control unit adaptations	Program the replacement keys.	V1.00.001 or higher
S (220)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher
S (220)	EZS-Electronic ignition switch	Control unit adaptations	Activate the Electronic Ignition Switch (EIS/EZS).	V1.00.001 or higher
S (220)	SAM-FL-Front left signal acquisition and actuation module	ECU Information		V1.00.001 or higher
S (220)	SAM-FL-Front left signal acquisition and actuation module	Read Codes		V1.00.001 or higher
S (220)	SAM-FL-Front left signal acquisition and actuation module	Erase Codes		V1.00.001 or higher

S (220)	SAM-FL-Front left signal acquisition and actuation module	Live Data		V1.00.001 or higher
S (220)	SAM-FL-Front left signal acquisition and actuation module	Active Test		V1.00.001 or higher
S (220)	SAM-FL-Front left signal acquisition and actuation module	Control unit adaptations	Steering Column Module (SCM/MRM)	V1.00.001 or higher
S (220)	SAM-FL-Front left signal acquisition and actuation module	Control unit adaptations	Rain sensor	V1.00.001 or higher
S (220)	SAM-FR-Front right signal acquisition and actuation module	ECU Information		V1.00.001 or higher
S (220)	SAM-FR-Front right signal acquisition and actuation module	Read Codes		V1.00.001 or higher
S (220)	SAM-FR-Front right signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
S (220)	SAM-FR-Front right signal acquisition and actuation module	Live Data		V1.00.001 or higher
S (220)	SAM-FR-Front right signal acquisition and actuation module	Active Test		V1.00.001 or higher

S (220)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
S (220)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
S (220)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
S (220)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
S (220)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
S (220)	AHE-Trailer recognition	ECU Information		V1.00.001 or higher
S (220)	AHE-Trailer recognition	Read Codes		V1.00.001 or higher
S (220)	AHE-Trailer recognition	Erase Codes		V1.00.001 or higher
S (220)	AHE-Trailer recognition	Live Data		V1.00.001 or higher
S (220)	AHE-Trailer recognition	Active Test		V1.00.001 or higher
S (220)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
S (220)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
S (220)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
S (220)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
S (220)	OCP-Overhead control panel	Active Test		V1.00.001 or higher

S (220)	OCP-Overhead control panel	Control unit adaptations	Setting of the limit position for excessive force limiter	V1.00.001 or higher
S (220)	OCP-Overhead control panel	Control unit adaptations	Coding of the Close-via-tilt function	V1.00.001 or higher
S (220)	OCP-Overhead control panel	Control unit adaptations	Coding of the SR/SHD (Tilting/Sliding Sunroof) Automatic Operation function	V1.00.001 or higher
S (220)	PSE-Pneumatic system equipment	ECU Information		V1.00.001 or higher
S (220)	PSE-Pneumatic system equipment	Read Codes		V1.00.001 or higher
S (220)	PSE-Pneumatic system equipment	Erase Codes		V1.00.001 or higher
S (220)	PSE-Pneumatic system equipment	Live Data		V1.00.001 or higher
S (220)	PSE-Pneumatic system equipment	Active Test		V1.00.001 or higher
S (220)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
S (220)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
S (220)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
S (220)	UCP-Upper control panel	Live Data		V1.00.001 or higher
S (220)	UCP-Upper control panel	Active Test		V1.00.001 or higher
S (220)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
S (220)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
S (220)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
S (220)	KG-KEYLESS GO	Live Data		V1.00.001 or higher

S (220)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
S (220)	KG-KEYLESS GO	Control unit adaptations	Assign the transmitter card to key track.	V1.00.001 or higher
S (220)	KG-KEYLESS GO	Control unit adaptations	Assign the Keyless Go (KG) key to key track.	V1.00.001 or higher
S (220)	MSS-Special vehicle multifunction control module	ECU Information		V1.00.001 or higher
S (220)	MSS-Special vehicle multifunction control module	Read Codes		V1.00.001 or higher
S (220)	MSS-Special vehicle multifunction control module	Erase Codes		V1.00.001 or higher
S (220)	MSS-Special vehicle multifunction control module	Live Data		V1.00.001 or higher
S (220)	MSS-Special vehicle multifunction control module	Active Test		V1.00.001 or higher
S (220)	MSS-Special vehicle multifunction control module	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
S (220)	HRA-Headlamp range adjustment	ECU Information		V1.00.001 or higher
S (220)	HRA-Headlamp range adjustment	Read Codes		V1.00.001 or higher
S (220)	HRA-Headlamp range adjustment	Erase Codes		V1.00.001 or higher
S (220)	HRA-Headlamp range adjustment	Live Data		V1.00.001 or higher
S (220)	HRA-Headlamp range adjustment	Active Test		V1.00.001 or higher



S (220)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
S (220)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
S (220)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
S (220)	ICM-Instrument cluster with maintenance interval display	Live Data		V1.00.001 or higher
S (220)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
S (220)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
S (220)	ICM-Instrument cluster with maintenance interval display	Control unit adaptations	Set the time.	V1.00.001 or higher
S (220)	ICM-Instrument cluster with maintenance interval display	Control unit adaptations	Setting the main odometer forward and back	V1.00.001 or higher
S (220)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
S (220)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
S (220)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
S (220)	PTS-Parktronic system	Live Data		V1.00.001 or higher
S (220)	PTS-Parktronic system	Active Test		V1.00.001 or higher
S (220)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
S (220)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher

S (220)	SCM [MRM]- Steering column module	Erase Codes		V1.00.001 or higher
S (220)	SCM [MRM]- Steering column module	Live Data		V1.00.001 or higher
S (220)	SCM [MRM]- Steering column module	Active Test		V1.00.001 or higher
S (220)	SCM [MRM]- Steering column module	Initial startup	●	V1.00.001 or higher
S (220)	TSTH-Radio remote control of stationary heater	ECU Information		V1.00.001 or higher
S (220)	TSTH-Radio remote control of stationary heater	Read Codes		V1.00.001 or higher
S (220)	TSTH-Radio remote control of stationary heater	Erase Codes		V1.00.001 or higher
S (220)	TSTH-Radio remote control of stationary heater	Live Data		V1.00.001 or higher
S (220)	TSTH-Radio remote control of stationary heater	Active Test		V1.00.001 or higher
S (220)	D2B-COMAND, MCS or AUDIO	ECU Information		V1.00.001 or higher
S (220)	D2B-COMAND, MCS or AUDIO	Read Codes		V1.00.001 or higher
S (220)	D2B-COMAND, MCS or AUDIO	Erase Codes		V1.00.001 or higher
S (220)	D2B-COMAND, MCS or AUDIO	Live Data		V1.00.001 or higher
S (220)	D2B-COMAND, MCS or AUDIO	Active Test		V1.00.001 or higher
S (220)	CDC-CD changer	ECU Information		V1.00.001 or higher
S (220)	CDC-CD changer	Read Codes		V1.00.001 or higher
S (220)	CDC-CD changer	Erase Codes		V1.00.001 or higher
S (220)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	ECU Information		V1.00.001 or higher

S (220)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Read Codes		V1.00.001 or higher
S (220)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Erase Codes		V1.00.001 or higher
S (220)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Live Data		V1.00.001 or higher
S (220)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Active Test		V1.00.001 or higher
S (220)	SOUND- Sound system	ECU Information		V1.00.001 or higher
S (220)	SOUND- Sound system	Read Codes		V1.00.001 or higher
S (220)	SOUND- Sound system	Erase Codes		V1.00.001 or higher
S (220)	SOUND- Sound system	Live Data		V1.00.001 or higher
S (220)	VCS-Voice control system	ECU Information		V1.00.001 or higher
S (220)	VCS-Voice control system	Read Codes		V1.00.001 or higher
S (220)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
S (220)	TV-TV tuner	ECU Information		V1.00.001 or higher
S (220)	TV-TV tuner	Read Codes		V1.00.001 or higher
S (220)	TV-TV tuner	Erase Codes		V1.00.001 or higher
S (220)	TV-TV tuner	Live Data		V1.00.001 or higher
S (220)	TV-TV tuner	Active Test		V1.00.001 or higher

S (220)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	ECU Information		V1.00.001 or higher
S (220)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Read Codes		V1.00.001 or higher
S (220)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Erase Codes		V1.00.001 or higher
S (220)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Live Data		V1.00.001 or higher
S (220)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Active Test		V1.00.001 or higher
S (220)	DN-Dynamic navigation by means of CTEL	ECU Information		V1.00.001 or higher
S (220)	DN-Dynamic navigation by means of CTEL	Read Codes		V1.00.001 or higher
S (220)	DN-Dynamic navigation by means of CTEL	Erase Codes		V1.00.001 or higher
S (220)	DN-Dynamic navigation by means of CTEL	Live Data		V1.00.001 or higher
S (220)	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
S (220)	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher
S (220)	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher

S (220)	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher
S (220)	DCM-FL-Door control module front left	Active Test		V1.00.001 or higher
S (220)	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
S (220)	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher
S (220)	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
S (220)	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
S (220)	DCM-FR-Door control module front right	Active Test		V1.00.001 or higher
S (220)	DCM-RL-Door control module rear left	ECU Information		V1.00.001 or higher
S (220)	DCM-RL-Door control module rear left	Read Codes		V1.00.001 or higher
S (220)	DCM-RL-Door control module rear left	Erase Codes		V1.00.001 or higher
S (220)	DCM-RL-Door control module rear left	Live Data		V1.00.001 or higher
S (220)	DCM-RL-Door control module rear left	Active Test		V1.00.001 or higher
S (220)	DCM-RR-Door control module rear right	ECU Information		V1.00.001 or higher
S (220)	DCM-RR-Door control module rear right	Read Codes		V1.00.001 or higher
S (220)	DCM-RR-Door control module rear right	Erase Codes		V1.00.001 or higher
S (220)	DCM-RR-Door control module rear right	Live Data		V1.00.001 or higher

S (220)	DCM-RR-Door control module rear right	Active Test		V1.00.001 or higher
S (220)	ESA-R-Electric seat adjustment rear	ECU Information		V1.00.001 or higher
S (220)	ESA-R-Electric seat adjustment rear	Read Codes		V1.00.001 or higher
S (220)	ESA-R-Electric seat adjustment rear	Erase Codes		V1.00.001 or higher
S (220)	ESA-R-Electric seat adjustment rear	Live Data		V1.00.001 or higher
S (220)	ESA-R-Electric seat adjustment rear	Active Test		V1.00.001 or higher
S (220)	ESA-R-Electric seat adjustment rear	Control unit adaptations	Normalization of the fore/aft adjustment of the left seat	V1.00.001 or higher
S (220)	ESA-R-Electric seat adjustment rear	Control unit adaptations	Normalization of the inclination adjustment of the left seat cushion	V1.00.001 or higher
S (220)	ESA-R-Electric seat adjustment rear	Control unit adaptations	Normalization of the fore/aft adjustment of the right seat	V1.00.001 or higher
S (220)	ESA-R-Electric seat adjustment rear	Control unit adaptations	Normalization of the inclination adjustment of the right seat cushion	V1.00.001 or higher
S (220)	ESA-FL-Electric seat adjustment front left	ECU Information		V1.00.001 or higher
S (220)	ESA-FL-Electric seat adjustment front left	Read Codes		V1.00.001 or higher
S (220)	ESA-FL-Electric seat adjustment front left	Erase Codes		V1.00.001 or higher

S (220)	ESA-FL-Electric seat adjustment front left	Live Data		V1.00.001 or higher
S (220)	ESA-FL-Electric seat adjustment front left	Active Test		V1.00.001 or higher
S (220)	ESA-FL-Electric seat adjustment front left	Control unit adaptations	Normalize seat adjustment.	V1.00.001 or higher
S (220)	ESA-FL-Electric seat adjustment front left	Control unit adaptations	Reduce the longitudinal travel with the retaining clip installed on the fore/aft adjustment rail.	V1.00.001 or higher
S (220)	ESA-FR-Electric seat adjustment front right	ECU Information		V1.00.001 or higher
S (220)	ESA-FR-Electric seat adjustment front right	Read Codes		V1.00.001 or higher
S (220)	ESA-FR-Electric seat adjustment front right	Erase Codes		V1.00.001 or higher
S (220)	ESA-FR-Electric seat adjustment front right	Live Data		V1.00.001 or higher
S (220)	ESA-FR-Electric seat adjustment front right	Active Test		V1.00.001 or higher
S (220)	ESA-FR-Electric seat adjustment front right	Control unit adaptations	Normalize seat adjustment.	V1.00.001 or higher
S (220)	ESA-FR-Electric seat adjustment front right	Control unit adaptations	Reduce the longitudinal travel with the retaining clip installed on the fore/aft adjustment rail.	V1.00.001 or higher
S (220)	OSB-R-Multicontour backrest rear	ECU Information		V1.00.001 or higher
S (220)	OSB-R-Multicontour backrest rear	Read Codes		V1.00.001 or higher

S (220)	OSB-R- Multicontour backrest rear	Erase Codes		V1.00.001 or higher
S (220)	OSB-R- Multicontour backrest rear	Live Data		V1.00.001 or higher
S (220)	OSB-R- Multicontour backrest rear	Active Test		V1.00.001 or higher
S (220)	OSB-FL- Multicontour backrest front left	ECU Information		V1.00.001 or higher
S (220)	OSB-FL- Multicontour backrest front left	Read Codes		V1.00.001 or higher
S (220)	OSB-FL- Multicontour backrest front left	Erase Codes		V1.00.001 or higher
S (220)	OSB-FL- Multicontour backrest front left	Live Data		V1.00.001 or higher
S (220)	OSB-FL- Multicontour backrest front left	Active Test		V1.00.001 or higher
S (220)	OSB-FR- Multicontour backrest front right	ECU Information		V1.00.001 or higher
S (220)	OSB-FR- Multicontour backrest front right	Read Codes		V1.00.001 or higher
S (220)	OSB-FR- Multicontour backrest front right	Erase Codes		V1.00.001 or higher
S (220)	OSB-FR- Multicontour backrest front right	Live Data		V1.00.001 or higher



S (220)	OSB-FR-Multicontour backrest front right	Active Test		V1.00.001 or higher
S (220)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
S (220)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
S (220)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
S (220)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
S (220)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
S (220)	AAC-Automatic air conditioning	Control unit adaptations	Special settings	V1.00.001 or higher
S (220)	AAC-Automatic air conditioning	Special functions	Operational check	V1.00.001 or higher
S (220)	REAR AC- Rear air conditioning	ECU Information		V1.00.001 or higher
S (220)	REAR AC- Rear air conditioning	Read Codes		V1.00.001 or higher
S (220)	REAR AC- Rear air conditioning	Erase Codes		V1.00.001 or higher
S (220)	REAR AC- Rear air conditioning	Live Data		V1.00.001 or higher
S (220)	REAR AC- Rear air conditioning	Active Test		V1.00.001 or higher
S (220)	TSTH-Radio remote control of stationary heater	ECU Information		V1.00.001 or higher
S (220)	TSTH-Radio remote control of stationary heater	Read Codes		V1.00.001 or higher
S (220)	TSTH-Radio remote control of stationary heater	Erase Codes		V1.00.001 or higher
S (220)	TSTH-Radio remote control of stationary heater	Live Data		V1.00.001 or higher
S (220)	HSW-Heated steering wheel	ECU Information		V1.00.001 or higher
S (220)	HSW-Heated steering wheel	Read Codes		V1.00.001 or higher
S (220)	HSW-Heated steering wheel	Erase Codes		V1.00.001 or higher
S (220)	HSW-Heated steering wheel	Live Data		V1.00.001 or higher

S (220)	HSW-Heated steering wheel	Active Test		V1.00.001 or higher
S (220)	STH-Stationary heater	ECU Information		V1.00.001 or higher
S (220)	STH-Stationary heater	Read Codes		V1.00.001 or higher
S (220)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
S (220)	STH-Stationary heater	Live Data		V1.00.001 or higher
S (220)	STH-Stationary heater	Active Test		V1.00.001 or higher
S (220)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
S (220)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
S (220)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
S (220)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher
S (220)	ETC-Electronic transmission control	Control unit adaptations	Detach the transport protection of control module 'ETC', personalize or activate the control module.	V1.00.001 or higher
S (220)	ETC-Electronic transmission control	Control unit adaptations	Learning process: Y3/8s1 (Selection range sensor)	V1.00.001 or higher
S (220)	ETC-Electronic transmission control	Control unit adaptations	Learning to the Drive Authorization System (DAS/FBS)	V1.00.001 or higher
S (220)	ETC-Electronic transmission control	Special functions	Turn off the incline recognition for dynamometer mode.	V1.00.001 or higher

S (220)	ETC-Electronic transmission control	Special functions	Transmission adaptation	V1.00.001 or higher
S (220)	DTR-Distronic	ECU Information		V1.00.001 or higher
S (220)	DTR-Distronic	Read Codes		V1.00.001 or higher
S (220)	DTR-Distronic	Erase Codes		V1.00.001 or higher
S (220)	DTR-Distronic	Live Data		V1.00.001 or higher
S (220)	AB-Airbag	ECU Information		V1.00.001 or higher
S (220)	AB-Airbag	Read Codes		V1.00.001 or higher
S (220)	AB-Airbag	Erase Codes		V1.00.001 or higher
S (220)	AB-Airbag	Live Data		V1.00.001 or higher
S (220)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
S (220)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
S (220)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
S (220)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
S (220)	HRA-Headlamp range adjustment	ECU Information		V1.00.001 or higher
S (220)	HRA-Headlamp range adjustment	Read Codes		V1.00.001 or higher
S (220)	HRA-Headlamp range adjustment	Erase Codes		V1.00.001 or higher
S (220)	HRA-Headlamp range adjustment	Live Data		V1.00.001 or higher
S (220)	HRA-Headlamp range adjustment	Active Test		V1.00.001 or higher
S (220)	HLCM-L-Left headlamp control module	ECU Information		V1.00.001 or higher
S (220)	HLCM-L-Left headlamp control module	Read Codes		V1.00.001 or higher

S (220)	HLCM-L-Left headlamp control module	Erase Codes		V1.00.001 or higher
S (220)	HLCM-L-Left headlamp control module	Live Data		V1.00.001 or higher
S (220)	HLCM-L-Left headlamp control module	Active Test		V1.00.001 or higher
S (220)	HLCM-L-Left headlamp control module	Control unit adaptations	Zero position adjustment	V1.00.001 or higher
S (220)	HLCM-R-Right headlamp control module	ECU Information		V1.00.001 or higher
S (220)	HLCM-R-Right headlamp control module	Read Codes		V1.00.001 or higher
S (220)	HLCM-R-Right headlamp control module	Erase Codes		V1.00.001 or higher
S (220)	HLCM-R-Right headlamp control module	Live Data		V1.00.001 or higher
S (220)	CGW-Central gateway	ECU Information		V1.00.001 or higher
S (220)	CGW-Central gateway	Read Codes		V1.00.001 or higher
S (220)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
S (220)	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher
S (220)	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher
S (220)	CGW-Central gateway	Special functions	All codes	V1.00.001 or higher
S (220)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
S (220)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher

S (220)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
S (220)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
S (220)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
S (220)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
S (220)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
S (220)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
S (220)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
S (220)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
S (220)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
S (220)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
S (220)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
S (220)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
S (220)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
S (220)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
S (220)	UCP-Upper control panel	Live Data		V1.00.001 or higher

S (220)	UCP-Upper control panel	Active Test		V1.00.001 or higher
S (220)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
S (220)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
S (220)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
S (220)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
S (220)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
S (220)	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher
S (220)	SCM [MRM]-Steering column module	Live Data		V1.00.001 or higher
S (220)	SCM [MRM]-Steering column module	Active Test		V1.00.001 or higher
S (220)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
S (220)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
S (220)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
S (220)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher
S (220)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher

S (220)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
S (220)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher
S (220)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher
S (220)	CTEL-Control unit Telecommunication for telematics services	ECU Information		V1.00.001 or higher
S (220)	CTEL-Control unit Telecommunication for telematics services	Read Codes		V1.00.001 or higher
S (220)	CTEL-Control unit Telecommunication for telematics services	Erase Codes		V1.00.001 or higher
S (220)	CTEL-Control unit Telecommunication for telematics services	Live Data		V1.00.001 or higher
S (220)	COMAND or AUDIO	ECU Information		V1.00.001 or higher
S (220)	COMAND or AUDIO	Read Codes		V1.00.001 or higher
S (220)	COMAND or AUDIO	Erase Codes		V1.00.001 or higher

S (220)	COMAND or AUDIO	Live Data		V1.00.001 or higher
S (220)	COMAND or AUDIO	Active Test		V1.00.001 or higher
S (220)	COMAND or AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
S (220)	NAVI-Navigation system	ECU Information		V1.00.001 or higher
S (220)	NAVI-Navigation system	Read Codes		V1.00.001 or higher
S (220)	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
S (220)	NAVI-Navigation system	Live Data		V1.00.001 or higher
S (220)	NAVI-Navigation system	Active Test		V1.00.001 or higher
S (220)	CDC-CD changer	ECU Information		V1.00.001 or higher
S (220)	CDC-CD changer	Read Codes		V1.00.001 or higher
S (220)	CDC-CD changer	Erase Codes		V1.00.001 or higher
S (220)	CDC-CD changer	Live Data		V1.00.001 or higher
S (220)	CDC-CD changer	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
S (220)	VCS-Voice control system	ECU Information		V1.00.001 or higher
S (220)	VCS-Voice control system	Read Codes		V1.00.001 or higher
S (220)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
S (220)	VCS-Voice control system	Active Test		V1.00.001 or higher
S (220)	SOUND-Bose sound system	ECU Information		V1.00.001 or higher
S (220)	SOUND-Bose sound system	Read Codes		V1.00.001 or higher
S (220)	SOUND-Bose sound system	Erase Codes		V1.00.001 or higher
S (220)	SOUND-Bose sound system	Live Data		V1.00.001 or higher
S (220)	TV-TV tuner	ECU Information		V1.00.001 or higher
S (220)	TV-TV tuner	Read Codes		V1.00.001 or higher



S (220)	TV-TV tuner	Erase Codes		V1.00.001 or higher
S (220)	TV-TV tuner	Live Data		V1.00.001 or higher
S (220)	TV-TV tuner	Active Test		V1.00.001 or higher
S (220)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
S (220)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
S (220)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
S (220)	SDAR-Satellite radio	Live Data		V1.00.001 or higher
S (220)	Control unit TELE AID	ECU Information		V1.00.001 or higher
S (220)	Control unit TELE AID	Read Codes		V1.00.001 or higher
S (220)	Control unit TELE AID	Erase Codes		V1.00.001 or higher
S (220)	Control unit TELE AID	Live Data		V1.00.001 or higher
S (220)	TELE AID- Telematic services Emergency call	ECU Information		V1.00.001 or higher
S (220)	TELE AID- Telematic services Emergency call	Read Codes		V1.00.001 or higher
S (220)	TELE AID- Telematic services Emergency call	Erase Codes		V1.00.001 or higher
S (220)	TELE AID- Telematic services Emergency call	Live Data		V1.00.001 or higher
S (220)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher

S (220)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
S (220)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
S (220)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
S (220)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher
S (220)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
S (220)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
S (220)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher
S (220)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher

S (220)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
S (220)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
S (220)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher
S (220)	DS-LF-Left front dynamic seat	ECU Information		V1.00.001 or higher
S (220)	DS-LF-Left front dynamic seat	Read Codes		V1.00.001 or higher
S (220)	DS-LF-Left front dynamic seat	Erase Codes		V1.00.001 or higher
S (220)	DS-LF-Left front dynamic seat	Live Data		V1.00.001 or higher
S (220)	DS-LF-Left front dynamic seat	Active Test		V1.00.001 or higher
S (220)	DS-RF-Right front dynamic seat	ECU Information		V1.00.001 or higher
S (220)	DS-RF-Right front dynamic seat	Read Codes		V1.00.001 or higher
S (220)	DS-RF-Right front dynamic seat	Erase Codes		V1.00.001 or higher
S (220)	DS-RF-Right front dynamic seat	Live Data		V1.00.001 or higher
S (220)	DS-RF-Right front dynamic seat	Active Test		V1.00.001 or higher
S (220)	DSP-Pneumatic pump for dynamic seat	ECU Information		V1.00.001 or higher
S (220)	DSP-Pneumatic pump for dynamic seat	Read Codes		V1.00.001 or higher
S (220)	DSP-Pneumatic pump for dynamic seat	Erase Codes		V1.00.001 or higher

S (220)	DSP-Pneumatic pump for dynamic seat	Live Data		V1.00.001 or higher
S (220)	DSP-Pneumatic pump for dynamic seat	Active Test		V1.00.001 or higher
S (220)	STH-Stationary heater	ECU Information		V1.00.001 or higher
S (220)	STH-Stationary heater	Read Codes		V1.00.001 or higher
S (220)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
S (220)	STH-Stationary heater	Live Data		V1.00.001 or higher
S (220)	STH-Stationary heater	Active Test		V1.00.001 or higher
S (220)	ME-SFI 2.7-Motor electronics 2.7	ECU Information		V1.00.001 or higher
S (220)	ME-SFI 2.7-Motor electronics 2.7	Read Codes		V1.00.001 or higher
S (220)	ME-SFI 2.7-Motor electronics 2.7	Erase Codes		V1.00.001 or higher
S (220)	ME-SFI 2.7-Motor electronics 2.7	Live Data		V1.00.001 or higher
S (220)	CDI 2-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
S (220)	CDI 2-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
S (220)	CDI 2-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
S (220)	CDI 2-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
S (220)	CDI 2-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
S (220)	CDI 2-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
S (220)	CDI 2-Common Rail Diesel Injection	Control unit adaptations	Extension of run-on time Drive Authorization System (DAS/FBS) 3	V1.00.001 or higher

S (220)	CDI-V-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
S (220)	CDI-V-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
S (220)	CDI-V-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
S (220)	CDI-V-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
S (220)	CDI-V-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
S (220)	CDI-V-Common Rail Diesel Injection	Control unit adaptations	Extension of run- on time	V1.00.001 or higher
S (220)	CDI-V-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
S (220)	ME-SFI 2.7.1- Motor electronics 2.7.1	ECU Information		V1.00.001 or higher
S (220)	ME-SFI 2.7.1- Motor electronics 2.7.1	Read Codes		V1.00.001 or higher
S (220)	ME-SFI 2.7.1- Motor electronics 2.7.1	Erase Codes		V1.00.001 or higher
S (220)	ME-SFI 2.7.1- Motor electronics 2.7.1	Live Data		V1.00.001 or higher
S (220)	ME-SFI 2.7.1- Motor electronics 2.7.1	Active Test		V1.00.001 or higher
S (220)	ME-SFI 2.7.1- Motor electronics 2.7.1	Control unit adaptations	Learning processes	V1.00.001 or higher
S (220)	ME-SFI 2.7.1- Motor electronics 2.7.1	Control unit adaptations	Correction programming	V1.00.001 or higher
S (220)	ME-SFI 2.7.1- Motor electronics 2.7.1	Special functions	Variant coding	V1.00.001 or higher
S (220)	CDI 3-Common Rail Diesel Injection3	ECU Information		V1.00.001 or higher

S (220)	CDI 3-Common Rail Diesel Injection3	Read Codes		V1.00.001 or higher
S (220)	CDI 3-Common Rail Diesel Injection3	Erase Codes		V1.00.001 or higher
S (220)	CDI 3-Common Rail Diesel Injection3	Live Data		V1.00.001 or higher
S (220)	CDI 3-Common Rail Diesel Injection3	Active Test		V1.00.001 or higher
S (217)	ME - Motor electronics	ECU Information		V1.00.001 or higher
S (217)	ME - Motor electronics	Read Codes		V1.00.001 or higher
S (217)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
S (217)	ME - Motor electronics	Live Data		V1.00.001 or higher
S (217)	ME - Motor electronics	Active Test		V1.00.001 or higher
S (217)	VGS - Transmission control	ECU Information		V1.00.001 or higher
S (217)	VGS - Transmission control	Read Codes		V1.00.001 or higher
S (217)	VGS - Transmission control	Erase Codes		V1.00.001 or higher
S (217)	VGS - Transmission control	Live Data		V1.00.001 or higher
S (217)	VGS - Transmission control	Active Test		V1.00.001 or higher
S (217)	ISM - Shift module	ECU Information		V1.00.001 or higher
S (217)	ISM - Shift module	Read Codes		V1.00.001 or higher
S (217)	ISM - Shift module	Erase Codes		V1.00.001 or higher
S (217)	ISM - Shift module	Live Data		V1.00.001 or higher
S (217)	FSCU08 - Control unit Fuel pump	ECU Information		V1.00.001 or higher

S (217)	FSCU08 - Control unit Fuel pump	Read Codes		V1.00.001 or higher
S (217)	FSCU08 - Control unit Fuel pump	Erase Codes		V1.00.001 or higher
S (217)	FSCU08 - Control unit Fuel pump	Live Data		V1.00.001 or higher
S (217)	SCR - Selective catalytic reduction	ECU Information		V1.00.001 or higher
S (217)	SCR - Selective catalytic reduction	Read Codes		V1.00.001 or higher
S (217)	SCR - Selective catalytic reduction	Erase Codes		V1.00.001 or higher
S (217)	SCR - Selective catalytic reduction	Live Data		V1.00.001 or higher
S (217)	PTCU - Control unit powertrain	ECU Information		V1.00.001 or higher
S (217)	PTCU - Control unit powertrain	Read Codes		V1.00.001 or higher
S (217)	PTCU - Control unit powertrain	Erase Codes		V1.00.001 or higher
S (217)	PTCU - Control unit powertrain	Live Data		V1.00.001 or higher
S (217)	ESP - Electric stability program	ECU Information		V1.00.001 or higher
S (217)	ESP - Electric stability program	Read Codes		V1.00.001 or higher
S (217)	ESP - Electric stability program	Erase Codes		V1.00.001 or higher
S (217)	ESP - Electric stability program	Live Data		V1.00.001 or higher
S (217)	ESP - Electric stability program	Active Test		V1.00.001 or higher
S (217)	EFB - Electric parking brake	ECU Information		V1.00.001 or higher
S (217)	EFB - Electric parking brake	Read Codes		V1.00.001 or higher
S (217)	EFB - Electric parking brake	Erase Codes		V1.00.001 or higher
S (217)	EFB - Electric parking brake	Live Data		V1.00.001 or higher
S (217)	EFB - Electric parking brake	Active Test		V1.00.001 or higher
S (217)	ADS - Adaptive damping system	ECU Information		V1.00.001 or higher

S (217)	ADS - Adaptive damping system	Read Codes		V1.00.001 or higher
S (217)	ADS - Adaptive damping system	Erase Codes		V1.00.001 or higher
S (217)	ADS - Adaptive damping system	Live Data		V1.00.001 or higher
S (217)	ES - Electric power steering	ECU Information		V1.00.001 or higher
S (217)	ES - Electric power steering	Read Codes		V1.00.001 or higher
S (217)	ES - Electric power steering	Erase Codes		V1.00.001 or higher
S (217)	ES - Electric power steering	Live Data		V1.00.001 or higher
S (217)	SRS - Supplemental restraint system	ECU Information		V1.00.001 or higher
S (217)	SRS - Supplemental restraint system	Read Codes		V1.00.001 or higher
S (217)	SRS - Supplemental restraint system	Erase Codes		V1.00.001 or higher
S (217)	SRS - Supplemental restraint system	Live Data		V1.00.001 or higher
S (217)	SRS - Supplemental restraint system	Active Test		V1.00.001 or higher
S (217)	SG-FOND - Rear control unit	ECU Information		V1.00.001 or higher
S (217)	SG-FOND - Rear control unit	Read Codes		V1.00.001 or higher
S (217)	SG-FOND - Rear control unit	Erase Codes		V1.00.001 or higher
S (217)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher
S (217)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
S (217)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
S (217)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
S (217)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher



S (217)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
S (217)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
S (217)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
S (217)	Rear SAM - Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
S (217)	Rear SAM - Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
S (217)	Rear SAM - Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
S (217)	Rear SAM - Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
S (217)	ATA - ATA[EDW]/tow-away protection/interior protection	ECU Information		V1.00.001 or higher
S (217)	ATA - ATA[EDW]/tow-away protection/interior protection	Read Codes		V1.00.001 or higher

S (217)	ATA - ATA[EDW]/tow- away protection/interio r protection	Erase Codes		V1.00.001 or higher
S (217)	ATA - ATA[EDW]/tow- away protection/interio r protection	Live Data		V1.00.001 or higher
S (217)	PSD - Control module Panoramic sliding roof	ECU Information		V1.00.001 or higher
S (217)	PSD - Control module Panoramic sliding roof	Read Codes		V1.00.001 or higher
S (217)	PSD - Control module Panoramic sliding roof	Erase Codes		V1.00.001 or higher
S (217)	PSD - Control module Panoramic sliding roof	Live Data		V1.00.001 or higher
S (217)	MSC - MAGIC SKY CONTROL	ECU Information		V1.00.001 or higher
S (217)	MSC - MAGIC SKY CONTROL	Read Codes		V1.00.001 or higher
S (217)	MSC - MAGIC SKY CONTROL	Erase Codes		V1.00.001 or higher
S (217)	MSC - MAGIC SKY CONTROL	Live Data		V1.00.001 or higher
S (217)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
S (217)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
S (217)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
S (217)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
S (217)	KG-KEYLESS GO	Active Test		V1.00.001 or higher

S (217)	RevETR-LF - Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
S (217)	RevETR-LF - Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
S (217)	RevETR-LF - Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
S (217)	RevETR-LF - Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
S (217)	RevETR-RF - Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
S (217)	RevETR-RF - Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
S (217)	RevETR-RF - Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
S (217)	RevETR-RF - Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
S (217)	SG-SW-L - Left headlamp	ECU Information		V1.00.001 or higher
S (217)	SG-SW-L - Left headlamp	Read Codes		V1.00.001 or higher

S (217)	SG-SW-L - Left headlamp	Erase Codes		V1.00.001 or higher
S (217)	SG-SW-L - Left headlamp	Live Data		V1.00.001 or higher
S (217)	SG-SW-R - Right headlamp	ECU Information		V1.00.001 or higher
S (217)	SG-SW-R - Right headlamp	Read Codes		V1.00.001 or higher
S (217)	SG-SW-R - Right headlamp	Erase Codes		V1.00.001 or higher
S (217)	SG-SW-R - Right headlamp	Live Data		V1.00.001 or higher
S (217)	SG-LG - Charger	ECU Information		V1.00.001 or higher
S (217)	SG-LG - Charger	Read Codes		V1.00.001 or higher
S (217)	SG-LG - Charger	Erase Codes		V1.00.001 or higher
S (217)	SG-LG - Charger	Live Data		V1.00.001 or higher
S (217)	DC/DC - DC/DC converter	ECU Information		V1.00.001 or higher
S (217)	DC/DC - DC/DC converter	Read Codes		V1.00.001 or higher
S (217)	DC/DC - DC/DC converter	Erase Codes		V1.00.001 or higher
S (217)	DC/DC - DC/DC converter	Live Data		V1.00.001 or higher
S (217)	SCM - Steering column module	ECU Information		V1.00.001 or higher
S (217)	SCM - Steering column module	Read Codes		V1.00.001 or higher
S (217)	SCM - Steering column module	Erase Codes		V1.00.001 or higher
S (217)	SCM - Steering column module	Live Data		V1.00.001 or higher
S (217)	BMS - Battery management system	ECU Information		V1.00.001 or higher
S (217)	BMS - Battery management system	Read Codes		V1.00.001 or higher
S (217)	BMS - Battery management system	Erase Codes		V1.00.001 or higher
S (217)	BMS - Battery management system	Live Data		V1.00.001 or higher

S (217)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
S (217)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
S (217)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
S (217)	IC - Instrument cluster	Live Data		V1.00.001 or higher
S (217)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
S (217)	IC - Instrument cluster	Active Test		V1.00.001 or higher
S (217)	KOMO/mbrace - N112/2(Telematics services Communication module)/Notrufsystem	ECU Information		V1.00.001 or higher
S (217)	KOMO/mbrace - N112/2(Telematics services Communication module)/Notrufsystem	Read Codes		V1.00.001 or higher
S (217)	KOMO/mbrace - N112/2(Telematics services Communication module)/Notrufsystem	Erase Codes		V1.00.001 or higher
S (217)	KOMO/mbrace - N112/2(Telematics services Communication module)/Notrufsystem	Live Data		V1.00.001 or higher
S (217)	TPAD - Touchpad	ECU Information		V1.00.001 or higher
S (217)	TPAD - Touchpad	Read Codes		V1.00.001 or higher
S (217)	TPAD - Touchpad	Erase Codes		V1.00.001 or higher
S (217)	TPAD - Touchpad	Live Data		V1.00.001 or higher
S (217)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
S (217)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher

S (217)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher
S (217)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
S (217)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
S (217)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
S (217)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
S (217)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
S (217)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
S (217)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
S (217)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
S (217)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
S (217)	Head-up display - Head-up display	ECU Information		V1.00.001 or higher
S (217)	Head-up display - Head-up display	Read Codes		V1.00.001 or higher
S (217)	Head-up display - Head-up display	Erase Codes		V1.00.001 or higher
S (217)	Head-up display - Head-up display	Live Data		V1.00.001 or higher
S (217)	TB5 - TV tuner Tuner unit	ECU Information		V1.00.001 or higher
S (217)	TB5 - TV tuner Tuner unit	Read Codes		V1.00.001 or higher
S (217)	TB5 - TV tuner Tuner unit	Erase Codes		V1.00.001 or higher
S (217)	TB5 - TV tuner Tuner unit	Live Data		V1.00.001 or higher
S (217)	SOUND - Sound system	ECU Information		V1.00.001 or higher
S (217)	SOUND - Sound system	Read Codes		V1.00.001 or higher

S (217)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
S (217)	SOUND - Sound system	Live Data		V1.00.001 or higher
S (217)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
S (217)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
S (217)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
S (217)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
S (217)	DCU-LF - Left front door	ECU Information		V1.00.001 or higher
S (217)	DCU-LF - Left front door	Read Codes		V1.00.001 or higher
S (217)	DCU-LF - Left front door	Erase Codes		V1.00.001 or higher
S (217)	DCU-LF - Left front door	Live Data		V1.00.001 or higher
S (217)	DCU-RF - Right front door	ECU Information		V1.00.001 or higher
S (217)	DCU-RF - Right front door	Read Codes		V1.00.001 or higher
S (217)	DCU-RF - Right front door	Erase Codes		V1.00.001 or higher
S (217)	DCU-RF - Right front door	Live Data		V1.00.001 or higher
S (217)	ESA Driver - Electric seat adjustmnet Driver	ECU Information		V1.00.001 or higher
S (217)	ESA Driver - Electric seat adjustmnet Driver	Read Codes		V1.00.001 or higher
S (217)	ESA Driver - Electric seat adjustmnet Driver	Erase Codes		V1.00.001 or higher

S (217)	ESA Front passenger - Electric seat adjustment Front passenger	ECU Information		V1.00.001 or higher
S (217)	ESA Front passenger - Electric seat adjustment Front passenger	Read Codes		V1.00.001 or higher
S (217)	ESA Front passenger - Electric seat adjustment Front passenger	Erase Codes		V1.00.001 or higher
S (217)	MKS-LF - Left front multicontour seat	ECU Information		V1.00.001 or higher
S (217)	MKS-LF - Left front multicontour seat	Read Codes		V1.00.001 or higher
S (217)	MKS-LF - Left front multicontour seat	Erase Codes		V1.00.001 or higher
S (217)	MKS-LF - Left front multicontour seat	Live Data		V1.00.001 or higher
S (217)	MKS-RF - Right front multicontour seat	ECU Information		V1.00.001 or higher
S (217)	MKS-RF - Right front multicontour seat	Read Codes		V1.00.001 or higher
S (217)	MKS-RF - Right front multicontour seat	Erase Codes		V1.00.001 or higher
S (217)	MKS-RF - Right front multicontour seat	Live Data		V1.00.001 or higher



S (217)	HKS - Trunk lid control	ECU Information		V1.00.001 or higher
S (217)	HKS - Trunk lid control	Read Codes		V1.00.001 or higher
S (217)	HKS - Trunk lid control	Erase Codes		V1.00.001 or higher
S (217)	HKS - Trunk lid control	Live Data		V1.00.001 or higher
S (217)	PPAMKS - Pneumatic pump for multicontour seat	ECU Information		V1.00.001 or higher
S (217)	PPAMKS - Pneumatic pump for multicontour seat	Read Codes		V1.00.001 or higher
S (217)	PPAMKS - Pneumatic pump for multicontour seat	Erase Codes		V1.00.001 or higher
S (217)	PPAMKS - Pneumatic pump for multicontour seat	Live Data		V1.00.001 or higher
S (217)	AAC - Ari conditioning	ECU Information		V1.00.001 or higher
S (217)	AAC - Ari conditioning	Read Codes		V1.00.001 or higher
S (217)	AAC - Ari conditioning	Erase Codes		V1.00.001 or higher
S (217)	AAC - Ari conditioning	Live Data		V1.00.001 or higher
S (217)	SG-EM - Power electronics	ECU Information		V1.00.001 or higher
S (217)	SG-EM - Power electronics	Read Codes		V1.00.001 or higher
S (217)	SG-EM - Power electronics	Erase Codes		V1.00.001 or higher
S (217)	SG-EM - Power electronics	Live Data		V1.00.001 or higher
S (217)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
S (217)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
S (217)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
S (217)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher

S (217)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
S (217)	KAB - Control unit Camera cover	ECU Information		V1.00.001 or higher
S (217)	KAB - Control unit Camera cover	Read Codes		V1.00.001 or higher
S (217)	KAB - Control unit Camera cover	Erase Codes		V1.00.001 or higher
S (217)	KAB - Control unit Camera cover	Live Data		V1.00.001 or higher
S (217)	NSA - Night View Assist	ECU Information		V1.00.001 or higher
S (217)	NSA - Night View Assist	Read Codes		V1.00.001 or higher
S (217)	NSA - Night View Assist	Erase Codes		V1.00.001 or higher
S (217)	NSA - Night View Assist	Live Data		V1.00.001 or higher
S (217)	RFK/360 - camera	ECU Information		V1.00.001 or higher
S (217)	RFK/360 - camera	Read Codes		V1.00.001 or higher
S (217)	RFK/360 - camera	Erase Codes		V1.00.001 or higher
S (217)	RFK/360 - camera	Live Data		V1.00.001 or higher
S (217)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
S (217)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
S (217)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
S (217)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
S (217)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	ECU Information		V1.00.001 or higher

S (217)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	Read Codes		V1.00.001 or higher
S (217)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	Erase Codes		V1.00.001 or higher
S (217)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	Live Data		V1.00.001 or higher
S (217)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
S (217)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
S (217)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
S (217)	DTR - DISTRONIC	Live Data		V1.00.001 or higher
S (217)	SGR - Radar sensors control unit	ECU Information		V1.00.001 or higher
S (217)	SGR - Radar sensors control unit	Read Codes		V1.00.001 or higher
S (217)	SGR - Radar sensors control unit	Erase Codes		V1.00.001 or higher
S (217)	SGR - Radar sensors control unit	Live Data		V1.00.001 or higher
S (217)	PARK - Parking system	ECU Information		V1.00.001 or higher
S (217)	PARK - Parking system	Read Codes		V1.00.001 or higher
S (217)	PARK - Parking system	Erase Codes		V1.00.001 or higher
S (217)	PARK - Parking system	Live Data		V1.00.001 or higher
S (140)	HFM,ME2-Hot film engine management,Fuel injection and ignition system	ECU Information		V1.00.001 or higher

S (140)	HFM,ME2-Hot film engine management,Fuel injection and ignition system	Read Codes		V1.00.001 or higher
S (140)	HFM,ME2-Hot film engine management,Fuel injection and ignition system	Erase Codes		V1.00.001 or higher
S (140)	HFM,ME2-Hot film engine management,Fuel injection and ignition system	Live Data		V1.00.001 or higher
S (140)	HFM,ME2-Hot film engine management,Fuel injection and ignition system	Active Test		V1.00.001 or higher
S (140)	HFM,ME2-Hot film engine management,Fuel injection and ignition system	Control unit adaptations	Correction programming	V1.00.001 or higher
S (140)	HFM,ME2-Hot film engine management,Fuel injection and ignition system	Control unit adaptations	Self-adaptation	V1.00.001 or higher
S (140)	EFP,TPM,ISC-Electronic accelerator pedal,Cruise control,Idle speed control	ECU Information		V1.00.001 or higher
S (140)	EFP,TPM,ISC-Electronic accelerator pedal,Cruise control,Idle speed control	Read Codes		V1.00.001 or higher
S (140)	EFP,TPM,ISC-Electronic accelerator pedal,Cruise control,Idle speed control	Erase Codes		V1.00.001 or higher

S (140)	EGS,EAG- Electronic control for automatic transmission	ECU Information		V1.00.001 or higher
S (140)	EGS,EAG- Electronic control for automatic transmission	Read Codes		V1.00.001 or higher
S (140)	EGS,EAG- Electronic control for automatic transmission	Erase Codes		V1.00.001 or higher
S (140)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
S (140)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
S (140)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
S (140)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
S (140)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
S (140)	BAS-Brake assist	ECU Information		V1.00.001 or higher
S (140)	BAS-Brake assist	Read Codes		V1.00.001 or higher
S (140)	BAS-Brake assist	Erase Codes		V1.00.001 or higher
S (140)	BAS-Brake assist	Live Data		V1.00.001 or higher
S (140)	BAS-Brake assist	Active Test		V1.00.001 or higher
S (140)	SPS-Speed- sensitive power steering	ECU Information		V1.00.001 or higher
S (140)	SPS-Speed- sensitive power steering	Read Codes		V1.00.001 or higher
S (140)	SPS-Speed- sensitive power steering	Erase Codes		V1.00.001 or higher
S (140)	SPS-Speed- sensitive power steering	Live Data		V1.00.001 or higher

S (140)	AirBag	ECU Information		V1.00.001 or higher
S (140)	AirBag	Read Codes		V1.00.001 or higher
S (140)	AirBag	Erase Codes		V1.00.001 or higher
S (140)	RFL-Radio frequency locking/electric central locking	ECU Information		V1.00.001 or higher
S (140)	RFL-Radio frequency locking/electric central locking	Read Codes		V1.00.001 or higher
S (140)	RFL-Radio frequency locking/electric central locking	Erase Codes		V1.00.001 or higher
S (140)	RFL-Radio frequency locking/electric central locking	Live Data		V1.00.001 or higher
S (140)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
S (140)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
S (140)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
S (140)	PSE-Pneumatic system equipment	ECU Information		V1.00.001 or higher
S (140)	PSE-Pneumatic system equipment	Read Codes		V1.00.001 or higher
S (140)	PSE-Pneumatic system equipment	Erase Codes		V1.00.001 or higher
S (140)	KFB-Power windows, emergency opening, convenience closing, tilting/sliding roof	ECU Information		V1.00.001 or higher

S (140)	KFB-Power windows,emergency opening,convenience closing,tilting/sliding roof	Read Codes		V1.00.001 or higher
S (140)	KFB-Power windows,emergency opening,convenience closing,tilting/sliding roof	Erase Codes		V1.00.001 or higher
S (140)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
S (140)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
S (140)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
S (140)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
S (140)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
S (140)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
S (140)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
S (140)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
CLA (117)	ME - Motor electronics	ECU Information		V1.00.001 or higher
CLA (117)	ME - Motor electronics	Read Codes		V1.00.001 or higher
CLA (117)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
CLA (117)	ME - Motor electronics	Live Data		V1.00.001 or higher

CLA (117)	ME - Motor electronics	Active Test		V1.00.001 or higher
CLA (117)	ME - Motor electronics	Control unit adaptations	Configuration	V1.00.001 or higher
CLA (117)	ME - Motor electronics	Control unit adaptations	Teach-in processes	V1.00.001 or higher
CLA (117)	CDI-Motor electronics	ECU Information		V1.00.001 or higher
CLA (117)	CDI-Motor electronics	Read Codes		V1.00.001 or higher
CLA (117)	CDI-Motor electronics	Erase Codes		V1.00.001 or higher
CLA (117)	CDI-Motor electronics	Live Data		V1.00.001 or higher
CLA (117)	CDI-Motor electronics	Active Test		V1.00.001 or higher
CLA (117)	DKG-Electronic transmission control for double-plate clutch transmission	ECU Information		V1.00.001 or higher
CLA (117)	DKG-Electronic transmission control for double-plate clutch transmission	Read Codes		V1.00.001 or higher
CLA (117)	DKG-Electronic transmission control for double-plate clutch transmission	Erase Codes		V1.00.001 or higher
CLA (117)	DKG-Electronic transmission control for double-plate clutch transmission	Live Data		V1.00.001 or higher
CLA (117)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
CLA (117)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
CLA (117)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
CLA (117)	FSCU-Fuel pump	Live Data		V1.00.001 or higher



CLA (117)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
CLA (117)	VG - All-wheel drive	ECU Information		V1.00.001 or higher
CLA (117)	VG - All-wheel drive	Read Codes		V1.00.001 or higher
CLA (117)	VG - All-wheel drive	Erase Codes		V1.00.001 or higher
CLA (117)	PTCU - Drivertrain	ECU Information		V1.00.001 or higher
CLA (117)	PTCU - Drivertrain	Read Codes		V1.00.001 or higher
CLA (117)	PTCU - Drivertrain	Erase Codes		V1.00.001 or higher
CLA (117)	PTCU - Drivertrain	Live Data		V1.00.001 or higher
CLA (117)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
CLA (117)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
CLA (117)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
CLA (117)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
CLA (117)	EFB-Electronic parking brake	ECU Information		V1.00.001 or higher
CLA (117)	EFB-Electronic parking brake	Read Codes		V1.00.001 or higher
CLA (117)	EFB-Electronic parking brake	Erase Codes		V1.00.001 or higher
CLA (117)	EFB-Electronic parking brake	Live Data		V1.00.001 or higher
CLA (117)	EFB-Electronic parking brake	Active Test		V1.00.001 or higher
CLA (117)	EFB-Electronic parking brake	Control unit adaptations	Calibration of control unit 'N128 (Electric parking brake control unit)'	V1.00.001 or higher
CLA (117)	ES-Electrical power steering	ECU Information		V1.00.001 or higher
CLA (117)	ES-Electrical power steering	Read Codes		V1.00.001 or higher
CLA (117)	ES-Electrical power steering	Erase Codes		V1.00.001 or higher
CLA (117)	ES-Electrical power steering	Live Data		V1.00.001 or higher

CLA (117)	DTR-DISTRONIC	ECU Information		V1.00.001 or higher
CLA (117)	DTR-DISTRONIC	Read Codes		V1.00.001 or higher
CLA (117)	DTR-DISTRONIC	Erase Codes		V1.00.001 or higher
CLA (117)	DTR-DISTRONIC	Live Data		V1.00.001 or higher
CLA (117)	SRS-Supplemental restraint system	ECU Information		V1.00.001 or higher
CLA (117)	SRS-Supplemental restraint system	Read Codes		V1.00.001 or higher
CLA (117)	SRS-Supplemental restraint system	Erase Codes		V1.00.001 or higher
CLA (117)	SRS-Supplemental restraint system	Live Data		V1.00.001 or higher
CLA (117)	SRS-Supplemental restraint system	Active Test		V1.00.001 or higher
CLA (117)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher
CLA (117)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
CLA (117)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
CLA (117)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
CLA (117)	SCM-Steering column module	ECU Information		V1.00.001 or higher
CLA (117)	SCM-Steering column module	Read Codes		V1.00.001 or higher
CLA (117)	SCM-Steering column module	Erase Codes		V1.00.001 or higher
CLA (117)	SCM-Steering column module	Live Data		V1.00.001 or higher
CLA (117)	SCM-Steering column module	Active Test		V1.00.001 or higher
CLA (117)	ATA-ATA[EDW]/tow-away protection/interior protection	ECU Information		V1.00.001 or higher

CLA (117)	ATA-ATA[EDW]/tow-away protection/interior protection	Read Codes		V1.00.001 or higher
CLA (117)	ATA-ATA[EDW]/tow-away protection/interior protection	Erase Codes		V1.00.001 or higher
CLA (117)	ATA-ATA[EDW]/tow-away protection/interior protection	Live Data		V1.00.001 or higher
CLA (117)	Multifunction control unit-Multifunction control unit	ECU Information		V1.00.001 or higher
CLA (117)	Multifunction control unit-Multifunction control unit	Read Codes		V1.00.001 or higher
CLA (117)	Multifunction control unit-Multifunction control unit	Erase Codes		V1.00.001 or higher
CLA (117)	Multifunction control unit-Multifunction control unit	Live Data		V1.00.001 or higher
CLA (117)	Multifunction control unit-Multifunction control unit	Active Test		V1.00.001 or higher
CLA (117)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
CLA (117)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
CLA (117)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
CLA (117)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
CLA (117)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
CLA (117)	HKS - Tailgate control	ECU Information		V1.00.001 or higher

CLA (117)	HKS - Tailgate control	Read Codes		V1.00.001 or higher
CLA (117)	HKS - Tailgate control	Erase Codes		V1.00.001 or higher
CLA (117)	PSD-Control module 'Panoramic sliding roof '	ECU Information		V1.00.001 or higher
CLA (117)	PSD-Control module 'Panoramic sliding roof '	Read Codes		V1.00.001 or higher
CLA (117)	PSD-Control module 'Panoramic sliding roof '	Erase Codes		V1.00.001 or higher
CLA (117)	PSD-Control module 'Panoramic sliding roof '	Live Data		V1.00.001 or higher
CLA (117)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
CLA (117)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
CLA (117)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
CLA (117)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
CLA (117)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher

CLA (117)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
CLA (117)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
CLA (117)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
CLA (117)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
CLA (117)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
CLA (117)	Trailer recognition module - Trailer recognition	ECU Information		V1.00.001 or higher
CLA (117)	Trailer recognition module - Trailer recognition	Read Codes		V1.00.001 or higher
CLA (117)	Trailer recognition module - Trailer recognition	Erase Codes		V1.00.001 or higher
CLA (117)	Trailer recognition module - Trailer recognition	Live Data		V1.00.001 or higher
CLA (117)	Trailer recognition module - Trailer recognition	Active Test		V1.00.001 or higher

CLA (117)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher
CLA (117)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
CLA (117)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
CLA (117)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
CLA (117)	SG-SW-Control unit 'Headlamp'	ECU Information		V1.00.001 or higher
CLA (117)	SG-SW-Control unit 'Headlamp'	Read Codes		V1.00.001 or higher
CLA (117)	SG-SW-Control unit 'Headlamp'	Erase Codes		V1.00.001 or higher
CLA (117)	SG-SW-Control unit 'Headlamp'	Live Data		V1.00.001 or higher
CLA (117)	SG-SW-Control unit 'Headlamp'	Active Test		V1.00.001 or higher
CLA (117)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
CLA (117)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
CLA (117)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
CLA (117)	IC - Instrument cluster	Live Data		V1.00.001 or higher
CLA (117)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
CLA (117)	IC - Instrument cluster	Active Test		V1.00.001 or higher
CLA (117)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher

CLA (117)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsy stem	Read Codes		V1.00.001 or higher
CLA (117)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsy stem	Erase Codes		V1.00.001 or higher
CLA (117)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsy stem	Live Data		V1.00.001 or higher
CLA (117)	NAV-Navigation module	ECU Information		V1.00.001 or higher
CLA (117)	NAV-Navigation module	Read Codes		V1.00.001 or higher
CLA (117)	NAV-Navigation module	Erase Codes		V1.00.001 or higher
CLA (117)	NAV-Navigation module	Live Data		V1.00.001 or higher
CLA (117)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
CLA (117)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher
CLA (117)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher
CLA (117)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
CLA (117)	SOUND - Sound system	ECU Information		V1.00.001 or higher
CLA (117)	SOUND - Sound system	Read Codes		V1.00.001 or higher
CLA (117)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
CLA (117)	SOUND - Sound system	Live Data		V1.00.001 or higher
CLA (117)	TV - TV tuner	ECU Information		V1.00.001 or higher
CLA (117)	TV - TV tuner	Read Codes		V1.00.001 or higher
CLA (117)	TV - TV tuner	Erase Codes		V1.00.001 or higher

CLA (117)	TV - TV tuner	Live Data		V1.00.001 or higher
CLA (117)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
CLA (117)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
CLA (117)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
CLA (117)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
CLA (117)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
CLA (117)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
CLA (117)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
CLA (117)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
CLA (117)	Drive Kit Plus - Drive kit for iPhone	ECU Information		V1.00.001 or higher
CLA (117)	Drive Kit Plus - Drive kit for iPhone	Read Codes		V1.00.001 or higher
CLA (117)	Drive Kit Plus - Drive kit for iPhone	Erase Codes		V1.00.001 or higher
CLA (117)	Drive Kit Plus - Drive kit for iPhone	Live Data		V1.00.001 or higher
CLA (117)	Head-up display - Head-up display	ECU Information		V1.00.001 or higher
CLA (117)	Head-up display - Head-up display	Read Codes		V1.00.001 or higher
CLA (117)	Head-up display - Head-up display	Erase Codes		V1.00.001 or higher
CLA (117)	Head-up display - Head-up display	Live Data		V1.00.001 or higher



CLA (117)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
CLA (117)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
CLA (117)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
CLA (117)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
CLA (117)	MIF - Media interface	ECU Information		V1.00.001 or higher
CLA (117)	MIF - Media interface	Read Codes		V1.00.001 or higher
CLA (117)	MIF - Media interface	Erase Codes		V1.00.001 or higher
CLA (117)	MIF - Media interface	Live Data		V1.00.001 or higher
CLA (117)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
CLA (117)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
CLA (117)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
CLA (117)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
CLA (117)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher
CLA (117)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
CLA (117)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
CLA (117)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
CLA (117)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher

CLA (117)	DSI-DIRECT SELECT interface	ECU Information		V1.00.001 or higher
CLA (117)	DSI-DIRECT SELECT interface	Read Codes		V1.00.001 or higher
CLA (117)	DSI-DIRECT SELECT interface	Erase Codes		V1.00.001 or higher
CLA (117)	DSI-DIRECT SELECT interface	Live Data		V1.00.001 or higher
CLA (117)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	ECU Information		V1.00.001 or higher
CLA (117)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Read Codes		V1.00.001 or higher
CLA (117)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Erase Codes		V1.00.001 or higher
CLA (117)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Live Data		V1.00.001 or higher
CLA (117)	ESA 'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	ECU Information		V1.00.001 or higher
CLA (117)	ESA 'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Read Codes		V1.00.001 or higher

CLA (117)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Erase Codes		V1.00.001 or higher
CLA (117)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Live Data		V1.00.001 or higher
CLA (117)	DCU-LF-Left front door	ECU Information		V1.00.001 or higher
CLA (117)	DCU-LF-Left front door	Read Codes		V1.00.001 or higher
CLA (117)	DCU-LF-Left front door	Erase Codes		V1.00.001 or higher
CLA (117)	DCU-LF-Left front door	Live Data		V1.00.001 or higher
CLA (117)	DCU-RF-Right front door	ECU Information		V1.00.001 or higher
CLA (117)	DCU-RF-Right front door	Read Codes		V1.00.001 or higher
CLA (117)	DCU-RF-Right front door	Erase Codes		V1.00.001 or higher
CLA (117)	DCU-RF-Right front door	Live Data		V1.00.001 or higher
CLA (117)	AAC-Air conditioning	ECU Information		V1.00.001 or higher
CLA (117)	AAC-Air conditioning	Read Codes		V1.00.001 or higher
CLA (117)	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
CLA (117)	AAC-Air conditioning	Live Data		V1.00.001 or higher
CLA (117)	STH-Stationary heater	ECU Information		V1.00.001 or higher
CLA (117)	STH-Stationary heater	Read Codes		V1.00.001 or higher
CLA (117)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
CLA (117)	STH-Stationary heater	Live Data		V1.00.001 or higher
CLA (117)	TPM-Tire pressure monitor	ECU Information		V1.00.001 or higher

CLA (117)	TPM-Tire pressure monitor	Read Codes		V1.00.001 or higher
CLA (117)	TPM-Tire pressure monitor	Erase Codes		V1.00.001 or higher
CLA (117)	TPM-Tire pressure monitor	Live Data		V1.00.001 or higher
CLA (117)	TPM-Tire pressure monitor	Active Test		V1.00.001 or higher
CLA (117)	TPM-Tire pressure monitor	Control unit adaptations	Teach-in processes	V1.00.001 or higher
CLA (117)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	ECU Information		V1.00.001 or higher
CLA (117)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Read Codes		V1.00.001 or higher
CLA (117)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Erase Codes		V1.00.001 or higher
CLA (117)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Live Data		V1.00.001 or higher
CLA (117)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Active Test		V1.00.001 or higher
CLA (117)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
CLA (117)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
CLA (117)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
CLA (117)	IRS-HRA - Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher

CLA (117)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
CLA (117)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
CLA (117)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
CLA (117)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
CLA (117)	DTR-DISTRONIC	ECU Information		V1.00.001 or higher
CLA (117)	DTR-DISTRONIC	Read Codes		V1.00.001 or higher
CLA (117)	DTR-DISTRONIC	Erase Codes		V1.00.001 or higher
CLA (117)	DTR-DISTRONIC	Live Data		V1.00.001 or higher
CLA (117)	RFK - Backup camera	ECU Information		V1.00.001 or higher
CLA (117)	RFK - Backup camera	Read Codes		V1.00.001 or higher
CLA (117)	RFK - Backup camera	Erase Codes		V1.00.001 or higher
CLA (117)	RFK - Backup camera	Live Data		V1.00.001 or higher
CLA (117)	RFK - Backup camera	Active Test		V1.00.001 or higher
CLA (117)	PARK - Parking system	ECU Information		V1.00.001 or higher
CLA (117)	PARK - Parking system	Read Codes		V1.00.001 or higher
CLA (117)	PARK - Parking system	Erase Codes		V1.00.001 or higher
CLA (117)	PARK - Parking system	Live Data		V1.00.001 or higher
CLA (117)	PARK - Parking system	Active Test		V1.00.001 or higher
CLA (117)	KAB-Control unit 'Camera cover'	ECU Information		V1.00.001 or higher
CLA (117)	KAB-Control unit 'Camera cover'	Read Codes		V1.00.001 or higher

CLA (117)	KAB-Control unit 'Camera cover'	Erase Codes		V1.00.001 or higher
CLA (117)	KAB-Control unit 'Camera cover'	Live Data		V1.00.001 or higher
CLK (209)	ME-SFI-Motor electronics	ECU Information		V1.00.001 or higher
CLK (209)	ME-SFI-Motor electronics	Read Codes		V1.00.001 or higher
CLK (209)	ME-SFI-Motor electronics	Erase Codes		V1.00.001 or higher
CLK (209)	ME-SFI-Motor electronics	Live Data		V1.00.001 or higher
CLK (209)	ME-SFI-Motor electronics	Active Test		V1.00.001 or higher
CLK (209)	ME-SFI-Motor electronics	Control unit adaptations	Learning processes	V1.00.001 or higher
CLK (209)	ME-SFI-Motor electronics	Control unit adaptations	Correction programming	V1.00.001 or higher
CLK (209)	Transmission	ECU Information		V1.00.001 or higher
CLK (209)	Transmission	Read Codes		V1.00.001 or higher
CLK (209)	Transmission	Erase Codes		V1.00.001 or higher
CLK (209)	Transmission	Live Data		V1.00.001 or higher
CLK (209)	Transmission	Active Test		V1.00.001 or higher
CLK (209)	Transmission	Control unit adaptations	Definition	V1.00.001 or higher
CLK (209)	Transmission	Control unit adaptations	Assignment of the hydraulic shift elements	V1.00.001 or higher
CLK (209)	Transmission	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
CLK (209)	Transmission	Control unit adaptations	Important information on the combination possibilities for adaptation end stop values	V1.00.001 or higher
CLK (209)	Transmission	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
CLK (209)	Transmission	Control unit adaptations	Performing adaptation	V1.00.001 or higher

CLK (209)	Transmission	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
CLK (209)	Transmission	Special functions	Warranty or goodwill processing	V1.00.001 or higher
CLK (209)	Transmission	Special functions	Diagnosis routines	V1.00.001 or higher
CLK (209)	Transmission	Initial startup	Initial start-up with manual settings input for new control module	V1.00.001 or higher
CLK (209)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
CLK (209)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
CLK (209)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
CLK (209)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
CLK (209)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
CLK (209)	ESM-Electronic selector module	Control unit adaptations	Operational check	V1.00.001 or higher
CLK (209)	DTR-Distronic	ECU Information		V1.00.001 or higher
CLK (209)	DTR-Distronic	Read Codes		V1.00.001 or higher
CLK (209)	DTR-Distronic	Erase Codes		V1.00.001 or higher
CLK (209)	DTR-Distronic	Live Data		V1.00.001 or higher
CLK (209)	DTR-Distronic	Control unit adaptations	•	V1.00.001 or higher
CLK (209)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
CLK (209)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
CLK (209)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
CLK (209)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
CLK (209)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
CLK (209)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher

CLK (209)	ESP-Electronic stability program	Control unit adaptations	Clear the zero point offset error of the component 'N49 (Steering Angle Sensor (SAS))'.	V1.00.001 or higher
CLK (209)	ESP-Electronic stability program	Control unit adaptations	Tire pressure loss warner(Activating)	V1.00.001 or higher
CLK (209)	ESP-Electronic stability program	Control unit adaptations	Clear the zero point offset error of the component 'B24/15 (Rotary speed and Lateral Acceleration Sensor (LAS))'.	V1.00.001 or higher
CLK (209)	AB-Airbag	ECU Information		V1.00.001 or higher
CLK (209)	AB-Airbag	Read Codes		V1.00.001 or higher
CLK (209)	AB-Airbag	Erase Codes		V1.00.001 or higher
CLK (209)	AB-Airbag	Live Data		V1.00.001 or higher
CLK (209)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
CLK (209)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
CLK (209)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
CLK (209)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
CLK (209)	EZS-Electronic ignition switch	Control unit adaptations	•	V1.00.001 or higher
CLK (209)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
CLK (209)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
CLK (209)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
CLK (209)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
CLK (209)	OCP-Overhead control panel	Active Test		V1.00.001 or higher



CLK (209)	OCP-Overhead control panel	Control unit adaptations	Rain/Light Sensor	V1.00.001 or higher
CLK (209)	OCP-Overhead control panel	Control unit adaptations	SR/SHD (Tilting/Sliding Sunroof)	V1.00.001 or higher
CLK (209)	LCP-Lower control panel	ECU Information		V1.00.001 or higher
CLK (209)	LCP-Lower control panel	Read Codes		V1.00.001 or higher
CLK (209)	LCP-Lower control panel	Erase Codes		V1.00.001 or higher
CLK (209)	LCP-Lower control panel	Live Data		V1.00.001 or higher
CLK (209)	LCP-Lower control panel	Active Test		V1.00.001 or higher
CLK (209)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
CLK (209)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
CLK (209)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
CLK (209)	UCP-Upper control panel	Live Data		V1.00.001 or higher
CLK (209)	UCP-Upper control panel	Active Test		V1.00.001 or higher
CLK (209)	SAM-F-Signal acquisition and actuation module front	ECU Information		V1.00.001 or higher
CLK (209)	SAM-F-Signal acquisition and actuation module front	Read Codes		V1.00.001 or higher
CLK (209)	SAM-F-Signal acquisition and actuation module front	Erase Codes		V1.00.001 or higher
CLK (209)	SAM-F-Signal acquisition and actuation module front	Live Data		V1.00.001 or higher
CLK (209)	SAM-F-Signal acquisition and actuation module front	Active Test		V1.00.001 or higher

CLK (209)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
CLK (209)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
CLK (209)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
CLK (209)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
CLK (209)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
CLK (209)	AHE-Trailer recognition	ECU Information		V1.00.001 or higher
CLK (209)	AHE-Trailer recognition	Read Codes		V1.00.001 or higher
CLK (209)	AHE-Trailer recognition	Erase Codes		V1.00.001 or higher
CLK (209)	AHE-Trailer recognition	Live Data		V1.00.001 or higher
CLK (209)	AHE-Trailer recognition	Active Test		V1.00.001 or higher
CLK (209)	MSS-Special vehicle multifunction control module	ECU Information		V1.00.001 or higher
CLK (209)	MSS-Special vehicle multifunction control module	Read Codes		V1.00.001 or higher
CLK (209)	MSS-Special vehicle multifunction control module	Erase Codes		V1.00.001 or higher

CLK (209)	MSS-Special vehicle multifunction control module	Live Data		V1.00.001 or higher
CLK (209)	MSS-Special vehicle multifunction control module	Active Test		V1.00.001 or higher
CLK (209)	MSS-Special vehicle multifunction control module	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
CLK (209)	RVC-Rollover bar soft top control module	ECU Information		V1.00.001 or higher
CLK (209)	RVC-Rollover bar soft top control module	Read Codes		V1.00.001 or higher
CLK (209)	RVC-Rollover bar soft top control module	Erase Codes		V1.00.001 or higher
CLK (209)	RVC-Rollover bar soft top control module	Live Data		V1.00.001 or higher
CLK (209)	HRA-FR-Front right headlamp range control	ECU Information		V1.00.001 or higher
CLK (209)	HRA-FR-Front right headlamp range control	Read Codes		V1.00.001 or higher
CLK (209)	HRA-FR-Front right headlamp range control	Erase Codes		V1.00.001 or higher
CLK (209)	HRA-FR-Front right headlamp range control	Live Data		V1.00.001 or higher
CLK (209)	HRA-FR-Front right headlamp range control	Active Test		V1.00.001 or higher
CLK (209)	HRA-FR-Front right headlamp range control	Control unit adaptations	Zero position adjustment	V1.00.001 or higher
CLK (209)	HRA-FL-Front left headlamp range control	ECU Information		V1.00.001 or higher
CLK (209)	HRA-FL-Front left headlamp range control	Read Codes		V1.00.001 or higher

CLK (209)	HRA-FL-Front left headlamp range control	Erase Codes		V1.00.001 or higher
CLK (209)	HRA-FL-Front left headlamp range control	Live Data		V1.00.001 or higher
CLK (209)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
CLK (209)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
CLK (209)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
CLK (209)	ICM-Instrument cluster with maintenance interval display	Live Data		V1.00.001 or higher
CLK (209)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
CLK (209)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
CLK (209)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
CLK (209)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
CLK (209)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
CLK (209)	PTS-Parktronic system	Live Data		V1.00.001 or higher
CLK (209)	PTS-Parktronic system	Active Test		V1.00.001 or higher
CLK (209)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
CLK (209)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher

CLK (209)	SCM [MRM]- Steering column module	Erase Codes		V1.00.001 or higher
CLK (209)	SCM [MRM]- Steering column module	Live Data		V1.00.001 or higher
CLK (209)	SCM [MRM]- Steering column module	Active Test		V1.00.001 or higher
CLK (209)	SCM [MRM]- Steering column module	Initial startup	●	V1.00.001 or higher
CLK (209)	TV-TV tuner	ECU Information		V1.00.001 or higher
CLK (209)	TV-TV tuner	Read Codes		V1.00.001 or higher
CLK (209)	TV-TV tuner	Erase Codes		V1.00.001 or higher
CLK (209)	TV-TV tuner	Live Data		V1.00.001 or higher
CLK (209)	TV-TV tuner	Active Test		V1.00.001 or higher
CLK (209)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	ECU Information		V1.00.001 or higher
CLK (209)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Read Codes		V1.00.001 or higher
CLK (209)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Erase Codes		V1.00.001 or higher
CLK (209)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Live Data		V1.00.001 or higher
CLK (209)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Active Test		V1.00.001 or higher

CLK (209)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
CLK (209)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
CLK (209)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
CLK (209)	TELE AID-Control unit	Live Data		V1.00.001 or higher
CLK (209)	TELE AID-Telematic services Emergency call	ECU Information		V1.00.001 or higher
CLK (209)	TELE AID-Telematic services Emergency call	Read Codes		V1.00.001 or higher
CLK (209)	TELE AID-Telematic services Emergency call	Erase Codes		V1.00.001 or higher
CLK (209)	TELE AID-Telematic services Emergency call	Live Data		V1.00.001 or higher
CLK (209)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
CLK (209)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
CLK (209)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher

CLK (209)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
CLK (209)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher
CLK (209)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
CLK (209)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
CLK (209)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher
CLK (209)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher
CLK (209)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
CLK (209)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
CLK (209)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher

CLK (209)	D2B-COMAND, MCS or AUDIO	ECU Information		V1.00.001 or higher
CLK (209)	D2B-COMAND, MCS or AUDIO	Read Codes		V1.00.001 or higher
CLK (209)	D2B-COMAND, MCS or AUDIO	Erase Codes		V1.00.001 or higher
CLK (209)	D2B-COMAND, MCS or AUDIO	Live Data		V1.00.001 or higher
CLK (209)	D2B-COMAND, MCS or AUDIO	Active Test		V1.00.001 or higher
CLK (209)	CDC-CD changer	ECU Information		V1.00.001 or higher
CLK (209)	CDC-CD changer	Read Codes		V1.00.001 or higher
CLK (209)	CDC-CD changer	Erase Codes		V1.00.001 or higher
CLK (209)	VCS-Voice control system	ECU Information		V1.00.001 or higher
CLK (209)	VCS-Voice control system	Read Codes		V1.00.001 or higher
CLK (209)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
CLK (209)	SOUND- Sound system	ECU Information		V1.00.001 or higher
CLK (209)	SOUND- Sound system	Read Codes		V1.00.001 or higher
CLK (209)	SOUND- Sound system	Erase Codes		V1.00.001 or higher
CLK (209)	SOUND- Sound system	Live Data		V1.00.001 or higher
CLK (209)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
CLK (209)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
CLK (209)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
CLK (209)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	ECU Information		V1.00.001 or higher
CLK (209)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Read Codes		V1.00.001 or higher



CLK (209)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Erase Codes		V1.00.001 or higher
CLK (209)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Live Data		V1.00.001 or higher
CLK (209)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Active Test		V1.00.001 or higher
CLK (209)	ESA passenger- Electric seat adjustment passenger	ECU Information		V1.00.001 or higher
CLK (209)	ESA passenger- Electric seat adjustment passenger	Read Codes		V1.00.001 or higher
CLK (209)	ESA passenger- Electric seat adjustment passenger	Erase Codes		V1.00.001 or higher
CLK (209)	ESA passenger- Electric seat adjustment passenger	Live Data		V1.00.001 or higher
CLK (209)	ESA passenger- Electric seat adjustment passenger	Active Test		V1.00.001 or higher
CLK (209)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
CLK (209)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher
CLK (209)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher

CLK (209)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
CLK (209)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
CLK (209)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	ECU Information		V1.00.001 or higher
CLK (209)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Read Codes		V1.00.001 or higher
CLK (209)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Erase Codes		V1.00.001 or higher
CLK (209)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Live Data		V1.00.001 or higher
CLK (209)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Active Test		V1.00.001 or higher
CLK (209)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Parameterize the Easy Entry/Exit.	V1.00.001 or higher
CLK (209)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
CLK (209)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher

CLK (209)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher
CLK (209)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
CLK (209)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
CLK (209)	DCM-L-Door control module left	ECU Information		V1.00.001 or higher
CLK (209)	DCM-L-Door control module left	Read Codes		V1.00.001 or higher
CLK (209)	DCM-L-Door control module left	Erase Codes		V1.00.001 or higher
CLK (209)	DCM-L-Door control module left	Live Data		V1.00.001 or higher
CLK (209)	DCM-L-Door control module left	Active Test		V1.00.001 or higher
CLK (209)	DCM-R-Door control module right	ECU Information		V1.00.001 or higher
CLK (209)	DCM-R-Door control module right	Read Codes		V1.00.001 or higher
CLK (209)	DCM-R-Door control module right	Erase Codes		V1.00.001 or higher
CLK (209)	DCM-R-Door control module right	Live Data		V1.00.001 or higher
CLK (209)	DCM-R-Door control module right	Active Test		V1.00.001 or higher
CLK (209)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher

CLK (209)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
CLK (209)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
CLK (209)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
CLK (209)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
CLK (209)	AAC-Automatic air conditioning	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
CLK (209)	AAC-Automatic air conditioning	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
CLK (209)	STH-Stationary heater	ECU Information		V1.00.001 or higher
CLK (209)	STH-Stationary heater	Read Codes		V1.00.001 or higher
CLK (209)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
CLK (209)	STH-Stationary heater	Live Data		V1.00.001 or higher
CLK (209)	STH-Stationary heater	Active Test		V1.00.001 or higher
CLK (209)	STH-Stationary heater	Control unit adaptations	CO2 setting (cold setting of combustion air blower)	V1.00.001 or higher
CLK (209)	STH-Stationary heater	Control unit adaptations	Learning component 'A8/3 (Stationary Heater (STH) radio remote control transmitter)'	V1.00.001 or higher
CLK (209)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
CLK (209)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
CLK (209)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
CLK (209)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher

CLK (209)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
CLK (209)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
CLK (209)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
CLK (209)	ME2-SFI-Motor electronics 2	Special functions	Fault path tests are carried out.	V1.00.001 or higher
CLK (209)	TLC-Trunk lid control	ECU Information		V1.00.001 or higher
CLK (209)	TLC-Trunk lid control	Read Codes		V1.00.001 or higher
CLK (209)	TLC-Trunk lid control	Erase Codes		V1.00.001 or higher
CLK (209)	TLC-Trunk lid control	Live Data		V1.00.001 or higher
CLK (209)	TLC-Trunk lid control	Active Test		V1.00.001 or higher
CLK (209)	RCM-Rear control module	ECU Information		V1.00.001 or higher
CLK (209)	RCM-Rear control module	Read Codes		V1.00.001 or higher
CLK (209)	RCM-Rear control module	Erase Codes		V1.00.001 or higher
CLK (209)	RCM-Rear control module	Live Data		V1.00.001 or higher
CLK (209)	CDI 2-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
CLK (209)	CDI 2-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
CLK (209)	CDI 2-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
CLK (209)	CDI 2-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
CLK (209)	CDI 2-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
CLK (209)	CDI 2-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher

CLK (209)	CDI 2-Common Rail Diesel Injection	Control unit adaptations	Extension of run-on time Drive Authorization System (DAS/FBS) 3	V1.00.001 or higher
CLK (209)	DTR-Distronic	ECU Information		V1.00.001 or higher
CLK (209)	DTR-Distronic	Read Codes		V1.00.001 or higher
CLK (209)	DTR-Distronic	Erase Codes		V1.00.001 or higher
CLK (209)	DTR-Distronic	Live Data		V1.00.001 or higher
CLK (209)	TPC-Tire pressure monitor	ECU Information		V1.00.001 or higher
CLK (209)	TPC-Tire pressure monitor	Read Codes		V1.00.001 or higher
CLK (209)	TPC-Tire pressure monitor	Erase Codes		V1.00.001 or higher
CLK (209)	TPC-Tire pressure monitor	Live Data		V1.00.001 or higher
CLK (209)	TPC-Tire pressure monitor	Active Test		V1.00.001 or higher
CLK (209)	TPC-Tire pressure monitor	Special functions	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
CLK (209)	TPC-Tire pressure monitor	Special functions	Initial start-up with manual settings input for new control module- For example: The previous control module cannot be read any longer.	V1.00.001 or higher
CLK (209)	AB-Airbag	ECU Information		V1.00.001 or higher
CLK (209)	AB-Airbag	Read Codes		V1.00.001 or higher
CLK (209)	AB-Airbag	Erase Codes		V1.00.001 or higher
CLK (209)	AB-Airbag	Live Data		V1.00.001 or higher

CLK (209)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
CLK (209)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
CLK (209)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
CLK (209)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
CLK (209)	WSS-Weight sensing system	Control unit adaptations	•	V1.00.001 or higher
CLK (209)	WSS-Weight sensing system	Initial startup	Initial start-up	V1.00.001 or higher
CLK (209)	AHE-Trailer recognition	ECU Information		V1.00.001 or higher
CLK (209)	AHE-Trailer recognition	Read Codes		V1.00.001 or higher
CLK (209)	AHE-Trailer recognition	Erase Codes		V1.00.001 or higher
CLK (209)	AHE-Trailer recognition	Live Data		V1.00.001 or higher
CLK (209)	AHE-Trailer recognition	Active Test		V1.00.001 or higher
CLK (209)	HRA-Automatic headlamp range adjustment and headlamp control	ECU Information		V1.00.001 or higher
CLK (209)	HRA-Automatic headlamp range adjustment and headlamp control	Read Codes		V1.00.001 or higher
CLK (209)	HRA-Automatic headlamp range adjustment and headlamp control	Erase Codes		V1.00.001 or higher
CLK (209)	HRA-Automatic headlamp range adjustment and headlamp control	Live Data		V1.00.001 or higher
CLK (209)	HRA-Automatic headlamp range adjustment and headlamp control	Active Test		V1.00.001 or higher

CLK (209)	HRA-Automatic headlamp range adjustment and headlamp control	Control unit adaptations	Zero position adjustment of axle or level sensors	V1.00.001 or higher
CLK (209)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
CLK (209)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
CLK (209)	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher
CLK (209)	SCM [MRM]-Steering column module	Live Data		V1.00.001 or higher
CLK (209)	SCM [MRM]-Steering column module	Active Test		V1.00.001 or higher
CLK (209)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher
CLK (209)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher
CLK (209)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
CLK (209)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher



CLK (209)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher
CLK (209)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
CLK (209)	COMAND or AUDIO	ECU Information		V1.00.001 or higher
CLK (209)	COMAND or AUDIO	Read Codes		V1.00.001 or higher
CLK (209)	COMAND or AUDIO	Erase Codes		V1.00.001 or higher
CLK (209)	COMAND or AUDIO	Live Data		V1.00.001 or higher
CLK (209)	COMAND or AUDIO	Active Test		V1.00.001 or higher
CLK (209)	COMAND or AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
CLK (209)	CTEL-Mobile phone adapter with universal interface	ECU Information		V1.00.001 or higher
CLK (209)	CTEL-Mobile phone adapter with universal interface	Read Codes		V1.00.001 or higher
CLK (209)	CTEL-Mobile phone adapter with universal interface	Erase Codes		V1.00.001 or higher
CLK (209)	CTEL-Mobile phone adapter with universal interface	Live Data		V1.00.001 or higher
CLK (209)	CDC-CD changer	ECU Information		V1.00.001 or higher
CLK (209)	CDC-CD changer	Read Codes		V1.00.001 or higher

CLK (209)	CDC-CD changer	Erase Codes		V1.00.001 or higher
CLK (209)	CDC-CD changer	Live Data		V1.00.001 or higher
CLK (209)	CDC-CD changer	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
CLK (209)	VCS-Voice control system	ECU Information		V1.00.001 or higher
CLK (209)	VCS-Voice control system	Read Codes		V1.00.001 or higher
CLK (209)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
CLK (209)	VCS-Voice control system	Active Test		V1.00.001 or higher
CLK (209)	SOUND- Sound system	ECU Information		V1.00.001 or higher
CLK (209)	SOUND- Sound system	Read Codes		V1.00.001 or higher
CLK (209)	SOUND- Sound system	Erase Codes		V1.00.001 or higher
CLK (209)	SOUND- Sound system	Live Data		V1.00.001 or higher
CLK (209)	SOUND- Sound system	Active Test		V1.00.001 or higher
CLK (209)	SOUND- Sound system	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
CLK (209)	TV-TV tuner	ECU Information		V1.00.001 or higher
CLK (209)	TV-TV tuner	Read Codes		V1.00.001 or higher
CLK (209)	TV-TV tuner	Erase Codes		V1.00.001 or higher
CLK (209)	TV-TV tuner	Live Data		V1.00.001 or higher
CLK (209)	TV-TV tuner	Active Test		V1.00.001 or higher
CLK (209)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
CLK (209)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
CLK (209)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
CLK (209)	SDAR-Satellite radio	Live Data		V1.00.001 or higher
CLK (209)	NAVI-Navigation system	ECU Information		V1.00.001 or higher
CLK (209)	NAVI-Navigation system	Read Codes		V1.00.001 or higher

CLK (209)	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
CLK (209)	NAVI-Navigation system	Live Data		V1.00.001 or higher
CLK (209)	NAVI-Navigation system	Active Test		V1.00.001 or higher
CLK (209)	STH-Stationary heater	ECU Information		V1.00.001 or higher
CLK (209)	STH-Stationary heater	Read Codes		V1.00.001 or higher
CLK (209)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
CLK (209)	STH-Stationary heater	Live Data		V1.00.001 or higher
CLK (209)	STH-Stationary heater	Active Test		V1.00.001 or higher
CLK (209)	STH-Stationary heater	Control unit adaptations	Learning component 'A8/3 (Stationary Heater (STH) radio remote control transmitter)'	V1.00.001 or higher
CLK (209)	ME 9.7-Motor electronics 9.7	ECU Information		V1.00.001 or higher
CLK (209)	ME 9.7-Motor electronics 9.7	Read Codes		V1.00.001 or higher
CLK (209)	ME 9.7-Motor electronics 9.7	Erase Codes		V1.00.001 or higher
CLK (209)	ME 9.7-Motor electronics 9.7	Live Data		V1.00.001 or higher
CLK (209)	ME 9.7-Motor electronics 9.7	Active Test		V1.00.001 or higher
CLK (209)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Learning processes	V1.00.001 or higher
CLK (209)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Correction programming	V1.00.001 or higher
CLK (209)	ME 9.7-Motor electronics 9.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
CLK (209)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
CLK (209)	ME 9.7-Motor electronics 9.7	Special functions	Variant coding	V1.00.001 or higher

CLK (209)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	ECU Information		V1.00.001 or higher
CLK (209)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Read Codes		V1.00.001 or higher
CLK (209)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Erase Codes		V1.00.001 or higher
CLK (209)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Live Data		V1.00.001 or higher
CLK (209)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Active Test		V1.00.001 or higher
CLK (209)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Learning processes	V1.00.001 or higher
CLK (209)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Correction programming	V1.00.001 or higher
CLK (209)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
CLK (209)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
CLK (209)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Special functions	Variant coding	V1.00.001 or higher
CLK (209)	FSCU Left-Control unit 'Left fuel pump'	ECU Information		V1.00.001 or higher
CLK (209)	FSCU Left-Control unit 'Left fuel pump'	Read Codes		V1.00.001 or higher

CLK (209)	FSCU Left-Control unit 'Left fuel pump'	Erase Codes		V1.00.001 or higher
CLK (209)	FSCU Left-Control unit 'Left fuel pump'	Active Test		V1.00.001 or higher
CLK (209)	FSCU Left-Control unit 'Left fuel pump'	Control unit adaptations	Assignment of the control modules to plug connections	V1.00.001 or higher
CLK (209)	FSCU Right-Control unit 'Right fuel pump'	ECU Information		V1.00.001 or higher
CLK (209)	FSCU Right-Control unit 'Right fuel pump'	Read Codes		V1.00.001 or higher
CLK (209)	FSCU Right-Control unit 'Right fuel pump'	Erase Codes		V1.00.001 or higher
CLK (209)	FSCU Right-Control unit 'Right fuel pump'	Active Test		V1.00.001 or higher
CLK (209)	FSCU Right-Control unit 'Right fuel pump'	Control unit adaptations	Assignment of the control modules to plug connections	V1.00.001 or higher
CLK (209)	On board electrical system(voltage supply)	ECU Information		V1.00.001 or higher
CLK (209)	On board electrical system(voltage supply)	Read Codes		V1.00.001 or higher
CLK (209)	On board electrical system(voltage supply)	Erase Codes		V1.00.001 or higher
CLK (209)	On board electrical system(voltage supply)	Live Data		V1.00.001 or higher
CLK (209)	CDI 4-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
CLK (209)	CDI 4-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher

CLK (209)	CDI 4-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
CLK (209)	CDI 4-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
CLK (209)	CDI 4-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
CLK (209)	CDI 3-Common Rail Diesel Injection3	ECU Information		V1.00.001 or higher
CLK (209)	CDI 3-Common Rail Diesel Injection3	Read Codes		V1.00.001 or higher
CLK (209)	CDI 3-Common Rail Diesel Injection3	Erase Codes		V1.00.001 or higher
CLK (209)	CDI 3-Common Rail Diesel Injection3	Live Data		V1.00.001 or higher
CLK (209)	CDI 3-Common Rail Diesel Injection3	Active Test		V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	Control unit adaptations	Correction programming	V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	Control unit adaptations	Self-adaptation	V1.00.001 or higher
CLK (208)	Transmission	ECU Information		V1.00.001 or higher
CLK (208)	Transmission	Read Codes		V1.00.001 or higher
CLK (208)	Transmission	Erase Codes		V1.00.001 or higher
CLK (208)	Transmission	Live Data		V1.00.001 or higher
CLK (208)	Transmission	Active Test		V1.00.001 or higher

CLK (208)	Transmission	Control unit adaptations	•	V1.00.001 or higher
CLK (208)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
CLK (208)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
CLK (208)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
CLK (208)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
CLK (208)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
CLK (208)	Traction systems ABS,ASR,ETS,ESP	ECU Information		V1.00.001 or higher
CLK (208)	Traction systems ABS,ASR,ETS,ESP	Read Codes		V1.00.001 or higher
CLK (208)	Traction systems ABS,ASR,ETS,ESP	Erase Codes		V1.00.001 or higher
CLK (208)	Traction systems ABS,ASR,ETS,ESP	Live Data		V1.00.001 or higher
CLK (208)	Traction systems ABS,ASR,ETS,ESP	Active Test		V1.00.001 or higher
CLK (208)	BAS-Brake assist	ECU Information		V1.00.001 or higher
CLK (208)	BAS-Brake assist	Read Codes		V1.00.001 or higher
CLK (208)	BAS-Brake assist	Erase Codes		V1.00.001 or higher
CLK (208)	BAS-Brake assist	Live Data		V1.00.001 or higher
CLK (208)	BAS-Brake assist	Active Test		V1.00.001 or higher
CLK (208)	AB-Airbag	ECU Information		V1.00.001 or higher
CLK (208)	AB-Airbag	Read Codes		V1.00.001 or higher
CLK (208)	AB-Airbag	Erase Codes		V1.00.001 or higher
CLK (208)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
CLK (208)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
CLK (208)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
CLK (208)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
CLK (208)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher

CLK (208)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
CLK (208)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
CLK (208)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
CLK (208)	LCP-Lower control panel	ECU Information		V1.00.001 or higher
CLK (208)	LCP-Lower control panel	Read Codes		V1.00.001 or higher
CLK (208)	LCP-Lower control panel	Erase Codes		V1.00.001 or higher
CLK (208)	LCP-Lower control panel	Live Data		V1.00.001 or higher
CLK (208)	PSE-Pneumatic system equipment	ECU Information		V1.00.001 or higher
CLK (208)	PSE-Pneumatic system equipment	Read Codes		V1.00.001 or higher
CLK (208)	PSE-Pneumatic system equipment	Erase Codes		V1.00.001 or higher
CLK (208)	PSE-Pneumatic system equipment	Live Data		V1.00.001 or higher
CLK (208)	SAM-Signal acquisition and actuation module	ECU Information		V1.00.001 or higher
CLK (208)	SAM-Signal acquisition and actuation module	Read Codes		V1.00.001 or higher
CLK (208)	SAM-Signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
CLK (208)	SAM-Signal acquisition and actuation module	Live Data		V1.00.001 or higher
CLK (208)	HRA-Headlamp range adjustment	ECU Information		V1.00.001 or higher
CLK (208)	HRA-Headlamp range adjustment	Read Codes		V1.00.001 or higher



CLK (208)	HRA-Headlamp range adjustment	Erase Codes		V1.00.001 or higher
CLK (208)	HRA-Headlamp range adjustment	Live Data		V1.00.001 or higher
CLK (208)	APS-Auto pilot system	ECU Information		V1.00.001 or higher
CLK (208)	APS-Auto pilot system	Read Codes		V1.00.001 or higher
CLK (208)	APS-Auto pilot system	Erase Codes		V1.00.001 or higher
CLK (208)	APS-Auto pilot system	Live Data		V1.00.001 or higher
CLK (208)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
CLK (208)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
CLK (208)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
CLK (208)	ICM-Instrument cluster with maintenance interval display	Live Data		V1.00.001 or higher
CLK (208)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
CLK (208)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
CLK (208)	D2B-COMAND, MCS or AUDIO	ECU Information		V1.00.001 or higher
CLK (208)	D2B-COMAND, MCS or AUDIO	Read Codes		V1.00.001 or higher
CLK (208)	D2B-COMAND, MCS or AUDIO	Erase Codes		V1.00.001 or higher
CLK (208)	D2B-COMAND, MCS or AUDIO	Live Data		V1.00.001 or higher
CLK (208)	D2B-COMAND, MCS or AUDIO	Active Test		V1.00.001 or higher

CLK (208)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	ECU Information		V1.00.001 or higher
CLK (208)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Read Codes		V1.00.001 or higher
CLK (208)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Erase Codes		V1.00.001 or higher
CLK (208)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Live Data		V1.00.001 or higher
CLK (208)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Active Test		V1.00.001 or higher
CLK (208)	VCS-Voice control system	ECU Information		V1.00.001 or higher
CLK (208)	VCS-Voice control system	Read Codes		V1.00.001 or higher
CLK (208)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
CLK (208)	CDC-CD changer	ECU Information		V1.00.001 or higher
CLK (208)	CDC-CD changer	Read Codes		V1.00.001 or higher
CLK (208)	CDC-CD changer	Erase Codes		V1.00.001 or higher
CLK (208)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
CLK (208)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
CLK (208)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
CLK (208)	PTS-Parktronic system	Live Data		V1.00.001 or higher
CLK (208)	PTS-Parktronic system	Active Test		V1.00.001 or higher

CLK (208)	TV-TV tuner	ECU Information		V1.00.001 or higher
CLK (208)	TV-TV tuner	Read Codes		V1.00.001 or higher
CLK (208)	TV-TV tuner	Erase Codes		V1.00.001 or higher
CLK (208)	TV-TV tuner	Live Data		V1.00.001 or higher
CLK (208)	TV-TV tuner	Active Test		V1.00.001 or higher
CLK (208)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	ECU Information		V1.00.001 or higher
CLK (208)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Read Codes		V1.00.001 or higher
CLK (208)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Erase Codes		V1.00.001 or higher
CLK (208)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Live Data		V1.00.001 or higher
CLK (208)	DN-Dynamic navigation by means of CTEL	ECU Information		V1.00.001 or higher
CLK (208)	DN-Dynamic navigation by means of CTEL	Read Codes		V1.00.001 or higher
CLK (208)	DN-Dynamic navigation by means of CTEL	Erase Codes		V1.00.001 or higher
CLK (208)	DN-Dynamic navigation by means of CTEL	Live Data		V1.00.001 or higher
CLK (208)	DCM1-Door control module front driver side	ECU Information		V1.00.001 or higher
CLK (208)	DCM1-Door control module front driver side	Read Codes		V1.00.001 or higher

CLK (208)	DCM1-Door control module front driver side	Erase Codes		V1.00.001 or higher
CLK (208)	DCM1-Door control module front driver side	Live Data		V1.00.001 or higher
CLK (208)	DCM2-Door control module front passenger side	ECU Information		V1.00.001 or higher
CLK (208)	DCM2-Door control module front passenger side	Read Codes		V1.00.001 or higher
CLK (208)	DCM2-Door control module front passenger side	Erase Codes		V1.00.001 or higher
CLK (208)	DCM2-Door control module front passenger side	Live Data		V1.00.001 or higher
CLK (208)	ESA-FL-Electric seat adjustment front left	ECU Information		V1.00.001 or higher
CLK (208)	ESA-FL-Electric seat adjustment front left	Read Codes		V1.00.001 or higher
CLK (208)	ESA-FL-Electric seat adjustment front left	Erase Codes		V1.00.001 or higher
CLK (208)	ESA-FL-Electric seat adjustment front left	Live Data		V1.00.001 or higher
CLK (208)	ESA-FR-Electric seat adjustment front right	ECU Information		V1.00.001 or higher
CLK (208)	ESA-FR-Electric seat adjustment front right	Read Codes		V1.00.001 or higher
CLK (208)	ESA-FR-Electric seat adjustment front right	Erase Codes		V1.00.001 or higher
CLK (208)	ESA-FR-Electric seat adjustment front right	Live Data		V1.00.001 or higher
CLK (208)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher

CLK (208)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
CLK (208)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
CLK (208)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
CLK (208)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
CLK (208)	AAC-Automatic air conditioning	Special functions	Version coding	V1.00.001 or higher
CLK (208)	STH-Stationary heater	ECU Information		V1.00.001 or higher
CLK (208)	STH-Stationary heater	Read Codes		V1.00.001 or higher
CLK (208)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
CLK (208)	STH-Stationary heater	Live Data		V1.00.001 or higher
CLK (208)	STH-Stationary heater	Active Test		V1.00.001 or higher
CLK (208)	STH-Stationary heater	Control unit adaptations	CO2 setting	V1.00.001 or higher
CLK (208)	ME-SFI-Motor electronics	ECU Information		V1.00.001 or higher
CLK (208)	ME-SFI-Motor electronics	Read Codes		V1.00.001 or higher
CLK (208)	ME-SFI-Motor electronics	Erase Codes		V1.00.001 or higher
CLK (208)	ME-SFI-Motor electronics	Live Data		V1.00.001 or higher
CLK (208)	ME-SFI-Motor electronics	Active Test		V1.00.001 or higher
CLK (208)	ME-SFI-Motor electronics	Control unit adaptations	Learning processes	V1.00.001 or higher
CLK (208)	ME-SFI-Motor electronics	Control unit adaptations	Correction programming	V1.00.001 or higher
CLK (208)	VP-Vacuum pump brake booster	ECU Information		V1.00.001 or higher
CLK (208)	VP-Vacuum pump brake booster	Read Codes		V1.00.001 or higher
CLK (208)	VP-Vacuum pump brake booster	Erase Codes		V1.00.001 or higher
CLK (208)	VP-Vacuum pump brake booster	Live Data		V1.00.001 or higher

CLK (208)	VP-Vacuum pump brake booster	Active Test		V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
CLK (208)	ME2-SFI-Motor electronics 2	Special functions	Fault path tests are carried out.	V1.00.001 or higher
CLK (208)	RVC-Rollover bar soft top control module	ECU Information		V1.00.001 or higher
CLK (208)	RVC-Rollover bar soft top control module	Read Codes		V1.00.001 or higher
CLK (208)	RVC-Rollover bar soft top control module	Erase Codes		V1.00.001 or higher
CLK (208)	RVC-Rollover bar soft top control module	Live Data		V1.00.001 or higher
CLK (208)	RVC-Rollover bar soft top control module	Active Test		V1.00.001 or higher
CLS (218)	ME - Motor electronics	ECU Information		V1.00.001 or higher
CLS (218)	ME - Motor electronics	Read Codes		V1.00.001 or higher
CLS (218)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
CLS (218)	ME - Motor electronics	Live Data		V1.00.001 or higher
CLS (218)	ME - Motor electronics	Active Test		V1.00.001 or higher
CLS (218)	ME - Motor electronics	Special functions	Variant coding	V1.00.001 or higher
CLS (218)	CDI-Motor electronics	ECU Information		V1.00.001 or higher

CLS (218)	CDI-Motor electronics	Read Codes		V1.00.001 or higher
CLS (218)	CDI-Motor electronics	Erase Codes		V1.00.001 or higher
CLS (218)	CDI-Motor electronics	Live Data		V1.00.001 or higher
CLS (218)	CDI-Motor electronics	Active Test		V1.00.001 or higher
CLS (218)	VGS - Transmission control	ECU Information		V1.00.001 or higher
CLS (218)	VGS - Transmission control	Read Codes		V1.00.001 or higher
CLS (218)	VGS - Transmission control	Erase Codes		V1.00.001 or higher
CLS (218)	VGS - Transmission control	Live Data		V1.00.001 or higher
CLS (218)	VGS - Transmission control	Active Test		V1.00.001 or higher
CLS (218)	VGS - Transmission control	Special functions	Notes on cause of fault symptom:	V1.00.001 or higher
CLS (218)	ISM-Shift module	ECU Information		V1.00.001 or higher
CLS (218)	ISM-Shift module	Read Codes		V1.00.001 or higher
CLS (218)	ISM-Shift module	Erase Codes		V1.00.001 or higher
CLS (218)	ISM-Shift module	Live Data		V1.00.001 or higher
CLS (218)	ISM-Shift module	Active Test		V1.00.001 or higher
CLS (218)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
CLS (218)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
CLS (218)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
CLS (218)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
CLS (218)	FSCU-Fuel pump	Active Test		V1.00.001 or higher

CLS (218)	ESM[EWM] - Electronic selector module	ECU Information		V1.00.001 or higher
CLS (218)	ESM[EWM] - Electronic selector module	Read Codes		V1.00.001 or higher
CLS (218)	ESM[EWM] - Electronic selector module	Erase Codes		V1.00.001 or higher
CLS (218)	ESM[EWM] - Electronic selector module	Live Data		V1.00.001 or higher
CLS (218)	ESM[EWM] - Electronic selector module	Active Test		V1.00.001 or higher
CLS (218)	SCR - Selective catalytic reduction	ECU Information		V1.00.001 or higher
CLS (218)	SCR - Selective catalytic reduction	Read Codes		V1.00.001 or higher
CLS (218)	SCR - Selective catalytic reduction	Erase Codes		V1.00.001 or higher
CLS (218)	SCR - Selective catalytic reduction	Live Data		V1.00.001 or higher
CLS (218)	SCR - Selective catalytic reduction	Active Test		V1.00.001 or higher
CLS (218)	ESP - Electric stability program	ECU Information		V1.00.001 or higher
CLS (218)	ESP - Electric stability program	Read Codes		V1.00.001 or higher
CLS (218)	ESP - Electric stability program	Erase Codes		V1.00.001 or higher
CLS (218)	ESP - Electric stability program	Live Data		V1.00.001 or higher
CLS (218)	ESP - Electric stability program	Active Test		V1.00.001 or higher
CLS (218)	AMG DRVU-AMG DRIVE UNIT	ECU Information		V1.00.001 or higher
CLS (218)	AMG DRVU-AMG DRIVE UNIT	Read Codes		V1.00.001 or higher
CLS (218)	AMG DRVU-AMG DRIVE UNIT	Erase Codes		V1.00.001 or higher
CLS (218)	AMG DRVU-AMG DRIVE UNIT	Live Data		V1.00.001 or higher



CLS (218)	AMG DRVU-AMG DRIVE UNIT	Active Test		V1.00.001 or higher
CLS (218)	ADS - Adaptive damping system/ELC - Electronic level control	ECU Information		V1.00.001 or higher
CLS (218)	ADS - Adaptive damping system/ELC - Electronic level control	Read Codes		V1.00.001 or higher
CLS (218)	ADS - Adaptive damping system/ELC - Electronic level control	Erase Codes		V1.00.001 or higher
CLS (218)	ADS - Adaptive damping system/ELC - Electronic level control	Live Data		V1.00.001 or higher
CLS (218)	ADS - Adaptive damping system/ELC - Electronic level control	Active Test		V1.00.001 or higher
CLS (218)	ES - Electric power steering	ECU Information		V1.00.001 or higher
CLS (218)	ES - Electric power steering	Read Codes		V1.00.001 or higher
CLS (218)	ES - Electric power steering	Erase Codes		V1.00.001 or higher
CLS (218)	ES - Electric power steering	Live Data		V1.00.001 or higher
CLS (218)	FWGW-Chassis gateway	ECU Information		V1.00.001 or higher
CLS (218)	FWGW-Chassis gateway	Read Codes		V1.00.001 or higher
CLS (218)	FWGW-Chassis gateway	Erase Codes		V1.00.001 or higher
CLS (218)	FWGW-Chassis gateway	Live Data		V1.00.001 or higher
CLS (218)	SRS - Supplemental restraint system	ECU Information		V1.00.001 or higher

CLS (218)	SRS - Supplemental restraint system	Read Codes		V1.00.001 or higher
CLS (218)	SRS - Supplemental restraint system	Erase Codes		V1.00.001 or higher
CLS (218)	SRS - Supplemental restraint system	Live Data		V1.00.001 or higher
CLS (218)	CGW-Central gateway	ECU Information		V1.00.001 or higher
CLS (218)	CGW-Central gateway	Read Codes		V1.00.001 or higher
CLS (218)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
CLS (218)	CGW-Central gateway	Live Data		V1.00.001 or higher
CLS (218)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher
CLS (218)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
CLS (218)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
CLS (218)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
CLS (218)	SCM - Steering column module	ECU Information		V1.00.001 or higher
CLS (218)	SCM - Steering column module	Read Codes		V1.00.001 or higher
CLS (218)	SCM - Steering column module	Erase Codes		V1.00.001 or higher
CLS (218)	SCM - Steering column module	Live Data		V1.00.001 or higher
CLS (218)	SCM - Steering column module	Active Test		V1.00.001 or higher
CLS (218)	Multifunction control unit- Multifunction control unit	ECU Information		V1.00.001 or higher
CLS (218)	Multifunction control unit- Multifunction control unit	Read Codes		V1.00.001 or higher
CLS (218)	Multifunction control unit- Multifunction control unit	Erase Codes		V1.00.001 or higher

CLS (218)	Multifunction control unit- Multifunction control unit	Live Data		V1.00.001 or higher
CLS (218)	Multifunction control unit- Multifunction control unit	Active Test		V1.00.001 or higher
CLS (218)	KG - KEYLESS GO	ECU Information		V1.00.001 or higher
CLS (218)	KG - KEYLESS GO	Read Codes		V1.00.001 or higher
CLS (218)	KG - KEYLESS GO	Erase Codes		V1.00.001 or higher
CLS (218)	KG - KEYLESS GO	Live Data		V1.00.001 or higher
CLS (218)	KG - KEYLESS GO	Active Test		V1.00.001 or higher
CLS (218)	HKS-Tailgate control (N121/1)	ECU Information		V1.00.001 or higher
CLS (218)	HKS-Tailgate control (N121/1)	Read Codes		V1.00.001 or higher
CLS (218)	HKS-Tailgate control (N121/1)	Erase Codes		V1.00.001 or higher
CLS (218)	HKS-Tailgate control (N121/1)	Live Data		V1.00.001 or higher
CLS (218)	HKS-Tailgate control (N121/1)	Active Test		V1.00.001 or higher
CLS (218)	PSD-Control mudule 'Panoramic sliding roof'	ECU Information		V1.00.001 or higher
CLS (218)	PSD-Control mudule 'Panoramic sliding roof'	Read Codes		V1.00.001 or higher
CLS (218)	PSD-Control mudule 'Panoramic sliding roof'	Erase Codes		V1.00.001 or higher
CLS (218)	PSD-Control mudule 'Panoramic sliding roof'	Live Data		V1.00.001 or higher
CLS (218)	PSD-Control mudule 'Panoramic sliding roof'	Active Test		V1.00.001 or higher

CLS (218)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
CLS (218)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
CLS (218)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
CLS (218)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
CLS (218)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
CLS (218)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
CLS (218)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
CLS (218)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
CLS (218)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
CLS (218)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
CLS (218)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
CLS (218)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher

CLS (218)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
CLS (218)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
CLS (218)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
CLS (218)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
CLS (218)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
CLS (218)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
CLS (218)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
CLS (218)	Trailer recognition module	ECU Information		V1.00.001 or higher
CLS (218)	Trailer recognition module	Read Codes		V1.00.001 or higher
CLS (218)	Trailer recognition module	Erase Codes		V1.00.001 or higher
CLS (218)	Trailer recognition module	Live Data		V1.00.001 or higher
CLS (218)	Trailer recognition module	Active Test		V1.00.001 or higher
CLS (218)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher
CLS (218)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher

CLS (218)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
CLS (218)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
CLS (218)	Driver-side SAM - Front signal acquisition and actuation module	Active Test		V1.00.001 or higher
CLS (218)	Rear SAM - Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
CLS (218)	Rear SAM - Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
CLS (218)	Rear SAM - Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
CLS (218)	Rear SAM - Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
CLS (218)	Rear SAM - Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
CLS (218)	SG-SW-L - Left headlamp	ECU Information		V1.00.001 or higher
CLS (218)	SG-SW-L - Left headlamp	Read Codes		V1.00.001 or higher
CLS (218)	SG-SW-L - Left headlamp	Erase Codes		V1.00.001 or higher
CLS (218)	SG-SW-L - Left headlamp	Live Data		V1.00.001 or higher

CLS (218)	SG-SW-L - Left headlamp	Active Test		V1.00.001 or higher
CLS (218)	SG-SW-R - Right headlamp	ECU Information		V1.00.001 or higher
CLS (218)	SG-SW-R - Right headlamp	Read Codes		V1.00.001 or higher
CLS (218)	SG-SW-R - Right headlamp	Erase Codes		V1.00.001 or higher
CLS (218)	SG-SW-R - Right headlamp	Live Data		V1.00.001 or higher
CLS (218)	SG-SW-R - Right headlamp	Active Test		V1.00.001 or higher
CLS (218)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
CLS (218)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
CLS (218)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
CLS (218)	IC - Instrument cluster	Live Data		V1.00.001 or higher
CLS (218)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
CLS (218)	IC - Instrument cluster	Active Test		V1.00.001 or higher
CLS (218)	ICI-InCar Internet	ECU Information		V1.00.001 or higher
CLS (218)	ICI-InCar Internet	Read Codes		V1.00.001 or higher
CLS (218)	ICI-InCar Internet	Erase Codes		V1.00.001 or higher
CLS (218)	ICI-InCar Internet	Live Data		V1.00.001 or higher
CLS (218)	AVE-H - Controller unit Rear entertainment system	ECU Information		V1.00.001 or higher
CLS (218)	AVE-H - Controller unit Rear entertainment system	Read Codes		V1.00.001 or higher
CLS (218)	AVE-H - Controller unit Rear entertainment system	Erase Codes		V1.00.001 or higher

CLS (218)	AVE-H - Controller unit Rear entertainment system	Live Data		V1.00.001 or higher
CLS (218)	AVE-H - Controller unit Rear entertainment system	Active Test		V1.00.001 or higher
CLS (218)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher
CLS (218)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Read Codes		V1.00.001 or higher
CLS (218)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
CLS (218)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
CLS (218)	NAV - Navigation module	ECU Information		V1.00.001 or higher
CLS (218)	NAV - Navigation module	Read Codes		V1.00.001 or higher
CLS (218)	NAV - Navigation module	Erase Codes		V1.00.001 or higher
CLS (218)	NAV - Navigation module	Live Data		V1.00.001 or higher
CLS (218)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
CLS (218)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher
CLS (218)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher



CLS (218)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
CLS (218)	SOUND - Sound system	ECU Information		V1.00.001 or higher
CLS (218)	SOUND - Sound system	Read Codes		V1.00.001 or higher
CLS (218)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
CLS (218)	SOUND - Sound system	Live Data		V1.00.001 or higher
CLS (218)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
CLS (218)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
CLS (218)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
CLS (218)	TELE AID-Control unit	Live Data		V1.00.001 or higher
CLS (218)	TV - TV tuner	ECU Information		V1.00.001 or higher
CLS (218)	TV - TV tuner	Read Codes		V1.00.001 or higher
CLS (218)	TV - TV tuner	Erase Codes		V1.00.001 or higher
CLS (218)	TV - TV tuner	Live Data		V1.00.001 or higher
CLS (218)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
CLS (218)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
CLS (218)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
CLS (218)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
CLS (218)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
CLS (218)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
CLS (218)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher

CLS (218)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
CLS (218)	Drive Kit Plus - Drive kit for iPhone	ECU Information		V1.00.001 or higher
CLS (218)	Drive Kit Plus - Drive kit for iPhone	Read Codes		V1.00.001 or higher
CLS (218)	Drive Kit Plus - Drive kit for iPhone	Erase Codes		V1.00.001 or higher
CLS (218)	Drive Kit Plus - Drive kit for iPhone	Live Data		V1.00.001 or higher
CLS (218)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
CLS (218)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
CLS (218)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
CLS (218)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
CLS (218)	MIF - Media interface	ECU Information		V1.00.001 or higher
CLS (218)	MIF - Media interface	Read Codes		V1.00.001 or higher
CLS (218)	MIF - Media interface	Erase Codes		V1.00.001 or higher
CLS (218)	MIF - Media interface	Live Data		V1.00.001 or higher
CLS (218)	D-FOL - Display in left rear passenger compartment	ECU Information		V1.00.001 or higher
CLS (218)	D-FOL - Display in left rear passenger compartment	Read Codes		V1.00.001 or higher
CLS (218)	D-FOL - Display in left rear passenger compartment	Erase Codes		V1.00.001 or higher

CLS (218)	D-FOL - Display in left rear passenger compartment	Live Data		V1.00.001 or higher
CLS (218)	D-FOL - Display in left rear passenger compartment	Active Test		V1.00.001 or higher
CLS (218)	D-FOR - Display in right rear passenger compartment	ECU Information		V1.00.001 or higher
CLS (218)	D-FOR - Display in right rear passenger compartment	Read Codes		V1.00.001 or higher
CLS (218)	D-FOR - Display in right rear passenger compartment	Erase Codes		V1.00.001 or higher
CLS (218)	D-FOR - Display in right rear passenger compartment	Live Data		V1.00.001 or higher
CLS (218)	D-FOR - Display in right rear passenger compartment	Active Test		V1.00.001 or higher
CLS (218)	TELE AID- Telematic service Emergency call	ECU Information		V1.00.001 or higher
CLS (218)	TELE AID- Telematic service Emergency call	Read Codes		V1.00.001 or higher
CLS (218)	TELE AID- Telematic service Emergency call	Erase Codes		V1.00.001 or higher
CLS (218)	TELE AID- Telematic service Emergency call	Live Data		V1.00.001 or higher

CLS (218)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
CLS (218)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
CLS (218)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
CLS (218)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
CLS (218)	TELE AID- Telematic services Remote door unlocking	ECU Information		V1.00.001 or higher
CLS (218)	TELE AID- Telematic services Remote door unlocking	Read Codes		V1.00.001 or higher
CLS (218)	TELE AID- Telematic services Remote door unlocking	Erase Codes		V1.00.001 or higher
CLS (218)	TELE AID- Telematic services Remote door unlocking	Live Data		V1.00.001 or higher
CLS (218)	TELE AID- Telematic service Stolen vehicle tracking	ECU Information		V1.00.001 or higher

CLS (218)	TELE AID- Telematic service Stolen vehicle tracking	Read Codes		V1.00.001 or higher
CLS (218)	TELE AID- Telematic service Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
CLS (218)	TELE AID- Telematic service Stolen vehicle tracking	Live Data		V1.00.001 or higher
CLS (218)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
CLS (218)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
CLS (218)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
CLS (218)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
CLS (218)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher
CLS (218)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
CLS (218)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
CLS (218)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
CLS (218)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
CLS (218)	CTEL - Mobile phone	ECU Information		V1.00.001 or higher
CLS (218)	CTEL - Mobile phone	Read Codes		V1.00.001 or higher
CLS (218)	CTEL - Mobile phone	Erase Codes		V1.00.001 or higher
CLS (218)	CTEL - Mobile phone	Live Data		V1.00.001 or higher

CLS (218)	PARK - Parking system	ECU Information		V1.00.001 or higher
CLS (218)	PARK - Parking system	Read Codes		V1.00.001 or higher
CLS (218)	PARK - Parking system	Erase Codes		V1.00.001 or higher
CLS (218)	PARK - Parking system	Live Data		V1.00.001 or higher
CLS (218)	DSI-DIRECT SELECT interface	ECU Information		V1.00.001 or higher
CLS (218)	DSI-DIRECT SELECT interface	Read Codes		V1.00.001 or higher
CLS (218)	DSI-DIRECT SELECT interface	Erase Codes		V1.00.001 or higher
CLS (218)	DSI-DIRECT SELECT interface	Live Data		V1.00.001 or higher
CLS (218)	PPAMKS - Pneumatic pump for multicontour seat	ECU Information		V1.00.001 or higher
CLS (218)	PPAMKS - Pneumatic pump for multicontour seat	Read Codes		V1.00.001 or higher
CLS (218)	PPAMKS - Pneumatic pump for multicontour seat	Erase Codes		V1.00.001 or higher
CLS (218)	PPAMKS - Pneumatic pump for multicontour seat	Live Data		V1.00.001 or higher
CLS (218)	PPAMKS - Pneumatic pump for multicontour seat	Active Test		V1.00.001 or higher
CLS (218)	AMKS-LF-Active multicontour seat	ECU Information		V1.00.001 or higher
CLS (218)	AMKS-LF-Active multicontour seat	Read Codes		V1.00.001 or higher
CLS (218)	AMKS-LF-Active multicontour seat	Erase Codes		V1.00.001 or higher
CLS (218)	AMKS-LF-Active multicontour seat	Live Data		V1.00.001 or higher

CLS (218)	AMKS-LF-Active multicontour seat	Active Test		V1.00.001 or higher
CLS (218)	AMKS-RF-Active multicontour seat	ECU Information		V1.00.001 or higher
CLS (218)	AMKS-RF-Active multicontour seat	Read Codes		V1.00.001 or higher
CLS (218)	AMKS-RF-Active multicontour seat	Erase Codes		V1.00.001 or higher
CLS (218)	AMKS-RF-Active multicontour seat	Live Data		V1.00.001 or higher
CLS (218)	AMKS-RF-Active multicontour seat	Active Test		V1.00.001 or higher
CLS (218)	ESA Driver - Electric seat adjustmnet Driver	ECU Information		V1.00.001 or higher
CLS (218)	ESA Driver - Electric seat adjustmnet Driver	Read Codes		V1.00.001 or higher
CLS (218)	ESA Driver - Electric seat adjustmnet Driver	Erase Codes		V1.00.001 or higher
CLS (218)	ESA Driver - Electric seat adjustmnet Driver	Live Data		V1.00.001 or higher
CLS (218)	ESA Driver - Electric seat adjustmnet Driver	Active Test		V1.00.001 or higher
CLS (218)	ESA Front passenger - Electric seat adjustment Front passenger	ECU Information		V1.00.001 or higher
CLS (218)	ESA Front passenger - Electric seat adjustment Front passenger	Read Codes		V1.00.001 or higher

CLS (218)	ESA Front passenger - Electric seat adjustment Front passenger	Erase Codes		V1.00.001 or higher
CLS (218)	ESA Front passenger - Electric seat adjustment Front passenger	Live Data		V1.00.001 or higher
CLS (218)	ESA Front passenger - Electric seat adjustment Front passenger	Active Test		V1.00.001 or higher
CLS (218)	DCU-LF-Left front door	ECU Information		V1.00.001 or higher
CLS (218)	DCU-LF-Left front door	Read Codes		V1.00.001 or higher
CLS (218)	DCU-LF-Left front door	Erase Codes		V1.00.001 or higher
CLS (218)	DCU-LF-Left front door	Live Data		V1.00.001 or higher
CLS (218)	DCU-LF-Left front door	Active Test		V1.00.001 or higher
CLS (218)	DCU-RF-Right front door	ECU Information		V1.00.001 or higher
CLS (218)	DCU-RF-Right front door	Read Codes		V1.00.001 or higher
CLS (218)	DCU-RF-Right front door	Erase Codes		V1.00.001 or higher
CLS (218)	DCU-RF-Right front door	Live Data		V1.00.001 or higher
CLS (218)	DCU-RF-Right front door	Active Test		V1.00.001 or higher
CLS (218)	DCU-LR-Left rear door	ECU Information		V1.00.001 or higher
CLS (218)	DCU-LR-Left rear door	Read Codes		V1.00.001 or higher
CLS (218)	DCU-LR-Left rear door	Erase Codes		V1.00.001 or higher
CLS (218)	DCU-LR-Left rear door	Live Data		V1.00.001 or higher
CLS (218)	DCU-LR-Left rear door	Active Test		V1.00.001 or higher
CLS (218)	DCU-RR-Right rear door	ECU Information		V1.00.001 or higher



CLS (218)	DCU-RR-Right rear door	Read Codes		V1.00.001 or higher
CLS (218)	DCU-RR-Right rear door	Erase Codes		V1.00.001 or higher
CLS (218)	DCU-RR-Right rear door	Live Data		V1.00.001 or higher
CLS (218)	DCU-RR-Right rear door	Active Test		V1.00.001 or higher
CLS (218)	SIH-FOND-Rear passenger compartment seat heater	ECU Information		V1.00.001 or higher
CLS (218)	SIH-FOND-Rear passenger compartment seat heater	Read Codes		V1.00.001 or higher
CLS (218)	SIH-FOND-Rear passenger compartment seat heater	Erase Codes		V1.00.001 or higher
CLS (218)	SIH-FOND-Rear passenger compartment seat heater	Live Data		V1.00.001 or higher
CLS (218)	SIH-FOND-Rear passenger compartment seat heater	Active Test		V1.00.001 or higher
CLS (218)	LRH-Steering wheel heater	ECU Information		V1.00.001 or higher
CLS (218)	LRH-Steering wheel heater	Read Codes		V1.00.001 or higher
CLS (218)	LRH-Steering wheel heater	Erase Codes		V1.00.001 or higher
CLS (218)	LRH-Steering wheel heater	Live Data		V1.00.001 or higher
CLS (218)	AAC-Air conditioning	ECU Information		V1.00.001 or higher
CLS (218)	AAC-Air conditioning	Read Codes		V1.00.001 or higher
CLS (218)	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
CLS (218)	AAC-Air conditioning	Live Data		V1.00.001 or higher
CLS (218)	AAC-Air conditioning	Active Test		V1.00.001 or higher
CLS (218)	STH - Stationary heater	ECU Information		V1.00.001 or higher

CLS (218)	STH - Stationary healer	Read Codes		V1.00.001 or higher
CLS (218)	STH - Stationary healer	Erase Codes		V1.00.001 or higher
CLS (218)	STH - Stationary healer	Live Data		V1.00.001 or higher
CLS (218)	STH - Stationary healer	Active Test		V1.00.001 or higher
CLS (218)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
CLS (218)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
CLS (218)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
CLS (218)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
CLS (218)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
CLS (218)	TPM - Tire pressure monitor	Special functions	Write the wheel electronics ID number.	V1.00.001 or higher
CLS (218)	SGR - Radar sensors control unit	ECU Information		V1.00.001 or higher
CLS (218)	SGR - Radar sensors control unit	Read Codes		V1.00.001 or higher
CLS (218)	SGR - Radar sensors control unit	Erase Codes		V1.00.001 or higher
CLS (218)	SGR - Radar sensors control unit	Live Data		V1.00.001 or higher
CLS (218)	SGR - Radar sensors control unit	Active Test		V1.00.001 or higher
CLS (218)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	ECU Information		V1.00.001 or higher
CLS (218)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Read Codes		V1.00.001 or higher
CLS (218)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Erase Codes		V1.00.001 or higher

CLS (218)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Live Data		V1.00.001 or higher
CLS (218)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Active Test		V1.00.001 or higher
CLS (218)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
CLS (218)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
CLS (218)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
CLS (218)	IRS-HRA - Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
CLS (218)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
CLS (218)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
CLS (218)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
CLS (218)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
CLS (218)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
CLS (218)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
CLS (218)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
CLS (218)	DTR - DISTRONIC	Live Data		V1.00.001 or higher

CLS (218)	NSA - Night View Assist	ECU Information		V1.00.001 or higher
CLS (218)	NSA - Night View Assist	Read Codes		V1.00.001 or higher
CLS (218)	NSA - Night View Assist	Erase Codes		V1.00.001 or higher
CLS (218)	NSA - Night View Assist	Live Data		V1.00.001 or higher
CLS (218)	RFK - Backup camera	ECU Information		V1.00.001 or higher
CLS (218)	RFK - Backup camera	Read Codes		V1.00.001 or higher
CLS (218)	RFK - Backup camera	Erase Codes		V1.00.001 or higher
CLS (218)	RFK - Backup camera	Live Data		V1.00.001 or higher
CLS (218)	RFK - Backup camera	Active Test		V1.00.001 or higher
CLS (218)	PARK - Parking system	ECU Information		V1.00.001 or higher
CLS (218)	PARK - Parking system	Read Codes		V1.00.001 or higher
CLS (218)	PARK - Parking system	Erase Codes		V1.00.001 or higher
CLS (218)	PARK - Parking system	Live Data		V1.00.001 or higher
CLS (218)	PARK - Parking system	Active Test		V1.00.001 or higher
CLS (219)	ME 9.7-Motor electronics 9.7	ECU Information		V1.00.001 or higher
CLS (219)	ME 9.7-Motor electronics 9.7	Read Codes		V1.00.001 or higher
CLS (219)	ME 9.7-Motor electronics 9.7	Erase Codes		V1.00.001 or higher
CLS (219)	ME 9.7-Motor electronics 9.7	Live Data		V1.00.001 or higher
CLS (219)	ME 9.7-Motor electronics 9.7	Active Test		V1.00.001 or higher
CLS (219)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Learning processes	V1.00.001 or higher
CLS (219)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Correction programming	V1.00.001 or higher
CLS (219)	ME 9.7-Motor electronics 9.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
CLS (219)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher

CLS (219)	ME 9.7-Motor electronics 9.7	Special functions	Variant coding	V1.00.001 or higher
CLS (219)	Transmission	ECU Information		V1.00.001 or higher
CLS (219)	Transmission	Read Codes		V1.00.001 or higher
CLS (219)	Transmission	Erase Codes		V1.00.001 or higher
CLS (219)	Transmission	Live Data		V1.00.001 or higher
CLS (219)	Transmission	Active Test		V1.00.001 or higher
CLS (219)	Transmission	Control unit adaptations	Definition	V1.00.001 or higher
CLS (219)	Transmission	Control unit adaptations	Assignment of the hydraulic shift elements	V1.00.001 or higher
CLS (219)	Transmission	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
CLS (219)	Transmission	Control unit adaptations	Important information on the combination possibilities for adaptation end stop values	V1.00.001 or higher
CLS (219)	Transmission	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
CLS (219)	Transmission	Control unit adaptations	Performing adaptation	V1.00.001 or higher
CLS (219)	Transmission	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
CLS (219)	Transmission	Special functions	Warranty or goodwill processing	V1.00.001 or higher
CLS (219)	Transmission	Special functions	Diagnosis routines	V1.00.001 or higher
CLS (219)	Transmission	Initial startup	Initial start-up with manual settings input for new control module	V1.00.001 or higher
CLS (219)	DTR-Distronic	ECU Information		V1.00.001 or higher

CLS (219)	DTR-Distronic	Read Codes		V1.00.001 or higher
CLS (219)	DTR-Distronic	Erase Codes		V1.00.001 or higher
CLS (219)	DTR-Distronic	Live Data		V1.00.001 or higher
CLS (219)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
CLS (219)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
CLS (219)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
CLS (219)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
CLS (219)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
CLS (219)	ESM-Electronic selector module	Control unit adaptations	Operational check	V1.00.001 or higher
CLS (219)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
CLS (219)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
CLS (219)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
CLS (219)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
CLS (219)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
CLS (219)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
CLS (219)	SBC-Sensotronic Brake Control	ECU Information		V1.00.001 or higher
CLS (219)	SBC-Sensotronic Brake Control	Read Codes		V1.00.001 or higher
CLS (219)	SBC-Sensotronic Brake Control	Erase Codes		V1.00.001 or higher
CLS (219)	SBC-Sensotronic Brake Control	Live Data		V1.00.001 or higher
CLS (219)	SBC-Sensotronic Brake Control	Special functions	•	V1.00.001 or higher
CLS (219)	TPC-Tire pressure monitor	ECU Information		V1.00.001 or higher
CLS (219)	TPC-Tire pressure monitor	Read Codes		V1.00.001 or higher
CLS (219)	TPC-Tire pressure monitor	Erase Codes		V1.00.001 or higher
CLS (219)	TPC-Tire pressure monitor	Live Data		V1.00.001 or higher

CLS (219)	TPC-Tire pressure monitor	Active Test		V1.00.001 or higher
CLS (219)	TPC-Tire pressure monitor	Control unit adaptations	•	V1.00.001 or higher
CLS (219)	AIRmatic	ECU Information		V1.00.001 or higher
CLS (219)	AIRmatic	Read Codes		V1.00.001 or higher
CLS (219)	AIRmatic	Erase Codes		V1.00.001 or higher
CLS (219)	AIRmatic	Live Data		V1.00.001 or higher
CLS (219)	AIRmatic	Active Test		V1.00.001 or higher
CLS (219)	AIRmatic	Special functions	Initial start-up	V1.00.001 or higher
CLS (219)	AIRmatic	Special functions	Pneumatic tests	V1.00.001 or higher
CLS (219)	AB-Airbag	ECU Information		V1.00.001 or higher
CLS (219)	AB-Airbag	Read Codes		V1.00.001 or higher
CLS (219)	AB-Airbag	Erase Codes		V1.00.001 or higher
CLS (219)	AB-Airbag	Live Data		V1.00.001 or higher
CLS (219)	CGW-Central gateway	ECU Information		V1.00.001 or higher
CLS (219)	CGW-Central gateway	Read Codes		V1.00.001 or higher
CLS (219)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
CLS (219)	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher
CLS (219)	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher
CLS (219)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
CLS (219)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
CLS (219)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
CLS (219)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
CLS (219)	EZS-Electronic ignition switch	Active Test		V1.00.001 or higher

CLS (219)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher
CLS (219)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher
CLS (219)	EZS-Electronic ignition switch	Control unit adaptations	Program the replacement keys.	V1.00.001 or higher
CLS (219)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N73 (Electronic Ignition Switch (EIS/EZS) control module)'. 'N73 (Electronic Ignition Switch (EIS/EZS) control module)'. 'N73 (Electronic Ignition Switch (EIS/EZS) control module)'.	V1.00.001 or higher
CLS (219)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N26/5 (Electric steering lock control module)'.	V1.00.001 or higher
CLS (219)	EZS-Electronic ignition switch	Control unit adaptations	Key assignment or key track assignment to a memory block number	V1.00.001 or higher
CLS (219)	EZS-Electronic ignition switch	Control unit adaptations	Writing of the VIN	V1.00.001 or higher
CLS (219)	EZS-Electronic ignition switch	Control unit adaptations	Telematic service 'Remote door unlocking' (TELE AID)	V1.00.001 or higher
CLS (219)	EZS-Electronic ignition switch	Initial startup	Initial start-up of the control module 'Electronic Ignition Switch (EIS/EZS)'	V1.00.001 or higher
CLS (219)	EZS-Electronic ignition switch	Initial startup	Initial start-up of the control module 'ESL'	V1.00.001 or higher
CLS (219)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
CLS (219)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
CLS (219)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher



CLS (219)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
CLS (219)	WSS-Weight sensing system	Control unit adaptations	•	V1.00.001 or higher
CLS (219)	WSS-Weight sensing system	Initial startup	Initial start-up	V1.00.001 or higher
CLS (219)	BCM-Battery control module	ECU Information		V1.00.001 or higher
CLS (219)	BCM-Battery control module	Read Codes		V1.00.001 or higher
CLS (219)	BCM-Battery control module	Erase Codes		V1.00.001 or higher
CLS (219)	BCM-Battery control module	Live Data		V1.00.001 or higher
CLS (219)	BCM-Battery control module	Active Test		V1.00.001 or higher
CLS (219)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
CLS (219)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
CLS (219)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
CLS (219)	Dr-side SAM- Driver signal acquisition and actuation module	ECU Information		V1.00.001 or higher
CLS (219)	Dr-side SAM- Driver signal acquisition and actuation module	Read Codes		V1.00.001 or higher
CLS (219)	Dr-side SAM- Driver signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
CLS (219)	Dr-side SAM- Driver signal acquisition and actuation module	Live Data		V1.00.001 or higher
CLS (219)	Dr-side SAM- Driver signal acquisition and actuation module	Active Test		V1.00.001 or higher

CLS (219)	Pass-side SAM-Passenger-side signal acquisition and actuation module	ECU Information		V1.00.001 or higher
CLS (219)	Pass-side SAM-Passenger-side signal acquisition and actuation module	Read Codes		V1.00.001 or higher
CLS (219)	Pass-side SAM-Passenger-side signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
CLS (219)	Pass-side SAM-Passenger-side signal acquisition and actuation module	Live Data		V1.00.001 or higher
CLS (219)	Pass-side SAM-Passenger-side signal acquisition and actuation module	Active Test		V1.00.001 or higher
CLS (219)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
CLS (219)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
CLS (219)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher

CLS (219)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
CLS (219)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
CLS (219)	LCP-Lower control panel	ECU Information		V1.00.001 or higher
CLS (219)	LCP-Lower control panel	Read Codes		V1.00.001 or higher
CLS (219)	LCP-Lower control panel	Erase Codes		V1.00.001 or higher
CLS (219)	LCP-Lower control panel	Live Data		V1.00.001 or higher
CLS (219)	LCP-Lower control panel	Active Test		V1.00.001 or higher
CLS (219)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
CLS (219)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
CLS (219)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
CLS (219)	UCP-Upper control panel	Live Data		V1.00.001 or higher
CLS (219)	UCP-Upper control panel	Active Test		V1.00.001 or higher
CLS (219)	UCP-Upper control panel	Initial startup	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
CLS (219)	UCP-Upper control panel	Initial startup	Initial start-up with manual settings input for new control module(For example: The previous control module cannot be read any longer.)	V1.00.001 or higher
CLS (219)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher

CLS (219)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
CLS (219)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
CLS (219)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
CLS (219)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
CLS (219)	OCP-Overhead control panel	Control unit adaptations	Rain/Light Sensor	V1.00.001 or higher
CLS (219)	OCP-Overhead control panel	Control unit adaptations	SR/SHD (Tilting/Sliding Sunroof)	V1.00.001 or higher
CLS (219)	OCP-Overhead control panel	Control unit adaptations	Adaptation of the light sensor amplification factor	V1.00.001 or higher
CLS (219)	OCP-Overhead control panel	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
CLS (219)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
CLS (219)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
CLS (219)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
CLS (219)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
CLS (219)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher

CLS (219)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
CLS (219)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
CLS (219)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
CLS (219)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
CLS (219)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
CLS (219)	HRA-Automatic headlamp range adjustment and headlamp control	ECU Information		V1.00.001 or higher
CLS (219)	HRA-Automatic headlamp range adjustment and headlamp control	Read Codes		V1.00.001 or higher
CLS (219)	HRA-Automatic headlamp range adjustment and headlamp control	Erase Codes		V1.00.001 or higher
CLS (219)	HRA-Automatic headlamp range adjustment and headlamp control	Live Data		V1.00.001 or higher

CLS (219)	HRA-Automatic headlamp range adjustment and headlamp control	Active Test		V1.00.001 or higher
CLS (219)	HRA-Automatic headlamp range adjustment and headlamp control	Control unit adaptations	Zero position adjustment of axle or level sensors	V1.00.001 or higher
CLS (219)	On board electrical system(voltage supply)	ECU Information		V1.00.001 or higher
CLS (219)	On board electrical system(voltage supply)	Read Codes		V1.00.001 or higher
CLS (219)	On board electrical system(voltage supply)	Erase Codes		V1.00.001 or higher
CLS (219)	On board electrical system(voltage supply)	Live Data		V1.00.001 or higher
CLS (219)	IC-Instrument cluster	ECU Information		V1.00.001 or higher
CLS (219)	IC-Instrument cluster	Read Codes		V1.00.001 or higher
CLS (219)	IC-Instrument cluster	Erase Codes		V1.00.001 or higher
CLS (219)	IC-Instrument cluster	Live Data		V1.00.001 or higher
CLS (219)	IC-Instrument cluster	Active Test		V1.00.001 or higher
CLS (219)	IC-Instrument cluster	Control unit adaptations	Setting the main odometer forward and back	V1.00.001 or higher
CLS (219)	IC-Instrument cluster	Control unit adaptations	Setting days since initial registration	V1.00.001 or higher
CLS (219)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
CLS (219)	PTS-Parktronic system	Read Codes		V1.00.001 or higher

CLS (219)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
CLS (219)	PTS-Parktronic system	Live Data		V1.00.001 or higher
CLS (219)	PTS-Parktronic system	Active Test		V1.00.001 or higher
CLS (219)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
CLS (219)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
CLS (219)	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher
CLS (219)	SCM [MRM]-Steering column module	Live Data		V1.00.001 or higher
CLS (219)	SCM [MRM]-Steering column module	Active Test		V1.00.001 or higher
CLS (219)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
CLS (219)	ASSYST-Active Service System	Read Codes		V1.00.001 or higher
CLS (219)	ASSYST-Active Service System	Erase Codes		V1.00.001 or higher
CLS (219)	ASSYST-Active Service System	Live Data		V1.00.001 or higher
CLS (219)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
CLS (219)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
CLS (219)	ASSYST PLUS-PLUS Active Service System	Read Codes		V1.00.001 or higher
CLS (219)	ASSYST PLUS-PLUS Active Service System	Erase Codes		V1.00.001 or higher
CLS (219)	ASSYST PLUS-PLUS Active Service System	Live Data		V1.00.001 or higher
CLS (219)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher

CLS (219)	ASSYST PLUS-PLUS Active Service System	Control unit adaptations	Current brake lining thickness	V1.00.001 or higher
CLS (219)	ASSYST PLUS-PLUS Active Service System	Control unit adaptations	Internal ASSYST Plus data	V1.00.001 or higher
CLS (219)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher
CLS (219)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher
CLS (219)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
CLS (219)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher
CLS (219)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher
CLS (219)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Special functions	Read the coding and change as necessary.	V1.00.001 or higher



CLS (219)	COMAND or AUDIO	ECU Information		V1.00.001 or higher
CLS (219)	COMAND or AUDIO	Read Codes		V1.00.001 or higher
CLS (219)	COMAND or AUDIO	Erase Codes		V1.00.001 or higher
CLS (219)	COMAND or AUDIO	Live Data		V1.00.001 or higher
CLS (219)	COMAND or AUDIO	Active Test		V1.00.001 or higher
CLS (219)	COMAND or AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
CLS (219)	CTEL-Mobile phone adapter with universal interface	ECU Information		V1.00.001 or higher
CLS (219)	CTEL-Mobile phone adapter with universal interface	Read Codes		V1.00.001 or higher
CLS (219)	CTEL-Mobile phone adapter with universal interface	Erase Codes		V1.00.001 or higher
CLS (219)	CTEL-Mobile phone adapter with universal interface	Live Data		V1.00.001 or higher
CLS (219)	NAVI-Navigation system	ECU Information		V1.00.001 or higher
CLS (219)	NAVI-Navigation system	Read Codes		V1.00.001 or higher
CLS (219)	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
CLS (219)	NAVI-Navigation system	Live Data		V1.00.001 or higher
CLS (219)	NAVI-Navigation system	Active Test		V1.00.001 or higher
CLS (219)	CDC-CD changer	ECU Information		V1.00.001 or higher
CLS (219)	CDC-CD changer	Read Codes		V1.00.001 or higher
CLS (219)	CDC-CD changer	Erase Codes		V1.00.001 or higher
CLS (219)	CDC-CD changer	Live Data		V1.00.001 or higher

CLS (219)	CDC-CD changer	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
CLS (219)	VCS-Voice control system	ECU Information		V1.00.001 or higher
CLS (219)	VCS-Voice control system	Read Codes		V1.00.001 or higher
CLS (219)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
CLS (219)	VCS-Voice control system	Active Test		V1.00.001 or higher
CLS (219)	TV-TV tuner	ECU Information		V1.00.001 or higher
CLS (219)	TV-TV tuner	Read Codes		V1.00.001 or higher
CLS (219)	TV-TV tuner	Erase Codes		V1.00.001 or higher
CLS (219)	TV-TV tuner	Live Data		V1.00.001 or higher
CLS (219)	TV-TV tuner	Active Test		V1.00.001 or higher
CLS (219)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
CLS (219)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
CLS (219)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
CLS (219)	SDAR-Satellite radio	Live Data		V1.00.001 or higher
CLS (219)	Control unit TELE AID	ECU Information		V1.00.001 or higher
CLS (219)	Control unit TELE AID	Read Codes		V1.00.001 or higher
CLS (219)	Control unit TELE AID	Erase Codes		V1.00.001 or higher
CLS (219)	Control unit TELE AID	Live Data		V1.00.001 or higher
CLS (219)	TELE AID-Telematic services Emergency call	ECU Information		V1.00.001 or higher
CLS (219)	TELE AID-Telematic services Emergency call	Read Codes		V1.00.001 or higher
CLS (219)	TELE AID-Telematic services Emergency call	Erase Codes		V1.00.001 or higher

CLS (219)	TELE AID- Telematic services Emergency call	Live Data		V1.00.001 or higher
CLS (219)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
CLS (219)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
CLS (219)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
CLS (219)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
CLS (219)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher
CLS (219)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
CLS (219)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
CLS (219)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher

CLS (219)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher
CLS (219)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
CLS (219)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
CLS (219)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher
CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	ECU Information		V1.00.001 or higher
CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Read Codes		V1.00.001 or higher
CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Erase Codes		V1.00.001 or higher
CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Live Data		V1.00.001 or higher

CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Active Test		V1.00.001 or higher
CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterize the Easy Entry/Exit.	V1.00.001 or higher
CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Increase the fore/aft adjustment range to rear.	V1.00.001 or higher
CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterize collision avoidance.	V1.00.001 or higher
CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Adjust the parameter for backrest adjustment.	V1.00.001 or higher
CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher
CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher
CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher

CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterization of the function for moving the driver seat out of way when folding down the rear seat	V1.00.001 or higher
CLS (219)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Re-adjust the adjustment parameters.	V1.00.001 or higher
CLS (219)	ESA passenger-Electric seat adjustment passenger	ECU Information		V1.00.001 or higher
CLS (219)	ESA passenger-Electric seat adjustment passenger	Read Codes		V1.00.001 or higher
CLS (219)	ESA passenger-Electric seat adjustment passenger	Erase Codes		V1.00.001 or higher
CLS (219)	ESA passenger-Electric seat adjustment passenger	Live Data		V1.00.001 or higher
CLS (219)	ESA passenger-Electric seat adjustment passenger	Active Test		V1.00.001 or higher
CLS (219)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Parameterize collision avoidance.	V1.00.001 or higher
CLS (219)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Adjust the parameter for backrest adjustment.	V1.00.001 or higher

CLS (219)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
CLS (219)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher
CLS (219)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher
CLS (219)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
CLS (219)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
CLS (219)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Parameterization of the function for moving the front passenger seat out of way when folding down the rear seat	V1.00.001 or higher
CLS (219)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Re-adjust the adjustment parameters.	V1.00.001 or higher
CLS (219)	DS-LF-Left front dynamic seat	ECU Information		V1.00.001 or higher
CLS (219)	DS-LF-Left front dynamic seat	Read Codes		V1.00.001 or higher
CLS (219)	DS-LF-Left front dynamic seat	Erase Codes		V1.00.001 or higher
CLS (219)	DS-LF-Left front dynamic seat	Live Data		V1.00.001 or higher
CLS (219)	DS-LF-Left front dynamic seat	Active Test		V1.00.001 or higher
CLS (219)	DS-LF-Left front dynamic seat	Control unit adaptations	Air cushion calibration	V1.00.001 or higher
CLS (219)	DS-RF-Right front dynamic seat	ECU Information		V1.00.001 or higher

CLS (219)	DS-RF-Right front dynamic seat	Read Codes		V1.00.001 or higher
CLS (219)	DS-RF-Right front dynamic seat	Erase Codes		V1.00.001 or higher
CLS (219)	DS-RF-Right front dynamic seat	Live Data		V1.00.001 or higher
CLS (219)	DS-RF-Right front dynamic seat	Active Test		V1.00.001 or higher
CLS (219)	DS-RF-Right front dynamic seat	Control unit adaptations	Air cushion calibration	V1.00.001 or higher
CLS (219)	DSP-Pneumatic pump for dynamic seat	ECU Information		V1.00.001 or higher
CLS (219)	DSP-Pneumatic pump for dynamic seat	Read Codes		V1.00.001 or higher
CLS (219)	DSP-Pneumatic pump for dynamic seat	Erase Codes		V1.00.001 or higher
CLS (219)	DSP-Pneumatic pump for dynamic seat	Live Data		V1.00.001 or higher
CLS (219)	DSP-Pneumatic pump for dynamic seat	Active Test		V1.00.001 or higher
CLS (219)	HS-Seat heater	ECU Information		V1.00.001 or higher
CLS (219)	HS-Seat heater	Read Codes		V1.00.001 or higher
CLS (219)	HS-Seat heater	Erase Codes		V1.00.001 or higher
CLS (219)	HS-Seat heater	Live Data		V1.00.001 or higher
CLS (219)	HS-Seat heater	Active Test		V1.00.001 or higher
CLS (219)	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
CLS (219)	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher
CLS (219)	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher
CLS (219)	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher



CLS (219)	DCM-FL-Door control module front left	Active Test		V1.00.001 or higher
CLS (219)	DCM-FL-Door control module front left	Control unit adaptations	Short stroke parameter "	V1.00.001 or higher
CLS (219)	DCM-FL-Door control module front left	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
CLS (219)	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
CLS (219)	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher
CLS (219)	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
CLS (219)	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
CLS (219)	DCM-FR-Door control module front right	Active Test		V1.00.001 or higher
CLS (219)	DCM-FR-Door control module front right	Control unit adaptations	Short stroke parameter "	V1.00.001 or higher
CLS (219)	DCM-FR-Door control module front right	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
CLS (219)	DCM-RL-Door control module rear left	ECU Information		V1.00.001 or higher
CLS (219)	DCM-RL-Door control module rear left	Read Codes		V1.00.001 or higher
CLS (219)	DCM-RL-Door control module rear left	Erase Codes		V1.00.001 or higher
CLS (219)	DCM-RL-Door control module rear left	Live Data		V1.00.001 or higher
CLS (219)	DCM-RL-Door control module rear left	Active Test		V1.00.001 or higher
CLS (219)	DCM-RL-Door control module rear left	Control unit adaptations	Short stroke parameter "	V1.00.001 or higher

CLS (219)	DCM-RL-Door control module rear left	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
CLS (219)	DCM-RR-Door control module rear right	ECU Information		V1.00.001 or higher
CLS (219)	DCM-RR-Door control module rear right	Read Codes		V1.00.001 or higher
CLS (219)	DCM-RR-Door control module rear right	Erase Codes		V1.00.001 or higher
CLS (219)	DCM-RR-Door control module rear right	Live Data		V1.00.001 or higher
CLS (219)	DCM-RR-Door control module rear right	Active Test		V1.00.001 or higher
CLS (219)	DCM-RR-Door control module rear right	Control unit adaptations	Short stroke parameter "	V1.00.001 or higher
CLS (219)	DCM-RR-Door control module rear right	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
CLS (219)	TLC-Trunk lid control	ECU Information		V1.00.001 or higher
CLS (219)	TLC-Trunk lid control	Read Codes		V1.00.001 or higher
CLS (219)	TLC-Trunk lid control	Erase Codes		V1.00.001 or higher
CLS (219)	TLC-Trunk lid control	Live Data		V1.00.001 or higher
CLS (219)	TLC-Trunk lid control	Active Test		V1.00.001 or higher
CLS (219)	LAE [LAA]-Loading floor automatically extendable	ECU Information		V1.00.001 or higher
CLS (219)	LAE [LAA]-Loading floor automatically extendable	Read Codes		V1.00.001 or higher
CLS (219)	LAE [LAA]-Loading floor automatically extendable	Erase Codes		V1.00.001 or higher

CLS (219)	LAE [LAA]-Loading floor automatically extendable	Live Data		V1.00.001 or higher
CLS (219)	LAE [LAA]-Loading floor automatically extendable	Active Test		V1.00.001 or higher
CLS (219)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
CLS (219)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
CLS (219)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
CLS (219)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
CLS (219)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
CLS (219)	AAC-Automatic air conditioning	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
CLS (219)	AAC-Automatic air conditioning	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
CLS (219)	AAC-Automatic air conditioning	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
CLS (219)	HSW-Heated steering wheel	ECU Information		V1.00.001 or higher
CLS (219)	HSW-Heated steering wheel	Read Codes		V1.00.001 or higher
CLS (219)	HSW-Heated steering wheel	Erase Codes		V1.00.001 or higher
CLS (219)	HSW-Heated steering wheel	Live Data		V1.00.001 or higher
CLS (219)	HSW-Heated steering wheel	Active Test		V1.00.001 or higher
CLS (219)	STH-Stationary heater	ECU Information		V1.00.001 or higher
CLS (219)	STH-Stationary heater	Read Codes		V1.00.001 or higher
CLS (219)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
CLS (219)	STH-Stationary heater	Live Data		V1.00.001 or higher

CLS (219)	STH-Stationary heater	Active Test		V1.00.001 or higher
CLS (219)	STH-Stationary heater	Control unit adaptations	Learning component 'A8/3 (Stationary Heater (STH) radio remote control transmitter)'	V1.00.001 or higher
CLS (219)	MED 9.7-Motor electronics for direct injection 9.7	ECU Information		V1.00.001 or higher
CLS (219)	MED 9.7-Motor electronics for direct injection 9.7	Read Codes		V1.00.001 or higher
CLS (219)	MED 9.7-Motor electronics for direct injection 9.7	Erase Codes		V1.00.001 or higher
CLS (219)	MED 9.7-Motor electronics for direct injection 9.7	Live Data		V1.00.001 or higher
CLS (219)	MED 9.7-Motor electronics for direct injection 9.7	Active Test		V1.00.001 or higher
CLS (219)	MED 9.7-Motor electronics for direct injection 9.7	Control unit adaptations	Learning processes	V1.00.001 or higher
CLS (219)	MED 9.7-Motor electronics for direct injection 9.7	Control unit adaptations	Correction programming	V1.00.001 or higher
CLS (219)	MED 9.7-Motor electronics for direct injection 9.7	Special functions	OBD I/M Check ( valid for USA )	V1.00.001 or higher
CLS (219)	MED 9.7-Motor electronics for direct injection 9.7	Special functions	Emissions inspection ( Not valid for USA )	V1.00.001 or higher
CLS (219)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher

CLS (219)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
CLS (219)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
CLS (219)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
CLS (219)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
CLS (219)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
CLS (219)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
CLS (219)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
CLS (219)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
CLS (219)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
CLS (219)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
CLS (219)	ME2-SFI-Motor electronics 2	Special functions	Fault path tests are carried out.	V1.00.001 or higher
CLS (219)	RWT-Rear-end door control module	ECU Information		V1.00.001 or higher
CLS (219)	RWT-Rear-end door control module	Read Codes		V1.00.001 or higher
CLS (219)	RWT-Rear-end door control module	Erase Codes		V1.00.001 or higher
CLS (219)	RWT-Rear-end door control module	Live Data		V1.00.001 or higher
CLS (219)	RWT-Rear-end door control module	Active Test		V1.00.001 or higher
CLS (219)	RWT-Rear-end door control module	Control unit adaptations	Rear wiper	V1.00.001 or higher
CLS (219)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	ECU Information		V1.00.001 or higher
CLS (219)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Read Codes		V1.00.001 or higher

CLS (219)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Erase Codes		V1.00.001 or higher
CLS (219)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Live Data		V1.00.001 or higher
CLS (219)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Active Test		V1.00.001 or higher
CLS (219)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Learning processes	V1.00.001 or higher
CLS (219)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Correction programming	V1.00.001 or higher
CLS (219)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
CLS (219)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
CLS (219)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Special functions	Variant coding	V1.00.001 or higher
CLS (219)	FSCU Right- Control unit 'Right fuel pump'	ECU Information		V1.00.001 or higher
CLS (219)	FSCU Right- Control unit 'Right fuel pump'	Read Codes		V1.00.001 or higher
CLS (219)	FSCU Right- Control unit 'Right fuel pump'	Erase Codes		V1.00.001 or higher
CLS (219)	FSCU Left-Control unit 'Left fuel pump'	ECU Information		V1.00.001 or higher
CLS (219)	FSCU Left-Control unit 'Left fuel pump'	Read Codes		V1.00.001 or higher

CLS (219)	FSCU Left-Control unit 'Left fuel pump'	Erase Codes		V1.00.001 or higher
CLS (219)	CDI 4-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
CLS (219)	CDI 4-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
CLS (219)	CDI 4-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
CLS (219)	CDI 4-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
CLS (219)	CDI 4-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
CLS (219)	ABR-Adaptive Brake	ECU Information		V1.00.001 or higher
CLS (219)	ABR-Adaptive Brake	Read Codes		V1.00.001 or higher
CLS (219)	ABR-Adaptive Brake	Erase Codes		V1.00.001 or higher
CLS (219)	ABR-Adaptive Brake	Live Data		V1.00.001 or higher
CLS (219)	ABR-Adaptive Brake	Active Test		V1.00.001 or higher
CLS (219)	ABR-Adaptive Brake	Control unit adaptations	Road test	V1.00.001 or higher
CLS (219)	ABR-Adaptive Brake	Control unit adaptations	Tire pressure loss warner(Activating)	V1.00.001 or higher
CLS (219)	ABR-Adaptive Brake	Control unit adaptations	Speed-sensitive Power Steering (SPS/PML)	V1.00.001 or higher
CLS (219)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
CLS (219)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
CLS (219)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
CLS (219)	PTS-Parktronic system	Live Data		V1.00.001 or higher
CLS (219)	PTS-Parktronic system	Active Test		V1.00.001 or higher

CLS (219)	AUDIO	ECU Information		V1.00.001 or higher
CLS (219)	AUDIO	Read Codes		V1.00.001 or higher
CLS (219)	AUDIO	Erase Codes		V1.00.001 or higher
CLS (219)	AUDIO	Live Data		V1.00.001 or higher
CLS (219)	AUDIO	Active Test		V1.00.001 or higher
CLS (219)	AUDIO	Control unit adaptations	Changing the language version(Linguatronic)	V1.00.001 or higher
CLS (219)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher
CLS (219)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
CLS (219)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher
CLS (219)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher
CLS (219)	Sound system (Main amplifier)	Active Test		V1.00.001 or higher
CLS (219)	UCI-Media interface	ECU Information		V1.00.001 or higher
CLS (219)	UCI-Media interface	Read Codes		V1.00.001 or higher
CLS (219)	UCI-Media interface	Erase Codes		V1.00.001 or higher
CLS (219)	DAB-Digital radio	ECU Information		V1.00.001 or higher
CLS (219)	DAB-Digital radio	Read Codes		V1.00.001 or higher
CLS (219)	DAB-Digital radio	Erase Codes		V1.00.001 or higher
CLS (219)	DAB-Digital radio	Live Data		V1.00.001 or higher
CLS (219)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
CLS (219)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
CLS (219)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher



CLS (219)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
CLS (219)	SDAR-Satellite radio(Valid for USA)	Active Test		V1.00.001 or higher
CLS (219)	TV-TV tuner	ECU Information		V1.00.001 or higher
CLS (219)	TV-TV tuner	Read Codes		V1.00.001 or higher
CLS (219)	TV-TV tuner	Erase Codes		V1.00.001 or higher
CLS (219)	TV-TV tuner	Live Data		V1.00.001 or higher
CLS (219)	CTEL-Cellular telephone(JAPAN)	ECU Information		V1.00.001 or higher
CLS (219)	CTEL-Cellular telephone(JAPAN)	Read Codes		V1.00.001 or higher
CLS (219)	CTEL-Cellular telephone(JAPAN)	Erase Codes		V1.00.001 or higher
CLS (219)	CTEL-Cellular telephone(JAPAN)	Live Data		V1.00.001 or higher
CLS (219)	CTEL-Cellular telephone(JAPAN)	Active Test		V1.00.001 or higher
CL (216)	ME 9.7-Motor electronics 9.7	ECU Information		V1.00.001 or higher
CL (216)	ME 9.7-Motor electronics 9.7	Read Codes		V1.00.001 or higher
CL (216)	ME 9.7-Motor electronics 9.7	Erase Codes		V1.00.001 or higher
CL (216)	ME 9.7-Motor electronics 9.7	Live Data		V1.00.001 or higher
CL (216)	ME 9.7-Motor electronics 9.7	Active Test		V1.00.001 or higher
CL (216)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Learning processes	V1.00.001 or higher
CL (216)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Correction programming	V1.00.001 or higher
CL (216)	ME 9.7-Motor electronics 9.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
CL (216)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher

CL (216)	ME 9.7-Motor electronics 9.7	Special functions	Variant coding	V1.00.001 or higher
CL (216)	Transmission	ECU Information		V1.00.001 or higher
CL (216)	Transmission	Read Codes		V1.00.001 or higher
CL (216)	Transmission	Erase Codes		V1.00.001 or higher
CL (216)	Transmission	Live Data		V1.00.001 or higher
CL (216)	Transmission	Active Test		V1.00.001 or higher
CL (216)	Transmission	Control unit adaptations	Definition	V1.00.001 or higher
CL (216)	Transmission	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
CL (216)	Transmission	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
CL (216)	Transmission	Control unit adaptations	Performing adaptation	V1.00.001 or higher
CL (216)	Transmission	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
CL (216)	Transmission	Special functions	Warranty or goodwill processing	V1.00.001 or higher
CL (216)	Transmission	Special functions	Diagnosis routines	V1.00.001 or higher
CL (216)	Transmission	Special functions	Initial start-up	V1.00.001 or higher
CL (216)	ISM-Intelligent servo module	ECU Information		V1.00.001 or higher
CL (216)	ISM-Intelligent servo module	Read Codes		V1.00.001 or higher
CL (216)	ISM-Intelligent servo module	Erase Codes		V1.00.001 or higher
CL (216)	ISM-Intelligent servo module	Live Data		V1.00.001 or higher
CL (216)	ISM-Intelligent servo module	Active Test		V1.00.001 or higher
CL (216)	ISM-Intelligent servo module	Control unit adaptations	Please calibrate.	V1.00.001 or higher

CL (216)	ISM-Intelligent servo module	Control unit adaptations	Detach the transport protection of control module 'Intelligent Servo Module', personalize or activate the control module.	V1.00.001 or higher
CL (216)	DTR-Distronic	ECU Information		V1.00.001 or higher
CL (216)	DTR-Distronic	Read Codes		V1.00.001 or higher
CL (216)	DTR-Distronic	Erase Codes		V1.00.001 or higher
CL (216)	DTR-Distronic	Live Data		V1.00.001 or higher
CL (216)	DTR-Distronic	Special functions	Initial start-up	V1.00.001 or higher
CL (216)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
CL (216)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
CL (216)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
CL (216)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
CL (216)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
CL (216)	SGR-Radar sensors control unit	ECU Information		V1.00.001 or higher
CL (216)	SGR-Radar sensors control unit	Read Codes		V1.00.001 or higher
CL (216)	SGR-Radar sensors control unit	Erase Codes		V1.00.001 or higher
CL (216)	SGR-Radar sensors control unit	Live Data		V1.00.001 or higher
CL (216)	SGR-Radar sensors control unit	Active Test		V1.00.001 or higher
CL (216)	Electronic parking brake-Electric parking brake	ECU Information		V1.00.001 or higher

CL (216)	Electronic parking brake-Electric parking brake	Read Codes		V1.00.001 or higher
CL (216)	Electronic parking brake-Electric parking brake	Erase Codes		V1.00.001 or higher
CL (216)	Electronic parking brake-Electric parking brake	Live Data		V1.00.001 or higher
CL (216)	Electronic parking brake-Electric parking brake	Active Test		V1.00.001 or higher
CL (216)	TPC-Tire pressure monitor	ECU Information		V1.00.001 or higher
CL (216)	TPC-Tire pressure monitor	Read Codes		V1.00.001 or higher
CL (216)	TPC-Tire pressure monitor	Erase Codes		V1.00.001 or higher
CL (216)	TPC-Tire pressure monitor	Live Data		V1.00.001 or higher
CL (216)	TPC-Tire pressure monitor	Active Test		V1.00.001 or higher
CL (216)	TPC-Tire pressure monitor	Special functions	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
CL (216)	TPC-Tire pressure monitor	Special functions	Initial start-up with manual settings input for new control module- For example: The previous control module cannot be read any longer.	V1.00.001 or higher
CL (216)	DTR-Distronic	ECU Information		V1.00.001 or higher
CL (216)	DTR-Distronic	Read Codes		V1.00.001 or higher
CL (216)	DTR-Distronic	Erase Codes		V1.00.001 or higher

CL (216)	DTR-Distronic	Live Data		V1.00.001 or higher
CL (216)	ABR-Adaptive Brake	ECU Information		V1.00.001 or higher
CL (216)	ABR-Adaptive Brake	Read Codes		V1.00.001 or higher
CL (216)	ABR-Adaptive Brake	Erase Codes		V1.00.001 or higher
CL (216)	ABR-Adaptive Brake	Live Data		V1.00.001 or higher
CL (216)	ABR-Adaptive Brake	Active Test		V1.00.001 or higher
CL (216)	ABR-Adaptive Brake	Control unit adaptations	Road test	V1.00.001 or higher
CL (216)	ABR-Adaptive Brake	Control unit adaptations	Tire pressure loss warner(Activating)	V1.00.001 or higher
CL (216)	ABR-Adaptive Brake	Control unit adaptations	Clear the zero point offset error of the component 'N49 (Steering Angle Sensor (SAS))'.	V1.00.001 or higher
CL (216)	ABR-Adaptive Brake	Control unit adaptations	Calibration of the control module 'Anti-lock Brake System'	V1.00.001 or higher
CL (216)	Suspension	ECU Information		V1.00.001 or higher
CL (216)	Suspension	Read Codes		V1.00.001 or higher
CL (216)	Suspension	Erase Codes		V1.00.001 or higher
CL (216)	Suspension	Live Data		V1.00.001 or higher
CL (216)	Suspension	Active Test		V1.00.001 or higher
CL (216)	Suspension	Special functions	Initial start-up	V1.00.001 or higher
CL (216)	Suspension	Special functions	Control module adaptation	V1.00.001 or higher
CL (216)	Suspension	Special functions	Pneumatic tests	V1.00.001 or higher
CL (216)	EHPS- Electrohydraulic Power Steering	ECU Information		V1.00.001 or higher

CL (216)	EHPS- Electrohydraulic Power Steering	Read Codes		V1.00.001 or higher
CL (216)	EHPS- Electrohydraulic Power Steering	Erase Codes		V1.00.001 or higher
CL (216)	EHPS- Electrohydraulic Power Steering	Live Data		V1.00.001 or higher
CL (216)	AB-Airbag	ECU Information		V1.00.001 or higher
CL (216)	AB-Airbag	Read Codes		V1.00.001 or higher
CL (216)	AB-Airbag	Erase Codes		V1.00.001 or higher
CL (216)	AB-Airbag	Live Data		V1.00.001 or higher
CL (216)	AB-Airbag	Active Test		V1.00.001 or higher
CL (216)	CGW-Central gateway	ECU Information		V1.00.001 or higher
CL (216)	CGW-Central gateway	Read Codes		V1.00.001 or higher
CL (216)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
CL (216)	CGW-Central gateway	Live Data		V1.00.001 or higher
CL (216)	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher
CL (216)	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher
CL (216)	CGW-Central gateway	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
CL (216)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
CL (216)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
CL (216)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
CL (216)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
CL (216)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher

CL (216)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track with the workshop key.	V1.00.001 or higher
CL (216)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher
CL (216)	EZS-Electronic ignition switch	Control unit adaptations	Program the replacement keys.	V1.00.001 or higher
CL (216)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N73 (Electronic Ignition Switch (EIS/EZS) control module)'.	V1.00.001 or higher
CL (216)	EZS-Electronic ignition switch	Control unit adaptations	Writing of the VIN	V1.00.001 or higher
CL (216)	SGR-Radar sensors control unit	ECU Information		V1.00.001 or higher
CL (216)	SGR-Radar sensors control unit	Read Codes		V1.00.001 or higher
CL (216)	SGR-Radar sensors control unit	Erase Codes		V1.00.001 or higher
CL (216)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
CL (216)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
CL (216)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
CL (216)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
CL (216)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
CL (216)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
CL (216)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
CL (216)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
CL (216)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
CL (216)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher

CL (216)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
CL (216)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
CL (216)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
CL (216)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
CL (216)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
CL (216)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
CL (216)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
CL (216)	UCP-Upper control panel	Live Data		V1.00.001 or higher
CL (216)	UCP-Upper control panel	Active Test		V1.00.001 or higher
CL (216)	Dr-side SAM- Driver signal acquisition and actuation module	ECU Information		V1.00.001 or higher
CL (216)	Dr-side SAM- Driver signal acquisition and actuation module	Read Codes		V1.00.001 or higher
CL (216)	Dr-side SAM- Driver signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
CL (216)	Dr-side SAM- Driver signal acquisition and actuation module	Live Data		V1.00.001 or higher
CL (216)	Dr-side SAM- Driver signal acquisition and actuation module	Active Test		V1.00.001 or higher
CL (216)	Dr-side SAM- Driver signal acquisition and actuation module	Control unit adaptations	Initializations	V1.00.001 or higher



CL (216)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
CL (216)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
CL (216)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
CL (216)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
CL (216)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
CL (216)	BNS-Vehicle power supply control module	ECU Information		V1.00.001 or higher
CL (216)	BNS-Vehicle power supply control module	Read Codes		V1.00.001 or higher
CL (216)	BNS-Vehicle power supply control module	Erase Codes		V1.00.001 or higher
CL (216)	BNS-Vehicle power supply control module	Live Data		V1.00.001 or higher
CL (216)	BNS-Vehicle power supply control module	Active Test		V1.00.001 or higher
CL (216)	AHE-Trailer recognition	ECU Information		V1.00.001 or higher
CL (216)	AHE-Trailer recognition	Read Codes		V1.00.001 or higher
CL (216)	AHE-Trailer recognition	Erase Codes		V1.00.001 or higher
CL (216)	AHE-Trailer recognition	Live Data		V1.00.001 or higher

CL (216)	AHE-Trailer recognition	Active Test		V1.00.001 or higher
CL (216)	XALWA-L-Xenon headlamp, left	ECU Information		V1.00.001 or higher
CL (216)	XALWA-L-Xenon headlamp, left	Read Codes		V1.00.001 or higher
CL (216)	XALWA-L-Xenon headlamp, left	Erase Codes		V1.00.001 or higher
CL (216)	XALWA-L-Xenon headlamp, left	Live Data		V1.00.001 or higher
CL (216)	XALWA-L-Xenon headlamp, left	Active Test		V1.00.001 or higher
CL (216)	XALWA-L-Xenon headlamp, left	Control unit adaptations	Tourist mode- Adaptation of the headlamps from left hand traffic system to right hand traffic system or vice versa.	V1.00.001 or higher
CL (216)	XALWA-R-Xenon headlamp, right	ECU Information		V1.00.001 or higher
CL (216)	XALWA-R-Xenon headlamp, right	Read Codes		V1.00.001 or higher
CL (216)	XALWA-R-Xenon headlamp, right	Erase Codes		V1.00.001 or higher
CL (216)	XALWA-R-Xenon headlamp, right	Live Data		V1.00.001 or higher
CL (216)	XALWA-R-Xenon headlamp, right	Active Test		V1.00.001 or higher
CL (216)	XALWA-R-Xenon headlamp, right	Control unit adaptations	Tourist mode- Adaptation of the headlamps from left hand traffic system to right hand traffic system or vice versa.	V1.00.001 or higher
CL (216)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
CL (216)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
CL (216)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
CL (216)	System diagnosis(CAN)	Live Data		V1.00.001 or higher

CL (216)	COU [ZBE]-Central operating unit	ECU Information		V1.00.001 or higher
CL (216)	COU [ZBE]-Central operating unit	Read Codes		V1.00.001 or higher
CL (216)	COU [ZBE]-Central operating unit	Erase Codes		V1.00.001 or higher
CL (216)	COU [ZBE]-Central operating unit	Live Data		V1.00.001 or higher
CL (216)	COU [ZBE]-Central operating unit	Active Test		V1.00.001 or higher
CL (216)	IC-Instrument cluster	ECU Information		V1.00.001 or higher
CL (216)	IC-Instrument cluster	Read Codes		V1.00.001 or higher
CL (216)	IC-Instrument cluster	Erase Codes		V1.00.001 or higher
CL (216)	IC-Instrument cluster	Live Data		V1.00.001 or higher
CL (216)	IC-Instrument cluster	Active Test		V1.00.001 or higher
CL (216)	IC-Instrument cluster	Control unit adaptations	Setting days since initial registration	V1.00.001 or higher
CL (216)	IC-Instrument cluster	Control unit adaptations	Resetting the menu settings to manufacturer default settings	V1.00.001 or higher
CL (216)	IC-Instrument cluster	Control unit adaptations	Setting the main odometer forward and back	V1.00.001 or higher
CL (216)	ICI-InCar Internet	ECU Information		V1.00.001 or higher
CL (216)	ICI-InCar Internet	Read Codes		V1.00.001 or higher
CL (216)	ICI-InCar Internet	Erase Codes		V1.00.001 or higher
CL (216)	ICI-InCar Internet	Live Data		V1.00.001 or higher
CL (216)	NSA-Night View Assist	ECU Information		V1.00.001 or higher
CL (216)	NSA-Night View Assist	Read Codes		V1.00.001 or higher

CL (216)	NSA-Night View Assist	Erase Codes		V1.00.001 or higher
CL (216)	NSA-Night View Assist	Live Data		V1.00.001 or higher
CL (216)	NSA-Night View Assist	Active Test		V1.00.001 or higher
CL (216)	NSA-Night View Assist	Control unit adaptations	Run the Self Test 'B84/2 (Night View Assist camera)'. •	V1.00.001 or higher
CL (216)	NSA-Night View Assist	Control unit adaptations	Calibration Reset	V1.00.001 or higher
CL (216)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
CL (216)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
CL (216)	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher
CL (216)	SCM [MRM]-Steering column module	Live Data		V1.00.001 or higher
CL (216)	SCM [MRM]-Steering column module	Active Test		V1.00.001 or higher
CL (216)	SCM [MRM]-Steering column module	Initial startup	•	V1.00.001 or higher
CL (216)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
CL (216)	ASSYST-Active Service System	Read Codes		V1.00.001 or higher
CL (216)	ASSYST-Active Service System	Erase Codes		V1.00.001 or higher
CL (216)	ASSYST-Active Service System	Live Data		V1.00.001 or higher
CL (216)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
CL (216)	ASSYST PLUS	ECU Information		V1.00.001 or higher
CL (216)	ASSYST PLUS	Read Codes		V1.00.001 or higher
CL (216)	ASSYST PLUS	Erase Codes		V1.00.001 or higher
CL (216)	ASSYST PLUS	Live Data		V1.00.001 or higher

CL (216)	ASSYST PLUS	ECU Information		V1.00.001 or higher
CL (216)	ASSYST PLUS	Control unit adaptations	Internal ASSYST Plus data	V1.00.001 or higher
CL (216)	ASSYST PLUS	Control unit adaptations	Average mileage per day	V1.00.001 or higher
CL (216)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
CL (216)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
CL (216)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
CL (216)	PTS-Parktronic system	Live Data		V1.00.001 or higher
CL (216)	PTS-Parktronic system	Active Test		V1.00.001 or higher
CL (216)	RFK-Backup camera	ECU Information		V1.00.001 or higher
CL (216)	RFK-Backup camera	Read Codes		V1.00.001 or higher
CL (216)	RFK-Backup camera	Erase Codes		V1.00.001 or higher
CL (216)	RFK-Backup camera	Live Data		V1.00.001 or higher
CL (216)	MFK-Multifunction camera	ECU Information		V1.00.001 or higher
CL (216)	MFK-Multifunction camera	Read Codes		V1.00.001 or higher
CL (216)	MFK-Multifunction camera	Erase Codes		V1.00.001 or higher
CL (216)	MFK-Multifunction camera	Live Data		V1.00.001 or higher
CL (216)	MFK-Multifunction camera	Control unit adaptations	Calibration	V1.00.001 or higher
CL (216)	COMAND	ECU Information		V1.00.001 or higher
CL (216)	COMAND	Read Codes		V1.00.001 or higher
CL (216)	COMAND	Erase Codes		V1.00.001 or higher
CL (216)	COMAND	Live Data		V1.00.001 or higher

CL (216)	COMAND	Active Test		V1.00.001 or higher
CL (216)	Tuner-Standard tuner	ECU Information		V1.00.001 or higher
CL (216)	Tuner-Standard tuner	Read Codes		V1.00.001 or higher
CL (216)	Tuner-Standard tuner	Erase Codes		V1.00.001 or higher
CL (216)	Tuner-Standard tuner	Live Data		V1.00.001 or higher
CL (216)	Tuner-Standard tuner	Active Test		V1.00.001 or higher
CL (216)	VCS-Voice control	ECU Information		V1.00.001 or higher
CL (216)	VCS-Voice control	Read Codes		V1.00.001 or higher
CL (216)	VCS-Voice control	Erase Codes		V1.00.001 or higher
CL (216)	VCS-Voice control	Live Data		V1.00.001 or higher
CL (216)	VCS-Voice control	Active Test		V1.00.001 or higher
CL (216)	CTEL-Mobile phone adapter with universal interface	ECU Information		V1.00.001 or higher
CL (216)	CTEL-Mobile phone adapter with universal interface	Read Codes		V1.00.001 or higher
CL (216)	CTEL-Mobile phone adapter with universal interface	Erase Codes		V1.00.001 or higher
CL (216)	CTEL-Mobile phone adapter with universal interface	Live Data		V1.00.001 or higher
CL (216)	CTEL-Mobile phone adapter with universal interface	Active Test		V1.00.001 or higher
CL (216)	TV-TV tuner(AGW)	ECU Information		V1.00.001 or higher
CL (216)	TV-TV tuner(AGW)	Read Codes		V1.00.001 or higher
CL (216)	TV-TV tuner(AGW)	Erase Codes		V1.00.001 or higher

CL (216)	TV-TV tuner(AGW)	Live Data		V1.00.001 or higher
CL (216)	TV-TV tuner(AGW)	Active Test		V1.00.001 or higher
CL (216)	DAB-Digital radio	ECU Information		V1.00.001 or higher
CL (216)	DAB-Digital radio	Read Codes		V1.00.001 or higher
CL (216)	DAB-Digital radio	Erase Codes		V1.00.001 or higher
CL (216)	DAB-Digital radio	Live Data		V1.00.001 or higher
CL (216)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
CL (216)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
CL (216)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
CL (216)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
CL (216)	ZAN-Central display	ECU Information		V1.00.001 or higher
CL (216)	ZAN-Central display	Read Codes		V1.00.001 or higher
CL (216)	ZAN-Central display	Erase Codes		V1.00.001 or higher
CL (216)	ZAN-Central display	Live Data		V1.00.001 or higher
CL (216)	ZAN-Central display	Active Test		V1.00.001 or higher
CL (216)	UCI-Media interface	ECU Information		V1.00.001 or higher
CL (216)	UCI-Media interface	Read Codes		V1.00.001 or higher
CL (216)	UCI-Media interface	Erase Codes		V1.00.001 or higher
CL (216)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
CL (216)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
CL (216)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
CL (216)	TELE AID-Control unit	Live Data		V1.00.001 or higher

CL (216)	TELE AID- Telematic services Emergency call	ECU Information		V1.00.001 or higher
CL (216)	TELE AID- Telematic services Emergency call	Read Codes		V1.00.001 or higher
CL (216)	TELE AID- Telematic services Emergency call	Erase Codes		V1.00.001 or higher
CL (216)	TELE AID- Telematic services Emergency call	Live Data		V1.00.001 or higher
CL (216)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
CL (216)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
CL (216)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
CL (216)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
CL (216)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher



CL (216)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
CL (216)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
CL (216)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher
CL (216)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher
CL (216)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
CL (216)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
CL (216)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher
CL (216)	DS-LF-Left front dynamic seat	ECU Information		V1.00.001 or higher
CL (216)	DS-LF-Left front dynamic seat	Read Codes		V1.00.001 or higher
CL (216)	DS-LF-Left front dynamic seat	Erase Codes		V1.00.001 or higher
CL (216)	DS-LF-Left front dynamic seat	Live Data		V1.00.001 or higher
CL (216)	DS-LF-Left front dynamic seat	Active Test		V1.00.001 or higher
CL (216)	DS-RF-Right front dynamic seat	ECU Information		V1.00.001 or higher

CL (216)	DS-RF-Right front dynamic seat	Read Codes		V1.00.001 or higher
CL (216)	DS-RF-Right front dynamic seat	Erase Codes		V1.00.001 or higher
CL (216)	DS-RF-Right front dynamic seat	Live Data		V1.00.001 or higher
CL (216)	DS-RF-Right front dynamic seat	Active Test		V1.00.001 or higher
CL (216)	DSP-Pneumatic pump for dynamic seat	ECU Information		V1.00.001 or higher
CL (216)	DSP-Pneumatic pump for dynamic seat	Read Codes		V1.00.001 or higher
CL (216)	DSP-Pneumatic pump for dynamic seat	Erase Codes		V1.00.001 or higher
CL (216)	DSP-Pneumatic pump for dynamic seat	Live Data		V1.00.001 or higher
CL (216)	DSP-Pneumatic pump for dynamic seat	Active Test		V1.00.001 or higher
CL (216)	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
CL (216)	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher
CL (216)	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher
CL (216)	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher
CL (216)	DCM-FL-Door control module front left	Active Test		V1.00.001 or higher
CL (216)	DCM-FL-Door control module front left	Control unit adaptations	Initialization of the power closing	V1.00.001 or higher
CL (216)	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
CL (216)	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher

CL (216)	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
CL (216)	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
CL (216)	DCM-FR-Door control module front right	Active Test		V1.00.001 or higher
CL (216)	DCM-FR-Door control module front right	Control unit adaptations	Initialization of the power closing	V1.00.001 or higher
CL (216)	RCM-Rear control module	ECU Information		V1.00.001 or higher
CL (216)	RCM-Rear control module	Read Codes		V1.00.001 or higher
CL (216)	RCM-Rear control module	Erase Codes		V1.00.001 or higher
CL (216)	RCM-Rear control module	Live Data		V1.00.001 or higher
CL (216)	ESA-FL-Electric seat adjustment front left	ECU Information		V1.00.001 or higher
CL (216)	ESA-FL-Electric seat adjustment front left	Read Codes		V1.00.001 or higher
CL (216)	ESA-FL-Electric seat adjustment front left	Erase Codes		V1.00.001 or higher
CL (216)	ESA-FL-Electric seat adjustment front left	Live Data		V1.00.001 or higher
CL (216)	ESA-FL-Electric seat adjustment front left	Active Test		V1.00.001 or higher
CL (216)	ESA-FL-Electric seat adjustment front left	Control unit adaptations	Normalization of all seat adjustment motors	V1.00.001 or higher
CL (216)	ESA-FL-Electric seat adjustment front left	Control unit adaptations	Adapt the obstacle protection.	V1.00.001 or higher
CL (216)	ESA-FL-Electric seat adjustment front left	Control unit adaptations	Parameterize the Easy Entry/Exit.	V1.00.001 or higher
CL (216)	ESA-FR-Electric seat adjustment front right	ECU Information		V1.00.001 or higher

CL (216)	ESA-FR-Electric seat adjustment front right	Read Codes		V1.00.001 or higher
CL (216)	ESA-FR-Electric seat adjustment front right	Erase Codes		V1.00.001 or higher
CL (216)	ESA-FR-Electric seat adjustment front right	Live Data		V1.00.001 or higher
CL (216)	ESA-FR-Electric seat adjustment front right	Active Test		V1.00.001 or higher
CL (216)	ESA-FR-Electric seat adjustment front right	Control unit adaptations	Normalization of all seat adjustment motors	V1.00.001 or higher
CL (216)	ESA-FR-Electric seat adjustment front right	Control unit adaptations	Adapt the obstacle protection.	V1.00.001 or higher
CL (216)	ESA-FR-Electric seat adjustment front right	Control unit adaptations	Parameterize the Easy Entry/Exit.	V1.00.001 or higher
CL (216)	TLC-Trunk lid control	ECU Information		V1.00.001 or higher
CL (216)	TLC-Trunk lid control	Read Codes		V1.00.001 or higher
CL (216)	TLC-Trunk lid control	Erase Codes		V1.00.001 or higher
CL (216)	TLC-Trunk lid control	Live Data		V1.00.001 or higher
CL (216)	TLC-Trunk lid control	Active Test		V1.00.001 or higher
CL (216)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
CL (216)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
CL (216)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
CL (216)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
CL (216)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
CL (216)	AAC-Automatic air conditioning	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher

CL (216)	AAC-Automatic air conditioning	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
CL (216)	AAC-Automatic air conditioning	Control unit adaptations	Teach-in of the actuator motors after replacement of actuator motor	V1.00.001 or higher
CL (216)	AAC-Automatic air conditioning	Control unit adaptations	Break-in procedure after replacement of refrigerant compressor	V1.00.001 or higher
CL (216)	AAC-Automatic air conditioning	Control unit adaptations	Teach-in of the rotary potentiometers for the air outlets	V1.00.001 or higher
CL (216)	STH-Stationary heater with remote control	ECU Information		V1.00.001 or higher
CL (216)	STH-Stationary heater with remote control	Read Codes		V1.00.001 or higher
CL (216)	STH-Stationary heater with remote control	Erase Codes		V1.00.001 or higher
CL (216)	STH-Stationary heater with remote control	Live Data		V1.00.001 or higher
CL (216)	STH-Stationary heater with remote control	Active Test		V1.00.001 or higher
CL (216)	STH-Stationary heater with remote control	Control unit adaptations	Learning component " A8/3 (Stationary Heater (STH) radio remote control transmitter)	V1.00.001 or higher
CL (216)	MED 17.7-Motor electronics for direct injection 17.7	ECU Information		V1.00.001 or higher

CL (216)	MED 17.7-Motor electronics for direct injection 17.7	Read Codes		V1.00.001 or higher
CL (216)	MED 17.7-Motor electronics for direct injection 17.7	Erase Codes		V1.00.001 or higher
CL (216)	MED 17.7-Motor electronics for direct injection 17.7	Live Data		V1.00.001 or higher
CL (216)	MED 17.7-Motor electronics for direct injection 17.7	Active Test		V1.00.001 or higher
CL (216)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	Variant coding	V1.00.001 or higher
CL (216)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	Learning processes	V1.00.001 or higher
CL (216)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	Correction programming	V1.00.001 or higher
CL (216)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
CL (216)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
CL (216)	FSCU-Fuel pump AMG	ECU Information		V1.00.001 or higher
CL (216)	FSCU-Fuel pump AMG	Read Codes		V1.00.001 or higher
CL (216)	FSCU-Fuel pump AMG	Erase Codes		V1.00.001 or higher
CL (216)	FSCU-Fuel pump AMG	Active Test		V1.00.001 or higher
CL (216)	ME 2.7.2-Motor electronics 2.7.2	ECU Information		V1.00.001 or higher
CL (216)	ME 2.7.2-Motor electronics 2.7.2	Read Codes		V1.00.001 or higher

CL (216)	ME 2.7.2-Motor electronics 2.7.2	Erase Codes		V1.00.001 or higher
CL (216)	ME 2.7.2-Motor electronics 2.7.2	Live Data		V1.00.001 or higher
CL (216)	ME 2.7.2-Motor electronics 2.7.2	Active Test		V1.00.001 or higher
CL (216)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Variant coding	V1.00.001 or higher
CL (216)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Learning process	V1.00.001 or higher
CL (216)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Correction programming	V1.00.001 or higher
CL (216)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Emissions inspection (Not valid for USA)	V1.00.001 or higher
CL (216)	ME 2.7.2-Motor electronics 2.7.2	Special functions	OBD I/M check (Valid for USA)	V1.00.001 or higher
CL (216)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	ECU Information		V1.00.001 or higher
CL (216)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Read Codes		V1.00.001 or higher
CL (216)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Erase Codes		V1.00.001 or higher
CL (216)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Live Data		V1.00.001 or higher
CL (216)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Active Test		V1.00.001 or higher
CL (216)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Learning processes	V1.00.001 or higher
CL (216)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Correction programming	V1.00.001 or higher

CL (216)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
CL (216)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
CL (216)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Special functions	Variant coding	V1.00.001 or higher
CL (215)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
CL (215)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
CL (215)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
CL (215)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
CL (215)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
CL (215)	ME2-SFI-Motor electronics 2	Special functions	Variant coding	V1.00.001 or higher
CL (215)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
CL (215)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
CL (215)	Transmission	ECU Information		V1.00.001 or higher
CL (215)	Transmission	Read Codes		V1.00.001 or higher
CL (215)	Transmission	Erase Codes		V1.00.001 or higher
CL (215)	Transmission	Live Data		V1.00.001 or higher
CL (215)	Transmission	Active Test		V1.00.001 or higher
CL (215)	Transmission	Control unit adaptations	Definition	V1.00.001 or higher
CL (215)	Transmission	Control unit adaptations	Display adaption data.	V1.00.001 or higher
CL (215)	Transmission	Control unit adaptations	Limit values of adaptation with additional information	V1.00.001 or higher
CL (215)	Transmission	Control unit adaptations	Resetting of the adaptation data	V1.00.001 or higher



CL (215)	Transmission	Control unit adaptations	Performing adaptation when transmission is replaced or repaired	V1.00.001 or higher
CL (215)	Transmission	Control unit adaptations	Performing adaptation in the event of shift quality complaints	V1.00.001 or higher
CL (215)	Transmission	Control unit adaptations	Read the coding.	V1.00.001 or higher
CL (215)	Transmission	Special functions	Transmission oil condition	V1.00.001 or higher
CL (215)	Transmission	Special functions	Operational check	V1.00.001 or higher
CL (215)	Transmission	Special functions	Emergency running	V1.00.001 or higher
CL (215)	Transmission	Special functions	Diagnosis routines	V1.00.001 or higher
CL (215)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
CL (215)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
CL (215)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
CL (215)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
CL (215)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
CL (215)	ESM-Electronic selector module	Control unit adaptations	Detach the transport protection of control module 'N15/5 (Electronic Selector Module (ESM/EWM))', personalize or activate the control module.	V1.00.001 or higher
CL (215)	DTR-Distronic	ECU Information		V1.00.001 or higher
CL (215)	DTR-Distronic	Read Codes		V1.00.001 or higher
CL (215)	DTR-Distronic	Erase Codes		V1.00.001 or higher

CL (215)	DTR-Distronic	Live Data		V1.00.001 or higher
CL (215)	DTR-Distronic	Control unit adaptations	•	V1.00.001 or higher
CL (215)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
CL (215)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
CL (215)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
CL (215)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
CL (215)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
CL (215)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
CL (215)	ESP-Electronic stability program	Control unit adaptations	Learning process	V1.00.001 or higher
CL (215)	ESP-Electronic stability program	Control unit adaptations	Resetting of the variant locking	V1.00.001 or higher
CL (215)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
CL (215)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
CL (215)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
CL (215)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
CL (215)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
CL (215)	TPM - Tire pressure monitor	Control unit adaptations	•	V1.00.001 or higher
CL (215)	ABC-ABC active body control	ECU Information		V1.00.001 or higher
CL (215)	ABC-ABC active body control	Read Codes		V1.00.001 or higher
CL (215)	ABC-ABC active body control	Erase Codes		V1.00.001 or higher
CL (215)	ABC-ABC active body control	Live Data		V1.00.001 or higher
CL (215)	ABC-ABC active body control	Active Test		V1.00.001 or higher
CL (215)	ABC-ABC active body control	Special functions	Initial start-up	V1.00.001 or higher
CL (215)	ABC-ABC active body control	Special functions	Control module adaptations	V1.00.001 or higher
CL (215)	AB-Airbag	ECU Information		V1.00.001 or higher

CL (215)	AB-Airbag	Read Codes		V1.00.001 or higher
CL (215)	AB-Airbag	Erase Codes		V1.00.001 or higher
CL (215)	AB-Airbag	Live Data		V1.00.001 or higher
CL (215)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
CL (215)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
CL (215)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
CL (215)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
CL (215)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher
CL (215)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track with the workshop key.	V1.00.001 or higher
CL (215)	EZS-Electronic ignition switch	Control unit adaptations	Program the replacement keys.	V1.00.001 or higher
CL (215)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher
CL (215)	EZS-Electronic ignition switch	Control unit adaptations	Activate the Electronic Ignition Switch (EIS/EZS).	V1.00.001 or higher
CL (215)	SAM-FL-Front left signal acquisition and actuation module	ECU Information		V1.00.001 or higher
CL (215)	SAM-FL-Front left signal acquisition and actuation module	Read Codes		V1.00.001 or higher
CL (215)	SAM-FL-Front left signal acquisition and actuation module	Erase Codes		V1.00.001 or higher

CL (215)	SAM-FL-Front left signal acquisition and actuation module	Live Data		V1.00.001 or higher
CL (215)	SAM-FL-Front left signal acquisition and actuation module	Active Test		V1.00.001 or higher
CL (215)	SAM-FL-Front left signal acquisition and actuation module	Control unit adaptations	Steering Column Module (SCM/MRM)	V1.00.001 or higher
CL (215)	SAM-FL-Front left signal acquisition and actuation module	Control unit adaptations	Rain sensor	V1.00.001 or higher
CL (215)	SAM-FR-Front right signal acquisition and actuation module	ECU Information		V1.00.001 or higher
CL (215)	SAM-FR-Front right signal acquisition and actuation module	Read Codes		V1.00.001 or higher
CL (215)	SAM-FR-Front right signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
CL (215)	SAM-FR-Front right signal acquisition and actuation module	Live Data		V1.00.001 or higher
CL (215)	SAM-FR-Front right signal acquisition and actuation module	Active Test		V1.00.001 or higher

CL (215)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
CL (215)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
CL (215)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
CL (215)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
CL (215)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
CL (215)	AHE-Trailer recognition	ECU Information		V1.00.001 or higher
CL (215)	AHE-Trailer recognition	Read Codes		V1.00.001 or higher
CL (215)	AHE-Trailer recognition	Erase Codes		V1.00.001 or higher
CL (215)	AHE-Trailer recognition	Live Data		V1.00.001 or higher
CL (215)	AHE-Trailer recognition	Active Test		V1.00.001 or higher
CL (215)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
CL (215)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
CL (215)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
CL (215)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
CL (215)	OCP-Overhead control panel	Active Test		V1.00.001 or higher

CL (215)	OCP-Overhead control panel	Control unit adaptations	Setting of the limit position for excessive force limiter	V1.00.001 or higher
CL (215)	OCP-Overhead control panel	Control unit adaptations	Coding of the Close-via-tilt function	V1.00.001 or higher
CL (215)	OCP-Overhead control panel	Control unit adaptations	Coding of the SR/SHD (Tilting/Sliding Sunroof) Automatic Operation function	V1.00.001 or higher
CL (215)	PSE-Pneumatic system equipment	ECU Information		V1.00.001 or higher
CL (215)	PSE-Pneumatic system equipment	Read Codes		V1.00.001 or higher
CL (215)	PSE-Pneumatic system equipment	Erase Codes		V1.00.001 or higher
CL (215)	PSE-Pneumatic system equipment	Live Data		V1.00.001 or higher
CL (215)	PSE-Pneumatic system equipment	Active Test		V1.00.001 or higher
CL (215)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
CL (215)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
CL (215)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
CL (215)	UCP-Upper control panel	Live Data		V1.00.001 or higher
CL (215)	UCP-Upper control panel	Active Test		V1.00.001 or higher
CL (215)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
CL (215)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
CL (215)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
CL (215)	KG-KEYLESS GO	Live Data		V1.00.001 or higher

CL (215)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
CL (215)	KG-KEYLESS GO	Control unit adaptations	Assign the transmitter card to key track.	V1.00.001 or higher
CL (215)	KG-KEYLESS GO	Control unit adaptations	Assign the Keyless Go (KG) key to key track.	V1.00.001 or higher
CL (215)	MSS-Special vehicle multifunction control module	ECU Information		V1.00.001 or higher
CL (215)	MSS-Special vehicle multifunction control module	Read Codes		V1.00.001 or higher
CL (215)	MSS-Special vehicle multifunction control module	Erase Codes		V1.00.001 or higher
CL (215)	MSS-Special vehicle multifunction control module	Live Data		V1.00.001 or higher
CL (215)	MSS-Special vehicle multifunction control module	Active Test		V1.00.001 or higher
CL (215)	MSS-Special vehicle multifunction control module	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
CL (215)	HRA-Headlamp range adjustment	ECU Information		V1.00.001 or higher
CL (215)	HRA-Headlamp range adjustment	Read Codes		V1.00.001 or higher
CL (215)	HRA-Headlamp range adjustment	Erase Codes		V1.00.001 or higher
CL (215)	HRA-Headlamp range adjustment	Live Data		V1.00.001 or higher
CL (215)	HRA-Headlamp range adjustment	Active Test		V1.00.001 or higher

CL (215)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
CL (215)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
CL (215)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
CL (215)	ICM-Instrument cluster with maintenance interval display	Live Data		V1.00.001 or higher
CL (215)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
CL (215)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
CL (215)	ICM-Instrument cluster with maintenance interval display	Control unit adaptations	Set the time.	V1.00.001 or higher
CL (215)	ICM-Instrument cluster with maintenance interval display	Control unit adaptations	Setting the main odometer forward and back	V1.00.001 or higher
CL (215)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
CL (215)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
CL (215)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
CL (215)	PTS-Parktronic system	Live Data		V1.00.001 or higher
CL (215)	PTS-Parktronic system	Active Test		V1.00.001 or higher
CL (215)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
CL (215)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher



CL (215)	SCM [MRM]- Steering column module	Erase Codes		V1.00.001 or higher
CL (215)	SCM [MRM]- Steering column module	Live Data		V1.00.001 or higher
CL (215)	SCM [MRM]- Steering column module	Active Test		V1.00.001 or higher
CL (215)	SCM [MRM]- Steering column module	Initial startup	●	V1.00.001 or higher
CL (215)	TSTH-Radio remote control of stationary heater	ECU Information		V1.00.001 or higher
CL (215)	TSTH-Radio remote control of stationary heater	Read Codes		V1.00.001 or higher
CL (215)	TSTH-Radio remote control of stationary heater	Erase Codes		V1.00.001 or higher
CL (215)	TSTH-Radio remote control of stationary heater	Live Data		V1.00.001 or higher
CL (215)	TSTH-Radio remote control of stationary heater	Active Test		V1.00.001 or higher
CL (215)	D2B-COMAND, MCS or AUDIO	ECU Information		V1.00.001 or higher
CL (215)	D2B-COMAND, MCS or AUDIO	Read Codes		V1.00.001 or higher
CL (215)	D2B-COMAND, MCS or AUDIO	Erase Codes		V1.00.001 or higher
CL (215)	D2B-COMAND, MCS or AUDIO	Live Data		V1.00.001 or higher
CL (215)	D2B-COMAND, MCS or AUDIO	Active Test		V1.00.001 or higher
CL (215)	CDC-CD changer	ECU Information		V1.00.001 or higher
CL (215)	CDC-CD changer	Read Codes		V1.00.001 or higher
CL (215)	CDC-CD changer	Erase Codes		V1.00.001 or higher
CL (215)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	ECU Information		V1.00.001 or higher

CL (215)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Read Codes		V1.00.001 or higher
CL (215)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Erase Codes		V1.00.001 or higher
CL (215)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Live Data		V1.00.001 or higher
CL (215)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Active Test		V1.00.001 or higher
CL (215)	SOUND- Sound system	ECU Information		V1.00.001 or higher
CL (215)	SOUND- Sound system	Read Codes		V1.00.001 or higher
CL (215)	SOUND- Sound system	Erase Codes		V1.00.001 or higher
CL (215)	SOUND- Sound system	Live Data		V1.00.001 or higher
CL (215)	VCS-Voice control system	ECU Information		V1.00.001 or higher
CL (215)	VCS-Voice control system	Read Codes		V1.00.001 or higher
CL (215)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
CL (215)	TV-TV tuner	ECU Information		V1.00.001 or higher
CL (215)	TV-TV tuner	Read Codes		V1.00.001 or higher
CL (215)	TV-TV tuner	Erase Codes		V1.00.001 or higher
CL (215)	TV-TV tuner	Live Data		V1.00.001 or higher
CL (215)	TV-TV tuner	Active Test		V1.00.001 or higher

CL (215)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	ECU Information		V1.00.001 or higher
CL (215)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Read Codes		V1.00.001 or higher
CL (215)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Erase Codes		V1.00.001 or higher
CL (215)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Live Data		V1.00.001 or higher
CL (215)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Active Test		V1.00.001 or higher
CL (215)	DN-Dynamic navigation by means of CTEL	ECU Information		V1.00.001 or higher
CL (215)	DN-Dynamic navigation by means of CTEL	Read Codes		V1.00.001 or higher
CL (215)	DN-Dynamic navigation by means of CTEL	Erase Codes		V1.00.001 or higher
CL (215)	DN-Dynamic navigation by means of CTEL	Live Data		V1.00.001 or higher
CL (215)	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
CL (215)	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher
CL (215)	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher

CL (215)	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher
CL (215)	DCM-FL-Door control module front left	Active Test		V1.00.001 or higher
CL (215)	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
CL (215)	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher
CL (215)	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
CL (215)	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
CL (215)	DCM-FR-Door control module front right	Active Test		V1.00.001 or higher
CL (215)	RCM-Rear control module	ECU Information		V1.00.001 or higher
CL (215)	RCM-Rear control module	Read Codes		V1.00.001 or higher
CL (215)	RCM-Rear control module	Erase Codes		V1.00.001 or higher
CL (215)	RCM-Rear control module	Live Data		V1.00.001 or higher
CL (215)	ESA-FL-Electric seat adjustment front left	ECU Information		V1.00.001 or higher
CL (215)	ESA-FL-Electric seat adjustment front left	Read Codes		V1.00.001 or higher
CL (215)	ESA-FL-Electric seat adjustment front left	Erase Codes		V1.00.001 or higher
CL (215)	ESA-FL-Electric seat adjustment front left	Live Data		V1.00.001 or higher
CL (215)	ESA-FL-Electric seat adjustment front left	Active Test		V1.00.001 or higher
CL (215)	ESA-FR-Electric seat adjustment front right	ECU Information		V1.00.001 or higher

CL (215)	ESA-FR-Electric seat adjustment front right	Read Codes		V1.00.001 or higher
CL (215)	ESA-FR-Electric seat adjustment front right	Erase Codes		V1.00.001 or higher
CL (215)	ESA-FR-Electric seat adjustment front right	Live Data		V1.00.001 or higher
CL (215)	ESA-FR-Electric seat adjustment front right	Active Test		V1.00.001 or higher
CL (215)	OSB-FL-Multicontour backrest front left	ECU Information		V1.00.001 or higher
CL (215)	OSB-FL-Multicontour backrest front left	Read Codes		V1.00.001 or higher
CL (215)	OSB-FL-Multicontour backrest front left	Erase Codes		V1.00.001 or higher
CL (215)	OSB-FL-Multicontour backrest front left	Live Data		V1.00.001 or higher
CL (215)	OSB-FR-Multicontour backrest front right	ECU Information		V1.00.001 or higher
CL (215)	OSB-FR-Multicontour backrest front right	Read Codes		V1.00.001 or higher
CL (215)	OSB-FR-Multicontour backrest front right	Erase Codes		V1.00.001 or higher
CL (215)	OSB-FR-Multicontour backrest front right	Live Data		V1.00.001 or higher
CL (215)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
CL (215)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher

CL (215)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
CL (215)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
CL (215)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
CL (215)	AAC-Automatic air conditioning	Control unit adaptations	Special settings	V1.00.001 or higher
CL (215)	AAC-Automatic air conditioning	Special functions	Operational check	V1.00.001 or higher
CL (215)	TSTH-Radio remote control of stationary heater	ECU Information		V1.00.001 or higher
CL (215)	TSTH-Radio remote control of stationary heater	Read Codes		V1.00.001 or higher
CL (215)	TSTH-Radio remote control of stationary heater	Erase Codes		V1.00.001 or higher
CL (215)	TSTH-Radio remote control of stationary heater	Live Data		V1.00.001 or higher
CL (215)	HSW-Heated steering wheel	ECU Information		V1.00.001 or higher
CL (215)	HSW-Heated steering wheel	Read Codes		V1.00.001 or higher
CL (215)	HSW-Heated steering wheel	Erase Codes		V1.00.001 or higher
CL (215)	HSW-Heated steering wheel	Live Data		V1.00.001 or higher
CL (215)	HSW-Heated steering wheel	Active Test		V1.00.001 or higher
CL (215)	STH-Stationary heater	ECU Information		V1.00.001 or higher
CL (215)	STH-Stationary heater	Read Codes		V1.00.001 or higher
CL (215)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
CL (215)	STH-Stationary heater	Live Data		V1.00.001 or higher
CL (215)	STH-Stationary heater	Active Test		V1.00.001 or higher
CL (215)	ME-SFI 2.7-Motor electronics 2.7	ECU Information		V1.00.001 or higher
CL (215)	ME-SFI 2.7-Motor electronics 2.7	Read Codes		V1.00.001 or higher
CL (215)	ME-SFI 2.7-Motor electronics 2.7	Erase Codes		V1.00.001 or higher

CL (215)	ME-SFI 2.7-Motor electronics 2.7	Live Data		V1.00.001 or higher
CL (215)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
CL (215)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
CL (215)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
CL (215)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher
CL (215)	ETC-Electronic transmission control	Control unit adaptations	Detach the transport protection of control module 'ETC', personalize or activate the control module.	V1.00.001 or higher
CL (215)	ETC-Electronic transmission control	Control unit adaptations	Learning process: Y3/8s1 (Selection range sensor)	V1.00.001 or higher
CL (215)	ETC-Electronic transmission control	Control unit adaptations	Learning to the Drive Authorization System (DAS/FBS)	V1.00.001 or higher
CL (215)	ETC-Electronic transmission control	Special functions	Turn off the incline recognition for dynamometer mode.	V1.00.001 or higher
CL (215)	ETC-Electronic transmission control	Special functions	Transmission adaptation	V1.00.001 or higher
CL (215)	DTR-Distronic	ECU Information		V1.00.001 or higher
CL (215)	DTR-Distronic	Read Codes		V1.00.001 or higher
CL (215)	DTR-Distronic	Erase Codes		V1.00.001 or higher
CL (215)	DTR-Distronic	Live Data		V1.00.001 or higher

CL (215)	AB-Airbag	ECU Information		V1.00.001 or higher
CL (215)	AB-Airbag	Read Codes		V1.00.001 or higher
CL (215)	AB-Airbag	Erase Codes		V1.00.001 or higher
CL (215)	AB-Airbag	Live Data		V1.00.001 or higher
CL (215)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
CL (215)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
CL (215)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
CL (215)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
CL (215)	HRA-FL-Front left headlamp range control	ECU Information		V1.00.001 or higher
CL (215)	HRA-FL-Front left headlamp range control	Read Codes		V1.00.001 or higher
CL (215)	HRA-FL-Front left headlamp range control	Erase Codes		V1.00.001 or higher
CL (215)	HRA-FL-Front left headlamp range control	Live Data		V1.00.001 or higher
CL (215)	HRA-FL-Front left headlamp range control	Active Test		V1.00.001 or higher
CL (215)	HRA-FL-Front left headlamp range control	Control unit adaptations	Zero position adjustment	V1.00.001 or higher
CL (215)	HRA-FR-Front right headlamp range control	ECU Information		V1.00.001 or higher
CL (215)	HRA-FR-Front right headlamp range control	Read Codes		V1.00.001 or higher
CL (215)	HRA-FR-Front right headlamp range control	Erase Codes		V1.00.001 or higher
CL (215)	HRA-FR-Front right headlamp range control	Live Data		V1.00.001 or higher
CL (215)	CGW-Central gateway	ECU Information		V1.00.001 or higher



CL (215)	CGW-Central gateway	Read Codes		V1.00.001 or higher
CL (215)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
CL (215)	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher
CL (215)	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher
CL (215)	CGW-Central gateway	Special functions	All codes	V1.00.001 or higher
CL (215)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
CL (215)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
CL (215)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
CL (215)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
CL (215)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
CL (215)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
CL (215)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
CL (215)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
CL (215)	UCP-Upper control panel	Live Data		V1.00.001 or higher
CL (215)	UCP-Upper control panel	Active Test		V1.00.001 or higher
CL (215)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
CL (215)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
CL (215)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
CL (215)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
CL (215)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
CL (215)	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher

CL (215)	SCM [MRM]- Steering column module	Live Data		V1.00.001 or higher
CL (215)	SCM [MRM]- Steering column module	Active Test		V1.00.001 or higher
CL (215)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
CL (215)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
CL (215)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
CL (215)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher
CL (215)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher
CL (215)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
CL (215)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher
CL (215)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher

CL (215)	CTEL-Control unit Telecommunicatio n for telematics services	ECU Information		V1.00.001 or higher
CL (215)	CTEL-Control unit Telecommunicatio n for telematics services	Read Codes		V1.00.001 or higher
CL (215)	CTEL-Control unit Telecommunicatio n for telematics services	Erase Codes		V1.00.001 or higher
CL (215)	CTEL-Control unit Telecommunicatio n for telematics services	Live Data		V1.00.001 or higher
CL (215)	COMAND or AUDIO	ECU Information		V1.00.001 or higher
CL (215)	COMAND or AUDIO	Read Codes		V1.00.001 or higher
CL (215)	COMAND or AUDIO	Erase Codes		V1.00.001 or higher
CL (215)	COMAND or AUDIO	Live Data		V1.00.001 or higher
CL (215)	COMAND or AUDIO	Active Test		V1.00.001 or higher
CL (215)	COMAND or AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
CL (215)	NAVI-Navigation system	ECU Information		V1.00.001 or higher
CL (215)	NAVI-Navigation system	Read Codes		V1.00.001 or higher
CL (215)	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
CL (215)	NAVI-Navigation system	Live Data		V1.00.001 or higher
CL (215)	NAVI-Navigation system	Active Test		V1.00.001 or higher
CL (215)	CDC-CD changer	ECU Information		V1.00.001 or higher
CL (215)	CDC-CD changer	Read Codes		V1.00.001 or higher

CL (215)	CDC-CD changer	Erase Codes		V1.00.001 or higher
CL (215)	CDC-CD changer	Live Data		V1.00.001 or higher
CL (215)	CDC-CD changer	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
CL (215)	VCS-Voice control system	ECU Information		V1.00.001 or higher
CL (215)	VCS-Voice control system	Read Codes		V1.00.001 or higher
CL (215)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
CL (215)	VCS-Voice control system	Active Test		V1.00.001 or higher
CL (215)	SOUND-Bose sound system	ECU Information		V1.00.001 or higher
CL (215)	SOUND-Bose sound system	Read Codes		V1.00.001 or higher
CL (215)	SOUND-Bose sound system	Erase Codes		V1.00.001 or higher
CL (215)	SOUND-Bose sound system	Live Data		V1.00.001 or higher
CL (215)	TV-TV tuner	ECU Information		V1.00.001 or higher
CL (215)	TV-TV tuner	Read Codes		V1.00.001 or higher
CL (215)	TV-TV tuner	Erase Codes		V1.00.001 or higher
CL (215)	TV-TV tuner	Live Data		V1.00.001 or higher
CL (215)	TV-TV tuner	Active Test		V1.00.001 or higher
CL (215)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
CL (215)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
CL (215)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
CL (215)	SDAR-Satellite radio	Live Data		V1.00.001 or higher
CL (215)	Control unit TELE AID	ECU Information		V1.00.001 or higher
CL (215)	Control unit TELE AID	Read Codes		V1.00.001 or higher
CL (215)	Control unit TELE AID	Erase Codes		V1.00.001 or higher
CL (215)	Control unit TELE AID	Live Data		V1.00.001 or higher

CL (215)	TELE AID- Telematic services Emergency call	ECU Information		V1.00.001 or higher
CL (215)	TELE AID- Telematic services Emergency call	Read Codes		V1.00.001 or higher
CL (215)	TELE AID- Telematic services Emergency call	Erase Codes		V1.00.001 or higher
CL (215)	TELE AID- Telematic services Emergency call	Live Data		V1.00.001 or higher
CL (215)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
CL (215)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
CL (215)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
CL (215)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
CL (215)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher

CL (215)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
CL (215)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
CL (215)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher
CL (215)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher
CL (215)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
CL (215)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
CL (215)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher
CL (215)	REAR AC- Rear air conditioning	ECU Information		V1.00.001 or higher
CL (215)	REAR AC- Rear air conditioning	Read Codes		V1.00.001 or higher
CL (215)	REAR AC- Rear air conditioning	Erase Codes		V1.00.001 or higher
CL (215)	REAR AC- Rear air conditioning	Live Data		V1.00.001 or higher
CL (215)	REAR AC- Rear air conditioning	Active Test		V1.00.001 or higher
CL (215)	STH-Stationary heater	ECU Information		V1.00.001 or higher

CL (215)	STH-Stationary heater	Read Codes		V1.00.001 or higher
CL (215)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
CL (215)	STH-Stationary heater	Live Data		V1.00.001 or higher
CL (215)	STH-Stationary heater	Active Test		V1.00.001 or higher
CL (215)	ME-SFI 2.7.1-Motor electronics 2.7.1	ECU Information		V1.00.001 or higher
CL (215)	ME-SFI 2.7.1-Motor electronics 2.7.1	Read Codes		V1.00.001 or higher
CL (215)	ME-SFI 2.7.1-Motor electronics 2.7.1	Erase Codes		V1.00.001 or higher
CL (215)	ME-SFI 2.7.1-Motor electronics 2.7.1	Live Data		V1.00.001 or higher
CL (215)	ME-SFI 2.7.1-Motor electronics 2.7.1	Active Test		V1.00.001 or higher
CL (215)	ME-SFI 2.7.1-Motor electronics 2.7.1	Control unit adaptations	Learning processes	V1.00.001 or higher
CL (215)	ME-SFI 2.7.1-Motor electronics 2.7.1	Control unit adaptations	Correction programming	V1.00.001 or higher
CL (215)	ME-SFI 2.7.1-Motor electronics 2.7.1	Special functions	Variant coding	V1.00.001 or higher
CL (140)	HFM,ME2-Hot film engine management,Fuel injection and ignition system	ECU Information		V1.00.001 or higher
CL (140)	HFM,ME2-Hot film engine management,Fuel injection and ignition system	Read Codes		V1.00.001 or higher
CL (140)	HFM,ME2-Hot film engine management,Fuel injection and ignition system	Erase Codes		V1.00.001 or higher

CL (140)	HFM,ME2-Hot film engine management,Fuel injection and ignition system	Live Data		V1.00.001 or higher
CL (140)	HFM,ME2-Hot film engine management,Fuel injection and ignition system	Active Test		V1.00.001 or higher
CL (140)	HFM,ME2-Hot film engine management,Fuel injection and ignition system	Control unit adaptations	Correction programming	V1.00.001 or higher
CL (140)	HFM,ME2-Hot film engine management,Fuel injection and ignition system	Control unit adaptations	Self-adaptation	V1.00.001 or higher
CL (140)	EFP,TPM,ISC-Electronic accelerator pedal,Cruise control,Idle speed control	ECU Information		V1.00.001 or higher
CL (140)	EFP,TPM,ISC-Electronic accelerator pedal,Cruise control,Idle speed control	Read Codes		V1.00.001 or higher
CL (140)	EFP,TPM,ISC-Electronic accelerator pedal,Cruise control,Idle speed control	Erase Codes		V1.00.001 or higher
CL (140)	EGS,EAG-Electronic control for automatic transmission	ECU Information		V1.00.001 or higher
CL (140)	EGS,EAG-Electronic control for automatic transmission	Read Codes		V1.00.001 or higher



CL (140)	EGS,EAG- Electronic control for automatic transmission	Erase Codes		V1.00.001 or higher
CL (140)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
CL (140)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
CL (140)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
CL (140)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
CL (140)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
CL (140)	BAS-Brake assist	ECU Information		V1.00.001 or higher
CL (140)	BAS-Brake assist	Read Codes		V1.00.001 or higher
CL (140)	BAS-Brake assist	Erase Codes		V1.00.001 or higher
CL (140)	BAS-Brake assist	Live Data		V1.00.001 or higher
CL (140)	BAS-Brake assist	Active Test		V1.00.001 or higher
CL (140)	SPS-Speed- sensitive power steering	ECU Information		V1.00.001 or higher
CL (140)	SPS-Speed- sensitive power steering	Read Codes		V1.00.001 or higher
CL (140)	SPS-Speed- sensitive power steering	Erase Codes		V1.00.001 or higher
CL (140)	SPS-Speed- sensitive power steering	Live Data		V1.00.001 or higher
CL (140)	AirBag	ECU Information		V1.00.001 or higher
CL (140)	AirBag	Read Codes		V1.00.001 or higher
CL (140)	AirBag	Erase Codes		V1.00.001 or higher
CL (140)	RFL-Radio frequency locking/electric central locking	ECU Information		V1.00.001 or higher

CL (140)	RFL-Radio frequency locking/electric central locking	Read Codes		V1.00.001 or higher
CL (140)	RFL-Radio frequency locking/electric central locking	Erase Codes		V1.00.001 or higher
CL (140)	RFL-Radio frequency locking/electric central locking	Live Data		V1.00.001 or higher
CL (140)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
CL (140)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
CL (140)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
CL (140)	PSE-Pneumatic system equipment	ECU Information		V1.00.001 or higher
CL (140)	PSE-Pneumatic system equipment	Read Codes		V1.00.001 or higher
CL (140)	PSE-Pneumatic system equipment	Erase Codes		V1.00.001 or higher
CL (140)	KFB-Power windows,emergency opening,convenience closing,tilting/sliding roof	ECU Information		V1.00.001 or higher
CL (140)	KFB-Power windows,emergency opening,convenience closing,tilting/sliding roof	Read Codes		V1.00.001 or higher
CL (140)	KFB-Power windows,emergency opening,convenience closing,tilting/sliding roof	Erase Codes		V1.00.001 or higher

CL (140)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
CL (140)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
CL (140)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
CL (140)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
CL (140)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
CL (140)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
CL (140)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
CL (140)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
SLK/SLC 172	ME - Motor electronics	ECU Information		V1.00.001 or higher
SLK/SLC 172	ME - Motor electronics	Read Codes		V1.00.001 or higher
SLK/SLC 172	ME - Motor electronics	Erase Codes		V1.00.001 or higher
SLK/SLC 172	ME - Motor electronics	Live Data		V1.00.001 or higher
SLK/SLC 172	ME - Motor electronics	Active Test		V1.00.001 or higher
SLK/SLC 172	CDI - Motor electronics CDID3 for combustion engine OM651	ECU Information		V1.00.001 or higher
SLK/SLC 172	CDI - Motor electronics CDID3 for combustion engine OM651	Read Codes		V1.00.001 or higher

SLK/SLC 172	CDI - Motor electronics CDID3 for combustion engine OM651	Erase Codes		V1.00.001 or higher
SLK/SLC 172	CDI - Motor electronics CDID3 for combustion engine OM651	Live Data		V1.00.001 or higher
SLK/SLC 172	CDI - Motor electronics CDID3 for combustion engine OM651	Active Test		V1.00.001 or higher
SLK/SLC 172	VGS - Transmission control for 7-speed transimssion	ECU Information		V1.00.001 or higher
SLK/SLC 172	VGS - Transmission control for 7-speed transimssion	Read Codes		V1.00.001 or higher
SLK/SLC 172	VGS - Transmission control for 7-speed transimssion	Erase Codes		V1.00.001 or higher
SLK/SLC 172	VGS - Transmission control for 7-speed transimssion	Live Data		V1.00.001 or higher
SLK/SLC 172	VGS - Transmission control for 7-speed transimssion	Active Test		V1.00.001 or higher
SLK/SLC 172	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
SLK/SLC 172	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
SLK/SLC 172	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
SLK/SLC 172	FSCU-Fuel pump	Live Data		V1.00.001 or higher

SLK/SLC 172	FSCU-Fuel pump	Active Test		V1.00.001 or higher
SLK/SLC 172	ESM[EWM] - Electronic selector module	ECU Information		V1.00.001 or higher
SLK/SLC 172	ESM[EWM] - Electronic selector module	Read Codes		V1.00.001 or higher
SLK/SLC 172	ESM[EWM] - Electronic selector module	Erase Codes		V1.00.001 or higher
SLK/SLC 172	ESM[EWM] - Electronic selector module	Live Data		V1.00.001 or higher
SLK/SLC 172	ESM[EWM] - Electronic selector module	Active Test		V1.00.001 or higher
SLK/SLC 172	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
SLK/SLC 172	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
SLK/SLC 172	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
SLK/SLC 172	ESP-Electronic stability program	Live Data		V1.00.001 or higher
SLK/SLC 172	ESP-Electronic stability program	Active Test		V1.00.001 or higher
SLK/SLC 172	ESP-Electronic stability program	Control unit adaptations	Teach-in processes	V1.00.001 or higher
SLK/SLC 172	EFB-Electronic parking brake	ECU Information		V1.00.001 or higher
SLK/SLC 172	EFB-Electronic parking brake	Read Codes		V1.00.001 or higher
SLK/SLC 172	EFB-Electronic parking brake	Erase Codes		V1.00.001 or higher
SLK/SLC 172	EFB-Electronic parking brake	Live Data		V1.00.001 or higher
SLK/SLC 172	EFB-Electronic parking brake	Active Test		V1.00.001 or higher
SLK/SLC 172	EFB-Electronic parking brake	Control unit adaptations	Calibration of control unit 'N128 (Electric parking brake control unit)'	V1.00.001 or higher
SLK/SLC 172	ADS - Adaptive damping system	ECU Information		V1.00.001 or higher
SLK/SLC 172	ADS - Adaptive damping system	Read Codes		V1.00.001 or higher

SLK/SLC 172	ADS - Adaptive damping system	Erase Codes		V1.00.001 or higher
SLK/SLC 172	ADS - Adaptive damping system	Live Data		V1.00.001 or higher
SLK/SLC 172	ADS - Adaptive damping system	Active Test		V1.00.001 or higher
SLK/SLC 172	EHPS - Electorhydraulic power sreeting	ECU Information		V1.00.001 or higher
SLK/SLC 172	EHPS - Electorhydraulic power sreeting	Read Codes		V1.00.001 or higher
SLK/SLC 172	EHPS - Electorhydraulic power sreeting	Erase Codes		V1.00.001 or higher
SLK/SLC 172	EHPS - Electorhydraulic power sreeting	Live Data		V1.00.001 or higher
SLK/SLC 172	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
SLK/SLC 172	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
SLK/SLC 172	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
SLK/SLC 172	DTR - DISTRONIC	Live Data		V1.00.001 or higher
SLK/SLC 172	SRS-Supplemental restraint system	ECU Information		V1.00.001 or higher
SLK/SLC 172	SRS-Supplemental restraint system	Read Codes		V1.00.001 or higher
SLK/SLC 172	SRS-Supplemental restraint system	Erase Codes		V1.00.001 or higher
SLK/SLC 172	SRS-Supplemental restraint system	Live Data		V1.00.001 or higher
SLK/SLC 172	CGW-Central gateway	ECU Information		V1.00.001 or higher
SLK/SLC 172	CGW-Central gateway	Read Codes		V1.00.001 or higher
SLK/SLC 172	CGW-Central gateway	Erase Codes		V1.00.001 or higher
SLK/SLC 172	CGW-Central gateway	Live Data		V1.00.001 or higher
SLK/SLC 172	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher

SLK/SLC 172	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
SLK/SLC 172	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
SLK/SLC 172	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
SLK/SLC 172	SCM - Steering column module	ECU Information		V1.00.001 or higher
SLK/SLC 172	SCM - Steering column module	Read Codes		V1.00.001 or higher
SLK/SLC 172	SCM - Steering column module	Erase Codes		V1.00.001 or higher
SLK/SLC 172	SCM - Steering column module	Live Data		V1.00.001 or higher
SLK/SLC 172	SCM - Steering column module	Active Test		V1.00.001 or higher
SLK/SLC 172	MSC-MAGIC SKY CONTROL	ECU Information		V1.00.001 or higher
SLK/SLC 172	MSC-MAGIC SKY CONTROL	Read Codes		V1.00.001 or higher
SLK/SLC 172	MSC-MAGIC SKY CONTROL	Erase Codes		V1.00.001 or higher
SLK/SLC 172	MSC-MAGIC SKY CONTROL	Live Data		V1.00.001 or higher
SLK/SLC 172	KG - KEYLESS GO	ECU Information		V1.00.001 or higher
SLK/SLC 172	KG - KEYLESS GO	Read Codes		V1.00.001 or higher
SLK/SLC 172	KG - KEYLESS GO	Erase Codes		V1.00.001 or higher
SLK/SLC 172	KG - KEYLESS GO	Live Data		V1.00.001 or higher
SLK/SLC 172	KG - KEYLESS GO	Active Test		V1.00.001 or higher
SLK/SLC 172	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
SLK/SLC 172	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher

SLK/SLC 172	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
SLK/SLC 172	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
SLK/SLC 172	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
SLK/SLC 172	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
SLK/SLC 172	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
SLK/SLC 172	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
SLK/SLC 172	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher
SLK/SLC 172	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
SLK/SLC 172	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher



SLK/SLC 172	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
SLK/SLC 172	Driver-side SAM - Front signal acquisition and actuation module	Active Test		V1.00.001 or higher
SLK/SLC 172	Rear SAM - Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
SLK/SLC 172	Rear SAM - Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
SLK/SLC 172	Rear SAM - Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
SLK/SLC 172	Rear SAM - Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
SLK/SLC 172	Rear SAM - Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
SLK/SLC 172	VDS-Vario roof control	ECU Information		V1.00.001 or higher
SLK/SLC 172	VDS-Vario roof control	Read Codes		V1.00.001 or higher
SLK/SLC 172	VDS-Vario roof control	Erase Codes		V1.00.001 or higher
SLK/SLC 172	VDS-Vario roof control	Live Data		V1.00.001 or higher
SLK/SLC 172	AIRSCARF-AIRSCARF system	ECU Information		V1.00.001 or higher

SLK/SLC 172	AIRSCARF- AIRSCARF system	Read Codes		V1.00.001 or higher
SLK/SLC 172	AIRSCARF- AIRSCARF system	Erase Codes		V1.00.001 or higher
SLK/SLC 172	AIRSCARF- AIRSCARF system	Live Data		V1.00.001 or higher
SLK/SLC 172	AIRSCARF- AIRSCARF system	Active Test		V1.00.001 or higher
SLK/SLC 172	SG-SW-Control unit 'Headlamp'	ECU Information		V1.00.001 or higher
SLK/SLC 172	SG-SW-Control unit 'Headlamp'	Read Codes		V1.00.001 or higher
SLK/SLC 172	SG-SW-Control unit 'Headlamp'	Erase Codes		V1.00.001 or higher
SLK/SLC 172	SG-SW-Control unit 'Headlamp'	Live Data		V1.00.001 or higher
SLK/SLC 172	SG-SW-Control unit 'Headlamp'	Active Test		V1.00.001 or higher
SLK/SLC 172	IC - Instrument cluster	ECU Information		V1.00.001 or higher
SLK/SLC 172	IC - Instrument cluster	Read Codes		V1.00.001 or higher
SLK/SLC 172	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
SLK/SLC 172	IC - Instrument cluster	Live Data		V1.00.001 or higher
SLK/SLC 172	IC - Instrument cluster	ECU Information		V1.00.001 or higher
SLK/SLC 172	IC - Instrument cluster	Active Test		V1.00.001 or higher
SLK/SLC 172	KOMO/mbrace - Communication module 'Telematics services'/Notrufsy stem	ECU Information		V1.00.001 or higher
SLK/SLC 172	KOMO/mbrace - Communication module 'Telematics services'/Notrufsy stem	Read Codes		V1.00.001 or higher

SLK/SLC 172	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
SLK/SLC 172	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
SLK/SLC 172	NAV - Navigation module	ECU Information		V1.00.001 or higher
SLK/SLC 172	NAV - Navigation module	Read Codes		V1.00.001 or higher
SLK/SLC 172	NAV - Navigation module	Erase Codes		V1.00.001 or higher
SLK/SLC 172	NAV - Navigation module	Live Data		V1.00.001 or higher
SLK/SLC 172	Audio-Audio or COMAND	ECU Information		V1.00.001 or higher
SLK/SLC 172	Audio-Audio or COMAND	Read Codes		V1.00.001 or higher
SLK/SLC 172	Audio-Audio or COMAND	Erase Codes		V1.00.001 or higher
SLK/SLC 172	Audio-Audio or COMAND	Live Data		V1.00.001 or higher
SLK/SLC 172	SOUND - Sound system	ECU Information		V1.00.001 or higher
SLK/SLC 172	SOUND - Sound system	Read Codes		V1.00.001 or higher
SLK/SLC 172	SOUND - Sound system	Erase Codes		V1.00.001 or higher
SLK/SLC 172	SOUND - Sound system	Live Data		V1.00.001 or higher
SLK/SLC 172	TELE AID-Control unit	ECU Information		V1.00.001 or higher
SLK/SLC 172	TELE AID-Control unit	Read Codes		V1.00.001 or higher
SLK/SLC 172	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
SLK/SLC 172	TELE AID-Control unit	Live Data		V1.00.001 or higher
SLK/SLC 172	TV - TV tuner	ECU Information		V1.00.001 or higher
SLK/SLC 172	TV - TV tuner	Read Codes		V1.00.001 or higher

SLK/SLC 172	TV - TV tuner	Erase Codes		V1.00.001 or higher
SLK/SLC 172	TV - TV tuner	Live Data		V1.00.001 or higher
SLK/SLC 172	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
SLK/SLC 172	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
SLK/SLC 172	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
SLK/SLC 172	MFK - Multifunction camera	Live Data		V1.00.001 or higher
SLK/SLC 172	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
SLK/SLC 172	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
SLK/SLC 172	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
SLK/SLC 172	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
SLK/SLC 172	Drive Kit Plus - Drive kit for iPhone	ECU Information		V1.00.001 or higher
SLK/SLC 172	Drive Kit Plus - Drive kit for iPhone	Read Codes		V1.00.001 or higher
SLK/SLC 172	Drive Kit Plus - Drive kit for iPhone	Erase Codes		V1.00.001 or higher
SLK/SLC 172	Drive Kit Plus - Drive kit for iPhone	Live Data		V1.00.001 or higher
SLK/SLC 172	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
SLK/SLC 172	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher

SLK/SLC 172	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
SLK/SLC 172	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
SLK/SLC 172	MIF - Media interface	ECU Information		V1.00.001 or higher
SLK/SLC 172	MIF - Media interface	Read Codes		V1.00.001 or higher
SLK/SLC 172	MIF - Media interface	Erase Codes		V1.00.001 or higher
SLK/SLC 172	MIF - Media interface	Live Data		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic service Emergency call	ECU Information		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic service Emergency call	Read Codes		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic service Emergency call	Erase Codes		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic service Emergency call	Live Data		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher

SLK/SLC 172	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic services Remote door unlocking	ECU Information		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic services Remote door unlocking	Read Codes		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic services Remote door unlocking	Erase Codes		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic services Remote door unlocking	Live Data		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic service Stolen vehicle tracking	ECU Information		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic service Stolen vehicle tracking	Read Codes		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic service Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
SLK/SLC 172	TELE AID- Telematic service Stolen vehicle tracking	Live Data		V1.00.001 or higher

SLK/SLC 172	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
SLK/SLC 172	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
SLK/SLC 172	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
SLK/SLC 172	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
SLK/SLC 172	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher
SLK/SLC 172	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
SLK/SLC 172	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
SLK/SLC 172	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
SLK/SLC 172	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
SLK/SLC 172	PTS-PARKTRONIC	ECU Information		V1.00.001 or higher
SLK/SLC 172	PTS-PARKTRONIC	Read Codes		V1.00.001 or higher
SLK/SLC 172	PTS-PARKTRONIC	Erase Codes		V1.00.001 or higher
SLK/SLC 172	PTS-PARKTRONIC	Live Data		V1.00.001 or higher
SLK/SLC 172	PTS-PARKTRONIC	Active Test		V1.00.001 or higher
SLK/SLC 172	ESA 'Driver'- Electric seat adjustment 'Driver'	ECU Information		V1.00.001 or higher
SLK/SLC 172	ESA 'Driver'- Electric seat adjustment 'Driver'	Read Codes		V1.00.001 or higher

SLK/SLC 172	ESA 'Driver'- Electric seat adjustment 'Driver'	Erase Codes		V1.00.001 or higher
SLK/SLC 172	ESA 'Driver'- Electric seat adjustment 'Driver'	Live Data		V1.00.001 or higher
SLK/SLC 172	ESA 'Driver'- Electric seat adjustment 'Driver'	Active Test		V1.00.001 or higher
SLK/SLC 172	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	ECU Information		V1.00.001 or higher
SLK/SLC 172	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Read Codes		V1.00.001 or higher
SLK/SLC 172	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Erase Codes		V1.00.001 or higher
SLK/SLC 172	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Live Data		V1.00.001 or higher
SLK/SLC 172	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Active Test		V1.00.001 or higher



SLK/SLC 172	DCU-LF-Left front door	ECU Information		V1.00.001 or higher
SLK/SLC 172	DCU-LF-Left front door	Read Codes		V1.00.001 or higher
SLK/SLC 172	DCU-LF-Left front door	Erase Codes		V1.00.001 or higher
SLK/SLC 172	DCU-LF-Left front door	Live Data		V1.00.001 or higher
SLK/SLC 172	DCU-LF-Left front door	Active Test		V1.00.001 or higher
SLK/SLC 172	DCU-RF-Right front door	ECU Information		V1.00.001 or higher
SLK/SLC 172	DCU-RF-Right front door	Read Codes		V1.00.001 or higher
SLK/SLC 172	DCU-RF-Right front door	Erase Codes		V1.00.001 or higher
SLK/SLC 172	DCU-RF-Right front door	Live Data		V1.00.001 or higher
SLK/SLC 172	DCU-RF-Right front door	Active Test		V1.00.001 or higher
SLK/SLC 172	AAC-Air conditioning	ECU Information		V1.00.001 or higher
SLK/SLC 172	AAC-Air conditioning	Read Codes		V1.00.001 or higher
SLK/SLC 172	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
SLK/SLC 172	AAC-Air conditioning	Live Data		V1.00.001 or higher
SLK/SLC 172	TPM-Tire pressure monitor	ECU Information		V1.00.001 or higher
SLK/SLC 172	TPM-Tire pressure monitor	Read Codes		V1.00.001 or higher
SLK/SLC 172	TPM-Tire pressure monitor	Erase Codes		V1.00.001 or higher
SLK/SLC 172	TPM-Tire pressure monitor	Live Data		V1.00.001 or higher
SLK/SLC 172	TPM-Tire pressure monitor	Active Test		V1.00.001 or higher
SLK/SLC 172	TPM-Tire pressure monitor	Control unit adaptations	Teach-in processes	V1.00.001 or higher
SLK/SLC 172	SGR - Radar sensors control unit	ECU Information		V1.00.001 or higher
SLK/SLC 172	SGR - Radar sensors control unit	Read Codes		V1.00.001 or higher

SLK/SLC 172	SGR - Radar sensors control unit	Erase Codes		V1.00.001 or higher
SLK/SLC 172	SGR - Radar sensors control unit	Live Data		V1.00.001 or higher
SLK/SLC 172	SGR - Radar sensors control unit	Active Test		V1.00.001 or higher
SLK/SLC 172	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
SLK/SLC 172	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
SLK/SLC 172	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
SLK/SLC 172	IRS-HRA - Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
SLK/SLC 172	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
SLK/SLC 172	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
SLK/SLC 172	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
SLK/SLC 172	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
SLK/SLC 172	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
SLK/SLC 172	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
SLK/SLC 172	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher

SLK/SLC 172	DTR - DISTRONIC	Live Data		V1.00.001 or higher
SLK (171)	ME-SFI-Motor electronics	ECU Information		V1.00.001 or higher
SLK (171)	ME-SFI-Motor electronics	Read Codes		V1.00.001 or higher
SLK (171)	ME-SFI-Motor electronics	Erase Codes		V1.00.001 or higher
SLK (171)	ME-SFI-Motor electronics	Live Data		V1.00.001 or higher
SLK (171)	ME-SFI-Motor electronics	Active Test		V1.00.001 or higher
SLK (171)	ME-SFI-Motor electronics	Control unit adaptations	Learning processes	V1.00.001 or higher
SLK (171)	ME-SFI-Motor electronics	Control unit adaptations	Correction programming	V1.00.001 or higher
SLK (171)	Transmission	ECU Information		V1.00.001 or higher
SLK (171)	Transmission	Read Codes		V1.00.001 or higher
SLK (171)	Transmission	Erase Codes		V1.00.001 or higher
SLK (171)	Transmission	Live Data		V1.00.001 or higher
SLK (171)	Transmission	Active Test		V1.00.001 or higher
SLK (171)	Transmission	Control unit adaptations	Definition	V1.00.001 or higher
SLK (171)	Transmission	Control unit adaptations	Assignment of the hydraulic shift elements	V1.00.001 or higher
SLK (171)	Transmission	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
SLK (171)	Transmission	Control unit adaptations	Important information on the combination possibilities for adaptation end stop values	V1.00.001 or higher
SLK (171)	Transmission	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
SLK (171)	Transmission	Control unit adaptations	Performing adaptation	V1.00.001 or higher

SLK (171)	Transmission	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
SLK (171)	Transmission	Special functions	Warranty or goodwill processing	V1.00.001 or higher
SLK (171)	Transmission	Special functions	Diagnosis routines	V1.00.001 or higher
SLK (171)	Transmission	Initial startup	Initial start-up with manual settings input for new control module	V1.00.001 or higher
SLK (171)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
SLK (171)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
SLK (171)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
SLK (171)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
SLK (171)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
SLK (171)	ESM-Electronic selector module	Control unit adaptations	Operational check	V1.00.001 or higher
SLK (171)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
SLK (171)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
SLK (171)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
SLK (171)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
SLK (171)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
SLK (171)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
SLK (171)	ESP-Electronic stability program	Control unit adaptations	Clear the zero point offset error of the component 'N49 (Steering Angle Sensor (SAS))'.	V1.00.001 or higher
SLK (171)	ESP-Electronic stability program	Control unit adaptations	Tire pressure loss warner(Activating)	V1.00.001 or higher

SLK (171)	ESP-Electronic stability program	Control unit adaptations	Clear the zero point offset error of the component 'B24/15 (Rotary speed and Lateral Acceleration Sensor (LAS))'.	V1.00.001 or higher
SLK (171)	AB-Airbag	ECU Information		V1.00.001 or higher
SLK (171)	AB-Airbag	Read Codes		V1.00.001 or higher
SLK (171)	AB-Airbag	Erase Codes		V1.00.001 or higher
SLK (171)	AB-Airbag	Live Data		V1.00.001 or higher
SLK (171)	CGW-Central gateway	ECU Information		V1.00.001 or higher
SLK (171)	CGW-Central gateway	Read Codes		V1.00.001 or higher
SLK (171)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
SLK (171)	CGW-Central gateway	Live Data		V1.00.001 or higher
SLK (171)	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher
SLK (171)	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher
SLK (171)	CGW-Central gateway	Special functions	All codes	V1.00.001 or higher
SLK (171)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
SLK (171)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
SLK (171)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
SLK (171)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
SLK (171)	EZS-Electronic ignition switch	Active Test		V1.00.001 or higher
SLK (171)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher
SLK (171)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher

SLK (171)	EZS-Electronic ignition switch	Control unit adaptations	Program the replacement keys.	V1.00.001 or higher
SLK (171)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N73 (Electronic Ignition Switch (EIS/EZS) control module)'. '.	V1.00.001 or higher
SLK (171)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N26/5 (Electric steering lock control module)'. '.	V1.00.001 or higher
SLK (171)	EZS-Electronic ignition switch	Control unit adaptations	Key assignment or key track assignment to a memory block number	V1.00.001 or higher
SLK (171)	EZS-Electronic ignition switch	Control unit adaptations	Writing of the VIN	V1.00.001 or higher
SLK (171)	EZS-Electronic ignition switch	Control unit adaptations	Telematic service 'Remote door unlocking' (TELE AID)	V1.00.001 or higher
SLK (171)	EZS-Electronic ignition switch	Initial startup	Initial start-up of the control module 'Electronic Ignition Switch (EIS/EZS)'. '.	V1.00.001 or higher
SLK (171)	EZS-Electronic ignition switch	Initial startup	Initial start-up of the control module 'ESL'	V1.00.001 or higher
SLK (171)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
SLK (171)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
SLK (171)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
SLK (171)	VR-Vario roof	ECU Information		V1.00.001 or higher
SLK (171)	VR-Vario roof	Read Codes		V1.00.001 or higher
SLK (171)	VR-Vario roof	Erase Codes		V1.00.001 or higher

SLK (171)	VR-Vario roof	Live Data		V1.00.001 or higher
SLK (171)	VR-Vario roof	Active Test		V1.00.001 or higher
SLK (171)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
SLK (171)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
SLK (171)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
SLK (171)	UCP-Upper control panel	Live Data		V1.00.001 or higher
SLK (171)	UCP-Upper control panel	Active Test		V1.00.001 or higher
SLK (171)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
SLK (171)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
SLK (171)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
SLK (171)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
SLK (171)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
SLK (171)	SAM-F-Signal acquisition and actuation module front	ECU Information		V1.00.001 or higher
SLK (171)	SAM-F-Signal acquisition and actuation module front	Read Codes		V1.00.001 or higher
SLK (171)	SAM-F-Signal acquisition and actuation module front	Erase Codes		V1.00.001 or higher
SLK (171)	SAM-F-Signal acquisition and actuation module front	Live Data		V1.00.001 or higher
SLK (171)	SAM-F-Signal acquisition and actuation module front	Active Test		V1.00.001 or higher

SLK (171)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
SLK (171)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
SLK (171)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
SLK (171)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
SLK (171)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
SLK (171)	HRA-Automatic headlamp range adjustment and headlamp control	ECU Information		V1.00.001 or higher
SLK (171)	HRA-Automatic headlamp range adjustment and headlamp control	Read Codes		V1.00.001 or higher
SLK (171)	HRA-Automatic headlamp range adjustment and headlamp control	Erase Codes		V1.00.001 or higher
SLK (171)	HRA-Automatic headlamp range adjustment and headlamp control	Live Data		V1.00.001 or higher



SLK (171)	HRA-Automatic headlamp range adjustment and headlamp control	Active Test		V1.00.001 or higher
SLK (171)	HRA-Automatic headlamp range adjustment and headlamp control	Control unit adaptations	Zero position adjustment of axle or level sensors	V1.00.001 or higher
SLK (171)	IC-Instrument cluster	ECU Information		V1.00.001 or higher
SLK (171)	IC-Instrument cluster	Read Codes		V1.00.001 or higher
SLK (171)	IC-Instrument cluster	Erase Codes		V1.00.001 or higher
SLK (171)	IC-Instrument cluster	Live Data		V1.00.001 or higher
SLK (171)	IC-Instrument cluster	Active Test		V1.00.001 or higher
SLK (171)	IC-Instrument cluster	Control unit adaptations	Setting the main odometer forward and back	V1.00.001 or higher
SLK (171)	IC-Instrument cluster	Control unit adaptations	Setting days since initial registration	V1.00.001 or higher
SLK (171)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
SLK (171)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
SLK (171)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
SLK (171)	PTS-Parktronic system	Live Data		V1.00.001 or higher
SLK (171)	PTS-Parktronic system	Active Test		V1.00.001 or higher
SLK (171)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
SLK (171)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
SLK (171)	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher

SLK (171)	SCM [MRM]- Steering column module	Live Data		V1.00.001 or higher
SLK (171)	SCM [MRM]- Steering column module	Active Test		V1.00.001 or higher
SLK (171)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
SLK (171)	ASSYST-Active Service System	Read Codes		V1.00.001 or higher
SLK (171)	ASSYST-Active Service System	Erase Codes		V1.00.001 or higher
SLK (171)	ASSYST-Active Service System	Live Data		V1.00.001 or higher
SLK (171)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
SLK (171)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
SLK (171)	ASSYST PLUS-PLUS Active Service System	Read Codes		V1.00.001 or higher
SLK (171)	ASSYST PLUS-PLUS Active Service System	Erase Codes		V1.00.001 or higher
SLK (171)	ASSYST PLUS-PLUS Active Service System	Live Data		V1.00.001 or higher
SLK (171)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
SLK (171)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher
SLK (171)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher

SLK (171)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
SLK (171)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher
SLK (171)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher
SLK (171)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
SLK (171)	CTEL-Mobile phone adapter with universal interface	ECU Information		V1.00.001 or higher
SLK (171)	CTEL-Mobile phone adapter with universal interface	Read Codes		V1.00.001 or higher
SLK (171)	CTEL-Mobile phone adapter with universal interface	Erase Codes		V1.00.001 or higher
SLK (171)	CTEL-Mobile phone adapter with universal interface	Live Data		V1.00.001 or higher
SLK (171)	COMAND or AUDIO	ECU Information		V1.00.001 or higher
SLK (171)	COMAND or AUDIO	Read Codes		V1.00.001 or higher

SLK (171)	COMAND or AUDIO	Erase Codes		V1.00.001 or higher
SLK (171)	COMAND or AUDIO	Live Data		V1.00.001 or higher
SLK (171)	COMAND or AUDIO	Active Test		V1.00.001 or higher
SLK (171)	COMAND or AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
SLK (171)	NAVI-Navigation system	ECU Information		V1.00.001 or higher
SLK (171)	NAVI-Navigation system	Read Codes		V1.00.001 or higher
SLK (171)	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
SLK (171)	NAVI-Navigation system	Live Data		V1.00.001 or higher
SLK (171)	NAVI-Navigation system	Active Test		V1.00.001 or higher
SLK (171)	CDC-CD changer	ECU Information		V1.00.001 or higher
SLK (171)	CDC-CD changer	Read Codes		V1.00.001 or higher
SLK (171)	CDC-CD changer	Erase Codes		V1.00.001 or higher
SLK (171)	CDC-CD changer	Live Data		V1.00.001 or higher
SLK (171)	CDC-CD changer	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
SLK (171)	VCS-Voice control system	ECU Information		V1.00.001 or higher
SLK (171)	VCS-Voice control system	Read Codes		V1.00.001 or higher
SLK (171)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
SLK (171)	VCS-Voice control system	Active Test		V1.00.001 or higher
SLK (171)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
SLK (171)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
SLK (171)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
SLK (171)	SDAR-Satellite radio	Live Data		V1.00.001 or higher
SLK (171)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher

SLK (171)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
SLK (171)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher
SLK (171)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher
SLK (171)	Sound system (Main amplifier)	Active Test		V1.00.001 or higher
SLK (171)	UCI-Media interface	ECU Information		V1.00.001 or higher
SLK (171)	UCI-Media interface	Read Codes		V1.00.001 or higher
SLK (171)	UCI-Media interface	Erase Codes		V1.00.001 or higher
SLK (171)	DAB-Digital radio	ECU Information		V1.00.001 or higher
SLK (171)	DAB-Digital radio	Read Codes		V1.00.001 or higher
SLK (171)	DAB-Digital radio	Erase Codes		V1.00.001 or higher
SLK (171)	DAB-Digital radio	Live Data		V1.00.001 or higher
SLK (171)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
SLK (171)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
SLK (171)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
SLK (171)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
SLK (171)	SDAR-Satellite radio(Valid for USA)	Active Test		V1.00.001 or higher
SLK (171)	TV-TV tuner	ECU Information		V1.00.001 or higher
SLK (171)	TV-TV tuner	Read Codes		V1.00.001 or higher
SLK (171)	TV-TV tuner	Erase Codes		V1.00.001 or higher
SLK (171)	TV-TV tuner	Live Data		V1.00.001 or higher
SLK (171)	CTEL-Cellular telephone(JAPAN)	ECU Information		V1.00.001 or higher

SLK (171)	CTEL-Cellular telephone(JAPAN)	Read Codes		V1.00.001 or higher
SLK (171)	CTEL-Cellular telephone(JAPAN)	Erase Codes		V1.00.001 or higher
SLK (171)	CTEL-Cellular telephone(JAPAN)	Live Data		V1.00.001 or higher
SLK (171)	CTEL-Cellular telephone(JAPAN)	Active Test		V1.00.001 or higher
SLK (171)	Control unit TELE AID	ECU Information		V1.00.001 or higher
SLK (171)	Control unit TELE AID	Read Codes		V1.00.001 or higher
SLK (171)	Control unit TELE AID	Erase Codes		V1.00.001 or higher
SLK (171)	Control unit TELE AID	Live Data		V1.00.001 or higher
SLK (171)	TELE AID- Telematic services Emergency call	ECU Information		V1.00.001 or higher
SLK (171)	TELE AID- Telematic services Emergency call	Read Codes		V1.00.001 or higher
SLK (171)	TELE AID- Telematic services Emergency call	Erase Codes		V1.00.001 or higher
SLK (171)	TELE AID- Telematic services Emergency call	Live Data		V1.00.001 or higher
SLK (171)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher

SLK (171)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
SLK (171)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
SLK (171)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
SLK (171)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher
SLK (171)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
SLK (171)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
SLK (171)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher
SLK (171)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher

SLK (171)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
SLK (171)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
SLK (171)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher
SLK (171)	DCM-L-Door control module left	ECU Information		V1.00.001 or higher
SLK (171)	DCM-L-Door control module left	Read Codes		V1.00.001 or higher
SLK (171)	DCM-L-Door control module left	Erase Codes		V1.00.001 or higher
SLK (171)	DCM-L-Door control module left	Live Data		V1.00.001 or higher
SLK (171)	DCM-L-Door control module left	Active Test		V1.00.001 or higher
SLK (171)	DCM-R-Door control module right	ECU Information		V1.00.001 or higher
SLK (171)	DCM-R-Door control module right	Read Codes		V1.00.001 or higher
SLK (171)	DCM-R-Door control module right	Erase Codes		V1.00.001 or higher
SLK (171)	DCM-R-Door control module right	Live Data		V1.00.001 or higher
SLK (171)	DCM-R-Door control module right	Active Test		V1.00.001 or higher



SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	ECU Information		V1.00.001 or higher
SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Read Codes		V1.00.001 or higher
SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Erase Codes		V1.00.001 or higher
SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Live Data		V1.00.001 or higher
SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Active Test		V1.00.001 or higher
SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterize the Easy Entry/Exit.	V1.00.001 or higher
SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Increase the fore/aft adjustment range to rear.	V1.00.001 or higher
SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterize collision avoidance.	V1.00.001 or higher
SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Adjust the parameter for backrest adjustment.	V1.00.001 or higher

SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher
SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher
SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterization of the function for moving the driver seat out of way when folding down the rear seat	V1.00.001 or higher
SLK (171)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Re-adjust the adjustment parameters.	V1.00.001 or higher
SLK (171)	ESA passenger-Electric seat adjustment passenger	ECU Information		V1.00.001 or higher
SLK (171)	ESA passenger-Electric seat adjustment passenger	Read Codes		V1.00.001 or higher

SLK (171)	ESA passenger- Electric seat adjustment passenger	Erase Codes		V1.00.001 or higher
SLK (171)	ESA passenger- Electric seat adjustment passenger	Live Data		V1.00.001 or higher
SLK (171)	ESA passenger- Electric seat adjustment passenger	Active Test		V1.00.001 or higher
SLK (171)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Parameterize collision avoidance.	V1.00.001 or higher
SLK (171)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Adjust the parameter for backrest adjustment.	V1.00.001 or higher
SLK (171)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
SLK (171)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher
SLK (171)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher
SLK (171)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
SLK (171)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher

SLK (171)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Parameterization of the function for moving the front passenger seat out of way when folding down the rear seat	V1.00.001 or higher
SLK (171)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Re-adjust the adjustment parameters.	V1.00.001 or higher
SLK (171)	HS-Seat heater	ECU Information		V1.00.001 or higher
SLK (171)	HS-Seat heater	Read Codes		V1.00.001 or higher
SLK (171)	HS-Seat heater	Erase Codes		V1.00.001 or higher
SLK (171)	HS-Seat heater	Live Data		V1.00.001 or higher
SLK (171)	HS-Seat heater	Active Test		V1.00.001 or higher
SLK (171)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	ECU Information		V1.00.001 or higher
SLK (171)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Read Codes		V1.00.001 or higher
SLK (171)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Erase Codes		V1.00.001 or higher

SLK (171)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Live Data		V1.00.001 or higher
SLK (171)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Active Test		V1.00.001 or higher
SLK (171)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
SLK (171)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
SLK (171)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Control unit adaptations	Break-in procedure after replacement of refrigerant compressor	V1.00.001 or higher
SLK (171)	C-AAC- Convenience automatic air conditioning/AAC- Automatic air conditioning/HEAT- Automatic heater	Control unit adaptations	Operational check	V1.00.001 or higher

SLK (171)	ME 9.7-Motor electronics 9.7	ECU Information		V1.00.001 or higher
SLK (171)	ME 9.7-Motor electronics 9.7	Read Codes		V1.00.001 or higher
SLK (171)	ME 9.7-Motor electronics 9.7	Erase Codes		V1.00.001 or higher
SLK (171)	ME 9.7-Motor electronics 9.7	Live Data		V1.00.001 or higher
SLK (171)	ME 9.7-Motor electronics 9.7	Active Test		V1.00.001 or higher
SLK (171)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Learning processes	V1.00.001 or higher
SLK (171)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Correction programming	V1.00.001 or higher
SLK (171)	ME 9.7-Motor electronics 9.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
SLK (171)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
SLK (171)	ME 9.7-Motor electronics 9.7	Special functions	Variant coding	V1.00.001 or higher
SLK (171)	ME-SFI 2.8-Motor electronics 2.8	ECU Information		V1.00.001 or higher
SLK (171)	ME-SFI 2.8-Motor electronics 2.8	Read Codes		V1.00.001 or higher
SLK (171)	ME-SFI 2.8-Motor electronics 2.8	Erase Codes		V1.00.001 or higher
SLK (171)	ME-SFI 2.8-Motor electronics 2.8	Live Data		V1.00.001 or higher
SLK (171)	ME-SFI 2.8-Motor electronics 2.8	Active Test		V1.00.001 or higher
SLK (171)	ME-SFI 2.8-Motor electronics 2.8	Special functions	Variant coding	V1.00.001 or higher
SLK (171)	ME-SFI 2.8-Motor electronics 2.8	Special functions	Learning processes	V1.00.001 or higher
SLK (171)	ME-SFI 2.8-Motor electronics 2.8	Special functions	Correction programming	V1.00.001 or higher
SLK (171)	ME-SFI 2.8-Motor electronics 2.8	Special functions	Fault path tests are carried out.	V1.00.001 or higher
SLK (171)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
SLK (171)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
SLK (171)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher

SLK (171)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher
SLK (171)	ETC-Electronic transmission control	Active Test		V1.00.001 or higher
SLK (171)	ETC-Electronic transmission control	Control unit adaptations	Definition	V1.00.001 or higher
SLK (171)	ETC-Electronic transmission control	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
SLK (171)	ETC-Electronic transmission control	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
SLK (171)	ETC-Electronic transmission control	Control unit adaptations	Performing adaptation	V1.00.001 or higher
SLK (171)	ETC-Electronic transmission control	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
SLK (171)	ETC-Electronic transmission control	Special functions	Warranty or goodwill processing	V1.00.001 or higher
SLK (171)	ETC-Electronic transmission control	Special functions	Diagnosis routines	V1.00.001 or higher
SLK (171)	ETC-Electronic transmission control	Special functions	Initial start-up	V1.00.001 or higher
SLK (171)	TPC-Tire pressure monitor	ECU Information		V1.00.001 or higher
SLK (171)	TPC-Tire pressure monitor	Read Codes		V1.00.001 or higher
SLK (171)	TPC-Tire pressure monitor	Erase Codes		V1.00.001 or higher
SLK (171)	TPC-Tire pressure monitor	Live Data		V1.00.001 or higher
SLK (171)	TPC-Tire pressure monitor	Active Test		V1.00.001 or higher
SLK (171)	TPC-Tire pressure monitor	Special functions	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher

SLK (171)	TPC-Tire pressure monitor	Special functions	Initial start-up with manual settings input for new control module- For example: The previous control module cannot be read any longer.	V1.00.001 or higher
SLK (171)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
SLK (171)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
SLK (171)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
SLK (171)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
SLK (171)	WSS-Weight sensing system	Initial startup	Initial start-up	V1.00.001 or higher
SLK (171)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
SLK (171)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
SLK (171)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
SLK (171)	PTS-Parktronic system	Live Data		V1.00.001 or higher
SLK (171)	PTS-Parktronic system	Active Test		V1.00.001 or higher
SLK (170)	ME-SFI-Motor electronics	ECU Information		V1.00.001 or higher
SLK (170)	ME-SFI-Motor electronics	Read Codes		V1.00.001 or higher
SLK (170)	ME-SFI-Motor electronics	Erase Codes		V1.00.001 or higher
SLK (170)	ME-SFI-Motor electronics	Live Data		V1.00.001 or higher
SLK (170)	ME-SFI-Motor electronics	Active Test		V1.00.001 or higher
SLK (170)	ME-SFI-Motor electronics	Control unit adaptations	Learning processes	V1.00.001 or higher
SLK (170)	ME-SFI-Motor electronics	Control unit adaptations	Correction programming	V1.00.001 or higher
SLK (170)	Transmission	ECU Information		V1.00.001 or higher
SLK (170)	Transmission	Read Codes		V1.00.001 or higher



SLK (170)	Transmission	Erase Codes		V1.00.001 or higher
SLK (170)	Transmission	Live Data		V1.00.001 or higher
SLK (170)	Transmission	Active Test		V1.00.001 or higher
SLK (170)	Transmission	Control unit adaptations	Definition	V1.00.001 or higher
SLK (170)	Transmission	Control unit adaptations	Display adaption data.	V1.00.001 or higher
SLK (170)	Transmission	Control unit adaptations	Limit values of adaptation with additional information	V1.00.001 or higher
SLK (170)	Transmission	Control unit adaptations	Resetting of the adaptation data	V1.00.001 or higher
SLK (170)	Transmission	Control unit adaptations	Performing adaptation when transmission is replaced or repaired	V1.00.001 or higher
SLK (170)	Transmission	Control unit adaptations	Performing adaptation in the event of shift quality complaints	V1.00.001 or higher
SLK (170)	Transmission	Control unit adaptations	Read the coding.	V1.00.001 or higher
SLK (170)	Transmission	Special functions	Transmission oil condition	V1.00.001 or higher
SLK (170)	Transmission	Special functions	Operational check	V1.00.001 or higher
SLK (170)	Transmission	Special functions	Emergency running	V1.00.001 or higher
SLK (170)	Transmission	Special functions	Diagnosis routines	V1.00.001 or higher
SLK (170)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
SLK (170)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
SLK (170)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
SLK (170)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
SLK (170)	ESM-Electronic selector module	Active Test		V1.00.001 or higher

SLK (170)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
SLK (170)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
SLK (170)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
SLK (170)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
SLK (170)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
SLK (170)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
SLK (170)	ESP-Electronic stability program	Control unit adaptations	Clear the zero point offset error of the component 'N49 (Steering Angle Sensor (SAS))'.	V1.00.001 or higher
SLK (170)	BAS-Brake assist	ECU Information		V1.00.001 or higher
SLK (170)	BAS-Brake assist	Read Codes		V1.00.001 or higher
SLK (170)	BAS-Brake assist	Erase Codes		V1.00.001 or higher
SLK (170)	BAS-Brake assist	Live Data		V1.00.001 or higher
SLK (170)	BAS-Brake assist	Active Test		V1.00.001 or higher
SLK (170)	VP-Vacuum pump brake booster	ECU Information		V1.00.001 or higher
SLK (170)	VP-Vacuum pump brake booster	Read Codes		V1.00.001 or higher
SLK (170)	VP-Vacuum pump brake booster	Erase Codes		V1.00.001 or higher
SLK (170)	VP-Vacuum pump brake booster	Live Data		V1.00.001 or higher
SLK (170)	VP-Vacuum pump brake booster	Active Test		V1.00.001 or higher
SLK (170)	AB-Airbag	ECU Information		V1.00.001 or higher
SLK (170)	AB-Airbag	Read Codes		V1.00.001 or higher

SLK (170)	AB-Airbag	Erase Codes		V1.00.001 or higher
SLK (170)	CCM-Multifunction control module	ECU Information		V1.00.001 or higher
SLK (170)	CCM-Multifunction control module	Read Codes		V1.00.001 or higher
SLK (170)	CCM-Multifunction control module	Erase Codes		V1.00.001 or higher
SLK (170)	CCM-Multifunction control module	Live Data		V1.00.001 or higher
SLK (170)	RFL-Radio frequency locking/electric central locking	ECU Information		V1.00.001 or higher
SLK (170)	RFL-Radio frequency locking/electric central locking	Read Codes		V1.00.001 or higher
SLK (170)	RFL-Radio frequency locking/electric central locking	Erase Codes		V1.00.001 or higher
SLK (170)	RFL-Radio frequency locking/electric central locking	Live Data		V1.00.001 or higher
SLK (170)	PSE-Pneumatic system equipment	ECU Information		V1.00.001 or higher
SLK (170)	PSE-Pneumatic system equipment	Read Codes		V1.00.001 or higher
SLK (170)	PSE-Pneumatic system equipment	Erase Codes		V1.00.001 or higher
SLK (170)	PSE-Pneumatic system equipment	Live Data		V1.00.001 or higher
SLK (170)	VR-Vario roof	ECU Information		V1.00.001 or higher
SLK (170)	VR-Vario roof	Read Codes		V1.00.001 or higher
SLK (170)	VR-Vario roof	Erase Codes		V1.00.001 or higher

SLK (170)	VR-Vario roof	Live Data		V1.00.001 or higher
SLK (170)	VR-Vario roof	Active Test		V1.00.001 or higher
SLK (170)	ATA-Anti-theft alarm system	ECU Information		V1.00.001 or higher
SLK (170)	ATA-Anti-theft alarm system	Read Codes		V1.00.001 or higher
SLK (170)	ATA-Anti-theft alarm system	Erase Codes		V1.00.001 or higher
SLK (170)	HRA-Headlamp range adjustment	ECU Information		V1.00.001 or higher
SLK (170)	HRA-Headlamp range adjustment	Read Codes		V1.00.001 or higher
SLK (170)	HRA-Headlamp range adjustment	Erase Codes		V1.00.001 or higher
SLK (170)	HRA-Headlamp range adjustment	Live Data		V1.00.001 or higher
SLK (170)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
SLK (170)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
SLK (170)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
SLK (170)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
SLK (170)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
SLK (170)	AUDIO	ECU Information		V1.00.001 or higher
SLK (170)	AUDIO	Read Codes		V1.00.001 or higher
SLK (170)	AUDIO	Erase Codes		V1.00.001 or higher

SLK (170)	AUDIO	Live Data		V1.00.001 or higher
SLK (170)	AUDIO	Active Test		V1.00.001 or higher
SLK (170)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	ECU Information		V1.00.001 or higher
SLK (170)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Read Codes		V1.00.001 or higher
SLK (170)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Erase Codes		V1.00.001 or higher
SLK (170)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Live Data		V1.00.001 or higher
SLK (170)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Active Test		V1.00.001 or higher
SLK (170)	VCS-Voice control system	ECU Information		V1.00.001 or higher
SLK (170)	VCS-Voice control system	Read Codes		V1.00.001 or higher
SLK (170)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
SLK (170)	CDC-CD changer	ECU Information		V1.00.001 or higher
SLK (170)	CDC-CD changer	Read Codes		V1.00.001 or higher
SLK (170)	CDC-CD changer	Erase Codes		V1.00.001 or higher
SLK (170)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	ECU Information		V1.00.001 or higher

SLK (170)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Read Codes		V1.00.001 or higher
SLK (170)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Erase Codes		V1.00.001 or higher
SLK (170)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Live Data		V1.00.001 or higher
SLK (170)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
SLK (170)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
SLK (170)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
SLK (170)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
SLK (170)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
SLK (170)	AAC-Automatic air conditioning	Special functions	Version coding	V1.00.001 or higher
SLK (170)	STH-Stationary heater	ECU Information		V1.00.001 or higher
SLK (170)	STH-Stationary heater	Read Codes		V1.00.001 or higher
SLK (170)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
SLK (170)	STH-Stationary heater	Live Data		V1.00.001 or higher
SLK (170)	STH-Stationary heater	Active Test		V1.00.001 or higher
SLK (170)	STH-Stationary heater	Control unit adaptations	CO2 setting	V1.00.001 or higher
SLK (170)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
SLK (170)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
SLK (170)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
SLK (170)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher

SLK (170)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
SLK (170)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
SLK (170)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
SLK (170)	ME2-SFI-Motor electronics 2	Special functions	Fault path tests are carried out.	V1.00.001 or higher
SLK (170)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
SLK (170)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
SLK (170)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
SLK (170)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
SLK (170)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
SLK (170)	ME2-SFI-Motor electronics 2	Control unit adaptations	Correction programming	V1.00.001 or higher
SLK (170)	ME2-SFI-Motor electronics 2	Control unit adaptations	Self-adaptation	V1.00.001 or higher
SLK (170)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
SLK (170)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
SLK (170)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
SLK (170)	ETC-Electronic transmission control	Active Test		V1.00.001 or higher
SLK (170)	ETC-Electronic transmission control	Control unit adaptations	•	V1.00.001 or higher
SLK (170)	Traction systems ABS,ASR,ETS,ESP	ECU Information		V1.00.001 or higher
SLK (170)	Traction systems ABS,ASR,ETS,ESP	Read Codes		V1.00.001 or higher
SLK (170)	Traction systems ABS,ASR,ETS,ESP	Erase Codes		V1.00.001 or higher
SLK (170)	Traction systems ABS,ASR,ETS,ESP	Live Data		V1.00.001 or higher
SLK (170)	Traction systems ABS,ASR,ETS,ESP	Active Test		V1.00.001 or higher

SLK (170)	BAS-Brake assist	ECU Information		V1.00.001 or higher
SLK (170)	BAS-Brake assist	Read Codes		V1.00.001 or higher
SLK (170)	BAS-Brake assist	Erase Codes		V1.00.001 or higher
SLK (170)	BAS-Brake assist	Live Data		V1.00.001 or higher
SLK (170)	BAS-Brake assist	Active Test		V1.00.001 or higher
SL (231)	ME - Motor electronics	ECU Information		V1.00.001 or higher
SL (231)	ME - Motor electronics	Read Codes		V1.00.001 or higher
SL (231)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
SL (231)	ME - Motor electronics	Live Data		V1.00.001 or higher
SL (231)	ME - Motor electronics	Active Test		V1.00.001 or higher
SL (231)	VGS - Fully integrated transmission control	ECU Information		V1.00.001 or higher
SL (231)	VGS - Fully integrated transmission control	Read Codes		V1.00.001 or higher
SL (231)	VGS - Fully integrated transmission control	Erase Codes		V1.00.001 or higher
SL (231)	VGS - Fully integrated transmission control	Live Data		V1.00.001 or higher
SL (231)	VGS - Fully integrated transmission control	Active Test		V1.00.001 or higher
SL (231)	ISM-Shift module	ECU Information		V1.00.001 or higher
SL (231)	ISM-Shift module	Read Codes		V1.00.001 or higher
SL (231)	ISM-Shift module	Erase Codes		V1.00.001 or higher
SL (231)	ISM-Shift module	Live Data		V1.00.001 or higher



SL (231)	ISM-Shift module	Active Test		V1.00.001 or higher
SL (231)	FSCU07 - Control unit Fuel pump	ECU Information		V1.00.001 or higher
SL (231)	FSCU07 - Control unit Fuel pump	Read Codes		V1.00.001 or higher
SL (231)	FSCU07 - Control unit Fuel pump	Erase Codes		V1.00.001 or higher
SL (231)	FSCU07 - Control unit Fuel pump	Live Data		V1.00.001 or higher
SL (231)	FSCU07 - Control unit Fuel pump	Active Test		V1.00.001 or higher
SL (231)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
SL (231)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
SL (231)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
SL (231)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
SL (231)	EFB-Electronic parking brake	ECU Information		V1.00.001 or higher
SL (231)	EFB-Electronic parking brake	Read Codes		V1.00.001 or higher
SL (231)	EFB-Electronic parking brake	Erase Codes		V1.00.001 or higher
SL (231)	EFB-Electronic parking brake	Live Data		V1.00.001 or higher
SL (231)	EFB-Electronic parking brake	Active Test		V1.00.001 or higher
SL (231)	EFB-Electronic parking brake	Control unit adaptations	Calibration of control unit 'N128 (Electric parking brake control unit)'	V1.00.001 or higher
SL (231)	AMG DRVU-AMG DRIVE UNIT	ECU Information		V1.00.001 or higher
SL (231)	AMG DRVU-AMG DRIVE UNIT	Read Codes		V1.00.001 or higher
SL (231)	AMG DRVU-AMG DRIVE UNIT	Erase Codes		V1.00.001 or higher
SL (231)	AMG DRVU-AMG DRIVE UNIT	Live Data		V1.00.001 or higher
SL (231)	AMG DRVU-AMG DRIVE UNIT	Active Test		V1.00.001 or higher
SL (231)	ADS - Adaptive damping system	ECU Information		V1.00.001 or higher

SL (231)	ADS - Adaptive damping system	Read Codes		V1.00.001 or higher
SL (231)	ADS - Adaptive damping system	Erase Codes		V1.00.001 or higher
SL (231)	ADS - Adaptive damping system	Live Data		V1.00.001 or higher
SL (231)	ADS - Adaptive damping system	Active Test		V1.00.001 or higher
SL (231)	ES-Electrical power steering	ECU Information		V1.00.001 or higher
SL (231)	ES-Electrical power steering	Read Codes		V1.00.001 or higher
SL (231)	ES-Electrical power steering	Erase Codes		V1.00.001 or higher
SL (231)	ES-Electrical power steering	Live Data		V1.00.001 or higher
SL (231)	FWGW-Chassis gateway	ECU Information		V1.00.001 or higher
SL (231)	FWGW-Chassis gateway	Read Codes		V1.00.001 or higher
SL (231)	FWGW-Chassis gateway	Erase Codes		V1.00.001 or higher
SL (231)	FWGW-Chassis gateway	Live Data		V1.00.001 or higher
SL (231)	SRS-Supplemental restraint system	ECU Information		V1.00.001 or higher
SL (231)	SRS-Supplemental restraint system	Read Codes		V1.00.001 or higher
SL (231)	SRS-Supplemental restraint system	Erase Codes		V1.00.001 or higher
SL (231)	SRS-Supplemental restraint system	Live Data		V1.00.001 or higher
SL (231)	CGW-Central gateway	ECU Information		V1.00.001 or higher
SL (231)	CGW-Central gateway	Read Codes		V1.00.001 or higher
SL (231)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
SL (231)	CGW-Central gateway	Live Data		V1.00.001 or higher
SL (231)	EZS-Electronic ignition lock	ECU Information		V1.00.001 or higher
SL (231)	EZS-Electronic ignition lock	Read Codes		V1.00.001 or higher

SL (231)	EZS-Electronic ignition lock	Erase Codes		V1.00.001 or higher
SL (231)	EZS-Electronic ignition lock	Live Data		V1.00.001 or higher
SL (231)	SCM-Steering column module	ECU Information		V1.00.001 or higher
SL (231)	SCM-Steering column module	Read Codes		V1.00.001 or higher
SL (231)	SCM-Steering column module	Erase Codes		V1.00.001 or higher
SL (231)	SCM-Steering column module	Live Data		V1.00.001 or higher
SL (231)	SCM-Steering column module	Active Test		V1.00.001 or higher
SL (231)	MSC-MAGIC SKY CONTROL	ECU Information		V1.00.001 or higher
SL (231)	MSC-MAGIC SKY CONTROL	Read Codes		V1.00.001 or higher
SL (231)	MSC-MAGIC SKY CONTROL	Erase Codes		V1.00.001 or higher
SL (231)	MSC-MAGIC SKY CONTROL	Live Data		V1.00.001 or higher
SL (231)	KG - KEYLESS GO	ECU Information		V1.00.001 or higher
SL (231)	KG - KEYLESS GO	Read Codes		V1.00.001 or higher
SL (231)	KG - KEYLESS GO	Erase Codes		V1.00.001 or higher
SL (231)	KG - KEYLESS GO	Live Data		V1.00.001 or higher
SL (231)	KG - KEYLESS GO	Active Test		V1.00.001 or higher
SL (231)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
SL (231)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
SL (231)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher

SL (231)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
SL (231)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
SL (231)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
SL (231)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
SL (231)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
SL (231)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher
SL (231)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
SL (231)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
SL (231)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher

SL (231)	Driver-side SAM - Front signal acquisition and actuation module	Active Test		V1.00.001 or higher
SL (231)	Rear SAM - Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
SL (231)	Rear SAM - Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
SL (231)	Rear SAM - Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
SL (231)	Rear SAM - Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
SL (231)	Rear SAM - Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
SL (231)	VDS-Vario roof control	ECU Information		V1.00.001 or higher
SL (231)	VDS-Vario roof control	Read Codes		V1.00.001 or higher
SL (231)	VDS-Vario roof control	Erase Codes		V1.00.001 or higher
SL (231)	VDS-Vario roof control	Live Data		V1.00.001 or higher
SL (231)	AIRSCARF-AIRSCARF system	ECU Information		V1.00.001 or higher
SL (231)	AIRSCARF-AIRSCARF system	Read Codes		V1.00.001 or higher
SL (231)	AIRSCARF-AIRSCARF system	Erase Codes		V1.00.001 or higher

SL (231)	AIRSCARF- AIRSCARF system	Live Data		V1.00.001 or higher
SL (231)	AIRSCARF- AIRSCARF system	Active Test		V1.00.001 or higher
SL (231)	SG-SW-Control unit 'Headlamp'	ECU Information		V1.00.001 or higher
SL (231)	SG-SW-Control unit 'Headlamp'	Read Codes		V1.00.001 or higher
SL (231)	SG-SW-Control unit 'Headlamp'	Erase Codes		V1.00.001 or higher
SL (231)	SG-SW-Control unit 'Headlamp'	Live Data		V1.00.001 or higher
SL (231)	SG-SW-Control unit 'Headlamp'	Active Test		V1.00.001 or higher
SL (231)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
SL (231)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
SL (231)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
SL (231)	IC - Instrument cluster	Live Data		V1.00.001 or higher
SL (231)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
SL (231)	IC - Instrument cluster	Active Test		V1.00.001 or higher
SL (231)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsy stem	ECU Information		V1.00.001 or higher
SL (231)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsy stem	Read Codes		V1.00.001 or higher
SL (231)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsy stem	Erase Codes		V1.00.001 or higher

SL (231)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
SL (231)	AMG PM-AMG Performance Media	ECU Information		V1.00.001 or higher
SL (231)	AMG PM-AMG Performance Media	Read Codes		V1.00.001 or higher
SL (231)	AMG PM-AMG Performance Media	Erase Codes		V1.00.001 or higher
SL (231)	AMG PM-AMG Performance Media	Live Data		V1.00.001 or higher
SL (231)	Audio-Audio or COMAND	ECU Information		V1.00.001 or higher
SL (231)	Audio-Audio or COMAND	Read Codes		V1.00.001 or higher
SL (231)	Audio-Audio or COMAND	Erase Codes		V1.00.001 or higher
SL (231)	Audio-Audio or COMAND	Live Data		V1.00.001 or higher
SL (231)	SOUND - Sound system	ECU Information		V1.00.001 or higher
SL (231)	SOUND - Sound system	Read Codes		V1.00.001 or higher
SL (231)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
SL (231)	SOUND - Sound system	Live Data		V1.00.001 or higher
SL (231)	TV - TV tuner	ECU Information		V1.00.001 or higher
SL (231)	TV - TV tuner	Read Codes		V1.00.001 or higher
SL (231)	TV - TV tuner	Erase Codes		V1.00.001 or higher
SL (231)	TV - TV tuner	Live Data		V1.00.001 or higher
SL (231)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
SL (231)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher

SL (231)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
SL (231)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
SL (231)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
SL (231)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
SL (231)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
SL (231)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
SL (231)	Drive Kit Plus - Drive kit for iPhone	ECU Information		V1.00.001 or higher
SL (231)	Drive Kit Plus - Drive kit for iPhone	Read Codes		V1.00.001 or higher
SL (231)	Drive Kit Plus - Drive kit for iPhone	Erase Codes		V1.00.001 or higher
SL (231)	Drive Kit Plus - Drive kit for iPhone	Live Data		V1.00.001 or higher
SL (231)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
SL (231)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
SL (231)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
SL (231)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
SL (231)	MIF - Media interface	ECU Information		V1.00.001 or higher
SL (231)	MIF - Media interface	Read Codes		V1.00.001 or higher
SL (231)	MIF - Media interface	Erase Codes		V1.00.001 or higher



SL (231)	MIF - Media interface	Live Data		V1.00.001 or higher
SL (231)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
SL (231)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
SL (231)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
SL (231)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
SL (231)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher
SL (231)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
SL (231)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
SL (231)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
SL (231)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
SL (231)	PTS-PARKTRONIC	ECU Information		V1.00.001 or higher
SL (231)	PTS-PARKTRONIC	Read Codes		V1.00.001 or higher
SL (231)	PTS-PARKTRONIC	Erase Codes		V1.00.001 or higher
SL (231)	PTS-PARKTRONIC	Live Data		V1.00.001 or higher
SL (231)	PTS-PARKTRONIC	Active Test		V1.00.001 or higher
SL (231)	DSI-DIRECT SELECT interface	ECU Information		V1.00.001 or higher
SL (231)	DSI-DIRECT SELECT interface	Read Codes		V1.00.001 or higher
SL (231)	DSI-DIRECT SELECT interface	Erase Codes		V1.00.001 or higher
SL (231)	DSI-DIRECT SELECT interface	Live Data		V1.00.001 or higher

SL (231)	PPAMKS - Pneumatic pump for multicontour seat	ECU Information		V1.00.001 or higher
SL (231)	PPAMKS - Pneumatic pump for multicontour seat	Read Codes		V1.00.001 or higher
SL (231)	PPAMKS - Pneumatic pump for multicontour seat	Erase Codes		V1.00.001 or higher
SL (231)	PPAMKS - Pneumatic pump for multicontour seat	Live Data		V1.00.001 or higher
SL (231)	PPAMKS - Pneumatic pump for multicontour seat	Active Test		V1.00.001 or higher
SL (231)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	ECU Information		V1.00.001 or higher
SL (231)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Read Codes		V1.00.001 or higher
SL (231)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Erase Codes		V1.00.001 or higher
SL (231)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Live Data		V1.00.001 or higher
SL (231)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	ECU Information		V1.00.001 or higher

SL (231)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Read Codes		V1.00.001 or higher
SL (231)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Erase Codes		V1.00.001 or higher
SL (231)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Live Data		V1.00.001 or higher
SL (231)	DCU-LF-Left front door	ECU Information		V1.00.001 or higher
SL (231)	DCU-LF-Left front door	Read Codes		V1.00.001 or higher
SL (231)	DCU-LF-Left front door	Erase Codes		V1.00.001 or higher
SL (231)	DCU-LF-Left front door	Live Data		V1.00.001 or higher
SL (231)	DCU-RF-Right front door	ECU Information		V1.00.001 or higher
SL (231)	DCU-RF-Right front door	Read Codes		V1.00.001 or higher
SL (231)	DCU-RF-Right front door	Erase Codes		V1.00.001 or higher
SL (231)	DCU-RF-Right front door	Live Data		V1.00.001 or higher
SL (231)	AAC-Air conditioning	ECU Information		V1.00.001 or higher
SL (231)	AAC-Air conditioning	Read Codes		V1.00.001 or higher
SL (231)	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
SL (231)	AAC-Air conditioning	Live Data		V1.00.001 or higher
SL (231)	TPM-Tire pressure monitor	ECU Information		V1.00.001 or higher

SL (231)	TPM-Tire pressure monitor	Read Codes		V1.00.001 or higher
SL (231)	TPM-Tire pressure monitor	Erase Codes		V1.00.001 or higher
SL (231)	TPM-Tire pressure monitor	Live Data		V1.00.001 or higher
SL (231)	TPM-Tire pressure monitor	Active Test		V1.00.001 or higher
SL (231)	TPM-Tire pressure monitor	Control unit adaptations	Teach-in processes	V1.00.001 or higher
SL (231)	SGR - Radar sensors control unit	ECU Information		V1.00.001 or higher
SL (231)	SGR - Radar sensors control unit	Read Codes		V1.00.001 or higher
SL (231)	SGR - Radar sensors control unit	Erase Codes		V1.00.001 or higher
SL (231)	SGR - Radar sensors control unit	Live Data		V1.00.001 or higher
SL (231)	SGR - Radar sensors control unit	Active Test		V1.00.001 or higher
SL (231)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
SL (231)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
SL (231)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
SL (231)	DTR - DISTRONIC	Live Data		V1.00.001 or higher
SL (231)	NSA-Night View Assist	ECU Information		V1.00.001 or higher
SL (231)	NSA-Night View Assist	Read Codes		V1.00.001 or higher
SL (231)	NSA-Night View Assist	Erase Codes		V1.00.001 or higher
SL (231)	NSA-Night View Assist	Live Data		V1.00.001 or higher
SL (231)	RFK - Backup camera	ECU Information		V1.00.001 or higher
SL (231)	RFK - Backup camera	Read Codes		V1.00.001 or higher
SL (231)	RFK - Backup camera	Erase Codes		V1.00.001 or higher

SL (231)	RFK - Backup camera	Live Data		V1.00.001 or higher
SL (230)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
SL (230)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
SL (230)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
SL (230)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
SL (230)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
SL (230)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
SL (230)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
SL (230)	ME2-SFI-Motor electronics 2	Special functions	Fault path tests are carried out.	V1.00.001 or higher
SL (230)	Transmission	ECU Information		V1.00.001 or higher
SL (230)	Transmission	Read Codes		V1.00.001 or higher
SL (230)	Transmission	Erase Codes		V1.00.001 or higher
SL (230)	Transmission	Live Data		V1.00.001 or higher
SL (230)	Transmission	Active Test		V1.00.001 or higher
SL (230)	Transmission	Control unit adaptations	Definition	V1.00.001 or higher
SL (230)	Transmission	Control unit adaptations	Assignment of the hydraulic shift elements	V1.00.001 or higher
SL (230)	Transmission	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
SL (230)	Transmission	Control unit adaptations	Important information on the combination possibilities for adaptation end stop values	V1.00.001 or higher
SL (230)	Transmission	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
SL (230)	Transmission	Control unit adaptations	Performing adaptation	V1.00.001 or higher

SL (230)	Transmission	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
SL (230)	Transmission	Special functions	Warranty or goodwill processing	V1.00.001 or higher
SL (230)	Transmission	Special functions	Diagnosis routines	V1.00.001 or higher
SL (230)	Transmission	Initial startup	Initial start-up with manual settings input for new control module	V1.00.001 or higher
SL (230)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
SL (230)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
SL (230)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
SL (230)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
SL (230)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
SL (230)	ESM-Electronic selector module	Control unit adaptations	Detach the transport protection of control module 'N15/5 (Electronic Selector Module (ESM/EWM))', personalize or activate the control module.	V1.00.001 or higher
SL (230)	DTR-Distronic	ECU Information		V1.00.001 or higher
SL (230)	DTR-Distronic	Read Codes		V1.00.001 or higher
SL (230)	DTR-Distronic	Erase Codes		V1.00.001 or higher
SL (230)	DTR-Distronic	Live Data		V1.00.001 or higher
SL (230)	DTR-Distronic	Control unit adaptations	•	V1.00.001 or higher
SL (230)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher

SL (230)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
SL (230)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
SL (230)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
SL (230)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
SL (230)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
SL (230)	SBC-Sensotronic Brake Control	ECU Information		V1.00.001 or higher
SL (230)	SBC-Sensotronic Brake Control	Read Codes		V1.00.001 or higher
SL (230)	SBC-Sensotronic Brake Control	Erase Codes		V1.00.001 or higher
SL (230)	SBC-Sensotronic Brake Control	Live Data		V1.00.001 or higher
SL (230)	SBC-Sensotronic Brake Control	Special functions	•	V1.00.001 or higher
SL (230)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
SL (230)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
SL (230)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
SL (230)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
SL (230)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
SL (230)	TPM - Tire pressure monitor	Control unit adaptations	•	V1.00.001 or higher
SL (230)	ABC-ABC active body control	ECU Information		V1.00.001 or higher
SL (230)	ABC-ABC active body control	Read Codes		V1.00.001 or higher
SL (230)	ABC-ABC active body control	Erase Codes		V1.00.001 or higher
SL (230)	ABC-ABC active body control	Live Data		V1.00.001 or higher
SL (230)	ABC-ABC active body control	Active Test		V1.00.001 or higher
SL (230)	ABC-ABC active body control	Special functions	Initial start-up	V1.00.001 or higher
SL (230)	ABC-ABC active body control	Special functions	Control module adaptations	V1.00.001 or higher
SL (230)	AB-Airbag	ECU Information		V1.00.001 or higher

SL (230)	AB-Airbag	Read Codes		V1.00.001 or higher
SL (230)	AB-Airbag	Erase Codes		V1.00.001 or higher
SL (230)	AB-Airbag	Live Data		V1.00.001 or higher
SL (230)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
SL (230)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
SL (230)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track with the workshop key.	V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	Control unit adaptations	Program the replacement keys.	V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	Control unit adaptations	Key assignment or key track assignment to a memory block number	V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	Control unit adaptations	Activate the Electronic Ignition Switch (EIS/EZS).	V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N26/5 (Electric steering lock control module)'. '.	V1.00.001 or higher



SL (230)	EZS-Electronic ignition switch	Control unit adaptations	Writing of the VIN	V1.00.001 or higher
SL (230)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
SL (230)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
SL (230)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
SL (230)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
SL (230)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
SL (230)	LCP-Lower control panel	ECU Information		V1.00.001 or higher
SL (230)	LCP-Lower control panel	Read Codes		V1.00.001 or higher
SL (230)	LCP-Lower control panel	Erase Codes		V1.00.001 or higher
SL (230)	LCP-Lower control panel	Live Data		V1.00.001 or higher
SL (230)	LCP-Lower control panel	Active Test		V1.00.001 or higher
SL (230)	Pass-side SAM-Passenger-side signal acquisition and actuation module	ECU Information		V1.00.001 or higher
SL (230)	Pass-side SAM-Passenger-side signal acquisition and actuation module	Read Codes		V1.00.001 or higher
SL (230)	Pass-side SAM-Passenger-side signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
SL (230)	Pass-side SAM-Passenger-side signal acquisition and actuation module	Live Data		V1.00.001 or higher

SL (230)	Pass-side SAM- Passenger-side signal acquisition and actuation module	Active Test		V1.00.001 or higher
SL (230)	Dr-side SAM- Driver signal acquisition and actuation module	ECU Information		V1.00.001 or higher
SL (230)	Dr-side SAM- Driver signal acquisition and actuation module	Read Codes		V1.00.001 or higher
SL (230)	Dr-side SAM- Driver signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
SL (230)	Dr-side SAM- Driver signal acquisition and actuation module	Live Data		V1.00.001 or higher
SL (230)	Dr-side SAM- Driver signal acquisition and actuation module	Active Test		V1.00.001 or higher
SL (230)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
SL (230)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
SL (230)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher

SL (230)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
SL (230)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
SL (230)	BNS-Vehicle power supply control module	ECU Information		V1.00.001 or higher
SL (230)	BNS-Vehicle power supply control module	Read Codes		V1.00.001 or higher
SL (230)	BNS-Vehicle power supply control module	Erase Codes		V1.00.001 or higher
SL (230)	BNS-Vehicle power supply control module	Live Data		V1.00.001 or higher
SL (230)	RVC-Rollover bar/vario roof control module	ECU Information		V1.00.001 or higher
SL (230)	RVC-Rollover bar/vario roof control module	Read Codes		V1.00.001 or higher
SL (230)	RVC-Rollover bar/vario roof control module	Erase Codes		V1.00.001 or higher
SL (230)	RVC-Rollover bar/vario roof control module	Live Data		V1.00.001 or higher
SL (230)	PSE-Pneumatic system equipment	ECU Information		V1.00.001 or higher
SL (230)	PSE-Pneumatic system equipment	Read Codes		V1.00.001 or higher
SL (230)	PSE-Pneumatic system equipment	Erase Codes		V1.00.001 or higher
SL (230)	PSE-Pneumatic system equipment	Live Data		V1.00.001 or higher

SL (230)	PSE-Pneumatic system equipment	Active Test		V1.00.001 or higher
SL (230)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
SL (230)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
SL (230)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
SL (230)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
SL (230)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
SL (230)	KG-KEYLESS GO	Control unit adaptations	Assign the transmitter card to key track.	V1.00.001 or higher
SL (230)	KG-KEYLESS GO	Control unit adaptations	Assign the Keyless Go (KG) key to key track.	V1.00.001 or higher
SL (230)	HRA-FL-Front left headlamp range control	ECU Information		V1.00.001 or higher
SL (230)	HRA-FL-Front left headlamp range control	Read Codes		V1.00.001 or higher
SL (230)	HRA-FL-Front left headlamp range control	Erase Codes		V1.00.001 or higher
SL (230)	HRA-FL-Front left headlamp range control	Live Data		V1.00.001 or higher
SL (230)	HRA-FL-Front left headlamp range control	Active Test		V1.00.001 or higher
SL (230)	HRA-FL-Front left headlamp range control	Control unit adaptations	Zero position adjustment	V1.00.001 or higher
SL (230)	HRA-FR-Front right headlamp range control	ECU Information		V1.00.001 or higher
SL (230)	HRA-FR-Front right headlamp range control	Read Codes		V1.00.001 or higher
SL (230)	HRA-FR-Front right headlamp range control	Erase Codes		V1.00.001 or higher

SL (230)	HRA-FR-Front right headlamp range control	Live Data		V1.00.001 or higher
SL (230)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
SL (230)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
SL (230)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
SL (230)	ICM-Instrument cluster with maintenance interval display	Live Data		V1.00.001 or higher
SL (230)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
SL (230)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
SL (230)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
SL (230)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
SL (230)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
SL (230)	PTS-Parktronic system	Live Data		V1.00.001 or higher
SL (230)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
SL (230)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
SL (230)	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher
SL (230)	SCM [MRM]-Steering column module	Live Data		V1.00.001 or higher

SL (230)	SCM [MRM]- Steering column module	Active Test		V1.00.001 or higher
SL (230)	TV-TV tuner	ECU Information		V1.00.001 or higher
SL (230)	TV-TV tuner	Read Codes		V1.00.001 or higher
SL (230)	TV-TV tuner	Erase Codes		V1.00.001 or higher
SL (230)	TV-TV tuner	Live Data		V1.00.001 or higher
SL (230)	TV-TV tuner	Active Test		V1.00.001 or higher
SL (230)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	ECU Information		V1.00.001 or higher
SL (230)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Read Codes		V1.00.001 or higher
SL (230)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Erase Codes		V1.00.001 or higher
SL (230)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Live Data		V1.00.001 or higher
SL (230)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Active Test		V1.00.001 or higher
SL (230)	D2B-COMAND, MCS or AUDIO	ECU Information		V1.00.001 or higher
SL (230)	D2B-COMAND, MCS or AUDIO	Read Codes		V1.00.001 or higher
SL (230)	D2B-COMAND, MCS or AUDIO	Erase Codes		V1.00.001 or higher
SL (230)	D2B-COMAND, MCS or AUDIO	Live Data		V1.00.001 or higher
SL (230)	D2B-COMAND, MCS or AUDIO	Active Test		V1.00.001 or higher

SL (230)	CDC-CD changer	ECU Information		V1.00.001 or higher
SL (230)	CDC-CD changer	Read Codes		V1.00.001 or higher
SL (230)	CDC-CD changer	Erase Codes		V1.00.001 or higher
SL (230)	VCS-Voice control system	ECU Information		V1.00.001 or higher
SL (230)	VCS-Voice control system	Read Codes		V1.00.001 or higher
SL (230)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
SL (230)	SOUND- Sound system	ECU Information		V1.00.001 or higher
SL (230)	SOUND- Sound system	Read Codes		V1.00.001 or higher
SL (230)	SOUND- Sound system	Erase Codes		V1.00.001 or higher
SL (230)	SOUND- Sound system	Live Data		V1.00.001 or higher
SL (230)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
SL (230)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
SL (230)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
SL (230)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	ECU Information		V1.00.001 or higher
SL (230)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Read Codes		V1.00.001 or higher
SL (230)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Erase Codes		V1.00.001 or higher
SL (230)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Live Data		V1.00.001 or higher

SL (230)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Active Test		V1.00.001 or higher
SL (230)	DCM-L-Door control module left	ECU Information		V1.00.001 or higher
SL (230)	DCM-L-Door control module left	Read Codes		V1.00.001 or higher
SL (230)	DCM-L-Door control module left	Erase Codes		V1.00.001 or higher
SL (230)	DCM-L-Door control module left	Live Data		V1.00.001 or higher
SL (230)	DCM-R-Door control module right	ECU Information		V1.00.001 or higher
SL (230)	DCM-R-Door control module right	Read Codes		V1.00.001 or higher
SL (230)	DCM-R-Door control module right	Erase Codes		V1.00.001 or higher
SL (230)	DCM-R-Door control module right	Live Data		V1.00.001 or higher
SL (230)	ESA-FL-Electric seat adjustment front left	ECU Information		V1.00.001 or higher
SL (230)	ESA-FL-Electric seat adjustment front left	Read Codes		V1.00.001 or higher
SL (230)	ESA-FL-Electric seat adjustment front left	Erase Codes		V1.00.001 or higher
SL (230)	ESA-FL-Electric seat adjustment front left	Live Data		V1.00.001 or higher
SL (230)	ESA-FL-Electric seat adjustment front left	Active Test		V1.00.001 or higher
SL (230)	ESA-FR-Electric seat adjustment front right	ECU Information		V1.00.001 or higher



SL (230)	ESA-FR-Electric seat adjustment front right	Read Codes		V1.00.001 or higher
SL (230)	ESA-FR-Electric seat adjustment front right	Erase Codes		V1.00.001 or higher
SL (230)	ESA-FR-Electric seat adjustment front right	Live Data		V1.00.001 or higher
SL (230)	ESA-FR-Electric seat adjustment front right	Active Test		V1.00.001 or higher
SL (230)	OSB-FL-Multicontour backrest front left	ECU Information		V1.00.001 or higher
SL (230)	OSB-FL-Multicontour backrest front left	Read Codes		V1.00.001 or higher
SL (230)	OSB-FL-Multicontour backrest front left	Erase Codes		V1.00.001 or higher
SL (230)	OSB-FL-Multicontour backrest front left	Live Data		V1.00.001 or higher
SL (230)	OSB-FR-Multicontour backrest front right	ECU Information		V1.00.001 or higher
SL (230)	OSB-FR-Multicontour backrest front right	Read Codes		V1.00.001 or higher
SL (230)	OSB-FR-Multicontour backrest front right	Erase Codes		V1.00.001 or higher
SL (230)	OSB-FR-Multicontour backrest front right	Live Data		V1.00.001 or higher
SL (230)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
SL (230)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher

SL (230)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
SL (230)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
SL (230)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
SL (230)	AAC-Automatic air conditioning	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
SL (230)	AAC-Automatic air conditioning	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
SL (230)	AAC-Automatic air conditioning	Control unit adaptations	Teach-in of the rotary potentiometer for center nozzle and side outlets	V1.00.001 or higher
SL (230)	STH-Stationary heater	ECU Information		V1.00.001 or higher
SL (230)	STH-Stationary heater	Read Codes		V1.00.001 or higher
SL (230)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
SL (230)	STH-Stationary heater	Live Data		V1.00.001 or higher
SL (230)	HSW-Heated steering wheel	ECU Information		V1.00.001 or higher
SL (230)	HSW-Heated steering wheel	Read Codes		V1.00.001 or higher
SL (230)	HSW-Heated steering wheel	Erase Codes		V1.00.001 or higher
SL (230)	HSW-Heated steering wheel	Live Data		V1.00.001 or higher
SL (230)	HSW-Heated steering wheel	Active Test		V1.00.001 or higher
SL (230)	ME 9.7-Motor electronics 9.7	ECU Information		V1.00.001 or higher
SL (230)	ME 9.7-Motor electronics 9.7	Read Codes		V1.00.001 or higher
SL (230)	ME 9.7-Motor electronics 9.7	Erase Codes		V1.00.001 or higher
SL (230)	ME 9.7-Motor electronics 9.7	Live Data		V1.00.001 or higher

SL (230)	ME 9.7-Motor electronics 9.7	Active Test		V1.00.001 or higher
SL (230)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Learning processes	V1.00.001 or higher
SL (230)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Correction programming	V1.00.001 or higher
SL (230)	ME 9.7-Motor electronics 9.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
SL (230)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
SL (230)	ME 9.7-Motor electronics 9.7	Special functions	Variant coding	V1.00.001 or higher
SL (230)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
SL (230)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
SL (230)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
SL (230)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher
SL (230)	ETC-Electronic transmission control	Active Test		V1.00.001 or higher
SL (230)	ETC-Electronic transmission control	Control unit adaptations	Definition	V1.00.001 or higher
SL (230)	ETC-Electronic transmission control	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
SL (230)	ETC-Electronic transmission control	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
SL (230)	ETC-Electronic transmission control	Control unit adaptations	Performing adaptation	V1.00.001 or higher
SL (230)	ETC-Electronic transmission control	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
SL (230)	ETC-Electronic transmission control	Special functions	Warranty or goodwill processing	V1.00.001 or higher

SL (230)	ETC-Electronic transmission control	Special functions	Diagnosis routines	V1.00.001 or higher
SL (230)	ETC-Electronic transmission control	Special functions	Initial start-up	V1.00.001 or higher
SL (230)	DTR-Distronic	ECU Information		V1.00.001 or higher
SL (230)	DTR-Distronic	Read Codes		V1.00.001 or higher
SL (230)	DTR-Distronic	Erase Codes		V1.00.001 or higher
SL (230)	DTR-Distronic	Live Data		V1.00.001 or higher
SL (230)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
SL (230)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
SL (230)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
SL (230)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
SL (230)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
SL (230)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
SL (230)	SBC-Sensotronic Brake Control	ECU Information		V1.00.001 or higher
SL (230)	SBC-Sensotronic Brake Control	Read Codes		V1.00.001 or higher
SL (230)	SBC-Sensotronic Brake Control	Erase Codes		V1.00.001 or higher
SL (230)	SBC-Sensotronic Brake Control	Live Data		V1.00.001 or higher
SL (230)	SBC-Sensotronic Brake Control	Special functions	•	V1.00.001 or higher
SL (230)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
SL (230)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
SL (230)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
SL (230)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
SL (230)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
SL (230)	ABC-ABC active body control	ECU Information		V1.00.001 or higher

SL (230)	ABC-ABC active body control	Read Codes		V1.00.001 or higher
SL (230)	ABC-ABC active body control	Erase Codes		V1.00.001 or higher
SL (230)	ABC-ABC active body control	Live Data		V1.00.001 or higher
SL (230)	ABC-ABC active body control	Active Test		V1.00.001 or higher
SL (230)	ABC-ABC active body control	Special functions	Initial start-up	V1.00.001 or higher
SL (230)	CGW-Central gateway	ECU Information		V1.00.001 or higher
SL (230)	CGW-Central gateway	Read Codes		V1.00.001 or higher
SL (230)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
SL (230)	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher
SL (230)	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher
SL (230)	CGW-Central gateway	Special functions	All codes	V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
SL (230)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
SL (230)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
SL (230)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
SL (230)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
SL (230)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
SL (230)	WSS-Weight sensing system	Initial startup	Initial start-up	V1.00.001 or higher
SL (230)	RVC-Rollover bar/vario roof control module	ECU Information		V1.00.001 or higher
SL (230)	RVC-Rollover bar/vario roof control module	Read Codes		V1.00.001 or higher

SL (230)	RVC-Rollover bar/vario roof control module	Erase Codes		V1.00.001 or higher
SL (230)	RVC-Rollover bar/vario roof control module	Live Data		V1.00.001 or higher
SL (230)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
SL (230)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
SL (230)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
SL (230)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
SL (230)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
SL (230)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
SL (230)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
SL (230)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher
SL (230)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher
SL (230)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
SL (230)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher

SL (230)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher
SL (230)	CTEL-Control unit Telecommunication for telematics services	ECU Information		V1.00.001 or higher
SL (230)	CTEL-Control unit Telecommunication for telematics services	Read Codes		V1.00.001 or higher
SL (230)	CTEL-Control unit Telecommunication for telematics services	Erase Codes		V1.00.001 or higher
SL (230)	CTEL-Control unit Telecommunication for telematics services	Live Data		V1.00.001 or higher
SL (230)	AUDIO	ECU Information		V1.00.001 or higher
SL (230)	AUDIO	Read Codes		V1.00.001 or higher
SL (230)	AUDIO	Erase Codes		V1.00.001 or higher
SL (230)	AUDIO	Live Data		V1.00.001 or higher
SL (230)	AUDIO	Active Test		V1.00.001 or higher
SL (230)	AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
SL (230)	NAVI-Navigation system	ECU Information		V1.00.001 or higher
SL (230)	NAVI-Navigation system	Read Codes		V1.00.001 or higher
SL (230)	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
SL (230)	NAVI-Navigation system	Live Data		V1.00.001 or higher

SL (230)	NAVI-Navigation system	Active Test		V1.00.001 or higher
SL (230)	CDC-CD changer	ECU Information		V1.00.001 or higher
SL (230)	CDC-CD changer	Read Codes		V1.00.001 or higher
SL (230)	CDC-CD changer	Erase Codes		V1.00.001 or higher
SL (230)	CDC-CD changer	Live Data		V1.00.001 or higher
SL (230)	CDC-CD changer	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
SL (230)	VCS-Voice control system	ECU Information		V1.00.001 or higher
SL (230)	VCS-Voice control system	Read Codes		V1.00.001 or higher
SL (230)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
SL (230)	VCS-Voice control system	Active Test		V1.00.001 or higher
SL (230)	SOUND-Bose sound system	ECU Information		V1.00.001 or higher
SL (230)	SOUND-Bose sound system	Read Codes		V1.00.001 or higher
SL (230)	SOUND-Bose sound system	Erase Codes		V1.00.001 or higher
SL (230)	SOUND-Bose sound system	Live Data		V1.00.001 or higher
SL (230)	TV-TV tuner	ECU Information		V1.00.001 or higher
SL (230)	TV-TV tuner	Read Codes		V1.00.001 or higher
SL (230)	TV-TV tuner	Erase Codes		V1.00.001 or higher
SL (230)	TV-TV tuner	Live Data		V1.00.001 or higher
SL (230)	TV-TV tuner	Active Test		V1.00.001 or higher
SL (230)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
SL (230)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
SL (230)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
SL (230)	SDAR-Satellite radio	Live Data		V1.00.001 or higher
SL (230)	TELE AID-Control unit	ECU Information		V1.00.001 or higher



SL (230)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
SL (230)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
SL (230)	TELE AID-Control unit	Live Data		V1.00.001 or higher
SL (230)	TELE AID-Telematic services Emergency call	ECU Information		V1.00.001 or higher
SL (230)	TELE AID-Telematic services Emergency call	Read Codes		V1.00.001 or higher
SL (230)	TELE AID-Telematic services Emergency call	Erase Codes		V1.00.001 or higher
SL (230)	TELE AID-Telematic services Emergency call	Live Data		V1.00.001 or higher
SL (230)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
SL (230)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
SL (230)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher

SL (230)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
SL (230)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher
SL (230)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
SL (230)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
SL (230)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher
SL (230)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher
SL (230)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
SL (230)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
SL (230)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher

SL (230)	ME-SFI 2.7.1- Motor electronics 2.7.1	ECU Information		V1.00.001 or higher
SL (230)	ME-SFI 2.7.1- Motor electronics 2.7.1	Read Codes		V1.00.001 or higher
SL (230)	ME-SFI 2.7.1- Motor electronics 2.7.1	Erase Codes		V1.00.001 or higher
SL (230)	ME-SFI 2.7.1- Motor electronics 2.7.1	Live Data		V1.00.001 or higher
SL (230)	ME-SFI 2.7.1- Motor electronics 2.7.1	Active Test		V1.00.001 or higher
SL (230)	ME-SFI 2.7.1- Motor electronics 2.7.1	Control unit adaptations	Learning processes	V1.00.001 or higher
SL (230)	ME-SFI 2.7.1- Motor electronics 2.7.1	Control unit adaptations	Correction programming	V1.00.001 or higher
SL (230)	ME-SFI 2.7.1- Motor electronics 2.7.1	Special functions	Variant coding	V1.00.001 or higher
SL (230)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
SL (230)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
SL (230)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
SL (230)	ICM-Instrument cluster with maintenance interval display	Live Data		V1.00.001 or higher
SL (230)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
SL (230)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher

SL (230)	ME 2.7.2-Motor electronics 2.7.2	ECU Information		V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Read Codes		V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Erase Codes		V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Live Data		V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Active Test		V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Variant coding	V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Learning process	V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Correction programming	V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Emissions inspection (Not valid for USA)	V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Special functions	OBD I/M check (Valid for USA)	V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	ECU Information		V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Read Codes		V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Erase Codes		V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Live Data		V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Variant coding	V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Learning process	V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Correction programming	V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Special functions	Emissions inspection (Not valid for USA)	V1.00.001 or higher
SL (230)	ME 2.7.2-Motor electronics 2.7.2	Special functions	OBD I/M check (Valid for USA)	V1.00.001 or higher
SL (230)	XALWA-L-Xenon headlamp, left	ECU Information		V1.00.001 or higher
SL (230)	XALWA-L-Xenon headlamp, left	Read Codes		V1.00.001 or higher
SL (230)	XALWA-L-Xenon headlamp, left	Erase Codes		V1.00.001 or higher
SL (230)	XALWA-L-Xenon headlamp, left	Live Data		V1.00.001 or higher

SL (230)	XALWA-L-Xenon headlamp, left	Active Test		V1.00.001 or higher
SL (230)	XALWA-R-Xenon headlamp, right	ECU Information		V1.00.001 or higher
SL (230)	XALWA-R-Xenon headlamp, right	Read Codes		V1.00.001 or higher
SL (230)	XALWA-R-Xenon headlamp, right	Erase Codes		V1.00.001 or higher
SL (230)	XALWA-R-Xenon headlamp, right	Live Data		V1.00.001 or higher
SL (230)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
SL (230)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
SL (230)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
SL (230)	AUDIO	ECU Information		V1.00.001 or higher
SL (230)	AUDIO	Read Codes		V1.00.001 or higher
SL (230)	AUDIO	Erase Codes		V1.00.001 or higher
SL (230)	AUDIO	Live Data		V1.00.001 or higher
SL (230)	AUDIO	Active Test		V1.00.001 or higher
SL (230)	AUDIO	Control unit adaptations	Changing the language version(Linguatronic)	V1.00.001 or higher
SL (230)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher
SL (230)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
SL (230)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher
SL (230)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher
SL (230)	Sound system (Main amplifier)	Active Test		V1.00.001 or higher
SL (230)	UCI-Media interface	ECU Information		V1.00.001 or higher
SL (230)	UCI-Media interface	Read Codes		V1.00.001 or higher
SL (230)	UCI-Media interface	Erase Codes		V1.00.001 or higher
SL (230)	DAB-Digital radio	ECU Information		V1.00.001 or higher

SL (230)	DAB-Digital radio	Read Codes		V1.00.001 or higher
SL (230)	DAB-Digital radio	Erase Codes		V1.00.001 or higher
SL (230)	DAB-Digital radio	Live Data		V1.00.001 or higher
SL (230)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
SL (230)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
SL (230)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
SL (230)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
SL (230)	SDAR-Satellite radio(Valid for USA)	Active Test		V1.00.001 or higher
SL (230)	TV-TV tuner	ECU Information		V1.00.001 or higher
SL (230)	TV-TV tuner	Read Codes		V1.00.001 or higher
SL (230)	TV-TV tuner	Erase Codes		V1.00.001 or higher
SL (230)	TV-TV tuner	Live Data		V1.00.001 or higher
SL (230)	CTEL-Cellular telephone(JAPAN)	ECU Information		V1.00.001 or higher
SL (230)	CTEL-Cellular telephone(JAPAN)	Read Codes		V1.00.001 or higher
SL (230)	CTEL-Cellular telephone(JAPAN)	Erase Codes		V1.00.001 or higher
SL (230)	CTEL-Cellular telephone(JAPAN)	Live Data		V1.00.001 or higher
SL (230)	CTEL-Cellular telephone(JAPAN)	Active Test		V1.00.001 or higher
SL (230)	AIRSCARF	ECU Information		V1.00.001 or higher
SL (230)	AIRSCARF	Read Codes		V1.00.001 or higher

SL (230)	AIRSCARF	Erase Codes		V1.00.001 or higher
SL (230)	AIRSCARF	Live Data		V1.00.001 or higher
SL (230)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	ECU Information		V1.00.001 or higher
SL (230)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Read Codes		V1.00.001 or higher
SL (230)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Erase Codes		V1.00.001 or higher
SL (230)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Live Data		V1.00.001 or higher
SL (230)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Active Test		V1.00.001 or higher
SL (230)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Learning processes	V1.00.001 or higher
SL (230)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Correction programming	V1.00.001 or higher
SL (230)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
SL (230)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
SL (230)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Special functions	Variant coding	V1.00.001 or higher
SL (230)	AMG DRVU-AMG DRIVE UNIT	ECU Information		V1.00.001 or higher
SL (230)	AMG DRVU-AMG DRIVE UNIT	Read Codes		V1.00.001 or higher

SL (230)	AMG DRVU-AMG DRIVE UNIT	Erase Codes		V1.00.001 or higher
SL (230)	AMG DRVU-AMG DRIVE UNIT	Live Data		V1.00.001 or higher
SL (129)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
SL (129)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
SL (129)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
SL (129)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
SL (129)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
SL (129)	ME2-SFI-Motor electronics 2	Control unit adaptations	Correction programming	V1.00.001 or higher
SL (129)	ME2-SFI-Motor electronics 2	Control unit adaptations	Self-adaptation	V1.00.001 or higher
SL (129)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
SL (129)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
SL (129)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
SL (129)	ETC-Electronic transmission control	Active Test		V1.00.001 or higher
SL (129)	ETC-Electronic transmission control	Control unit adaptations	•	V1.00.001 or higher
SL (129)	Traction systems ABS,ASR,ETS,ESP	ECU Information		V1.00.001 or higher
SL (129)	Traction systems ABS,ASR,ETS,ESP	Read Codes		V1.00.001 or higher
SL (129)	Traction systems ABS,ASR,ETS,ESP	Erase Codes		V1.00.001 or higher
SL (129)	Traction systems ABS,ASR,ETS,ESP	Live Data		V1.00.001 or higher
SL (129)	Traction systems ABS,ASR,ETS,ESP	Active Test		V1.00.001 or higher
SL (129)	BAS-Brake assist	ECU Information		V1.00.001 or higher
SL (129)	BAS-Brake assist	Read Codes		V1.00.001 or higher



SL (129)	BAS-Brake assist	Erase Codes		V1.00.001 or higher
SL (129)	BAS-Brake assist	Live Data		V1.00.001 or higher
SL (129)	BAS-Brake assist	Active Test		V1.00.001 or higher
SL (129)	AB-Airbag	ECU Information		V1.00.001 or higher
SL (129)	AB-Airbag	Read Codes		V1.00.001 or higher
SL (129)	AB-Airbag	Erase Codes		V1.00.001 or higher
SL (129)	HRA-Headlamp range adjustment	ECU Information		V1.00.001 or higher
SL (129)	HRA-Headlamp range adjustment	Read Codes		V1.00.001 or higher
SL (129)	HRA-Headlamp range adjustment	Erase Codes		V1.00.001 or higher
SL (129)	RFL-Radio frequency locking/electric central locking	ECU Information		V1.00.001 or higher
SL (129)	RFL-Radio frequency locking/electric central locking	Read Codes		V1.00.001 or higher
SL (129)	RFL-Radio frequency locking/electric central locking	Erase Codes		V1.00.001 or higher
SL (129)	RFL-Radio frequency locking/electric central locking	Live Data		V1.00.001 or higher
SL (129)	APS-Auto pilot system	ECU Information		V1.00.001 or higher
SL (129)	APS-Auto pilot system	Read Codes		V1.00.001 or higher
SL (129)	APS-Auto pilot system	Erase Codes		V1.00.001 or higher
SL (129)	APS-Auto pilot system	Live Data		V1.00.001 or higher

SL (129)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
SL (129)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
SL (129)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
SL (129)	ICM-Instrument cluster with maintenance interval display	Live Data		V1.00.001 or higher
SL (129)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
SL (129)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
SL (129)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	ECU Information		V1.00.001 or higher
SL (129)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Read Codes		V1.00.001 or higher
SL (129)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Erase Codes		V1.00.001 or higher
SL (129)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Live Data		V1.00.001 or higher
SL (129)	DN-Dynamic navigation by means of CTEL	ECU Information		V1.00.001 or higher

SL (129)	DN-Dynamic navigation by means of CTEL	Read Codes		V1.00.001 or higher
SL (129)	DN-Dynamic navigation by means of CTEL	Erase Codes		V1.00.001 or higher
SL (129)	DN-Dynamic navigation by means of CTEL	Live Data		V1.00.001 or higher
SL (129)	AUDIO	ECU Information		V1.00.001 or higher
SL (129)	AUDIO	Read Codes		V1.00.001 or higher
SL (129)	AUDIO	Erase Codes		V1.00.001 or higher
SL (129)	AUDIO	Live Data		V1.00.001 or higher
SL (129)	AUDIO	Active Test		V1.00.001 or higher
SL (129)	CDC-CD changer	ECU Information		V1.00.001 or higher
SL (129)	CDC-CD changer	Read Codes		V1.00.001 or higher
SL (129)	CDC-CD changer	Erase Codes		V1.00.001 or higher
SL (129)	VCS-Voice control system	ECU Information		V1.00.001 or higher
SL (129)	VCS-Voice control system	Read Codes		V1.00.001 or higher
SL (129)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
SL (129)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	ECU Information		V1.00.001 or higher
SL (129)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Read Codes		V1.00.001 or higher
SL (129)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Erase Codes		V1.00.001 or higher

SL (129)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Live Data		V1.00.001 or higher
SL (129)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Active Test		V1.00.001 or higher
SL (129)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
SL (129)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
SL (129)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
SL (129)	STH-Stationary heater	ECU Information		V1.00.001 or higher
SL (129)	STH-Stationary heater	Read Codes		V1.00.001 or higher
SL (129)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
SL (129)	STH-Stationary heater	Live Data		V1.00.001 or higher
SL (129)	STH-Stationary heater	Active Test		V1.00.001 or higher
SL (129)	STH-Stationary heater	Control unit adaptations	CO2 setting	V1.00.001 or higher
SL (129)	ME1-SFI-Motor electronics	ECU Information		V1.00.001 or higher
SL (129)	ME1-SFI-Motor electronics	Read Codes		V1.00.001 or higher
SL (129)	ME1-SFI-Motor electronics	Erase Codes		V1.00.001 or higher
AMG GT (190)	ME - Motor electronics ME1778 for combustion engine M277	ECU Information		V1.00.001 or higher
AMG GT (190)	ME - Motor electronics ME1778 for combustion engine M277	Read Codes		V1.00.001 or higher

AMG GT (190)	ME - Motor electronics ME1778 for combustion engine M277	Erase Codes		V1.00.001 or higher
AMG GT (190)	DKG-Electronic transmission control for double-plate clutch transmission	ECU Information		V1.00.001 or higher
AMG GT (190)	DKG-Electronic transmission control for double-plate clutch transmission	Read Codes		V1.00.001 or higher
AMG GT (190)	DKG-Electronic transmission control for double-plate clutch transmission	Erase Codes		V1.00.001 or higher
AMG GT (190)	DKG-Electronic transmission control for double-plate clutch transmission	Live Data		V1.00.001 or higher
AMG GT (190)	FSCU07 - Control unit Fuel pump	ECU Information		V1.00.001 or higher
AMG GT (190)	FSCU07 - Control unit Fuel pump	Read Codes		V1.00.001 or higher
AMG GT (190)	FSCU07 - Control unit Fuel pump	Erase Codes		V1.00.001 or higher
AMG GT (190)	FSCU07 - Control unit Fuel pump	Live Data		V1.00.001 or higher
AMG GT (190)	FSCU07 - Control unit Fuel pump	Active Test		V1.00.001 or higher
AMG GT (190)	PTCU-Common powertrain controller	ECU Information		V1.00.001 or higher
AMG GT (190)	PTCU-Common powertrain controller	Read Codes		V1.00.001 or higher
AMG GT (190)	PTCU-Common powertrain controller	Erase Codes		V1.00.001 or higher

AMG GT (190)	PTCU-Common powertrain controller	Live Data		V1.00.001 or higher
AMG GT (190)	EFB-Electronic parking brake	ECU Information		V1.00.001 or higher
AMG GT (190)	EFB-Electronic parking brake	Read Codes		V1.00.001 or higher
AMG GT (190)	EFB-Electronic parking brake	Erase Codes		V1.00.001 or higher
AMG GT (190)	EFB-Electronic parking brake	Live Data		V1.00.001 or higher
AMG GT (190)	EFB-Electronic parking brake	Active Test		V1.00.001 or higher
AMG GT (190)	EFB-Electronic parking brake	Control unit adaptations	Calibration of control unit 'N128 (Electric parking brake control unit)'	V1.00.001 or higher
AMG GT (190)	DTR-DISTRONIC	ECU Information		V1.00.001 or higher
AMG GT (190)	DTR-DISTRONIC	Read Codes		V1.00.001 or higher
AMG GT (190)	DTR-DISTRONIC	Erase Codes		V1.00.001 or higher
AMG GT (190)	DTR-DISTRONIC	Live Data		V1.00.001 or higher
AMG GT (190)	SRS-Supplemental restraint system	ECU Information		V1.00.001 or higher
AMG GT (190)	SRS-Supplemental restraint system	Read Codes		V1.00.001 or higher
AMG GT (190)	SRS-Supplemental restraint system	Erase Codes		V1.00.001 or higher
AMG GT (190)	SRS-Supplemental restraint system	Live Data		V1.00.001 or higher
AMG GT (190)	CGW-Central gateway	ECU Information		V1.00.001 or higher
AMG GT (190)	CGW-Central gateway	Read Codes		V1.00.001 or higher
AMG GT (190)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
AMG GT (190)	CGW-Central gateway	Live Data		V1.00.001 or higher
AMG GT (190)	EZS-Electronic ignition lock	ECU Information		V1.00.001 or higher

AMG GT (190)	EZS-Electronic ignition lock	Read Codes		V1.00.001 or higher
AMG GT (190)	EZS-Electronic ignition lock	Erase Codes		V1.00.001 or higher
AMG GT (190)	EZS-Electronic ignition lock	Live Data		V1.00.001 or higher
AMG GT (190)	SCM-Steering column module	ECU Information		V1.00.001 or higher
AMG GT (190)	SCM-Steering column module	Read Codes		V1.00.001 or higher
AMG GT (190)	SCM-Steering column module	Erase Codes		V1.00.001 or higher
AMG GT (190)	SCM-Steering column module	Live Data		V1.00.001 or higher
AMG GT (190)	SCM-Steering column module	Active Test		V1.00.001 or higher
AMG GT (190)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
AMG GT (190)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
AMG GT (190)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
AMG GT (190)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
AMG GT (190)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
AMG GT (190)	RevETR-LF - Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
AMG GT (190)	RevETR-LF - Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
AMG GT (190)	RevETR-LF - Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
AMG GT (190)	RevETR-LF - Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher

AMG GT (190)	RevETR-RF - Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
AMG GT (190)	RevETR-RF - Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
AMG GT (190)	RevETR-RF - Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
AMG GT (190)	RevETR-RF - Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
AMG GT (190)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher
AMG GT (190)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
AMG GT (190)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
AMG GT (190)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher



AMG GT (190)	Driver-side SAM - Front signal acquisition and actuation module	Active Test		V1.00.001 or higher
AMG GT (190)	Rear SAM - Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
AMG GT (190)	Rear SAM - Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
AMG GT (190)	Rear SAM - Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
AMG GT (190)	Rear SAM - Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
AMG GT (190)	Rear SAM - Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
AMG GT (190)	SG-SW-L - Left headlamp	ECU Information		V1.00.001 or higher
AMG GT (190)	SG-SW-L - Left headlamp	Read Codes		V1.00.001 or higher
AMG GT (190)	SG-SW-L - Left headlamp	Erase Codes		V1.00.001 or higher
AMG GT (190)	SG-SW-L - Left headlamp	Live Data		V1.00.001 or higher
AMG GT (190)	SG-SW-L - Left headlamp	Active Test		V1.00.001 or higher
AMG GT (190)	SG-SW-R - Right headlamp	ECU Information		V1.00.001 or higher
AMG GT (190)	SG-SW-R - Right headlamp	Read Codes		V1.00.001 or higher
AMG GT (190)	SG-SW-R - Right headlamp	Erase Codes		V1.00.001 or higher
AMG GT (190)	SG-SW-R - Right headlamp	Live Data		V1.00.001 or higher

AMG GT (190)	SG-SW-R - Right headlamp	Active Test		V1.00.001 or higher
AMG GT (190)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
AMG GT (190)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
AMG GT (190)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
AMG GT (190)	IC - Instrument cluster	Live Data		V1.00.001 or higher
AMG GT (190)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
AMG GT (190)	IC - Instrument cluster	Active Test		V1.00.001 or higher
AMG GT (190)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher
AMG GT (190)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Read Codes		V1.00.001 or higher
AMG GT (190)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
AMG GT (190)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
AMG GT (190)	TPAD - Touchpad	ECU Information		V1.00.001 or higher
AMG GT (190)	TPAD - Touchpad	Read Codes		V1.00.001 or higher
AMG GT (190)	TPAD - Touchpad	Erase Codes		V1.00.001 or higher
AMG GT (190)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
AMG GT (190)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher

AMG GT (190)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher
AMG GT (190)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
AMG GT (190)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
AMG GT (190)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
AMG GT (190)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
AMG GT (190)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
AMG GT (190)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
AMG GT (190)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
AMG GT (190)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
AMG GT (190)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
AMG GT (190)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
AMG GT (190)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
AMG GT (190)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
AMG GT (190)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
AMG GT (190)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
AMG GT (190)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher

AMG GT (190)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
AMG GT (190)	TV - TV tuner	ECU Information		V1.00.001 or higher
AMG GT (190)	TV - TV tuner	Read Codes		V1.00.001 or higher
AMG GT (190)	TV - TV tuner	Erase Codes		V1.00.001 or higher
AMG GT (190)	TV - TV tuner	Live Data		V1.00.001 or higher
AMG GT (190)	SOUND - Sound system	ECU Information		V1.00.001 or higher
AMG GT (190)	SOUND - Sound system	Read Codes		V1.00.001 or higher
AMG GT (190)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
AMG GT (190)	PTS-PARKTRONIC	ECU Information		V1.00.001 or higher
AMG GT (190)	PTS-PARKTRONIC	Read Codes		V1.00.001 or higher
AMG GT (190)	PTS-PARKTRONIC	Erase Codes		V1.00.001 or higher
AMG GT (190)	PTS-PARKTRONIC	Live Data		V1.00.001 or higher
AMG GT (190)	PTS-PARKTRONIC	Active Test		V1.00.001 or higher
AMG GT (190)	DSI-DIRECT SELECT interface	ECU Information		V1.00.001 or higher
AMG GT (190)	DSI-DIRECT SELECT interface	Read Codes		V1.00.001 or higher
AMG GT (190)	DSI-DIRECT SELECT interface	Erase Codes		V1.00.001 or higher
AMG GT (190)	DSI-DIRECT SELECT interface	Live Data		V1.00.001 or higher
AMG GT (190)	ESA 'Driver'- Electric seat adjustment 'Driver'	ECU Information		V1.00.001 or higher
AMG GT (190)	ESA 'Driver'- Electric seat adjustment 'Driver'	Read Codes		V1.00.001 or higher
AMG GT (190)	ESA 'Driver'- Electric seat adjustment 'Driver'	Erase Codes		V1.00.001 or higher

AMG GT (190)	ESA 'Driver'- Electric seat adjustment 'Driver'	Live Data		V1.00.001 or higher
AMG GT (190)	ESA 'Driver'- Electric seat adjustment 'Driver'	Active Test		V1.00.001 or higher
AMG GT (190)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	ECU Information		V1.00.001 or higher
AMG GT (190)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Read Codes		V1.00.001 or higher
AMG GT (190)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Erase Codes		V1.00.001 or higher
AMG GT (190)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Live Data		V1.00.001 or higher
AMG GT (190)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Active Test		V1.00.001 or higher
AMG GT (190)	DCU-LF-Left front door	ECU Information		V1.00.001 or higher
AMG GT (190)	DCU-LF-Left front door	Read Codes		V1.00.001 or higher

AMG GT (190)	DCU-LF-Left front door	Erase Codes		V1.00.001 or higher
AMG GT (190)	DCU-LF-Left front door	Live Data		V1.00.001 or higher
AMG GT (190)	DCU-LF-Left front door	Active Test		V1.00.001 or higher
AMG GT (190)	DCU-RF-Right front door	ECU Information		V1.00.001 or higher
AMG GT (190)	DCU-RF-Right front door	Read Codes		V1.00.001 or higher
AMG GT (190)	DCU-RF-Right front door	Erase Codes		V1.00.001 or higher
AMG GT (190)	DCU-RF-Right front door	Live Data		V1.00.001 or higher
AMG GT (190)	DCU-RF-Right front door	Active Test		V1.00.001 or higher
AMG GT (190)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
AMG GT (190)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
AMG GT (190)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
AMG GT (190)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
AMG GT (190)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
AMG GT (190)	RFK - Backup camera	ECU Information		V1.00.001 or higher
AMG GT (190)	RFK - Backup camera	Read Codes		V1.00.001 or higher
AMG GT (190)	RFK - Backup camera	Erase Codes		V1.00.001 or higher
AMG GT (190)	RFK - Backup camera	Live Data		V1.00.001 or higher
AMG GT (190)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	ECU Information		V1.00.001 or higher
AMG GT (190)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Read Codes		V1.00.001 or higher
AMG GT (190)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Erase Codes		V1.00.001 or higher

AMG GT (190)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Live Data		V1.00.001 or higher
AMG GT (190)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Active Test		V1.00.001 or higher
AMG GT (190)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
AMG GT (190)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
AMG GT (190)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
AMG GT (190)	IRS-HRA - Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
AMG GT (190)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
AMG GT (190)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
AMG GT (190)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
AMG GT (190)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
AMG GT (190)	DTR-DISTRONIC	ECU Information		V1.00.001 or higher
AMG GT (190)	DTR-DISTRONIC	Read Codes		V1.00.001 or higher
AMG GT (190)	DTR-DISTRONIC	Erase Codes		V1.00.001 or higher
AMG GT (190)	DTR-DISTRONIC	Live Data		V1.00.001 or higher

SLS (197)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	ECU Information		V1.00.001 or higher
SLS (197)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Read Codes		V1.00.001 or higher
SLS (197)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Erase Codes		V1.00.001 or higher
SLS (197)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Live Data		V1.00.001 or higher
SLS (197)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Active Test		V1.00.001 or higher
SLS (197)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Special functions	Variant coding	V1.00.001 or higher
SLS (197)	DKG-Electronic transmission control for double- plate clutch transmission	ECU Information		V1.00.001 or higher
SLS (197)	DKG-Electronic transmission control for double- plate clutch transmission	Read Codes		V1.00.001 or higher
SLS (197)	DKG-Electronic transmission control for double- plate clutch transmission	Erase Codes		V1.00.001 or higher
SLS (197)	DKG-Electronic transmission control for double- plate clutch transmission	Live Data		V1.00.001 or higher



SLS (197)	FSCU06 - Control unit Fuel pump	ECU Information		V1.00.001 or higher
SLS (197)	FSCU06 - Control unit Fuel pump	Read Codes		V1.00.001 or higher
SLS (197)	FSCU06 - Control unit Fuel pump	Erase Codes		V1.00.001 or higher
SLS (197)	FSCU06 - Control unit Fuel pump	Live Data		V1.00.001 or higher
SLS (197)	FSCU06 - Control unit Fuel pump	Active Test		V1.00.001 or higher
SLS (197)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
SLS (197)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
SLS (197)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
SLS (197)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
SLS (197)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
SLS (197)	AMG DRVU-AMG DRIVE UNIT	ECU Information		V1.00.001 or higher
SLS (197)	AMG DRVU-AMG DRIVE UNIT	Read Codes		V1.00.001 or higher
SLS (197)	AMG DRVU-AMG DRIVE UNIT	Erase Codes		V1.00.001 or higher
SLS (197)	AMG DRVU-AMG DRIVE UNIT	Live Data		V1.00.001 or higher
SLS (197)	AMG DRVU-AMG DRIVE UNIT	Active Test		V1.00.001 or higher
SLS (197)	SRS-Supplemental restraint system	ECU Information		V1.00.001 or higher
SLS (197)	SRS-Supplemental restraint system	Read Codes		V1.00.001 or higher
SLS (197)	SRS-Supplemental restraint system	Erase Codes		V1.00.001 or higher
SLS (197)	SRS-Supplemental restraint system	Live Data		V1.00.001 or higher
SLS (197)	CGW-Central gateway	ECU Information		V1.00.001 or higher
SLS (197)	CGW-Central gateway	Read Codes		V1.00.001 or higher
SLS (197)	CGW-Central gateway	Erase Codes		V1.00.001 or higher

SLS (197)	CGW-Central gateway	Live Data		V1.00.001 or higher
SLS (197)	EZS-Electronic ignition lock	ECU Information		V1.00.001 or higher
SLS (197)	EZS-Electronic ignition lock	Read Codes		V1.00.001 or higher
SLS (197)	EZS-Electronic ignition lock	Erase Codes		V1.00.001 or higher
SLS (197)	EZS-Electronic ignition lock	Live Data		V1.00.001 or higher
SLS (197)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
SLS (197)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
SLS (197)	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher
SLS (197)	SCM [MRM]-Steering column module	Live Data		V1.00.001 or higher
SLS (197)	SCM [MRM]-Steering column module	Active Test		V1.00.001 or higher
SLS (197)	KG - KEYLESS GO	ECU Information		V1.00.001 or higher
SLS (197)	KG - KEYLESS GO	Read Codes		V1.00.001 or higher
SLS (197)	KG - KEYLESS GO	Erase Codes		V1.00.001 or higher
SLS (197)	KG - KEYLESS GO	Live Data		V1.00.001 or higher
SLS (197)	KG - KEYLESS GO	Active Test		V1.00.001 or higher
SLS (197)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
SLS (197)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
SLS (197)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
SLS (197)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
SLS (197)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher

SLS (197)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
SLS (197)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
SLS (197)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
SLS (197)	Driver-side SAM - Front signal acquisition and actuation module	Active Test		V1.00.001 or higher
SLS (197)	Rear SAM - Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
SLS (197)	Rear SAM - Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
SLS (197)	Rear SAM - Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
SLS (197)	Rear SAM - Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
SLS (197)	Rear SAM - Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
SLS (197)	VDS-Soft top control	ECU Information		V1.00.001 or higher

SLS (197)	VDS-Soft top control	Read Codes		V1.00.001 or higher
SLS (197)	VDS-Soft top control	Erase Codes		V1.00.001 or higher
SLS (197)	VDS-Soft top control	Live Data		V1.00.001 or higher
SLS (197)	AIRSCARF-AIRSCARF system	ECU Information		V1.00.001 or higher
SLS (197)	AIRSCARF-AIRSCARF system	Read Codes		V1.00.001 or higher
SLS (197)	AIRSCARF-AIRSCARF system	Erase Codes		V1.00.001 or higher
SLS (197)	AIRSCARF-AIRSCARF system	Live Data		V1.00.001 or higher
SLS (197)	AIRSCARF-AIRSCARF system	Active Test		V1.00.001 or higher
SLS (197)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
SLS (197)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
SLS (197)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
SLS (197)	IC - Instrument cluster	Live Data		V1.00.001 or higher
SLS (197)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
SLS (197)	IC - Instrument cluster	Active Test		V1.00.001 or higher
SLS (197)	AMG PM-AMG Performance Media	ECU Information		V1.00.001 or higher
SLS (197)	AMG PM-AMG Performance Media	Read Codes		V1.00.001 or higher
SLS (197)	AMG PM-AMG Performance Media	Erase Codes		V1.00.001 or higher
SLS (197)	AMG PM-AMG Performance Media	Live Data		V1.00.001 or higher
SLS (197)	COMAND or AUDIO	ECU Information		V1.00.001 or higher

SLS (197)	COMAND or AUDIO	Read Codes		V1.00.001 or higher
SLS (197)	COMAND or AUDIO	Erase Codes		V1.00.001 or higher
SLS (197)	COMAND or AUDIO	Live Data		V1.00.001 or higher
SLS (197)	SOUND - Sound system	ECU Information		V1.00.001 or higher
SLS (197)	SOUND - Sound system	Read Codes		V1.00.001 or higher
SLS (197)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
SLS (197)	SOUND - Sound system	Live Data		V1.00.001 or higher
SLS (197)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
SLS (197)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
SLS (197)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
SLS (197)	TELE AID-Control unit	Live Data		V1.00.001 or higher
SLS (197)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
SLS (197)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
SLS (197)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
SLS (197)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
SLS (197)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
SLS (197)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
SLS (197)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
SLS (197)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
SLS (197)	MIF - Media interface	ECU Information		V1.00.001 or higher

SLS (197)	MIF - Media interface	Read Codes		V1.00.001 or higher
SLS (197)	MIF - Media interface	Erase Codes		V1.00.001 or higher
SLS (197)	MIF - Media interface	Live Data		V1.00.001 or higher
SLS (197)	TELE AID- Telematic service Emergency call	ECU Information		V1.00.001 or higher
SLS (197)	TELE AID- Telematic service Emergency call	Read Codes		V1.00.001 or higher
SLS (197)	TELE AID- Telematic service Emergency call	Erase Codes		V1.00.001 or higher
SLS (197)	TELE AID- Telematic service Emergency call	Live Data		V1.00.001 or higher
SLS (197)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
SLS (197)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
SLS (197)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher

SLS (197)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
SLS (197)	TELE AID- Telematic services Remote door unlocking	ECU Information		V1.00.001 or higher
SLS (197)	TELE AID- Telematic services Remote door unlocking	Read Codes		V1.00.001 or higher
SLS (197)	TELE AID- Telematic services Remote door unlocking	Erase Codes		V1.00.001 or higher
SLS (197)	TELE AID- Telematic services Remote door unlocking	Live Data		V1.00.001 or higher
SLS (197)	TELE AID- Telematic service Stolen vehicle tracking	ECU Information		V1.00.001 or higher
SLS (197)	TELE AID- Telematic service Stolen vehicle tracking	Read Codes		V1.00.001 or higher
SLS (197)	TELE AID- Telematic service Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
SLS (197)	TELE AID- Telematic service Stolen vehicle tracking	Live Data		V1.00.001 or higher
SLS (197)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
SLS (197)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
SLS (197)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher

SLS (197)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
SLS (197)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher
SLS (197)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
SLS (197)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
SLS (197)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
SLS (197)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
SLS (197)	PTS-PARKTRONIC	ECU Information		V1.00.001 or higher
SLS (197)	PTS-PARKTRONIC	Read Codes		V1.00.001 or higher
SLS (197)	PTS-PARKTRONIC	Erase Codes		V1.00.001 or higher
SLS (197)	PTS-PARKTRONIC	Live Data		V1.00.001 or higher
SLS (197)	PTS-PARKTRONIC	Active Test		V1.00.001 or higher
SLS (197)	DSI-DIRECT SELECT interface	ECU Information		V1.00.001 or higher
SLS (197)	DSI-DIRECT SELECT interface	Read Codes		V1.00.001 or higher
SLS (197)	DSI-DIRECT SELECT interface	Erase Codes		V1.00.001 or higher
SLS (197)	DSI-DIRECT SELECT interface	Live Data		V1.00.001 or higher
SLS (197)	ESA Driver - Electric seat adjustmnet Driver	ECU Information		V1.00.001 or higher
SLS (197)	ESA Driver - Electric seat adjustmnet Driver	Read Codes		V1.00.001 or higher
SLS (197)	ESA Driver - Electric seat adjustmnet Driver	Erase Codes		V1.00.001 or higher



SLS (197)	ESA Driver - Electric seat adjustmnet Driver	Live Data		V1.00.001 or higher
SLS (197)	ESA Driver - Electric seat adjustmnet Driver	Active Test		V1.00.001 or higher
SLS (197)	ESA Front passenger - Electric seat adjustment Front passenger	ECU Information		V1.00.001 or higher
SLS (197)	ESA Front passenger - Electric seat adjustment Front passenger	Read Codes		V1.00.001 or higher
SLS (197)	ESA Front passenger - Electric seat adjustment Front passenger	Erase Codes		V1.00.001 or higher
SLS (197)	ESA Front passenger - Electric seat adjustment Front passenger	Live Data		V1.00.001 or higher
SLS (197)	ESA Front passenger - Electric seat adjustment Front passenger	Active Test		V1.00.001 or higher
SLS (197)	DCU-LF-Left front door	ECU Information		V1.00.001 or higher
SLS (197)	DCU-LF-Left front door	Read Codes		V1.00.001 or higher
SLS (197)	DCU-LF-Left front door	Erase Codes		V1.00.001 or higher
SLS (197)	DCU-LF-Left front door	Live Data		V1.00.001 or higher
SLS (197)	DCU-LF-Left front door	Active Test		V1.00.001 or higher
SLS (197)	DCU-RF-Right front door	ECU Information		V1.00.001 or higher
SLS (197)	DCU-RF-Right front door	Read Codes		V1.00.001 or higher

SLS (197)	DCU-RF-Right front door	Erase Codes		V1.00.001 or higher
SLS (197)	DCU-RF-Right front door	Live Data		V1.00.001 or higher
SLS (197)	DCU-RF-Right front door	Active Test		V1.00.001 or higher
SLS (197)	AAC-Air conditioning	ECU Information		V1.00.001 or higher
SLS (197)	AAC-Air conditioning	Read Codes		V1.00.001 or higher
SLS (197)	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
SLS (197)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
SLS (197)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
SLS (197)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
SLS (197)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
SLS (197)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
SLS (197)	TPM - Tire pressure monitor	Special functions	Write the wheel electronics ID number.	V1.00.001 or higher
SLS (197)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
SLS (197)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
SLS (197)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
SLS (197)	IRS-HRA - Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
SLS (197)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher

SLS (197)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
SLS (197)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
SLS (197)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
GLE (292)	ME - Motor electronics	ECU Information		V1.00.001 or higher
GLE (292)	ME - Motor electronics	Read Codes		V1.00.001 or higher
GLE (292)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
GLE (292)	ME - Motor electronics	Live Data		V1.00.001 or higher
GLE (292)	ME - Motor electronics	Active Test		V1.00.001 or higher
GLE (292)	CDI-Motor electronics 'CDI61' for combustion engine 'OM642'	ECU Information		V1.00.001 or higher
GLE (292)	CDI-Motor electronics 'CDI61' for combustion engine 'OM642'	Read Codes		V1.00.001 or higher
GLE (292)	CDI-Motor electronics 'CDI61' for combustion engine 'OM642'	Erase Codes		V1.00.001 or higher
GLE (292)	CDI-Motor electronics 'CDI61' for combustion engine 'OM642'	Live Data		V1.00.001 or higher
GLE (292)	CDI-Motor electronics 'CDI61' for combustion engine 'OM642'	Active Test		V1.00.001 or higher

GLE (292)	CDI-Motor electronics 'CDI61' for combustion engine 'OM642'	Control unit adaptations	Teach-in processes	V1.00.001 or higher
GLE (292)	VGS - Transmission control	ECU Information		V1.00.001 or higher
GLE (292)	VGS - Transmission control	Read Codes		V1.00.001 or higher
GLE (292)	VGS - Transmission control	Erase Codes		V1.00.001 or higher
GLE (292)	VGS - Transmission control	Live Data		V1.00.001 or higher
GLE (292)	VGS - Transmission control	Active Test		V1.00.001 or higher
GLE (292)	VGS - Transmission control	Special functions	Notes on cause of fault symptom:	V1.00.001 or higher
GLE (292)	ISM-Shift module	ECU Information		V1.00.001 or higher
GLE (292)	ISM-Shift module	Read Codes		V1.00.001 or higher
GLE (292)	ISM-Shift module	Erase Codes		V1.00.001 or higher
GLE (292)	ISM-Shift module	Live Data		V1.00.001 or higher
GLE (292)	ISM-Shift module	Active Test		V1.00.001 or higher
GLE (292)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
GLE (292)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
GLE (292)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
GLE (292)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
GLE (292)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
GLE (292)	VG - Transfer case	ECU Information		V1.00.001 or higher
GLE (292)	VG - Transfer case	Read Codes		V1.00.001 or higher

GLE (292)	VG - Transfer case	Erase Codes		V1.00.001 or higher
GLE (292)	VG - Transfer case	Live Data		V1.00.001 or higher
GLE (292)	SCR - Selective catalytic reduction	ECU Information		V1.00.001 or higher
GLE (292)	SCR - Selective catalytic reduction	Read Codes		V1.00.001 or higher
GLE (292)	SCR - Selective catalytic reduction	Erase Codes		V1.00.001 or higher
GLE (292)	SCR - Selective catalytic reduction	Live Data		V1.00.001 or higher
GLE (292)	SCR - Selective catalytic reduction	Active Test		V1.00.001 or higher
GLE (292)	ESP - Electric stability program	ECU Information		V1.00.001 or higher
GLE (292)	ESP - Electric stability program	Read Codes		V1.00.001 or higher
GLE (292)	ESP - Electric stability program	Erase Codes		V1.00.001 or higher
GLE (292)	ESP - Electric stability program	Live Data		V1.00.001 or higher
GLE (292)	ESP - Electric stability program	Active Test		V1.00.001 or higher
GLE (292)	ESP - Electric stability program	Control unit adaptations	Teach-in processes	V1.00.001 or higher
GLE (292)	ESP - Electric stability program	Special functions	Display of SCN	V1.00.001 or higher
GLE (292)	ESP - Electric stability program	Special functions	Display of CVN	V1.00.001 or higher
GLE (292)	EFB-Electronic parking brake	ECU Information		V1.00.001 or higher
GLE (292)	EFB-Electronic parking brake	Read Codes		V1.00.001 or higher
GLE (292)	EFB-Electronic parking brake	Erase Codes		V1.00.001 or higher
GLE (292)	EFB-Electronic parking brake	Live Data		V1.00.001 or higher
GLE (292)	EFB-Electronic parking brake	Active Test		V1.00.001 or higher

GLE (292)	EFB-Electronic parking brake	Control unit adaptations	Calibration of control unit 'N128 (Electric parking brake control unit)'	V1.00.001 or higher
GLE (292)	ES-Electrical power steering	ECU Information		V1.00.001 or higher
GLE (292)	ES-Electrical power steering	Read Codes		V1.00.001 or higher
GLE (292)	ES-Electrical power steering	Erase Codes		V1.00.001 or higher
GLE (292)	ES-Electrical power steering	Live Data		V1.00.001 or higher
GLE (292)	FWGW-Chassis gateway	ECU Information		V1.00.001 or higher
GLE (292)	FWGW-Chassis gateway	Read Codes		V1.00.001 or higher
GLE (292)	FWGW-Chassis gateway	Erase Codes		V1.00.001 or higher
GLE (292)	FWGW-Chassis gateway	Live Data		V1.00.001 or higher
GLE (292)	Roll control-Roll control	ECU Information		V1.00.001 or higher
GLE (292)	Roll control-Roll control	Read Codes		V1.00.001 or higher
GLE (292)	Roll control-Roll control	Erase Codes		V1.00.001 or higher
GLE (292)	Roll control-Roll control	Live Data		V1.00.001 or higher
GLE (292)	SRS-Supplemental restraint system	ECU Information		V1.00.001 or higher
GLE (292)	SRS-Supplemental restraint system	Read Codes		V1.00.001 or higher
GLE (292)	SRS-Supplemental restraint system	Erase Codes		V1.00.001 or higher
GLE (292)	SRS-Supplemental restraint system	Live Data		V1.00.001 or higher
GLE (292)	SRS-Supplemental restraint system	Active Test		V1.00.001 or higher
GLE (292)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher
GLE (292)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher

GLE (292)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
GLE (292)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
GLE (292)	SCM-Steering column module	ECU Information		V1.00.001 or higher
GLE (292)	SCM-Steering column module	Read Codes		V1.00.001 or higher
GLE (292)	SCM-Steering column module	Erase Codes		V1.00.001 or higher
GLE (292)	SCM-Steering column module	Live Data		V1.00.001 or higher
GLE (292)	SCM-Steering column module	Active Test		V1.00.001 or higher
GLE (292)	ATA-ATA[EDW]/tow-away protection/interior protection	ECU Information		V1.00.001 or higher
GLE (292)	ATA-ATA[EDW]/tow-away protection/interior protection	Read Codes		V1.00.001 or higher
GLE (292)	ATA-ATA[EDW]/tow-away protection/interior protection	Erase Codes		V1.00.001 or higher
GLE (292)	ATA-ATA[EDW]/tow-away protection/interior protection	Live Data		V1.00.001 or higher
GLE (292)	Multifunction control unit-Multifunction control unit	ECU Information		V1.00.001 or higher
GLE (292)	Multifunction control unit-Multifunction control unit	Read Codes		V1.00.001 or higher
GLE (292)	Multifunction control unit-Multifunction control unit	Erase Codes		V1.00.001 or higher

GLE (292)	Multifunction control unit- Multifunction control unit	Live Data		V1.00.001 or higher
GLE (292)	Multifunction control unit- Multifunction control unit	Active Test		V1.00.001 or higher
GLE (292)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
GLE (292)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
GLE (292)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
GLE (292)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
GLE (292)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
GLE (292)	SD - Control module Silding roof	ECU Information		V1.00.001 or higher
GLE (292)	SD - Control module Silding roof	Read Codes		V1.00.001 or higher
GLE (292)	SD - Control module Silding roof	Erase Codes		V1.00.001 or higher
GLE (292)	SD - Control module Silding roof	Live Data		V1.00.001 or higher
GLE (292)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
GLE (292)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
GLE (292)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher



GLE (292)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
GLE (292)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
GLE (292)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
GLE (292)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
GLE (292)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
GLE (292)	Trailer recognition module - Trailer recognition	ECU Information		V1.00.001 or higher
GLE (292)	Trailer recognition module - Trailer recognition	Read Codes		V1.00.001 or higher
GLE (292)	Trailer recognition module - Trailer recognition	Erase Codes		V1.00.001 or higher
GLE (292)	Trailer recognition module - Trailer recognition	Live Data		V1.00.001 or higher
GLE (292)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher

GLE (292)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
GLE (292)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
GLE (292)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
GLE (292)	Rear-Rear control unit	ECU Information		V1.00.001 or higher
GLE (292)	Rear-Rear control unit	Read Codes		V1.00.001 or higher
GLE (292)	Rear-Rear control unit	Erase Codes		V1.00.001 or higher
GLE (292)	Rear-Rear control unit	Live Data		V1.00.001 or higher
GLE (292)	SG-SW-L - Left headlamp	ECU Information		V1.00.001 or higher
GLE (292)	SG-SW-L - Left headlamp	Read Codes		V1.00.001 or higher
GLE (292)	SG-SW-L - Left headlamp	Erase Codes		V1.00.001 or higher
GLE (292)	SG-SW-L - Left headlamp	Live Data		V1.00.001 or higher
GLE (292)	SG-SW-L - Left headlamp	Active Test		V1.00.001 or higher
GLE (292)	SG-SW-R - Right headlamp	ECU Information		V1.00.001 or higher
GLE (292)	SG-SW-R - Right headlamp	Read Codes		V1.00.001 or higher
GLE (292)	SG-SW-R - Right headlamp	Erase Codes		V1.00.001 or higher
GLE (292)	SG-SW-R - Right headlamp	Live Data		V1.00.001 or higher
GLE (292)	SG-SW-R - Right headlamp	Active Test		V1.00.001 or higher
GLE (292)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
GLE (292)	IC - Instrument cluster	Read Codes		V1.00.001 or higher

GLE (292)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
GLE (292)	IC - Instrument cluster	Live Data		V1.00.001 or higher
GLE (292)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
GLE (292)	IC - Instrument cluster	Active Test		V1.00.001 or higher
GLE (292)	AVE-H - Controller unit Rear entertainment system	ECU Information		V1.00.001 or higher
GLE (292)	AVE-H - Controller unit Rear entertainment system	Read Codes		V1.00.001 or higher
GLE (292)	AVE-H - Controller unit Rear entertainment system	Erase Codes		V1.00.001 or higher
GLE (292)	AVE-H - Controller unit Rear entertainment system	Live Data		V1.00.001 or higher
GLE (292)	AVE-H - Controller unit Rear entertainment system	Active Test		V1.00.001 or higher
GLE (292)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher
GLE (292)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Read Codes		V1.00.001 or higher

GLE (292)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
GLE (292)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
GLE (292)	TPAD - Touchpad	ECU Information		V1.00.001 or higher
GLE (292)	TPAD - Touchpad	Read Codes		V1.00.001 or higher
GLE (292)	TPAD - Touchpad	Erase Codes		V1.00.001 or higher
GLE (292)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
GLE (292)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher
GLE (292)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher
GLE (292)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
GLE (292)	SOUND - Sound system	ECU Information		V1.00.001 or higher
GLE (292)	SOUND - Sound system	Read Codes		V1.00.001 or higher
GLE (292)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
GLE (292)	SOUND - Sound system	Live Data		V1.00.001 or higher
GLE (292)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
GLE (292)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
GLE (292)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
GLE (292)	MFK - Multifunction camera	Live Data		V1.00.001 or higher

GLE (292)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
GLE (292)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
GLE (292)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
GLE (292)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
GLE (292)	Head-up display - Head-up display	ECU Information		V1.00.001 or higher
GLE (292)	Head-up display - Head-up display	Read Codes		V1.00.001 or higher
GLE (292)	Head-up display - Head-up display	Erase Codes		V1.00.001 or higher
GLE (292)	Head-up display - Head-up display	Live Data		V1.00.001 or higher
GLE (292)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
GLE (292)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
GLE (292)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
GLE (292)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
GLE (292)	TV - TV tuner	ECU Information		V1.00.001 or higher
GLE (292)	TV - TV tuner	Read Codes		V1.00.001 or higher
GLE (292)	TV - TV tuner	Erase Codes		V1.00.001 or higher
GLE (292)	TV - TV tuner	Live Data		V1.00.001 or higher
GLE (292)	D-FOL - Display in left rear passenger compartment	ECU Information		V1.00.001 or higher
GLE (292)	D-FOL - Display in left rear passenger compartment	Read Codes		V1.00.001 or higher

GLE (292)	D-FOL - Display in left rear passenger compartment	Erase Codes		V1.00.001 or higher
GLE (292)	D-FOL - Display in left rear passenger compartment	Live Data		V1.00.001 or higher
GLE (292)	D-FOL - Display in left rear passenger compartment	Active Test		V1.00.001 or higher
GLE (292)	D-FOR - Display in right rear passenger compartment	ECU Information		V1.00.001 or higher
GLE (292)	D-FOR - Display in right rear passenger compartment	Read Codes		V1.00.001 or higher
GLE (292)	D-FOR - Display in right rear passenger compartment	Erase Codes		V1.00.001 or higher
GLE (292)	D-FOR - Display in right rear passenger compartment	Live Data		V1.00.001 or higher
GLE (292)	D-FOR - Display in right rear passenger compartment	Active Test		V1.00.001 or higher
GLE (292)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
GLE (292)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
GLE (292)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
GLE (292)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
GLE (292)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher

GLE (292)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
GLE (292)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
GLE (292)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
GLE (292)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
GLE (292)	PPAMKS - Pneumatic pump for active multicontour seat	ECU Information		V1.00.001 or higher
GLE (292)	PPAMKS - Pneumatic pump for active multicontour seat	Read Codes		V1.00.001 or higher
GLE (292)	PPAMKS - Pneumatic pump for active multicontour seat	Erase Codes		V1.00.001 or higher
GLE (292)	PPAMKS - Pneumatic pump for active multicontour seat	Live Data		V1.00.001 or higher
GLE (292)	PPAMKS - Pneumatic pump for active multicontour seat	Active Test		V1.00.001 or higher
GLE (292)	MKS-FS- Multicontour seat 'Driver'	ECU Information		V1.00.001 or higher
GLE (292)	MKS-FS- Multicontour seat 'Driver'	Read Codes		V1.00.001 or higher
GLE (292)	MKS-FS- Multicontour seat 'Driver'	Erase Codes		V1.00.001 or higher

GLE (292)	MKS-FS- Multicontour seat 'Driver'	Live Data		V1.00.001 or higher
GLE (292)	MKS-BFS- Multicontour seat 'Front passenger'	ECU Information		V1.00.001 or higher
GLE (292)	MKS-BFS- Multicontour seat 'Front passenger'	Read Codes		V1.00.001 or higher
GLE (292)	MKS-BFS- Multicontour seat 'Front passenger'	Erase Codes		V1.00.001 or higher
GLE (292)	MKS-BFS- Multicontour seat 'Front passenger'	Live Data		V1.00.001 or higher
GLE (292)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	ECU Information		V1.00.001 or higher
GLE (292)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Read Codes		V1.00.001 or higher
GLE (292)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Erase Codes		V1.00.001 or higher
GLE (292)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Live Data		V1.00.001 or higher
GLE (292)	ESA 'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	ECU Information		V1.00.001 or higher



GLE (292)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Read Codes		V1.00.001 or higher
GLE (292)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Erase Codes		V1.00.001 or higher
GLE (292)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Live Data		V1.00.001 or higher
GLE (292)	DCU-LF-Left front door	ECU Information		V1.00.001 or higher
GLE (292)	DCU-LF-Left front door	Read Codes		V1.00.001 or higher
GLE (292)	DCU-LF-Left front door	Erase Codes		V1.00.001 or higher
GLE (292)	DCU-LF-Left front door	Live Data		V1.00.001 or higher
GLE (292)	DCU-RF-Right front door	ECU Information		V1.00.001 or higher
GLE (292)	DCU-RF-Right front door	Read Codes		V1.00.001 or higher
GLE (292)	DCU-RF-Right front door	Erase Codes		V1.00.001 or higher
GLE (292)	DCU-RF-Right front door	Live Data		V1.00.001 or higher
GLE (292)	DCU-LR-Left rear door	ECU Information		V1.00.001 or higher
GLE (292)	DCU-LR-Left rear door	Read Codes		V1.00.001 or higher
GLE (292)	DCU-LR-Left rear door	Erase Codes		V1.00.001 or higher
GLE (292)	DCU-LR-Left rear door	Live Data		V1.00.001 or higher
GLE (292)	DCU-RR-Right rear door	ECU Information		V1.00.001 or higher

GLE (292)	DCU-RR-Right rear door	Read Codes		V1.00.001 or higher
GLE (292)	DCU-RR-Right rear door	Erase Codes		V1.00.001 or higher
GLE (292)	DCU-RR-Right rear door	Live Data		V1.00.001 or higher
GLE (292)	AAC-Air conditioning	ECU Information		V1.00.001 or higher
GLE (292)	AAC-Air conditioning	Read Codes		V1.00.001 or higher
GLE (292)	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
GLE (292)	AAC-Air conditioning	Live Data		V1.00.001 or higher
GLE (292)	STH-Stationary heater	ECU Information		V1.00.001 or higher
GLE (292)	STH-Stationary heater	Read Codes		V1.00.001 or higher
GLE (292)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
GLE (292)	STH-Stationary heater	Live Data		V1.00.001 or higher
GLE (292)	HBF-Rear control panel	ECU Information		V1.00.001 or higher
GLE (292)	HBF-Rear control panel	Read Codes		V1.00.001 or higher
GLE (292)	HBF-Rear control panel	Erase Codes		V1.00.001 or higher
GLE (292)	HBF-Rear control panel	Live Data		V1.00.001 or higher
GLE (292)	TPM-Tire pressure monitor	ECU Information		V1.00.001 or higher
GLE (292)	TPM-Tire pressure monitor	Read Codes		V1.00.001 or higher
GLE (292)	TPM-Tire pressure monitor	Erase Codes		V1.00.001 or higher
GLE (292)	TPM-Tire pressure monitor	Live Data		V1.00.001 or higher
GLE (292)	TPM-Tire pressure monitor	Active Test		V1.00.001 or higher
GLE (292)	TPM-Tire pressure monitor	Control unit adaptations	Teach-in processes	V1.00.001 or higher
GLE (292)	SGR - Radar sensors control unit	ECU Information		V1.00.001 or higher
GLE (292)	SGR - Radar sensors control unit	Read Codes		V1.00.001 or higher

GLE (292)	SGR - Radar sensors control unit	Erase Codes		V1.00.001 or higher
GLE (292)	SGR - Radar sensors control unit	Live Data		V1.00.001 or higher
GLE (292)	SGR - Radar sensors control unit	Active Test		V1.00.001 or higher
GLE (292)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
GLE (292)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
GLE (292)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
GLE (292)	DTR - DISTRONIC	Live Data		V1.00.001 or higher
GLE (292)	NSA-Night View Assist	ECU Information		V1.00.001 or higher
GLE (292)	NSA-Night View Assist	Read Codes		V1.00.001 or higher
GLE (292)	NSA-Night View Assist	Erase Codes		V1.00.001 or higher
GLE (292)	NSA-Night View Assist	Live Data		V1.00.001 or higher
GLE (292)	RFK - Backup camera	ECU Information		V1.00.001 or higher
GLE (292)	RFK - Backup camera	Read Codes		V1.00.001 or higher
GLE (292)	RFK - Backup camera	Erase Codes		V1.00.001 or higher
GLE (292)	RFK - Backup camera	Live Data		V1.00.001 or higher
GLE (292)	RFK - Backup camera	Active Test		V1.00.001 or higher
GLE (292)	PARK - Parking system	ECU Information		V1.00.001 or higher
GLE (292)	PARK - Parking system	Read Codes		V1.00.001 or higher
GLE (292)	PARK - Parking system	Erase Codes		V1.00.001 or higher
GLE (292)	PARK - Parking system	Live Data		V1.00.001 or higher
GLE (292)	PARK - Parking system	Active Test		V1.00.001 or higher
M/GLE (166)	ME - Motor electronics	ECU Information		V1.00.001 or higher

M/GLE (166)	ME - Motor electronics	Read Codes		V1.00.001 or higher
M/GLE (166)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
M/GLE (166)	ME - Motor electronics	Live Data		V1.00.001 or higher
M/GLE (166)	ME - Motor electronics	Active Test		V1.00.001 or higher
M/GLE (166)	CDI-Motor electronics	ECU Information		V1.00.001 or higher
M/GLE (166)	CDI-Motor electronics	Read Codes		V1.00.001 or higher
M/GLE (166)	CDI-Motor electronics	Erase Codes		V1.00.001 or higher
M/GLE (166)	CDI-Motor electronics	Live Data		V1.00.001 or higher
M/GLE (166)	CDI-Motor electronics	Active Test		V1.00.001 or higher
M/GLE (166)	CDI-Motor electronics	Control unit adaptations	Teach-in processes	V1.00.001 or higher
M/GLE (166)	VGS - Transmission control	ECU Information		V1.00.001 or higher
M/GLE (166)	VGS - Transmission control	Read Codes		V1.00.001 or higher
M/GLE (166)	VGS - Transmission control	Erase Codes		V1.00.001 or higher
M/GLE (166)	VGS - Transmission control	Live Data		V1.00.001 or higher
M/GLE (166)	VGS - Transmission control	Active Test		V1.00.001 or higher
M/GLE (166)	VGS - Transmission control	Special functions	Notes on cause of fault symptom:	V1.00.001 or higher
M/GLE (166)	ISM-Shift module	ECU Information		V1.00.001 or higher
M/GLE (166)	ISM-Shift module	Read Codes		V1.00.001 or higher
M/GLE (166)	ISM-Shift module	Erase Codes		V1.00.001 or higher
M/GLE (166)	ISM-Shift module	Live Data		V1.00.001 or higher
M/GLE (166)	ISM-Shift module	Active Test		V1.00.001 or higher

M/GLE (166)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
M/GLE (166)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
M/GLE (166)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
M/GLE (166)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
M/GLE (166)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
M/GLE (166)	VG - Transfer case	ECU Information		V1.00.001 or higher
M/GLE (166)	VG - Transfer case	Read Codes		V1.00.001 or higher
M/GLE (166)	VG - Transfer case	Erase Codes		V1.00.001 or higher
M/GLE (166)	VG - Transfer case	Live Data		V1.00.001 or higher
M/GLE (166)	SCR - Selective catalytic reduction	ECU Information		V1.00.001 or higher
M/GLE (166)	SCR - Selective catalytic reduction	Read Codes		V1.00.001 or higher
M/GLE (166)	SCR - Selective catalytic reduction	Erase Codes		V1.00.001 or higher
M/GLE (166)	SCR - Selective catalytic reduction	Live Data		V1.00.001 or higher
M/GLE (166)	SCR - Selective catalytic reduction	Active Test		V1.00.001 or higher
M/GLE (166)	PTCU-Common powertrain controller	ECU Information		V1.00.001 or higher
M/GLE (166)	PTCU-Common powertrain controller	Read Codes		V1.00.001 or higher
M/GLE (166)	PTCU-Common powertrain controller	Erase Codes		V1.00.001 or higher
M/GLE (166)	PTCU-Common powertrain controller	Live Data		V1.00.001 or higher
M/GLE (166)	SG-EM - Power electronics	ECU Information		V1.00.001 or higher

M/GLE (166)	SG-EM - Power electronics	Read Codes		V1.00.001 or higher
M/GLE (166)	SG-EM - Power electronics	Erase Codes		V1.00.001 or higher
M/GLE (166)	SG-EM - Power electronics	Live Data		V1.00.001 or higher
M/GLE (166)	ESP - Electric stability program	ECU Information		V1.00.001 or higher
M/GLE (166)	ESP - Electric stability program	Read Codes		V1.00.001 or higher
M/GLE (166)	ESP - Electric stability program	Erase Codes		V1.00.001 or higher
M/GLE (166)	ESP - Electric stability program	Live Data		V1.00.001 or higher
M/GLE (166)	ESP - Electric stability program	Active Test		V1.00.001 or higher
M/GLE (166)	ESP - Electric stability program	Control unit adaptations	Teach-in processes	V1.00.001 or higher
M/GLE (166)	ESP - Electric stability program	Special functions	Display of SCN	V1.00.001 or higher
M/GLE (166)	ESP - Electric stability program	Special functions	Display of CVN	V1.00.001 or higher
M/GLE (166)	EFB-Electronic parking brake	ECU Information		V1.00.001 or higher
M/GLE (166)	EFB-Electronic parking brake	Read Codes		V1.00.001 or higher
M/GLE (166)	EFB-Electronic parking brake	Erase Codes		V1.00.001 or higher
M/GLE (166)	EFB-Electronic parking brake	Live Data		V1.00.001 or higher
M/GLE (166)	EFB-Electronic parking brake	Active Test		V1.00.001 or higher
M/GLE (166)	EFB-Electronic parking brake	Control unit adaptations	Calibration of control unit 'N128 (Electric parking brake control unit)'	V1.00.001 or higher
M/GLE (166)	AIRMATIC - AIRMATIC	ECU Information		V1.00.001 or higher
M/GLE (166)	AIRMATIC - AIRMATIC	Read Codes		V1.00.001 or higher
M/GLE (166)	AIRMATIC - AIRMATIC	Erase Codes		V1.00.001 or higher
M/GLE (166)	AIRMATIC - AIRMATIC	Live Data		V1.00.001 or higher
M/GLE (166)	ES-Electrical power steering	ECU Information		V1.00.001 or higher

M/GLE (166)	ES-Electrical power steering	Read Codes		V1.00.001 or higher
M/GLE (166)	ES-Electrical power steering	Erase Codes		V1.00.001 or higher
M/GLE (166)	ES-Electrical power steering	Live Data		V1.00.001 or higher
M/GLE (166)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
M/GLE (166)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
M/GLE (166)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
M/GLE (166)	DTR - DISTRONIC	Live Data		V1.00.001 or higher
M/GLE (166)	FWGW-Chassis gateway	ECU Information		V1.00.001 or higher
M/GLE (166)	FWGW-Chassis gateway	Read Codes		V1.00.001 or higher
M/GLE (166)	FWGW-Chassis gateway	Erase Codes		V1.00.001 or higher
M/GLE (166)	FWGW-Chassis gateway	Live Data		V1.00.001 or higher
M/GLE (166)	Roll control-Roll control	ECU Information		V1.00.001 or higher
M/GLE (166)	Roll control-Roll control	Read Codes		V1.00.001 or higher
M/GLE (166)	Roll control-Roll control	Erase Codes		V1.00.001 or higher
M/GLE (166)	Roll control-Roll control	Live Data		V1.00.001 or higher
M/GLE (166)	SRS-Supplemental restraint system	ECU Information		V1.00.001 or higher
M/GLE (166)	SRS-Supplemental restraint system	Read Codes		V1.00.001 or higher
M/GLE (166)	SRS-Supplemental restraint system	Erase Codes		V1.00.001 or higher
M/GLE (166)	SRS-Supplemental restraint system	Live Data		V1.00.001 or higher
M/GLE (166)	SRS-Supplemental restraint system	Active Test		V1.00.001 or higher
M/GLE (166)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher

M/GLE (166)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
M/GLE (166)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
M/GLE (166)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
M/GLE (166)	SCM-Steering column module	ECU Information		V1.00.001 or higher
M/GLE (166)	SCM-Steering column module	Read Codes		V1.00.001 or higher
M/GLE (166)	SCM-Steering column module	Erase Codes		V1.00.001 or higher
M/GLE (166)	SCM-Steering column module	Live Data		V1.00.001 or higher
M/GLE (166)	SCM-Steering column module	Active Test		V1.00.001 or higher
M/GLE (166)	ATA-ATA[EDW]/tow-away protection/interior protection	ECU Information		V1.00.001 or higher
M/GLE (166)	ATA-ATA[EDW]/tow-away protection/interior protection	Read Codes		V1.00.001 or higher
M/GLE (166)	ATA-ATA[EDW]/tow-away protection/interior protection	Erase Codes		V1.00.001 or higher
M/GLE (166)	ATA-ATA[EDW]/tow-away protection/interior protection	Live Data		V1.00.001 or higher
M/GLE (166)	Multifunction control unit-Multifunction control unit	ECU Information		V1.00.001 or higher
M/GLE (166)	Multifunction control unit-Multifunction control unit	Read Codes		V1.00.001 or higher
M/GLE (166)	Multifunction control unit-Multifunction control unit	Erase Codes		V1.00.001 or higher



M/GLE (166)	Multifunction control unit- Multifunction control unit	Live Data		V1.00.001 or higher
M/GLE (166)	Multifunction control unit- Multifunction control unit	Active Test		V1.00.001 or higher
M/GLE (166)	KG - KEYLESS GO	ECU Information		V1.00.001 or higher
M/GLE (166)	KG - KEYLESS GO	Read Codes		V1.00.001 or higher
M/GLE (166)	KG - KEYLESS GO	Erase Codes		V1.00.001 or higher
M/GLE (166)	KG - KEYLESS GO	Live Data		V1.00.001 or higher
M/GLE (166)	KG - KEYLESS GO	Active Test		V1.00.001 or higher
M/GLE (166)	HKS-Tailgate control (N121/1)	ECU Information		V1.00.001 or higher
M/GLE (166)	HKS-Tailgate control (N121/1)	Read Codes		V1.00.001 or higher
M/GLE (166)	HKS-Tailgate control (N121/1)	Erase Codes		V1.00.001 or higher
M/GLE (166)	HKS-Tailgate control (N121/1)	Live Data		V1.00.001 or higher
M/GLE (166)	SG-SOGE-E - Sound generator for electric vehicle	ECU Information		V1.00.001 or higher
M/GLE (166)	SG-SOGE-E - Sound generator for electric vehicle	Read Codes		V1.00.001 or higher
M/GLE (166)	SG-SOGE-E - Sound generator for electric vehicle	Erase Codes		V1.00.001 or higher
M/GLE (166)	SG-SOGE-E - Sound generator for electric vehicle	Live Data		V1.00.001 or higher
M/GLE (166)	SD - Control module Silding roof	ECU Information		V1.00.001 or higher
M/GLE (166)	SD - Control module Silding roof	Read Codes		V1.00.001 or higher

M/GLE (166)	SD - Control module Silding roof	Erase Codes		V1.00.001 or higher
M/GLE (166)	SD - Control module Silding roof	Live Data		V1.00.001 or higher
M/GLE (166)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
M/GLE (166)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
M/GLE (166)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
M/GLE (166)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
M/GLE (166)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
M/GLE (166)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
M/GLE (166)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
M/GLE (166)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher

M/GLE (166)	Trailer recognition module - Trailer recognition	ECU Information		V1.00.001 or higher
M/GLE (166)	Trailer recognition module - Trailer recognition	Read Codes		V1.00.001 or higher
M/GLE (166)	Trailer recognition module - Trailer recognition	Erase Codes		V1.00.001 or higher
M/GLE (166)	Trailer recognition module - Trailer recognition	Live Data		V1.00.001 or higher
M/GLE (166)	Trailer recognition module - Trailer recognition	Active Test		V1.00.001 or higher
M/GLE (166)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher
M/GLE (166)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
M/GLE (166)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
M/GLE (166)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
M/GLE (166)	Rear-Rear control unit	ECU Information		V1.00.001 or higher
M/GLE (166)	Rear-Rear control unit	Read Codes		V1.00.001 or higher
M/GLE (166)	Rear-Rear control unit	Erase Codes		V1.00.001 or higher
M/GLE (166)	Rear-Rear control unit	Live Data		V1.00.001 or higher

M/GLE (166)	SG-SW-L - Left headlamp	ECU Information		V1.00.001 or higher
M/GLE (166)	SG-SW-L - Left headlamp	Read Codes		V1.00.001 or higher
M/GLE (166)	SG-SW-L - Left headlamp	Erase Codes		V1.00.001 or higher
M/GLE (166)	SG-SW-L - Left headlamp	Live Data		V1.00.001 or higher
M/GLE (166)	SG-SW-L - Left headlamp	Active Test		V1.00.001 or higher
M/GLE (166)	SG-SW-R - Right headlamp	ECU Information		V1.00.001 or higher
M/GLE (166)	SG-SW-R - Right headlamp	Read Codes		V1.00.001 or higher
M/GLE (166)	SG-SW-R - Right headlamp	Erase Codes		V1.00.001 or higher
M/GLE (166)	SG-SW-R - Right headlamp	Live Data		V1.00.001 or higher
M/GLE (166)	SG-SW-R - Right headlamp	Active Test		V1.00.001 or higher
M/GLE (166)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
M/GLE (166)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
M/GLE (166)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
M/GLE (166)	IC - Instrument cluster	Live Data		V1.00.001 or higher
M/GLE (166)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
M/GLE (166)	IC - Instrument cluster	Active Test		V1.00.001 or higher
M/GLE (166)	AVE-H - Controller unit Rear entertainment system	ECU Information		V1.00.001 or higher
M/GLE (166)	AVE-H - Controller unit Rear entertainment system	Read Codes		V1.00.001 or higher
M/GLE (166)	AVE-H - Controller unit Rear entertainment system	Erase Codes		V1.00.001 or higher

M/GLE (166)	AVE-H - Controller unit Rear entertainment system	Live Data		V1.00.001 or higher
M/GLE (166)	AVE-H - Controller unit Rear entertainment system	Active Test		V1.00.001 or higher
M/GLE (166)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher
M/GLE (166)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Read Codes		V1.00.001 or higher
M/GLE (166)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
M/GLE (166)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
M/GLE (166)	NAV-Navigation module	ECU Information		V1.00.001 or higher
M/GLE (166)	NAV-Navigation module	Read Codes		V1.00.001 or higher
M/GLE (166)	NAV-Navigation module	Erase Codes		V1.00.001 or higher
M/GLE (166)	NAV-Navigation module	Live Data		V1.00.001 or higher
M/GLE (166)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
M/GLE (166)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher
M/GLE (166)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher

M/GLE (166)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
M/GLE (166)	SOUND - Sound system	ECU Information		V1.00.001 or higher
M/GLE (166)	SOUND - Sound system	Read Codes		V1.00.001 or higher
M/GLE (166)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
M/GLE (166)	SOUND - Sound system	Live Data		V1.00.001 or higher
M/GLE (166)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
M/GLE (166)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
M/GLE (166)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
M/GLE (166)	TELE AID-Control unit	Live Data		V1.00.001 or higher
M/GLE (166)	TV - TV tuner	ECU Information		V1.00.001 or higher
M/GLE (166)	TV - TV tuner	Read Codes		V1.00.001 or higher
M/GLE (166)	TV - TV tuner	Erase Codes		V1.00.001 or higher
M/GLE (166)	TV - TV tuner	Live Data		V1.00.001 or higher
M/GLE (166)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
M/GLE (166)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
M/GLE (166)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
M/GLE (166)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
M/GLE (166)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
M/GLE (166)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
M/GLE (166)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher

M/GLE (166)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
M/GLE (166)	Drive Kit Plus - Drive kit for iPhone	ECU Information		V1.00.001 or higher
M/GLE (166)	Drive Kit Plus - Drive kit for iPhone	Read Codes		V1.00.001 or higher
M/GLE (166)	Drive Kit Plus - Drive kit for iPhone	Erase Codes		V1.00.001 or higher
M/GLE (166)	Drive Kit Plus - Drive kit for iPhone	Live Data		V1.00.001 or higher
M/GLE (166)	Head-up display - Head-up display	ECU Information		V1.00.001 or higher
M/GLE (166)	Head-up display - Head-up display	Read Codes		V1.00.001 or higher
M/GLE (166)	Head-up display - Head-up display	Erase Codes		V1.00.001 or higher
M/GLE (166)	Head-up display - Head-up display	Live Data		V1.00.001 or higher
M/GLE (166)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
M/GLE (166)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
M/GLE (166)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
M/GLE (166)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
M/GLE (166)	MIF - Media interface	ECU Information		V1.00.001 or higher
M/GLE (166)	MIF - Media interface	Read Codes		V1.00.001 or higher
M/GLE (166)	MIF - Media interface	Erase Codes		V1.00.001 or higher
M/GLE (166)	MIF - Media interface	Live Data		V1.00.001 or higher
M/GLE (166)	D-FOL - Display in left rear passenger compartment	ECU Information		V1.00.001 or higher

M/GLE (166)	D-FOL - Display in left rear passenger compartment	Read Codes		V1.00.001 or higher
M/GLE (166)	D-FOL - Display in left rear passenger compartment	Erase Codes		V1.00.001 or higher
M/GLE (166)	D-FOL - Display in left rear passenger compartment	Live Data		V1.00.001 or higher
M/GLE (166)	D-FOL - Display in left rear passenger compartment	Active Test		V1.00.001 or higher
M/GLE (166)	D-FOR - Display in right rear passenger compartment	ECU Information		V1.00.001 or higher
M/GLE (166)	D-FOR - Display in right rear passenger compartment	Read Codes		V1.00.001 or higher
M/GLE (166)	D-FOR - Display in right rear passenger compartment	Erase Codes		V1.00.001 or higher
M/GLE (166)	D-FOR - Display in right rear passenger compartment	Live Data		V1.00.001 or higher
M/GLE (166)	D-FOR - Display in right rear passenger compartment	Active Test		V1.00.001 or higher
M/GLE (166)	TELE AID- Telematic service Emergency call	ECU Information		V1.00.001 or higher
M/GLE (166)	TELE AID- Telematic service Emergency call	Read Codes		V1.00.001 or higher
M/GLE (166)	TELE AID- Telematic service Emergency call	Erase Codes		V1.00.001 or higher



M/GLE (166)	TELE AID- Telematic service Emergency call	Live Data		V1.00.001 or higher
M/GLE (166)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
M/GLE (166)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
M/GLE (166)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
M/GLE (166)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
M/GLE (166)	TELE AID- Telematic services Remote door unlocking	ECU Information		V1.00.001 or higher
M/GLE (166)	TELE AID- Telematic services Remote door unlocking	Read Codes		V1.00.001 or higher
M/GLE (166)	TELE AID- Telematic services Remote door unlocking	Erase Codes		V1.00.001 or higher
M/GLE (166)	TELE AID- Telematic services Remote door unlocking	Live Data		V1.00.001 or higher

M/GLE (166)	TELE AID- Telematic service Stolen vehicle tracking	ECU Information		V1.00.001 or higher
M/GLE (166)	TELE AID- Telematic service Stolen vehicle tracking	Read Codes		V1.00.001 or higher
M/GLE (166)	TELE AID- Telematic service Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
M/GLE (166)	TELE AID- Telematic service Stolen vehicle tracking	Live Data		V1.00.001 or higher
M/GLE (166)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
M/GLE (166)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
M/GLE (166)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
M/GLE (166)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
M/GLE (166)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher
M/GLE (166)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
M/GLE (166)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
M/GLE (166)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
M/GLE (166)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
M/GLE (166)	PARK - Parking system	ECU Information		V1.00.001 or higher
M/GLE (166)	PARK - Parking system	Read Codes		V1.00.001 or higher

M/GLE (166)	PARK - Parking system	Erase Codes		V1.00.001 or higher
M/GLE (166)	PARK - Parking system	Live Data		V1.00.001 or higher
M/GLE (166)	PPAMKS - Pneumatic pump for multicontour seat	ECU Information		V1.00.001 or higher
M/GLE (166)	PPAMKS - Pneumatic pump for multicontour seat	Read Codes		V1.00.001 or higher
M/GLE (166)	PPAMKS - Pneumatic pump for multicontour seat	Erase Codes		V1.00.001 or higher
M/GLE (166)	PPAMKS - Pneumatic pump for multicontour seat	Live Data		V1.00.001 or higher
M/GLE (166)	PPAMKS - Pneumatic pump for multicontour seat	Active Test		V1.00.001 or higher
M/GLE (166)	MKS-FS- Multicontour seat 'Driver'	ECU Information		V1.00.001 or higher
M/GLE (166)	MKS-FS- Multicontour seat 'Driver'	Read Codes		V1.00.001 or higher
M/GLE (166)	MKS-FS- Multicontour seat 'Driver'	Erase Codes		V1.00.001 or higher
M/GLE (166)	MKS-FS- Multicontour seat 'Driver'	Live Data		V1.00.001 or higher
M/GLE (166)	MKS-BFS- Multicontour seat 'Front passenger'	ECU Information		V1.00.001 or higher
M/GLE (166)	MKS-BFS- Multicontour seat 'Front passenger'	Read Codes		V1.00.001 or higher
M/GLE (166)	MKS-BFS- Multicontour seat 'Front passenger'	Erase Codes		V1.00.001 or higher

M/GLE (166)	MKS-BFS- Multicontour seat 'Front passenger'	Live Data		V1.00.001 or higher
M/GLE (166)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	ECU Information		V1.00.001 or higher
M/GLE (166)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Read Codes		V1.00.001 or higher
M/GLE (166)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Erase Codes		V1.00.001 or higher
M/GLE (166)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Live Data		V1.00.001 or higher
M/GLE (166)	ESA 'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	ECU Information		V1.00.001 or higher
M/GLE (166)	ESA 'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Read Codes		V1.00.001 or higher
M/GLE (166)	ESA 'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Erase Codes		V1.00.001 or higher

M/GLE (166)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Live Data		V1.00.001 or higher
M/GLE (166)	DCU-LF-Left front door	ECU Information		V1.00.001 or higher
M/GLE (166)	DCU-LF-Left front door	Read Codes		V1.00.001 or higher
M/GLE (166)	DCU-LF-Left front door	Erase Codes		V1.00.001 or higher
M/GLE (166)	DCU-LF-Left front door	Live Data		V1.00.001 or higher
M/GLE (166)	DCU-RF-Right front door	ECU Information		V1.00.001 or higher
M/GLE (166)	DCU-RF-Right front door	Read Codes		V1.00.001 or higher
M/GLE (166)	DCU-RF-Right front door	Erase Codes		V1.00.001 or higher
M/GLE (166)	DCU-RF-Right front door	Live Data		V1.00.001 or higher
M/GLE (166)	DCU-LR-Left rear door	ECU Information		V1.00.001 or higher
M/GLE (166)	DCU-LR-Left rear door	Read Codes		V1.00.001 or higher
M/GLE (166)	DCU-LR-Left rear door	Erase Codes		V1.00.001 or higher
M/GLE (166)	DCU-LR-Left rear door	Live Data		V1.00.001 or higher
M/GLE (166)	DCU-RR-Right rear door	ECU Information		V1.00.001 or higher
M/GLE (166)	DCU-RR-Right rear door	Read Codes		V1.00.001 or higher
M/GLE (166)	DCU-RR-Right rear door	Erase Codes		V1.00.001 or higher
M/GLE (166)	DCU-RR-Right rear door	Live Data		V1.00.001 or higher
M/GLE (166)	AAC-Air conditioning	ECU Information		V1.00.001 or higher
M/GLE (166)	AAC-Air conditioning	Read Codes		V1.00.001 or higher
M/GLE (166)	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
M/GLE (166)	AAC-Air conditioning	Live Data		V1.00.001 or higher

M/GLE (166)	STH-Stationary heater	ECU Information		V1.00.001 or higher
M/GLE (166)	STH-Stationary heater	Read Codes		V1.00.001 or higher
M/GLE (166)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
M/GLE (166)	STH-Stationary heater	Live Data		V1.00.001 or higher
M/GLE (166)	HBF-Rear control panel	ECU Information		V1.00.001 or higher
M/GLE (166)	HBF-Rear control panel	Read Codes		V1.00.001 or higher
M/GLE (166)	HBF-Rear control panel	Erase Codes		V1.00.001 or higher
M/GLE (166)	HBF-Rear control panel	Live Data		V1.00.001 or higher
M/GLE (166)	TPM-Tire pressure monitor	ECU Information		V1.00.001 or higher
M/GLE (166)	TPM-Tire pressure monitor	Read Codes		V1.00.001 or higher
M/GLE (166)	TPM-Tire pressure monitor	Erase Codes		V1.00.001 or higher
M/GLE (166)	TPM-Tire pressure monitor	Live Data		V1.00.001 or higher
M/GLE (166)	TPM-Tire pressure monitor	Active Test		V1.00.001 or higher
M/GLE (166)	TPM-Tire pressure monitor	Control unit adaptations	Teach-in processes	V1.00.001 or higher
M/GLE (166)	SGR - Radar sensors control unit	ECU Information		V1.00.001 or higher
M/GLE (166)	SGR - Radar sensors control unit	Read Codes		V1.00.001 or higher
M/GLE (166)	SGR - Radar sensors control unit	Erase Codes		V1.00.001 or higher
M/GLE (166)	SGR - Radar sensors control unit	Live Data		V1.00.001 or higher
M/GLE (166)	SGR - Radar sensors control unit	Active Test		V1.00.001 or higher
M/GLE (166)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	ECU Information		V1.00.001 or higher

M/GLE (166)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Read Codes		V1.00.001 or higher
M/GLE (166)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Erase Codes		V1.00.001 or higher
M/GLE (166)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Live Data		V1.00.001 or higher
M/GLE (166)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Active Test		V1.00.001 or higher
M/GLE (166)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
M/GLE (166)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
M/GLE (166)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
M/GLE (166)	IRS-HRA - Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
M/GLE (166)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
M/GLE (166)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
M/GLE (166)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
M/GLE (166)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher

M/GLE (166)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
M/GLE (166)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
M/GLE (166)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
M/GLE (166)	DTR - DISTRONIC	Live Data		V1.00.001 or higher
M/GLE (166)	NSA - Night View Assist	ECU Information		V1.00.001 or higher
M/GLE (166)	NSA - Night View Assist	Read Codes		V1.00.001 or higher
M/GLE (166)	NSA - Night View Assist	Erase Codes		V1.00.001 or higher
M/GLE (166)	NSA - Night View Assist	Live Data		V1.00.001 or higher
M/GLE (166)	RFK - Backup camera	ECU Information		V1.00.001 or higher
M/GLE (166)	RFK - Backup camera	Read Codes		V1.00.001 or higher
M/GLE (166)	RFK - Backup camera	Erase Codes		V1.00.001 or higher
M/GLE (166)	RFK - Backup camera	Live Data		V1.00.001 or higher
M/GLE (166)	RFK - Backup camera	Active Test		V1.00.001 or higher
M/GLE (166)	PARK - Parking system	ECU Information		V1.00.001 or higher
M/GLE (166)	PARK - Parking system	Read Codes		V1.00.001 or higher
M/GLE (166)	PARK - Parking system	Erase Codes		V1.00.001 or higher
M/GLE (166)	PARK - Parking system	Live Data		V1.00.001 or higher
M/GLE (166)	PARK - Parking system	Active Test		V1.00.001 or higher
M (164)	ME 9.7-Motor electronics 9.7	ECU Information		V1.00.001 or higher
M (164)	ME 9.7-Motor electronics 9.7	Read Codes		V1.00.001 or higher
M (164)	ME 9.7-Motor electronics 9.7	Erase Codes		V1.00.001 or higher
M (164)	ME 9.7-Motor electronics 9.7	Live Data		V1.00.001 or higher
M (164)	ME 9.7-Motor electronics 9.7	Active Test		V1.00.001 or higher
M (164)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Learning processes	V1.00.001 or higher



M (164)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Correction programming	V1.00.001 or higher
M (164)	ME 9.7-Motor electronics 9.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
M (164)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
M (164)	ME 9.7-Motor electronics 9.7	Special functions	Variant coding	V1.00.001 or higher
M (164)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
M (164)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
M (164)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
M (164)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher
M (164)	ETC-Electronic transmission control	Control unit adaptations	Detach the transport protection of control module 'ETC', personalize or activate the control module.	V1.00.001 or higher
M (164)	ETC-Electronic transmission control	Control unit adaptations	Learning process: Y3/8s1 (Selection range sensor)	V1.00.001 or higher
M (164)	ETC-Electronic transmission control	Control unit adaptations	Learning to the Drive Authorization System (DAS/FBS)	V1.00.001 or higher
M (164)	ETC-Electronic transmission control	Special functions	Turn off the incline recognition for dynamometer mode.	V1.00.001 or higher
M (164)	ETC-Electronic transmission control	Special functions	Transmission adaptation	V1.00.001 or higher

M (164)	VG - Transfer case	ECU Information		V1.00.001 or higher
M (164)	VG - Transfer case	Read Codes		V1.00.001 or higher
M (164)	VG - Transfer case	Erase Codes		V1.00.001 or higher
M (164)	VG - Transfer case	Active Test		V1.00.001 or higher
M (164)	VG - Transfer case	Control unit adaptations	Calibration	V1.00.001 or higher
M (164)	HAQ-Interwheel differential lock at rear axle	ECU Information		V1.00.001 or higher
M (164)	HAQ-Interwheel differential lock at rear axle	Read Codes		V1.00.001 or higher
M (164)	HAQ-Interwheel differential lock at rear axle	Erase Codes		V1.00.001 or higher
M (164)	HAQ-Interwheel differential lock at rear axle	Live Data		V1.00.001 or higher
M (164)	HAQ-Interwheel differential lock at rear axle	Active Test		V1.00.001 or higher
M (164)	ISM-Intelligent servo module	ECU Information		V1.00.001 or higher
M (164)	ISM-Intelligent servo module	Read Codes		V1.00.001 or higher
M (164)	ISM-Intelligent servo module	Erase Codes		V1.00.001 or higher
M (164)	ISM-Intelligent servo module	Live Data		V1.00.001 or higher
M (164)	ISM-Intelligent servo module	Active Test		V1.00.001 or higher
M (164)	ISM-Intelligent servo module	Control unit adaptations	Please calibrate.	V1.00.001 or higher
M (164)	ISM-Intelligent servo module	Control unit adaptations	Detach the transport protection of control module 'Intelligent Servo Module', personalize or activate the control module.	V1.00.001 or higher
M (164)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher

M (164)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
M (164)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
M (164)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
M (164)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
M (164)	DTR-Distronic	ECU Information		V1.00.001 or higher
M (164)	DTR-Distronic	Read Codes		V1.00.001 or higher
M (164)	DTR-Distronic	Erase Codes		V1.00.001 or higher
M (164)	DTR-Distronic	Live Data		V1.00.001 or higher
M (164)	IRS-HRA-Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
M (164)	IRS-HRA-Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
M (164)	IRS-HRA-Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
M (164)	IRS-HRA-Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
M (164)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
M (164)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
M (164)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
M (164)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher

M (164)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
M (164)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
M (164)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
M (164)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
M (164)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
M (164)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
M (164)	ESP-Electronic stability program	Control unit adaptations	Tire pressure loss warner(Activating)	V1.00.001 or higher
M (164)	ESP-Electronic stability program	Control unit adaptations	Clear the zero point offset error of the component 'N49 (Steering Angle Sensor (SAS))'.	V1.00.001 or higher
M (164)	TPC-Tire pressure monitor	ECU Information		V1.00.001 or higher
M (164)	TPC-Tire pressure monitor	Read Codes		V1.00.001 or higher
M (164)	TPC-Tire pressure monitor	Erase Codes		V1.00.001 or higher
M (164)	TPC-Tire pressure monitor	Live Data		V1.00.001 or higher
M (164)	TPC-Tire pressure monitor	Active Test		V1.00.001 or higher
M (164)	TPC-Tire pressure monitor	Special functions	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
M (164)	TPC-Tire pressure monitor	Special functions	Initial start-up with manual settings input for new control module- For example: The previous control module cannot be read any longer.	V1.00.001 or higher

M (164)	DTR-Distronic	ECU Information		V1.00.001 or higher
M (164)	DTR-Distronic	Read Codes		V1.00.001 or higher
M (164)	DTR-Distronic	Erase Codes		V1.00.001 or higher
M (164)	DTR-Distronic	Live Data		V1.00.001 or higher
M (164)	Suspension	ECU Information		V1.00.001 or higher
M (164)	Suspension	Read Codes		V1.00.001 or higher
M (164)	Suspension	Erase Codes		V1.00.001 or higher
M (164)	Suspension	Live Data		V1.00.001 or higher
M (164)	Suspension	Active Test		V1.00.001 or higher
M (164)	Suspension	Special functions	Initial start-up	V1.00.001 or higher
M (164)	Suspension	Special functions	Pneumatic tests	V1.00.001 or higher
M (164)	EHPS- Electrohydraulic Power Steering	ECU Information		V1.00.001 or higher
M (164)	EHPS- Electrohydraulic Power Steering	Read Codes		V1.00.001 or higher
M (164)	EHPS- Electrohydraulic Power Steering	Erase Codes		V1.00.001 or higher
M (164)	EHPS- Electrohydraulic Power Steering	Live Data		V1.00.001 or higher
M (164)	AB-Airbag	ECU Information		V1.00.001 or higher
M (164)	AB-Airbag	Read Codes		V1.00.001 or higher
M (164)	AB-Airbag	Erase Codes		V1.00.001 or higher
M (164)	AB-Airbag	Live Data		V1.00.001 or higher
M (164)	AB-Airbag	Active Test		V1.00.001 or higher
M (164)	CGW-Central gateway	ECU Information		V1.00.001 or higher
M (164)	CGW-Central gateway	Read Codes		V1.00.001 or higher

M (164)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
M (164)	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher
M (164)	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher
M (164)	CGW-Central gateway	Special functions	All codes	V1.00.001 or higher
M (164)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
M (164)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
M (164)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
M (164)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
M (164)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher
M (164)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track with the workshop key.	V1.00.001 or higher
M (164)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher
M (164)	EZS-Electronic ignition switch	Control unit adaptations	Program the replacement keys.	V1.00.001 or higher
M (164)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N73 (Electronic Ignition Switch (EIS/EZS) control module)'. '.	V1.00.001 or higher
M (164)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
M (164)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
M (164)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
M (164)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
M (164)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
M (164)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher

M (164)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
M (164)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
M (164)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
M (164)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
M (164)	OCP-Overhead control panel	Control unit adaptations	SR/SHD (Tilting/Sliding Sunroof)	V1.00.001 or higher
M (164)	OCP-Overhead control panel	Control unit adaptations	Panoramic sliding sunroof	V1.00.001 or higher
M (164)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
M (164)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
M (164)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
M (164)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
M (164)	WSS-Weight sensing system	Control unit adaptations	•	V1.00.001 or higher
M (164)	WSS-Weight sensing system	Initial startup	Initial start-up	V1.00.001 or higher
M (164)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
M (164)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
M (164)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
M (164)	UCP-Upper control panel	Live Data		V1.00.001 or higher
M (164)	UCP-Upper control panel	Active Test		V1.00.001 or higher
M (164)	HBF (Rear control panel)-Rear control field	ECU Information		V1.00.001 or higher
M (164)	HBF (Rear control panel)-Rear control field	Read Codes		V1.00.001 or higher
M (164)	HBF (Rear control panel)-Rear control field	Erase Codes		V1.00.001 or higher
M (164)	HBF (Rear control panel)-Rear control field	Live Data		V1.00.001 or higher

M (164)	HBF (Rear control panel)-Rear control field	Active Test		V1.00.001 or higher
M (164)	SAM-F-Signal acquisition and actuation module front	ECU Information		V1.00.001 or higher
M (164)	SAM-F-Signal acquisition and actuation module front	Read Codes		V1.00.001 or higher
M (164)	SAM-F-Signal acquisition and actuation module front	Erase Codes		V1.00.001 or higher
M (164)	SAM-F-Signal acquisition and actuation module front	Live Data		V1.00.001 or higher
M (164)	SAM-F-Signal acquisition and actuation module front	Active Test		V1.00.001 or higher
M (164)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
M (164)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
M (164)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
M (164)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
M (164)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher



M (164)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
M (164)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
M (164)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
M (164)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
M (164)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
M (164)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
M (164)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
M (164)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
M (164)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher

M (164)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
M (164)	RevETR-LF-Left front reversible emergency tensioning retractor	Control unit adaptations	Reset the control module.	V1.00.001 or higher
M (164)	XALWA-L-Xenon headlamp, left	ECU Information		V1.00.001 or higher
M (164)	XALWA-L-Xenon headlamp, left	Read Codes		V1.00.001 or higher
M (164)	XALWA-L-Xenon headlamp, left	Erase Codes		V1.00.001 or higher
M (164)	XALWA-L-Xenon headlamp, left	Live Data		V1.00.001 or higher
M (164)	XALWA-L-Xenon headlamp, left	Active Test		V1.00.001 or higher
M (164)	XALWA-L-Xenon headlamp, left	Control unit adaptations	Zero position adjustment of axle or level sensors	V1.00.001 or higher
M (164)	XALWA-R-Xenon headlamp, right	ECU Information		V1.00.001 or higher
M (164)	XALWA-R-Xenon headlamp, right	Read Codes		V1.00.001 or higher
M (164)	XALWA-R-Xenon headlamp, right	Erase Codes		V1.00.001 or higher
M (164)	XALWA-R-Xenon headlamp, right	Live Data		V1.00.001 or higher
M (164)	XALWA-R-Xenon headlamp, right	Active Test		V1.00.001 or higher
M (164)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
M (164)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
M (164)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
M (164)	IC-Instrument cluster	ECU Information		V1.00.001 or higher
M (164)	IC-Instrument cluster	Read Codes		V1.00.001 or higher
M (164)	IC-Instrument cluster	Erase Codes		V1.00.001 or higher
M (164)	IC-Instrument cluster	Live Data		V1.00.001 or higher

M (164)	IC-Instrument cluster	Active Test		V1.00.001 or higher
M (164)	IC-Instrument cluster	Control unit adaptations	Setting days since initial registration	V1.00.001 or higher
M (164)	IC-Instrument cluster	Control unit adaptations	Setting the main odometer forward and back	V1.00.001 or higher
M (164)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
M (164)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
M (164)	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher
M (164)	SCM [MRM]-Steering column module	Live Data		V1.00.001 or higher
M (164)	SCM [MRM]-Steering column module	Active Test		V1.00.001 or higher
M (164)	SCM [MRM]-Steering column module	Initial startup	●	V1.00.001 or higher
M (164)	CM-Compass module	ECU Information		V1.00.001 or higher
M (164)	CM-Compass module	Read Codes		V1.00.001 or higher
M (164)	CM-Compass module	Erase Codes		V1.00.001 or higher
M (164)	CM-Compass module	Live Data		V1.00.001 or higher
M (164)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
M (164)	ASSYST-Active Service System	Read Codes		V1.00.001 or higher
M (164)	ASSYST-Active Service System	Erase Codes		V1.00.001 or higher
M (164)	ASSYST-Active Service System	Live Data		V1.00.001 or higher
M (164)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
M (164)	ASSYST-Active Service System	Control unit adaptations	Reinitialization of AdBlue range	V1.00.001 or higher

M (164)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
M (164)	ASSYST PLUS-PLUS Active Service System	Read Codes		V1.00.001 or higher
M (164)	ASSYST PLUS-PLUS Active Service System	Erase Codes		V1.00.001 or higher
M (164)	ASSYST PLUS-PLUS Active Service System	Live Data		V1.00.001 or higher
M (164)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
M (164)	ASSYST PLUS-PLUS Active Service System	Control unit adaptations	Control module reset	V1.00.001 or higher
M (164)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
M (164)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
M (164)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
M (164)	PTS-Parktronic system	Live Data		V1.00.001 or higher
M (164)	PTS-Parktronic system	Active Test		V1.00.001 or higher
M (164)	RFK-Backup camera	ECU Information		V1.00.001 or higher
M (164)	RFK-Backup camera	Read Codes		V1.00.001 or higher
M (164)	RFK-Backup camera	Erase Codes		V1.00.001 or higher
M (164)	RFK-Backup camera	Live Data		V1.00.001 or higher
M (164)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher

M (164)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher
M (164)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
M (164)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher
M (164)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher
M (164)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
M (164)	CDC-CD changer	ECU Information		V1.00.001 or higher
M (164)	CDC-CD changer	Read Codes		V1.00.001 or higher
M (164)	CDC-CD changer	Erase Codes		V1.00.001 or higher
M (164)	CDC-CD changer	Live Data		V1.00.001 or higher
M (164)	CDC-CD changer	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
M (164)	VCS-Voice control system	ECU Information		V1.00.001 or higher

M (164)	VCS-Voice control system	Read Codes		V1.00.001 or higher
M (164)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
M (164)	VCS-Voice control system	Active Test		V1.00.001 or higher
M (164)	COMAND or AUDIO	ECU Information		V1.00.001 or higher
M (164)	COMAND or AUDIO	Read Codes		V1.00.001 or higher
M (164)	COMAND or AUDIO	Erase Codes		V1.00.001 or higher
M (164)	COMAND or AUDIO	Live Data		V1.00.001 or higher
M (164)	COMAND or AUDIO	Active Test		V1.00.001 or higher
M (164)	COMAND or AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
M (164)	TV-TV tuner	ECU Information		V1.00.001 or higher
M (164)	TV-TV tuner	Read Codes		V1.00.001 or higher
M (164)	TV-TV tuner	Erase Codes		V1.00.001 or higher
M (164)	TV-TV tuner	Live Data		V1.00.001 or higher
M (164)	TV-TV tuner	Active Test		V1.00.001 or higher
M (164)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
M (164)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
M (164)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
M (164)	SDAR-Satellite radio	Live Data		V1.00.001 or higher
M (164)	SOUND- Sound system	ECU Information		V1.00.001 or higher
M (164)	SOUND- Sound system	Read Codes		V1.00.001 or higher
M (164)	SOUND- Sound system	Erase Codes		V1.00.001 or higher
M (164)	SOUND- Sound system	Live Data		V1.00.001 or higher
M (164)	SOUND- Sound system	Active Test		V1.00.001 or higher

M (164)	SOUND- Sound system	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
M (164)	CTEL-Mobile phone adapter with universal interface	ECU Information		V1.00.001 or higher
M (164)	CTEL-Mobile phone adapter with universal interface	Read Codes		V1.00.001 or higher
M (164)	CTEL-Mobile phone adapter with universal interface	Erase Codes		V1.00.001 or higher
M (164)	CTEL-Mobile phone adapter with universal interface	Live Data		V1.00.001 or higher
M (164)	NAVI-Navigation system	ECU Information		V1.00.001 or higher
M (164)	NAVI-Navigation system	Read Codes		V1.00.001 or higher
M (164)	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
M (164)	NAVI-Navigation system	Live Data		V1.00.001 or higher
M (164)	NAVI-Navigation system	Active Test		V1.00.001 or higher
M (164)	AVE-H-Rear audio video unit	ECU Information		V1.00.001 or higher
M (164)	AVE-H-Rear audio video unit	Read Codes		V1.00.001 or higher
M (164)	AVE-H-Rear audio video unit	Erase Codes		V1.00.001 or higher
M (164)	AVE-H-Rear audio video unit	Live Data		V1.00.001 or higher
M (164)	AVE-H-Rear audio video unit	Active Test		V1.00.001 or higher
M (164)	CTEL-Cellular telephone	ECU Information		V1.00.001 or higher
M (164)	CTEL-Cellular telephone	Read Codes		V1.00.001 or higher
M (164)	CTEL-Cellular telephone	Erase Codes		V1.00.001 or higher
M (164)	CTEL-Cellular telephone	Live Data		V1.00.001 or higher
M (164)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher

M (164)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
M (164)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher
M (164)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher
M (164)	Sound system (Main amplifier)	Active Test		V1.00.001 or higher
M (164)	UCI-Media interface	ECU Information		V1.00.001 or higher
M (164)	UCI-Media interface	Read Codes		V1.00.001 or higher
M (164)	UCI-Media interface	Erase Codes		V1.00.001 or higher
M (164)	DAB-Digital radio	ECU Information		V1.00.001 or higher
M (164)	DAB-Digital radio	Read Codes		V1.00.001 or higher
M (164)	DAB-Digital radio	Erase Codes		V1.00.001 or higher
M (164)	DAB-Digital radio	Live Data		V1.00.001 or higher
M (164)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
M (164)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
M (164)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
M (164)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
M (164)	SDAR-Satellite radio(Valid for USA)	Active Test		V1.00.001 or higher
M (164)	TV-TV tuner	ECU Information		V1.00.001 or higher
M (164)	TV-TV tuner	Read Codes		V1.00.001 or higher
M (164)	TV-TV tuner	Erase Codes		V1.00.001 or higher
M (164)	TV-TV tuner	Live Data		V1.00.001 or higher
M (164)	CTEL-Cellular telephone(JAPAN)	ECU Information		V1.00.001 or higher



M (164)	CTEL-Cellular telephone(JAPAN)	Read Codes		V1.00.001 or higher
M (164)	CTEL-Cellular telephone(JAPAN)	Erase Codes		V1.00.001 or higher
M (164)	CTEL-Cellular telephone(JAPAN)	Live Data		V1.00.001 or higher
M (164)	CTEL-Cellular telephone(JAPAN)	Active Test		V1.00.001 or higher
M (164)	AVE-H - DVD player	ECU Information		V1.00.001 or higher
M (164)	AVE-H - DVD player	Read Codes		V1.00.001 or higher
M (164)	AVE-H - DVD player	Erase Codes		V1.00.001 or higher
M (164)	AVE-H - DVD player	Live Data		V1.00.001 or higher
M (164)	Left rear screen	ECU Information		V1.00.001 or higher
M (164)	Left rear screen	Read Codes		V1.00.001 or higher
M (164)	Left rear screen	Erase Codes		V1.00.001 or higher
M (164)	Left rear screen	Live Data		V1.00.001 or higher
M (164)	Left rear screen	Active Test		V1.00.001 or higher
M (164)	Right rear screen	ECU Information		V1.00.001 or higher
M (164)	Right rear screen	Read Codes		V1.00.001 or higher
M (164)	Right rear screen	Erase Codes		V1.00.001 or higher
M (164)	Right rear screen	Live Data		V1.00.001 or higher
M (164)	Right rear screen	Active Test		V1.00.001 or higher
M (164)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
M (164)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
M (164)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
M (164)	TELE AID-Control unit	Live Data		V1.00.001 or higher

M (164)	TELE AID- Telematic services Emergency call	ECU Information		V1.00.001 or higher
M (164)	TELE AID- Telematic services Emergency call	Read Codes		V1.00.001 or higher
M (164)	TELE AID- Telematic services Emergency call	Erase Codes		V1.00.001 or higher
M (164)	TELE AID- Telematic services Emergency call	Live Data		V1.00.001 or higher
M (164)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
M (164)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
M (164)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
M (164)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
M (164)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher

M (164)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
M (164)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
M (164)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher
M (164)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher
M (164)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
M (164)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
M (164)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher
M (164)	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
M (164)	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher
M (164)	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher
M (164)	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher

M (164)	DCM-FL-Door control module front left	Active Test		V1.00.001 or higher
M (164)	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
M (164)	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher
M (164)	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
M (164)	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
M (164)	DCM-FR-Door control module front right	Active Test		V1.00.001 or higher
M (164)	ESA driver-Electric seat adjustment driver (with memory)	ECU Information		V1.00.001 or higher
M (164)	ESA driver-Electric seat adjustment driver (with memory)	Read Codes		V1.00.001 or higher
M (164)	ESA driver-Electric seat adjustment driver (with memory)	Erase Codes		V1.00.001 or higher
M (164)	ESA driver-Electric seat adjustment driver (with memory)	Live Data		V1.00.001 or higher
M (164)	ESA driver-Electric seat adjustment driver (with memory)	Active Test		V1.00.001 or higher
M (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterize the Easy Entry/Exit.	V1.00.001 or higher

M (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Increase the fore/aft adjustment range to rear.	V1.00.001 or higher
M (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterize collision avoidance.	V1.00.001 or higher
M (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Adjust the parameter for backrest adjustment.	V1.00.001 or higher
M (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
M (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher
M (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher
M (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
M (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
M (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterization of the function for moving the driver seat out of way when folding down the rear seat	V1.00.001 or higher

M (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Re-adjust the adjustment parameters.	V1.00.001 or higher
M (164)	ESA passenger-Electric seat adjustment passenger	ECU Information		V1.00.001 or higher
M (164)	ESA passenger-Electric seat adjustment passenger	Read Codes		V1.00.001 or higher
M (164)	ESA passenger-Electric seat adjustment passenger	Erase Codes		V1.00.001 or higher
M (164)	ESA passenger-Electric seat adjustment passenger	Live Data		V1.00.001 or higher
M (164)	ESA passenger-Electric seat adjustment passenger	Active Test		V1.00.001 or higher
M (164)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Parameterize collision avoidance.	V1.00.001 or higher
M (164)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Adjust the parameter for backrest adjustment.	V1.00.001 or higher
M (164)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
M (164)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher
M (164)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher

M (164)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
M (164)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
M (164)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Parameterization of the function for moving the front passenger seat out of way when folding down the rear seat	V1.00.001 or higher
M (164)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Re-adjust the adjustment parameters.	V1.00.001 or higher
M (164)	DS-LF-Left front dynamic seat	ECU Information		V1.00.001 or higher
M (164)	DS-LF-Left front dynamic seat	Read Codes		V1.00.001 or higher
M (164)	DS-LF-Left front dynamic seat	Erase Codes		V1.00.001 or higher
M (164)	DS-LF-Left front dynamic seat	Live Data		V1.00.001 or higher
M (164)	DS-LF-Left front dynamic seat	Active Test		V1.00.001 or higher
M (164)	DS-LF-Left front dynamic seat	Control unit adaptations	Air cushion calibration	V1.00.001 or higher
M (164)	DS-RF-Right front dynamic seat	ECU Information		V1.00.001 or higher
M (164)	DS-RF-Right front dynamic seat	Read Codes		V1.00.001 or higher
M (164)	DS-RF-Right front dynamic seat	Erase Codes		V1.00.001 or higher
M (164)	DS-RF-Right front dynamic seat	Live Data		V1.00.001 or higher
M (164)	DS-RF-Right front dynamic seat	Active Test		V1.00.001 or higher
M (164)	DS-RF-Right front dynamic seat	Control unit adaptations	Air cushion calibration	V1.00.001 or higher
M (164)	DSP-Pneumatic pump for dynamic seat	ECU Information		V1.00.001 or higher

M (164)	DSP-Pneumatic pump for dynamic seat	Read Codes		V1.00.001 or higher
M (164)	DSP-Pneumatic pump for dynamic seat	Erase Codes		V1.00.001 or higher
M (164)	DSP-Pneumatic pump for dynamic seat	Live Data		V1.00.001 or higher
M (164)	DSP-Pneumatic pump for dynamic seat	Active Test		V1.00.001 or higher
M (164)	REDC-Rear-end door closing control module	ECU Information		V1.00.001 or higher
M (164)	REDC-Rear-end door closing control module	Read Codes		V1.00.001 or higher
M (164)	REDC-Rear-end door closing control module	Erase Codes		V1.00.001 or higher
M (164)	REDC-Rear-end door closing control module	Live Data		V1.00.001 or higher
M (164)	REDC-Rear-end door closing control module	Active Test		V1.00.001 or higher
M (164)	REDC-Rear-end door closing control module	Control unit adaptations	Intermediate position 'Tailgate'	V1.00.001 or higher
M (164)	HS-Seat heater	ECU Information		V1.00.001 or higher
M (164)	HS-Seat heater	Read Codes		V1.00.001 or higher
M (164)	HS-Seat heater	Erase Codes		V1.00.001 or higher
M (164)	HS-Seat heater	Live Data		V1.00.001 or higher
M (164)	HS-Seat heater	Active Test		V1.00.001 or higher
M (164)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
M (164)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
M (164)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
M (164)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher



M (164)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
M (164)	AAC-Automatic air conditioning	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
M (164)	AAC-Automatic air conditioning	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
M (164)	AAC-Automatic air conditioning	Control unit adaptations	Teach-in of the actuator motors after replacement of actuator motor	V1.00.001 or higher
M (164)	AAC-Automatic air conditioning	Control unit adaptations	Break-in procedure after replacement of refrigerant compressor	V1.00.001 or higher
M (164)	HSW-Heated steering wheel	ECU Information		V1.00.001 or higher
M (164)	HSW-Heated steering wheel	Read Codes		V1.00.001 or higher
M (164)	HSW-Heated steering wheel	Erase Codes		V1.00.001 or higher
M (164)	HSW-Heated steering wheel	Live Data		V1.00.001 or higher
M (164)	HSW-Heated steering wheel	Active Test		V1.00.001 or higher
M (164)	STH-Stationary heater with remote control	ECU Information		V1.00.001 or higher
M (164)	STH-Stationary heater with remote control	Read Codes		V1.00.001 or higher
M (164)	STH-Stationary heater with remote control	Erase Codes		V1.00.001 or higher
M (164)	STH-Stationary heater with remote control	Live Data		V1.00.001 or higher
M (164)	STH-Stationary heater with remote control	Active Test		V1.00.001 or higher

M (164)	STH-Stationary heater with remote control	Control unit adaptations	Learning component " A8/3 (Stationary Heater (STH) radio remote control transmitter)	V1.00.001 or higher
M (164)	ME-SF 17.7-Motor electronics 17.7	ECU Information		V1.00.001 or higher
M (164)	ME-SF 17.7-Motor electronics 17.7	Read Codes		V1.00.001 or higher
M (164)	ME-SF 17.7-Motor electronics 17.7	Erase Codes		V1.00.001 or higher
M (164)	ME-SF 17.7-Motor electronics 17.7	Live Data		V1.00.001 or higher
M (164)	ME-SF 17.7-Motor electronics 17.7	Active Test		V1.00.001 or higher
M (164)	ME-SF 17.7-Motor electronics 17.7	Control unit adaptations	Learning processes	V1.00.001 or higher
M (164)	ME-SF 17.7-Motor electronics 17.7	Control unit adaptations	Correction programming	V1.00.001 or higher
M (164)	ME-SF 17.7-Motor electronics 17.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
M (164)	ME-SF 17.7-Motor electronics 17.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
M (164)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
M (164)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
M (164)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
M (164)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher

M (164)	ETC-Electronic transmission control	Active Test		V1.00.001 or higher
M (164)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
M (164)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
M (164)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
M (164)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
M (164)	HSG-Hybrid control unit	ECU Information		V1.00.001 or higher
M (164)	HSG-Hybrid control unit	Read Codes		V1.00.001 or higher
M (164)	HSG-Hybrid control unit	Erase Codes		V1.00.001 or higher
M (164)	HSG-Hybrid control unit	Live Data		V1.00.001 or higher
M (164)	HSG-Hybrid control unit	Active Test		V1.00.001 or higher
M (164)	RBS-Regenerative braking system	ECU Information		V1.00.001 or higher
M (164)	RBS-Regenerative braking system	Read Codes		V1.00.001 or higher
M (164)	RBS-Regenerative braking system	Erase Codes		V1.00.001 or higher
M (164)	RBS-Regenerative braking system	Live Data		V1.00.001 or higher
M (164)	RBS-Regenerative braking system	Control unit adaptations	Road test	V1.00.001 or higher
M (164)	RBS-Regenerative braking system	Control unit adaptations	Clear the zero point offset error of the component 'N49 (Steering Angle Sensor (SAS))'.	V1.00.001 or higher
M (164)	RBS-Regenerative braking system	Control unit adaptations	Calibration of the control module 'Regenerative Braking System'	V1.00.001 or higher

M (164)	RBS-Regenerative braking system	Control unit adaptations	Calibration of the component 'B37/1 (Pedal angle sensor)'	V1.00.001 or higher
M (164)	RBS-Regenerative braking system	Control unit adaptations	CVN(Calibration verification number)	V1.00.001 or higher
M (164)	SG-DDW - DC/DC converter control unit	ECU Information		V1.00.001 or higher
M (164)	SG-DDW - DC/DC converter control unit	Read Codes		V1.00.001 or higher
M (164)	SG-DDW - DC/DC converter control unit	Erase Codes		V1.00.001 or higher
M (164)	SG-DDW - DC/DC converter control unit	Live Data		V1.00.001 or higher
M (164)	SG-BMS - Battery management system control unit	ECU Information		V1.00.001 or higher
M (164)	SG-BMS - Battery management system control unit	Read Codes		V1.00.001 or higher
M (164)	SG-BMS - Battery management system control unit	Erase Codes		V1.00.001 or higher
M (164)	SG-BMS - Battery management system control unit	Live Data		V1.00.001 or higher
M (164)	EKMK-Electric refrigerant compressor	ECU Information		V1.00.001 or higher
M (164)	EKMK-Electric refrigerant compressor	Read Codes		V1.00.001 or higher
M (164)	EKMK-Electric refrigerant compressor	Erase Codes		V1.00.001 or higher
M (164)	EKMK-Electric refrigerant compressor	Live Data		V1.00.001 or higher

M (164)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
M (164)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
M (164)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
M (164)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
M (164)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
M (164)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
M (164)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
M (164)	ME2-SFI-Motor electronics 2	Special functions	Fault path tests are carried out.	V1.00.001 or higher
M (164)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	ECU Information		V1.00.001 or higher
M (164)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Read Codes		V1.00.001 or higher
M (164)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Erase Codes		V1.00.001 or higher
M (164)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Live Data		V1.00.001 or higher
M (164)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Active Test		V1.00.001 or higher
M (164)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Control unit adaptations	Learning processes	V1.00.001 or higher
M (164)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Control unit adaptations	Correction programming	V1.00.001 or higher
M (164)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher

M (164)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
M (164)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Special functions	Variant coding	V1.00.001 or higher
M (164)	FSCU Left-Control unit 'Left fuel pump'	ECU Information		V1.00.001 or higher
M (164)	FSCU Left-Control unit 'Left fuel pump'	Read Codes		V1.00.001 or higher
M (164)	FSCU Left-Control unit 'Left fuel pump'	Erase Codes		V1.00.001 or higher
M (164)	FSCU Left-Control unit 'Left fuel pump'	Active Test		V1.00.001 or higher
M (164)	FSCU Left-Control unit 'Left fuel pump'	Control unit adaptations	Assignment of the control modules to plug connections	V1.00.001 or higher
M (164)	FSCU Right- Control unit 'Right fuel pump'	ECU Information		V1.00.001 or higher
M (164)	FSCU Right- Control unit 'Right fuel pump'	Read Codes		V1.00.001 or higher
M (164)	FSCU Right- Control unit 'Right fuel pump'	Erase Codes		V1.00.001 or higher
M (164)	FSCU Right- Control unit 'Right fuel pump'	Active Test		V1.00.001 or higher
M (164)	FSCU Right- Control unit 'Right fuel pump'	Control unit adaptations	Assignment of the control modules to plug connections	V1.00.001 or higher
M (164)	ERA-Electric fold- down backrest system (3rd seat row)	ECU Information		V1.00.001 or higher
M (164)	ERA-Electric fold- down backrest system (3rd seat row)	Read Codes		V1.00.001 or higher

M (164)	ERA-Electric fold-down backrest system (3rd seat row)	Erase Codes		V1.00.001 or higher
M (164)	ERA-Electric fold-down backrest system (3rd seat row)	Live Data		V1.00.001 or higher
M (164)	ERA-Electric fold-down backrest system (3rd seat row)	Active Test		V1.00.001 or higher
M (164)	CDI 4-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
M (164)	CDI 4-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
M (164)	CDI 4-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
M (164)	CDI 4-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
M (164)	CDI 4-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher

M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Learning of the throttle valve stop	V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B28/8 (Diesel Particulate Filter (DPF) differential pressure sensor)'	V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'G3/2 (Oxygen sensor upstream of the Three Way Catalyst (TWC/KAT))'	V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y27/9 (EGR/ARF actuator)'	V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y74 (Pressure control valve)'	V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Activate the fuel pump.	V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher



M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Rapid teach-in of zero quantity calibration values	V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel Particulate Filter'	V1.00.001 or higher
M (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher
M (164)	CDI 6BIN5-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
M (164)	CDI 6BIN5-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
M (164)	CDI 6BIN5-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
M (164)	CDI 6BIN5-Common Rail Diesel Injection	Live Data		V1.00.001 or higher

M (164)	CDI 6BIN5- Common Rail Diesel Injection	Active Test		V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Selective Catalytic Reduction (SCR) exhaust aftertreatment system after replacement of ECM without transfer of values	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel oxidation catalytic converter'	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Selective Catalytic Reduction'- Catalytic converter	V1.00.001 or higher

M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B16/15 (Temperature sensor upstream of the Selective Catalytic Reduction (SCR) catalytic converter)'	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B28/8 (Diesel Particulate Filter (DPF) differential pressure sensor)'	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'G3/2 (Oxygen sensor upstream of the Three Way Catalyst (TWC/KAT))'	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Nitrogen Oxide (NOx) sensor upstream of the Selective Catalytic Reduction (SCR) catalytic converter'	V1.00.001 or higher

M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Nitrogen Oxide (NOx) sensor downstream of the Selective Catalytic Reduction (SCR) catalytic converter'	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y27/9 (EGR/ARF actuator)'	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y74 (Pressure control valve)'	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y129 (AdBlue metering valve)'	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Activate the fuel pump.	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Rapid teach-in of zero quantity calibration values	V1.00.001 or higher

M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Resetting the AdBlue quality factor	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Learning of the throttle valve stop	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Diesel Particulate Filter (DPF) after replacement of ECM without transfer of values	V1.00.001 or higher
M (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " Diesel Particulate Filter	V1.00.001 or higher

M (164)	SCR-Selective Catalytic Reduction	ECU Information		V1.00.001 or higher
M (164)	SCR-Selective Catalytic Reduction	Read Codes		V1.00.001 or higher
M (164)	SCR-Selective Catalytic Reduction	Erase Codes		V1.00.001 or higher
M (164)	SCR-Selective Catalytic Reduction	Live Data		V1.00.001 or higher
M (164)	SCR-Selective Catalytic Reduction	Active Test		V1.00.001 or higher
M (164)	SCR-Selective Catalytic Reduction	Control unit adaptations	Refill the AdBlue.	V1.00.001 or higher
M (164)	SCR-Selective Catalytic Reduction	Control unit adaptations	Clearing the adaptation values after replacement of AdBlue fluid	V1.00.001 or higher
M (164)	SCR-Selective Catalytic Reduction	Control unit adaptations	Teach-in process after replacement of component 'Y129 (AdBlue metering valve)'	V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Learning of the throttle valve stop	V1.00.001 or higher

M (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Drive Authorization System (DAS/FBS)	V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Purge control Diesel Particulate Filter	V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Replace the component 'Diesel Particulate Filter'.	V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Replace the component 'Y74 (Pressure control valve)'.	V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Teaching in the ECM after replacement of an exhaust-relevant component	V1.00.001 or higher

M (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Prevention of regeneration	V1.00.001 or higher
M (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Rapid teach-in of zero quantity calibration values	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel Particulate Filter'	V1.00.001 or higher



M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B28/8 (Diesel Particulate Filter (DPF) differential pressure sensor)'	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y74 (Pressure control valve)'	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'G3/2 (Oxygen sensor upstream of the Three Way Catalyst (TWC/KAT))'	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel oxidation catalytic converter'	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Learning of the throttle valve stop	V1.00.001 or higher

M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Activate the fuel pump.	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Rapid teach-in of zero quantity calibration values	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Selective Catalytic Reduction'-Catalytic converter	V1.00.001 or higher

M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " B16/15 (Temperature sensor upstream of the Selective Catalytic Reduction (SCR) catalytic converter)	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " N37/7b1 (Nitrogen Oxide (NOx) sensor downstream of the Diesel Particulate Filter (DPF))	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " N37/8b1 (Nitrogen Oxide (NOx) sensor downstream of the Selective Catalytic Reduction (SCR) catalytic converter)	V1.00.001 or higher
M (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " Y129 (AdBlue metering valve)	V1.00.001 or higher
M (163)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
M (163)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher

M (163)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
M (163)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
M (163)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
M (163)	ME2-SFI-Motor electronics 2	Control unit adaptations	Correction programming	V1.00.001 or higher
M (163)	ME2-SFI-Motor electronics 2	Control unit adaptations	Self-adaptation	V1.00.001 or higher
M (163)	Transmission	ECU Information		V1.00.001 or higher
M (163)	Transmission	Read Codes		V1.00.001 or higher
M (163)	Transmission	Erase Codes		V1.00.001 or higher
M (163)	Transmission	Live Data		V1.00.001 or higher
M (163)	Transmission	Active Test		V1.00.001 or higher
M (163)	Transmission	Control unit adaptations	•	V1.00.001 or higher
M (163)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
M (163)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
M (163)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
M (163)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
M (163)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
M (163)	VG - Transfer case	ECU Information		V1.00.001 or higher
M (163)	VG - Transfer case	Read Codes		V1.00.001 or higher
M (163)	VG - Transfer case	Erase Codes		V1.00.001 or higher
M (163)	VG - Transfer case	Live Data		V1.00.001 or higher
M (163)	Traction systems ABS,ASR,ETS,ESP	ECU Information		V1.00.001 or higher
M (163)	Traction systems ABS,ASR,ETS,ESP	Read Codes		V1.00.001 or higher
M (163)	Traction systems ABS,ASR,ETS,ESP	Erase Codes		V1.00.001 or higher
M (163)	Traction systems ABS,ASR,ETS,ESP	Live Data		V1.00.001 or higher

M (163)	Traction systems ABS,ASR,ETS,ESP	Active Test		V1.00.001 or higher
M (163)	Traction systems ABS,ASR,ETS,ESP	Control unit adaptations	Road test	V1.00.001 or higher
M (163)	Traction systems ABS,ASR,ETS,ESP	Control unit adaptations	Clear the zero point offset error of the component 'N49 (Steering Angle Sensor (SAS))'.	V1.00.001 or higher
M (163)	Traction systems ABS,ASR,ETS,ESP	Control unit adaptations	Tire pressure loss warner(Activatin g)	V1.00.001 or higher
M (163)	Traction systems ABS,ASR,ETS,ESP	Control unit adaptations	Clear the zero point offset error of the component 'B24/15 (Rotary speed and Lateral Acceleration Sensor (LAS))'.	V1.00.001 or higher
M (163)	BAS-Brake assist	ECU Information		V1.00.001 or higher
M (163)	BAS-Brake assist	Read Codes		V1.00.001 or higher
M (163)	BAS-Brake assist	Erase Codes		V1.00.001 or higher
M (163)	BAS-Brake assist	Live Data		V1.00.001 or higher
M (163)	BAS-Brake assist	Active Test		V1.00.001 or higher
M (163)	AB-Airbag	ECU Information		V1.00.001 or higher
M (163)	AB-Airbag	Read Codes		V1.00.001 or higher
M (163)	AB-Airbag	Erase Codes		V1.00.001 or higher
M (163)	AB-Airbag	Live Data		V1.00.001 or higher
M (163)	AB-Airbag	Active Test		V1.00.001 or higher
M (163)	EAM-Extended activity module	ECU Information		V1.00.001 or higher
M (163)	EAM-Extended activity module	Read Codes		V1.00.001 or higher

M (163)	EAM-Extended activity module	Erase Codes		V1.00.001 or higher
M (163)	EAM-Extended activity module	Live Data		V1.00.001 or higher
M (163)	EAM-Extended activity module	Active Test		V1.00.001 or higher
M (163)	AAM-All Activity Module	ECU Information		V1.00.001 or higher
M (163)	AAM-All Activity Module	Read Codes		V1.00.001 or higher
M (163)	AAM-All Activity Module	Erase Codes		V1.00.001 or higher
M (163)	AAM-All Activity Module	Live Data		V1.00.001 or higher
M (163)	AAM-All Activity Module	Active Test		V1.00.001 or higher
M (163)	AAM-All Activity Module	Control unit adaptations	Transmitter key / Transponder key	V1.00.001 or higher
M (163)	AAM-All Activity Module	Control unit adaptations	Correction programming	V1.00.001 or higher
M (163)	AAM-All Activity Module	Control unit adaptations	Test of the remote control key	V1.00.001 or higher
M (163)	AAM-All Activity Module	Control unit adaptations	Test of the immobilizer	V1.00.001 or higher
M (163)	DAS-Drive authorization system	ECU Information		V1.00.001 or higher
M (163)	DAS-Drive authorization system	Read Codes		V1.00.001 or higher
M (163)	DAS-Drive authorization system	Erase Codes		V1.00.001 or higher
M (163)	DAS-Drive authorization system	Live Data		V1.00.001 or higher
M (163)	DAS-Drive authorization system	Control unit adaptations	Revocably deactivate the key.	V1.00.001 or higher
M (163)	DAS-Drive authorization system	Control unit adaptations	Reactivate the key.	V1.00.001 or higher
M (163)	DAS-Drive authorization system	Control unit adaptations	Irrevocably deactivate the key.	V1.00.001 or higher

M (163)	DAS-Drive authorization system	Control unit adaptations	Learn the replacement key.	V1.00.001 or higher
M (163)	HRA-Headlamp range adjustment	ECU Information		V1.00.001 or higher
M (163)	HRA-Headlamp range adjustment	Read Codes		V1.00.001 or higher
M (163)	HRA-Headlamp range adjustment	Erase Codes		V1.00.001 or higher
M (163)	HRA-Headlamp range adjustment	Live Data		V1.00.001 or higher
M (163)	HRA-Headlamp range adjustment	Active Test		V1.00.001 or higher
M (163)	HRA-Headlamp range adjustment	Control unit adaptations	Zero position adjustment	V1.00.001 or higher
M (163)	LCP-Lower operating panel with power window function	ECU Information		V1.00.001 or higher
M (163)	LCP-Lower operating panel with power window function	Read Codes		V1.00.001 or higher
M (163)	LCP-Lower operating panel with power window function	Erase Codes		V1.00.001 or higher
M (163)	LCP-Lower operating panel with power window function	Live Data		V1.00.001 or higher
M (163)	LCP-Lower operating panel with power window function	Active Test		V1.00.001 or higher
M (163)	SEM-Security Module(Up to model year 1999)	ECU Information		V1.00.001 or higher

M (163)	SEM-Security Module(Up to model year 1999)	Read Codes		V1.00.001 or higher
M (163)	SEM-Security Module(Up to model year 1999)	Erase Codes		V1.00.001 or higher
M (163)	SEM-Security Module(Up to model year 1999)	Active Test		V1.00.001 or higher
M (163)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
M (163)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
M (163)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
M (163)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
M (163)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
M (163)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
M (163)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
M (163)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
M (163)	PTS-Parktronic system	Live Data		V1.00.001 or higher
M (163)	PTS-Parktronic system	Active Test		V1.00.001 or higher
M (163)	D2B-COMAND, MCS or AUDIO	ECU Information		V1.00.001 or higher
M (163)	D2B-COMAND, MCS or AUDIO	Read Codes		V1.00.001 or higher
M (163)	D2B-COMAND, MCS or AUDIO	Erase Codes		V1.00.001 or higher



M (163)	D2B-COMAND, MCS or AUDIO	Live Data		V1.00.001 or higher
M (163)	D2B-COMAND, MCS or AUDIO	Active Test		V1.00.001 or higher
M (163)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	ECU Information		V1.00.001 or higher
M (163)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Read Codes		V1.00.001 or higher
M (163)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Erase Codes		V1.00.001 or higher
M (163)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Live Data		V1.00.001 or higher
M (163)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Active Test		V1.00.001 or higher
M (163)	CDC-CD changer	ECU Information		V1.00.001 or higher
M (163)	CDC-CD changer	Read Codes		V1.00.001 or higher
M (163)	CDC-CD changer	Erase Codes		V1.00.001 or higher
M (163)	VCS-Voice control system	ECU Information		V1.00.001 or higher
M (163)	VCS-Voice control system	Read Codes		V1.00.001 or higher
M (163)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
M (163)	SOUND- Sound system	ECU Information		V1.00.001 or higher
M (163)	SOUND- Sound system	Read Codes		V1.00.001 or higher
M (163)	SOUND- Sound system	Erase Codes		V1.00.001 or higher

M (163)	SOUND- Sound system	Live Data		V1.00.001 or higher
M (163)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
M (163)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
M (163)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
M (163)	MCS navigation- Navigation in MCS	ECU Information		V1.00.001 or higher
M (163)	MCS navigation- Navigation in MCS	Read Codes		V1.00.001 or higher
M (163)	MCS navigation- Navigation in MCS	Erase Codes		V1.00.001 or higher
M (163)	MCS navigation- Navigation in MCS	Live Data		V1.00.001 or higher
M (163)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	ECU Information		V1.00.001 or higher
M (163)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Read Codes		V1.00.001 or higher
M (163)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Erase Codes		V1.00.001 or higher
M (163)	TELE AID, E-call or cellular telephone- Telematic system(K-wire)	Live Data		V1.00.001 or higher
M (163)	STH-Stationary heater	ECU Information		V1.00.001 or higher
M (163)	STH-Stationary heater	Read Codes		V1.00.001 or higher
M (163)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
M (163)	STH-Stationary heater	Live Data		V1.00.001 or higher

M (163)	STH-Stationary heater	Active Test		V1.00.001 or higher
M (163)	STH-Stationary heater	Control unit adaptations	CO2 setting	V1.00.001 or higher
M (163)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
M (163)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
M (163)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
M (163)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
M (163)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
M (163)	AAC-Automatic air conditioning	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
M (163)	AAC-Automatic air conditioning	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
M (163)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
M (163)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
M (163)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
M (163)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
M (163)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
M (163)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
M (163)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
M (163)	ME2-SFI-Motor electronics 2	Special functions	Fault path tests are carried out.	V1.00.001 or higher
M (163)	CDI 2-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
M (163)	CDI 2-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
M (163)	CDI 2-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher

M (163)	CDI 2-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
M (163)	CDI 2-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
M (163)	CDI 2-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
M (163)	CDI 2-Common Rail Diesel Injection	Control unit adaptations	Extension of run-on time Drive Authorization System (DAS/FBS) 3	V1.00.001 or higher
M (163)	VP-Vacuum pump brake booster	ECU Information		V1.00.001 or higher
M (163)	VP-Vacuum pump brake booster	Read Codes		V1.00.001 or higher
M (163)	VP-Vacuum pump brake booster	Erase Codes		V1.00.001 or higher
M (163)	VP-Vacuum pump brake booster	Live Data		V1.00.001 or higher
M (163)	VP-Vacuum pump brake booster	Active Test		V1.00.001 or higher
M (163)	CDI-V-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
M (163)	CDI-V-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
M (163)	CDI-V-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
M (163)	CDI-V-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
M (163)	CDI-V-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
M (163)	CDI-V-Common Rail Diesel Injection	Control unit adaptations	Extension of run-on time	V1.00.001 or higher

M (163)	CDI-V-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
G (463)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
G (463)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
G (463)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
G (463)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
G (463)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
G (463)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
G (463)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
G (463)	ME2-SFI-Motor electronics 2	Special functions	Fault path tests are carried out.	V1.00.001 or higher
G (463)	Transmission	ECU Information		V1.00.001 or higher
G (463)	Transmission	Read Codes		V1.00.001 or higher
G (463)	Transmission	Erase Codes		V1.00.001 or higher
G (463)	Transmission	Live Data		V1.00.001 or higher
G (463)	Transmission	Active Test		V1.00.001 or higher
G (463)	Transmission	Control unit adaptations	Definition	V1.00.001 or higher
G (463)	Transmission	Control unit adaptations	Assignment of the hydraulic shift elements	V1.00.001 or higher
G (463)	Transmission	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
G (463)	Transmission	Control unit adaptations	Important information on the combination possibilities for adaptation end stop values	V1.00.001 or higher
G (463)	Transmission	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher

G (463)	Transmission	Control unit adaptations	Performing adaptation	V1.00.001 or higher
G (463)	Transmission	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
G (463)	Transmission	Special functions	Warranty or goodwill processing	V1.00.001 or higher
G (463)	Transmission	Special functions	Diagnosis routines	V1.00.001 or higher
G (463)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
G (463)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
G (463)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
G (463)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
G (463)	ESM-Electronic selector module	Active Test		V1.00.001 or higher
G (463)	VG - Transfer case	ECU Information		V1.00.001 or higher
G (463)	VG - Transfer case	Read Codes		V1.00.001 or higher
G (463)	VG - Transfer case	Erase Codes		V1.00.001 or higher
G (463)	VG - Transfer case	Live Data		V1.00.001 or higher
G (463)	VG - Transfer case	Active Test		V1.00.001 or higher
G (463)	Traction systems ABS,ASR,ETS,ESP	ECU Information		V1.00.001 or higher
G (463)	Traction systems ABS,ASR,ETS,ESP	Read Codes		V1.00.001 or higher
G (463)	Traction systems ABS,ASR,ETS,ESP	Erase Codes		V1.00.001 or higher
G (463)	Traction systems ABS,ASR,ETS,ESP	Live Data		V1.00.001 or higher
G (463)	Traction systems ABS,ASR,ETS,ESP	Active Test		V1.00.001 or higher
G (463)	AB-Airbag	ECU Information		V1.00.001 or higher
G (463)	AB-Airbag	Read Codes		V1.00.001 or higher
G (463)	AB-Airbag	Erase Codes		V1.00.001 or higher

G (463)	AB-Airbag	Live Data		V1.00.001 or higher
G (463)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
G (463)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
G (463)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
G (463)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
G (463)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
G (463)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
G (463)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
G (463)	UCP-Upper control panel	Live Data		V1.00.001 or higher
G (463)	UCP-Upper control panel	Active Test		V1.00.001 or higher
G (463)	SAM-F-Signal acquisition and actuation module front	ECU Information		V1.00.001 or higher
G (463)	SAM-F-Signal acquisition and actuation module front	Read Codes		V1.00.001 or higher
G (463)	SAM-F-Signal acquisition and actuation module front	Erase Codes		V1.00.001 or higher
G (463)	SAM-F-Signal acquisition and actuation module front	Live Data		V1.00.001 or higher
G (463)	SAM-F-Signal acquisition and actuation module front	Active Test		V1.00.001 or higher
G (463)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher

G (463)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
G (463)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
G (463)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
G (463)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
G (463)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
G (463)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
G (463)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
G (463)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
G (463)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
G (463)	MSS-Special vehicle multifunction control module	ECU Information		V1.00.001 or higher
G (463)	MSS-Special vehicle multifunction control module	Read Codes		V1.00.001 or higher
G (463)	MSS-Special vehicle multifunction control module	Erase Codes		V1.00.001 or higher
G (463)	MSS-Special vehicle multifunction control module	Live Data		V1.00.001 or higher



G (463)	MSS-Special vehicle multifunction control module	Active Test		V1.00.001 or higher
G (463)	MSS-Special vehicle multifunction control module	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
G (463)	AHE-Trailer recognition	ECU Information		V1.00.001 or higher
G (463)	AHE-Trailer recognition	Read Codes		V1.00.001 or higher
G (463)	AHE-Trailer recognition	Erase Codes		V1.00.001 or higher
G (463)	AHE-Trailer recognition	Live Data		V1.00.001 or higher
G (463)	AHE-Trailer recognition	Active Test		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	Live Data		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	Control unit adaptations	Settings	V1.00.001 or higher
G (463)	SCM-Steering column module	ECU Information		V1.00.001 or higher

G (463)	SCM-Steering column module	Read Codes		V1.00.001 or higher
G (463)	SCM-Steering column module	Erase Codes		V1.00.001 or higher
G (463)	SCM-Steering column module	Live Data		V1.00.001 or higher
G (463)	SCM-Steering column module	Active Test		V1.00.001 or higher
G (463)	SCM-Steering column module	Initial startup	•	V1.00.001 or higher
G (463)	D2B-COMAND, MCS or AUDIO	ECU Information		V1.00.001 or higher
G (463)	D2B-COMAND, MCS or AUDIO	Read Codes		V1.00.001 or higher
G (463)	D2B-COMAND, MCS or AUDIO	Erase Codes		V1.00.001 or higher
G (463)	D2B-COMAND, MCS or AUDIO	Live Data		V1.00.001 or higher
G (463)	D2B-COMAND, MCS or AUDIO	Active Test		V1.00.001 or higher
G (463)	CDC-CD changer	ECU Information		V1.00.001 or higher
G (463)	CDC-CD changer	Read Codes		V1.00.001 or higher
G (463)	CDC-CD changer	Erase Codes		V1.00.001 or higher
G (463)	VCS-Voice control system	ECU Information		V1.00.001 or higher
G (463)	VCS-Voice control system	Read Codes		V1.00.001 or higher
G (463)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
G (463)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
G (463)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
G (463)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
G (463)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	ECU Information		V1.00.001 or higher
G (463)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Read Codes		V1.00.001 or higher

G (463)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Erase Codes		V1.00.001 or higher
G (463)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Live Data		V1.00.001 or higher
G (463)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Active Test		V1.00.001 or higher
G (463)	TV-TV tuner	ECU Information		V1.00.001 or higher
G (463)	TV-TV tuner	Read Codes		V1.00.001 or higher
G (463)	TV-TV tuner	Erase Codes		V1.00.001 or higher
G (463)	TV-TV tuner	Live Data		V1.00.001 or higher
G (463)	TV-TV tuner	Active Test		V1.00.001 or higher
G (463)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	ECU Information		V1.00.001 or higher
G (463)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Read Codes		V1.00.001 or higher
G (463)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Erase Codes		V1.00.001 or higher
G (463)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Live Data		V1.00.001 or higher

G (463)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Active Test		V1.00.001 or higher
G (463)	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
G (463)	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher
G (463)	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher
G (463)	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher
G (463)	DCM-FL-Door control module front left	Active Test		V1.00.001 or higher
G (463)	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
G (463)	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher
G (463)	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
G (463)	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
G (463)	DCM-FR-Door control module front right	Active Test		V1.00.001 or higher
G (463)	DCM-RL-Door control module rear left	ECU Information		V1.00.001 or higher
G (463)	DCM-RL-Door control module rear left	Read Codes		V1.00.001 or higher
G (463)	DCM-RL-Door control module rear left	Erase Codes		V1.00.001 or higher
G (463)	DCM-RL-Door control module rear left	Live Data		V1.00.001 or higher

G (463)	DCM-RL-Door control module rear left	Active Test		V1.00.001 or higher
G (463)	DCM-RR-Door control module rear right	ECU Information		V1.00.001 or higher
G (463)	DCM-RR-Door control module rear right	Read Codes		V1.00.001 or higher
G (463)	DCM-RR-Door control module rear right	Erase Codes		V1.00.001 or higher
G (463)	DCM-RR-Door control module rear right	Live Data		V1.00.001 or higher
G (463)	DCM-RR-Door control module rear right	Active Test		V1.00.001 or higher
G (463)	ESA passenger-Electric seat adjustment passenger	ECU Information		V1.00.001 or higher
G (463)	ESA passenger-Electric seat adjustment passenger	Read Codes		V1.00.001 or higher
G (463)	ESA passenger-Electric seat adjustment passenger	Erase Codes		V1.00.001 or higher
G (463)	ESA passenger-Electric seat adjustment passenger	Live Data		V1.00.001 or higher
G (463)	ESA passenger-Electric seat adjustment passenger	Active Test		V1.00.001 or higher
G (463)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
G (463)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher

G (463)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher
G (463)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
G (463)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
G (463)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	ECU Information		V1.00.001 or higher
G (463)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Read Codes		V1.00.001 or higher
G (463)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Erase Codes		V1.00.001 or higher
G (463)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Live Data		V1.00.001 or higher
G (463)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Active Test		V1.00.001 or higher
G (463)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
G (463)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher

G (463)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
G (463)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
G (463)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
G (463)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
G (463)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
G (463)	AAC-Automatic air conditioning	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
G (463)	AAC-Automatic air conditioning	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
G (463)	STH-Stationary heater	ECU Information		V1.00.001 or higher
G (463)	STH-Stationary heater	Read Codes		V1.00.001 or higher
G (463)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
G (463)	STH-Stationary heater	Live Data		V1.00.001 or higher
G (463)	STH-Stationary heater	Active Test		V1.00.001 or higher
G (463)	STH-Stationary heater	Control unit adaptations	CO2 setting (cold setting of combustion air blower)	V1.00.001 or higher
G (463)	STH-Stationary heater	Control unit adaptations	Learning component 'A8/3 (Stationary Heater (STH) radio remote control transmitter)'	V1.00.001 or higher
G (463)	HSW-Heated steering wheel	ECU Information		V1.00.001 or higher
G (463)	HSW-Heated steering wheel	Read Codes		V1.00.001 or higher
G (463)	HSW-Heated steering wheel	Erase Codes		V1.00.001 or higher

G (463)	HSW-Heated steering wheel	Live Data		V1.00.001 or higher
G (463)	HSW-Heated steering wheel	Active Test		V1.00.001 or higher
G (463)	HSW-Heated steering wheel	Control unit adaptations	Read the coding and change as necessary.	V1.00.001 or higher
G (463)	HSW-Heated steering wheel	Initial startup	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
G (463)	HSW-Heated steering wheel	Initial startup	Initial start-up with manual settings input for new control module(For example: The previous control module cannot be read any longer.)	V1.00.001 or higher
G (463)	CDI-V-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
G (463)	CDI-V-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
G (463)	CDI-V-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
G (463)	CDI-V-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
G (463)	CDI-V-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
G (463)	CDI-V-Common Rail Diesel Injection	Control unit adaptations	Extension of run-on time	V1.00.001 or higher
G (463)	CDI-V-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
G (463)	CDI 2-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher



G (463)	CDI 2-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
G (463)	CDI 2-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
G (463)	CDI 2-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
G (463)	CDI 2-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
G (463)	CDI 2-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
G (463)	CDI 2-Common Rail Diesel Injection	Control unit adaptations	Extension of run-on time Drive Authorization System (DAS/FBS) 3	V1.00.001 or higher
G (463)	HSW-Heated steering wheel	ECU Information		V1.00.001 or higher
G (463)	HSW-Heated steering wheel	Read Codes		V1.00.001 or higher
G (463)	HSW-Heated steering wheel	Erase Codes		V1.00.001 or higher
G (463)	HSW-Heated steering wheel	Live Data		V1.00.001 or higher
G (463)	HSW-Heated steering wheel	Active Test		V1.00.001 or higher
G (463)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
G (463)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
G (463)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
G (463)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher

G (463)	ETC-Electronic transmission control	Control unit adaptations	Detach the transport protection of control module 'ETC', personalize or activate the control module.	V1.00.001 or higher
G (463)	ETC-Electronic transmission control	Control unit adaptations	Learning process: Y3/8s1 (Selection range sensor)	V1.00.001 or higher
G (463)	ETC-Electronic transmission control	Control unit adaptations	Learning to the Drive Authorization System (DAS/FBS)	V1.00.001 or higher
G (463)	ETC-Electronic transmission control	Special functions	Turn off the incline recognition for dynamometer mode.	V1.00.001 or higher
G (463)	ETC-Electronic transmission control	Special functions	Transmission adaptation	V1.00.001 or higher
G (463)	ALWR-Headlamp range adjustment	ECU Information		V1.00.001 or higher
G (463)	ALWR-Headlamp range adjustment	Read Codes		V1.00.001 or higher
G (463)	ALWR-Headlamp range adjustment	Erase Codes		V1.00.001 or higher
G (463)	ALWR-Headlamp range adjustment	Live Data		V1.00.001 or higher
G (463)	ALWR-Headlamp range adjustment	Active Test		V1.00.001 or higher
G (463)	CDI 4-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
G (463)	CDI 4-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher

G (463)	CDI 4-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
G (463)	CDI 4-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
G (463)	CDI 4-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
G (463)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
G (463)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
G (463)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
G (463)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
G (463)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher
G (463)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher
G (463)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
G (463)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher

G (463)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher
G (463)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
G (463)	COMAND or AUDIO	ECU Information		V1.00.001 or higher
G (463)	COMAND or AUDIO	Read Codes		V1.00.001 or higher
G (463)	COMAND or AUDIO	Erase Codes		V1.00.001 or higher
G (463)	COMAND or AUDIO	Live Data		V1.00.001 or higher
G (463)	COMAND or AUDIO	Active Test		V1.00.001 or higher
G (463)	COMAND or AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
G (463)	CDC-CD changer	ECU Information		V1.00.001 or higher
G (463)	CDC-CD changer	Read Codes		V1.00.001 or higher
G (463)	CDC-CD changer	Erase Codes		V1.00.001 or higher
G (463)	CDC-CD changer	Live Data		V1.00.001 or higher
G (463)	CDC-CD changer	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
G (463)	VCS-Voice control system	ECU Information		V1.00.001 or higher
G (463)	VCS-Voice control system	Read Codes		V1.00.001 or higher
G (463)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
G (463)	VCS-Voice control system	Active Test		V1.00.001 or higher
G (463)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher

G (463)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
G (463)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
G (463)	SDAR-Satellite radio	Live Data		V1.00.001 or higher
G (463)	SOUND- Sound system	ECU Information		V1.00.001 or higher
G (463)	SOUND- Sound system	Read Codes		V1.00.001 or higher
G (463)	SOUND- Sound system	Erase Codes		V1.00.001 or higher
G (463)	SOUND- Sound system	Live Data		V1.00.001 or higher
G (463)	SOUND- Sound system	Active Test		V1.00.001 or higher
G (463)	SOUND- Sound system	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
G (463)	TV-TV tuner(AGW)	ECU Information		V1.00.001 or higher
G (463)	TV-TV tuner(AGW)	Read Codes		V1.00.001 or higher
G (463)	TV-TV tuner(AGW)	Erase Codes		V1.00.001 or higher
G (463)	TV-TV tuner(AGW)	Live Data		V1.00.001 or higher
G (463)	TV-TV tuner(AGW)	Active Test		V1.00.001 or higher
G (463)	CTEL-Mobile phone adapter with universal interface	ECU Information		V1.00.001 or higher
G (463)	CTEL-Mobile phone adapter with universal interface	Read Codes		V1.00.001 or higher
G (463)	CTEL-Mobile phone adapter with universal interface	Erase Codes		V1.00.001 or higher
G (463)	CTEL-Mobile phone adapter with universal interface	Live Data		V1.00.001 or higher
G (463)	NAVI-Navigation system	ECU Information		V1.00.001 or higher
G (463)	NAVI-Navigation system	Read Codes		V1.00.001 or higher

G (463)	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
G (463)	NAVI-Navigation system	Live Data		V1.00.001 or higher
G (463)	NAVI-Navigation system	Active Test		V1.00.001 or higher
G (463)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
G (463)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
G (463)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
G (463)	TELE AID-Control unit	Live Data		V1.00.001 or higher
G (463)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
G (463)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
G (463)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
G (463)	TELE AID-Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
G (463)	TELE AID-Telematic services Emergency call	ECU Information		V1.00.001 or higher

G (463)	TELE AID- Telematic services Emergency call	Read Codes		V1.00.001 or higher
G (463)	TELE AID- Telematic services Emergency call	Erase Codes		V1.00.001 or higher
G (463)	TELE AID- Telematic services Emergency call	Live Data		V1.00.001 or higher
G (463)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher
G (463)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
G (463)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
G (463)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher
G (463)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher
G (463)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
G (463)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher

G (463)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher
G (463)	ME 9.7-Motor electronics 9.7	ECU Information		V1.00.001 or higher
G (463)	ME 9.7-Motor electronics 9.7	Read Codes		V1.00.001 or higher
G (463)	ME 9.7-Motor electronics 9.7	Erase Codes		V1.00.001 or higher
G (463)	ME 9.7-Motor electronics 9.7	Live Data		V1.00.001 or higher
G (463)	ME 9.7-Motor electronics 9.7	Active Test		V1.00.001 or higher
G (463)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Learning processes	V1.00.001 or higher
G (463)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Correction programming	V1.00.001 or higher
G (463)	ME 9.7-Motor electronics 9.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
G (463)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
G (463)	ME 9.7-Motor electronics 9.7	Special functions	Variant coding	V1.00.001 or higher
G (463)	ABS-Antilock brake system	ECU Information		V1.00.001 or higher
G (463)	ABS-Antilock brake system	Read Codes		V1.00.001 or higher
G (463)	ABS-Antilock brake system	Erase Codes		V1.00.001 or higher
G (463)	ABS-Antilock brake system	Live Data		V1.00.001 or higher
G (463)	TPC-Tire pressure monitor	ECU Information		V1.00.001 or higher
G (463)	TPC-Tire pressure monitor	Read Codes		V1.00.001 or higher
G (463)	TPC-Tire pressure monitor	Erase Codes		V1.00.001 or higher
G (463)	TPC-Tire pressure monitor	Live Data		V1.00.001 or higher
G (463)	TPC-Tire pressure monitor	Active Test		V1.00.001 or higher



G (463)	TPC-Tire pressure monitor	Special functions	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
G (463)	TPC-Tire pressure monitor	Special functions	Initial start-up with manual settings input for new control module- For example: The previous control module cannot be read any longer.	V1.00.001 or higher
G (463)	AHE-Trailer recognition	ECU Information		V1.00.001 or higher
G (463)	AHE-Trailer recognition	Read Codes		V1.00.001 or higher
G (463)	AHE-Trailer recognition	Erase Codes		V1.00.001 or higher
G (463)	AHE-Trailer recognition	Live Data		V1.00.001 or higher
G (463)	AHE-Trailer recognition	Active Test		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	Live Data		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher

G (463)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	Control unit adaptations	Instrument Cluster (IC) settings	V1.00.001 or higher
G (463)	AUDIO	ECU Information		V1.00.001 or higher
G (463)	AUDIO	Read Codes		V1.00.001 or higher
G (463)	AUDIO	Erase Codes		V1.00.001 or higher
G (463)	AUDIO	Live Data		V1.00.001 or higher
G (463)	AUDIO	Active Test		V1.00.001 or higher
G (463)	AUDIO	Control unit adaptations	Changing the language version(Linguatronic)	V1.00.001 or higher
G (463)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher
G (463)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
G (463)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher
G (463)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher
G (463)	Sound system (Main amplifier)	Active Test		V1.00.001 or higher
G (463)	UCI-Media interface	ECU Information		V1.00.001 or higher
G (463)	UCI-Media interface	Read Codes		V1.00.001 or higher
G (463)	UCI-Media interface	Erase Codes		V1.00.001 or higher
G (463)	DAB-Digital radio	ECU Information		V1.00.001 or higher
G (463)	DAB-Digital radio	Read Codes		V1.00.001 or higher
G (463)	DAB-Digital radio	Erase Codes		V1.00.001 or higher
G (463)	DAB-Digital radio	Live Data		V1.00.001 or higher

G (463)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
G (463)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
G (463)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
G (463)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
G (463)	SDAR-Satellite radio(Valid for USA)	Active Test		V1.00.001 or higher
G (463)	TV-TV tuner	ECU Information		V1.00.001 or higher
G (463)	TV-TV tuner	Read Codes		V1.00.001 or higher
G (463)	TV-TV tuner	Erase Codes		V1.00.001 or higher
G (463)	TV-TV tuner	Live Data		V1.00.001 or higher
G (463)	CTEL-Cellular telephone(JAPAN)	ECU Information		V1.00.001 or higher
G (463)	CTEL-Cellular telephone(JAPAN)	Read Codes		V1.00.001 or higher
G (463)	CTEL-Cellular telephone(JAPAN)	Erase Codes		V1.00.001 or higher
G (463)	CTEL-Cellular telephone(JAPAN)	Live Data		V1.00.001 or higher
G (463)	CTEL-Cellular telephone(JAPAN)	Active Test		V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher

G (463)	CDI 6-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Learning of the throttle valve stop	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Selective Catalytic Reduction (SCR) exhaust aftertreatment system after replacement of ECM without transfer of values	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel oxidation catalytic converter'	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Selective Catalytic Reduction'-Catalytic converter	V1.00.001 or higher

G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B16/15 (Temperature sensor upstream of the Selective Catalytic Reduction (SCR) catalytic converter)'	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B28/8 (Diesel Particulate Filter (DPF) differential pressure sensor)'	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B28/16 (Diesel Particulate Filter (DPF) differential pressure sensor for OBD)'	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'G3/2 (Oxygen sensor upstream of the Three Way Catalyst (TWC/KAT))'	V1.00.001 or higher

G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Nitrogen Oxide (NOx) sensor upstream of the Selective Catalytic Reduction (SCR) catalytic converter'	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Nitrogen Oxide (NOx) sensor downstream of the Selective Catalytic Reduction (SCR) catalytic converter'	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y27/9 (EGR/ARF actuator)'	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y74 (Pressure control valve)'	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y129 (AdBlue metering valve)'	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Activate the fuel pump.	V1.00.001 or higher

G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Rapid teach-in of zero quantity calibration values	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Resetting the AdBlue quality factor	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel Particulate Filter'	V1.00.001 or higher
G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher

G (463)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Diesel Particulate Filter (DPF) after replacement of ECM without transfer of values	V1.00.001 or higher
G (463)	SCR-Selective Catalytic Reduction	ECU Information		V1.00.001 or higher
G (463)	SCR-Selective Catalytic Reduction	Read Codes		V1.00.001 or higher
G (463)	SCR-Selective Catalytic Reduction	Erase Codes		V1.00.001 or higher
G (463)	SCR-Selective Catalytic Reduction	Live Data		V1.00.001 or higher
G (463)	SCR-Selective Catalytic Reduction	Active Test		V1.00.001 or higher
G (463)	SCR-Selective Catalytic Reduction	Control unit adaptations	Refill the AdBlue.	V1.00.001 or higher
G (463)	SCR-Selective Catalytic Reduction	Control unit adaptations	Clearing the adaptation values after replacement of AdBlue fluid	V1.00.001 or higher
G (463)	SCR-Selective Catalytic Reduction	Control unit adaptations	Teach-in process after replacement of component 'Y129 (AdBlue metering valve)'	V1.00.001 or higher
G (463)	HS-Seat heater	ECU Information		V1.00.001 or higher
G (463)	HS-Seat heater	Read Codes		V1.00.001 or higher
G (463)	HS-Seat heater	Erase Codes		V1.00.001 or higher
G (463)	HS-Seat heater	Live Data		V1.00.001 or higher
G (463)	HS-Seat heater	Active Test		V1.00.001 or higher



G (463)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
G (463)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
G (463)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
G (463)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
G (463)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
G (463)	ME2-SFI-Motor electronics 2	Control unit adaptations	Correction programming	V1.00.001 or higher
G (463)	ME2-SFI-Motor electronics 2	Control unit adaptations	Self-adaptation	V1.00.001 or higher
G (463)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
G (463)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
G (463)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
G (463)	ETC-Electronic transmission control	Active Test		V1.00.001 or higher
G (463)	ETC-Electronic transmission control	Control unit adaptations	•	V1.00.001 or higher
G (463)	ABS-Antilock brake system	ECU Information		V1.00.001 or higher
G (463)	ABS-Antilock brake system	Read Codes		V1.00.001 or higher
G (463)	ABS-Antilock brake system	Erase Codes		V1.00.001 or higher
G (463)	ABS-Antilock brake system	Live Data		V1.00.001 or higher
G (463)	AB-Airbag	ECU Information		V1.00.001 or higher
G (463)	AB-Airbag	Read Codes		V1.00.001 or higher
G (463)	AB-Airbag	Erase Codes		V1.00.001 or higher
G (463)	APS-Auto pilot system	ECU Information		V1.00.001 or higher
G (463)	APS-Auto pilot system	Read Codes		V1.00.001 or higher

G (463)	APS-Auto pilot system	Erase Codes		V1.00.001 or higher
G (463)	APS-Auto pilot system	Live Data		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	Live Data		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
G (463)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
G (463)	STH-Stationary heater	ECU Information		V1.00.001 or higher
G (463)	STH-Stationary heater	Read Codes		V1.00.001 or higher
G (463)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
G (463)	STH-Stationary heater	Live Data		V1.00.001 or higher
G (463)	STH-Stationary heater	Active Test		V1.00.001 or higher
G (463)	STH-Stationary heater	Control unit adaptations	CO2 setting	V1.00.001 or higher
G (463)	HFM-SFI-Hot film engine management	ECU Information		V1.00.001 or higher
G (463)	HFM-SFI-Hot film engine management	Read Codes		V1.00.001 or higher

G (463)	HFM-SFI-Hot film engine management	Erase Codes		V1.00.001 or higher
G (463)	HFM-SFI-Hot film engine management	Live Data		V1.00.001 or higher
G (463)	IFI-Electronic in-line injection system diesel	ECU Information		V1.00.001 or higher
G (463)	IFI-Electronic in-line injection system diesel	Read Codes		V1.00.001 or higher
G (463)	IFI-Electronic in-line injection system diesel	Erase Codes		V1.00.001 or higher
G (461)	CDI 2-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
G (461)	CDI 2-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
G (461)	CDI 2-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
G (461)	CDI 2-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
G (461)	CDI 2-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
G (461)	CDI 2-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
G (461)	CDI 2-Common Rail Diesel Injection	Control unit adaptations	Extension of run-on time Drive Authorization System (DAS/FBS) 3	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher

G (461)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Active Test		V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Control unit adaptations	Definition	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Control unit adaptations	Assignment of the hydraulic shift elements	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Control unit adaptations	Important information on the combination possibilities for adaptation end stop values	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Control unit adaptations	Performing adaptation	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Special functions	Warranty or goodwill processing	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Special functions	Diagnosis routines	V1.00.001 or higher
G (461)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
G (461)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
G (461)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
G (461)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
G (461)	ESM-Electronic selector module	Active Test		V1.00.001 or higher

G (461)	VG - Transfer case	ECU Information		V1.00.001 or higher
G (461)	VG - Transfer case	Read Codes		V1.00.001 or higher
G (461)	VG - Transfer case	Erase Codes		V1.00.001 or higher
G (461)	VG - Transfer case	Live Data		V1.00.001 or higher
G (461)	VG - Transfer case	Active Test		V1.00.001 or higher
G (461)	ABS-Antilock brake system	ECU Information		V1.00.001 or higher
G (461)	ABS-Antilock brake system	Read Codes		V1.00.001 or higher
G (461)	ABS-Antilock brake system	Erase Codes		V1.00.001 or higher
G (461)	ABS-Antilock brake system	Live Data		V1.00.001 or higher
G (461)	ABS-Antilock brake system	Active Test		V1.00.001 or higher
G (461)	AB-Airbag	ECU Information		V1.00.001 or higher
G (461)	AB-Airbag	Read Codes		V1.00.001 or higher
G (461)	AB-Airbag	Erase Codes		V1.00.001 or higher
G (461)	AB-Airbag	Live Data		V1.00.001 or higher
G (461)	IC-Instrument cluster	ECU Information		V1.00.001 or higher
G (461)	IC-Instrument cluster	Read Codes		V1.00.001 or higher
G (461)	IC-Instrument cluster	Erase Codes		V1.00.001 or higher
G (461)	IC-Instrument cluster	Live Data		V1.00.001 or higher
G (461)	IC-Instrument cluster	Active Test		V1.00.001 or higher
G (461)	WSP immobilizer	ECU Information		V1.00.001 or higher
G (461)	WSP immobilizer	Read Codes		V1.00.001 or higher
G (461)	WSP immobilizer	Erase Codes		V1.00.001 or higher
G (461)	WSP immobilizer	Live Data		V1.00.001 or higher
G (461)	STH-Stationary heater	ECU Information		V1.00.001 or higher

G (461)	STH-Stationary heater	Read Codes		V1.00.001 or higher
G (461)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
G (461)	STH-Stationary heater	Live Data		V1.00.001 or higher
G (461)	STH-Stationary heater	Active Test		V1.00.001 or higher
G (461)	STH-Stationary heater	Control unit adaptations	CO2 setting	V1.00.001 or higher
G (461)	CDI 4-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
G (461)	CDI 4-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
G (461)	CDI 4-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
G (461)	CDI 4-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
G (461)	CDI 4-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
G (461)	CDI 4-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
G (461)	CDI 4-Common Rail Diesel Injection	Control unit adaptations	Diesel Particulate Filter Configuration	V1.00.001 or higher
G (461)	CDI 4-Common Rail Diesel Injection	Control unit adaptations	Replace the component 'Diesel Particulate Filter'.	V1.00.001 or higher
G (461)	CDI 4-Common Rail Diesel Injection	Control unit adaptations	Diesel Particulate Filter Purge control	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher

G (461)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Active Test		V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Control unit adaptations	Definition	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Control unit adaptations	Performing adaptation	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Special functions	Warranty or goodwill processing	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Special functions	Diagnosis routines	V1.00.001 or higher
G (461)	ETC-Electronic transmission control	Special functions	Initial start-up	V1.00.001 or higher
G (461)	ABS-Antilock brake system	ECU Information		V1.00.001 or higher
G (461)	ABS-Antilock brake system	Read Codes		V1.00.001 or higher
G (461)	ABS-Antilock brake system	Erase Codes		V1.00.001 or higher
G (461)	ABS-Antilock brake system	Live Data		V1.00.001 or higher
G (461)	CGW-Central gateway	ECU Information		V1.00.001 or higher

G (461)	CGW-Central gateway	Read Codes		V1.00.001 or higher
G (461)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
G (461)	CGW-Central gateway	Live Data		V1.00.001 or higher
G (461)	CGW-Central gateway	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
G (461)	AUDIO	ECU Information		V1.00.001 or higher
G (461)	AUDIO	Read Codes		V1.00.001 or higher
G (461)	AUDIO	Erase Codes		V1.00.001 or higher
G (461)	CDI 6-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
G (461)	CDI 6-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
G (461)	CDI 6-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
G (461)	CDI 6-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
G (461)	CDI 6-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
G (461)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
G (461)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel Particulate Filter'	V1.00.001 or higher



G (461)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher
G (461)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Diesel Particulate Filter (DPF) after replacement of ECM without transfer of values	V1.00.001 or higher
G (461)	AUDIO	ECU Information		V1.00.001 or higher
G (461)	AUDIO	Read Codes		V1.00.001 or higher
G (461)	AUDIO	Erase Codes		V1.00.001 or higher
G (461)	AUDIO	Live Data		V1.00.001 or higher
G (461)	AUDIO	Active Test		V1.00.001 or higher
GL/GLS (166)	ME - Motor electronics	ECU Information		V1.00.001 or higher
GL/GLS (166)	ME - Motor electronics	Read Codes		V1.00.001 or higher
GL/GLS (166)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
GL/GLS (166)	ME - Motor electronics	Live Data		V1.00.001 or higher
GL/GLS (166)	ME - Motor electronics	Active Test		V1.00.001 or higher
GL/GLS (166)	CDI-Motor electronics	ECU Information		V1.00.001 or higher
GL/GLS (166)	CDI-Motor electronics	Read Codes		V1.00.001 or higher
GL/GLS (166)	CDI-Motor electronics	Erase Codes		V1.00.001 or higher
GL/GLS (166)	CDI-Motor electronics	Live Data		V1.00.001 or higher
GL/GLS (166)	CDI-Motor electronics	Active Test		V1.00.001 or higher
GL/GLS (166)	CDI-Motor electronics	Control unit adaptations	Teach-in processes	V1.00.001 or higher

GL/GLS (166)	VGS - Transmission control	ECU Information		V1.00.001 or higher
GL/GLS (166)	VGS - Transmission control	Read Codes		V1.00.001 or higher
GL/GLS (166)	VGS - Transmission control	Erase Codes		V1.00.001 or higher
GL/GLS (166)	VGS - Transmission control	Live Data		V1.00.001 or higher
GL/GLS (166)	VGS - Transmission control	Active Test		V1.00.001 or higher
GL/GLS (166)	VGS - Transmission control	Special functions	Notes on cause of fault symptom:	V1.00.001 or higher
GL/GLS (166)	ISM-Shift module	ECU Information		V1.00.001 or higher
GL/GLS (166)	ISM-Shift module	Read Codes		V1.00.001 or higher
GL/GLS (166)	ISM-Shift module	Erase Codes		V1.00.001 or higher
GL/GLS (166)	ISM-Shift module	Live Data		V1.00.001 or higher
GL/GLS (166)	ISM-Shift module	Active Test		V1.00.001 or higher
GL/GLS (166)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
GL/GLS (166)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
GL/GLS (166)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
GL/GLS (166)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
GL/GLS (166)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
GL/GLS (166)	VG - Transfer case	ECU Information		V1.00.001 or higher
GL/GLS (166)	VG - Transfer case	Read Codes		V1.00.001 or higher
GL/GLS (166)	VG - Transfer case	Erase Codes		V1.00.001 or higher
GL/GLS (166)	VG - Transfer case	Live Data		V1.00.001 or higher

GL/GLS (166)	SCR - Selective catalytic reduction	ECU Information		V1.00.001 or higher
GL/GLS (166)	SCR - Selective catalytic reduction	Read Codes		V1.00.001 or higher
GL/GLS (166)	SCR - Selective catalytic reduction	Erase Codes		V1.00.001 or higher
GL/GLS (166)	SCR - Selective catalytic reduction	Live Data		V1.00.001 or higher
GL/GLS (166)	SCR - Selective catalytic reduction	Active Test		V1.00.001 or higher
GL/GLS (166)	PTCU-Common powertrain controller	ECU Information		V1.00.001 or higher
GL/GLS (166)	PTCU-Common powertrain controller	Read Codes		V1.00.001 or higher
GL/GLS (166)	PTCU-Common powertrain controller	Erase Codes		V1.00.001 or higher
GL/GLS (166)	PTCU-Common powertrain controller	Live Data		V1.00.001 or higher
GL/GLS (166)	SG-EM - Power electronics	ECU Information		V1.00.001 or higher
GL/GLS (166)	SG-EM - Power electronics	Read Codes		V1.00.001 or higher
GL/GLS (166)	SG-EM - Power electronics	Erase Codes		V1.00.001 or higher
GL/GLS (166)	SG-EM - Power electronics	Live Data		V1.00.001 or higher
GL/GLS (166)	ESP - Electric stability program	ECU Information		V1.00.001 or higher
GL/GLS (166)	ESP - Electric stability program	Read Codes		V1.00.001 or higher
GL/GLS (166)	ESP - Electric stability program	Erase Codes		V1.00.001 or higher
GL/GLS (166)	ESP - Electric stability program	Live Data		V1.00.001 or higher
GL/GLS (166)	ESP - Electric stability program	Active Test		V1.00.001 or higher
GL/GLS (166)	ESP - Electric stability program	Control unit adaptations	Teach-in processes	V1.00.001 or higher

GL/GLS (166)	ESP - Electric stability program	Special functions	Display of SCN	V1.00.001 or higher
GL/GLS (166)	ESP - Electric stability program	Special functions	Display of CVN	V1.00.001 or higher
GL/GLS (166)	EFB-Electronic parking brake	ECU Information		V1.00.001 or higher
GL/GLS (166)	EFB-Electronic parking brake	Read Codes		V1.00.001 or higher
GL/GLS (166)	EFB-Electronic parking brake	Erase Codes		V1.00.001 or higher
GL/GLS (166)	EFB-Electronic parking brake	Live Data		V1.00.001 or higher
GL/GLS (166)	EFB-Electronic parking brake	Active Test		V1.00.001 or higher
GL/GLS (166)	EFB-Electronic parking brake	Control unit adaptations	Calibration of control unit 'N128 (Electric parking brake control unit)'	V1.00.001 or higher
GL/GLS (166)	AIRMATIC - AIRMATIC	ECU Information		V1.00.001 or higher
GL/GLS (166)	AIRMATIC - AIRMATIC	Read Codes		V1.00.001 or higher
GL/GLS (166)	AIRMATIC - AIRMATIC	Erase Codes		V1.00.001 or higher
GL/GLS (166)	AIRMATIC - AIRMATIC	Live Data		V1.00.001 or higher
GL/GLS (166)	ES-Electrical power steering	ECU Information		V1.00.001 or higher
GL/GLS (166)	ES-Electrical power steering	Read Codes		V1.00.001 or higher
GL/GLS (166)	ES-Electrical power steering	Erase Codes		V1.00.001 or higher
GL/GLS (166)	ES-Electrical power steering	Live Data		V1.00.001 or higher
GL/GLS (166)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
GL/GLS (166)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
GL/GLS (166)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
GL/GLS (166)	DTR - DISTRONIC	Live Data		V1.00.001 or higher
GL/GLS (166)	FWGW-Chassis gateway	ECU Information		V1.00.001 or higher
GL/GLS (166)	FWGW-Chassis gateway	Read Codes		V1.00.001 or higher

GL/GLS (166)	FWGW-Chassis gateway	Erase Codes		V1.00.001 or higher
GL/GLS (166)	FWGW-Chassis gateway	Live Data		V1.00.001 or higher
GL/GLS (166)	Roll control-Roll control	ECU Information		V1.00.001 or higher
GL/GLS (166)	Roll control-Roll control	Read Codes		V1.00.001 or higher
GL/GLS (166)	Roll control-Roll control	Erase Codes		V1.00.001 or higher
GL/GLS (166)	Roll control-Roll control	Live Data		V1.00.001 or higher
GL/GLS (166)	SRS-Supplemental restraint system	ECU Information		V1.00.001 or higher
GL/GLS (166)	SRS-Supplemental restraint system	Read Codes		V1.00.001 or higher
GL/GLS (166)	SRS-Supplemental restraint system	Erase Codes		V1.00.001 or higher
GL/GLS (166)	SRS-Supplemental restraint system	Live Data		V1.00.001 or higher
GL/GLS (166)	SRS-Supplemental restraint system	Active Test		V1.00.001 or higher
GL/GLS (166)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher
GL/GLS (166)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
GL/GLS (166)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
GL/GLS (166)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
GL/GLS (166)	SCM-Steering column module	ECU Information		V1.00.001 or higher
GL/GLS (166)	SCM-Steering column module	Read Codes		V1.00.001 or higher
GL/GLS (166)	SCM-Steering column module	Erase Codes		V1.00.001 or higher
GL/GLS (166)	SCM-Steering column module	Live Data		V1.00.001 or higher
GL/GLS (166)	SCM-Steering column module	Active Test		V1.00.001 or higher

GL/GLS (166)	ATA-ATA[EDW]/tow-away protection/interior protection	ECU Information		V1.00.001 or higher
GL/GLS (166)	ATA-ATA[EDW]/tow-away protection/interior protection	Read Codes		V1.00.001 or higher
GL/GLS (166)	ATA-ATA[EDW]/tow-away protection/interior protection	Erase Codes		V1.00.001 or higher
GL/GLS (166)	ATA-ATA[EDW]/tow-away protection/interior protection	Live Data		V1.00.001 or higher
GL/GLS (166)	Multifunction control unit-Multifunction control unit	ECU Information		V1.00.001 or higher
GL/GLS (166)	Multifunction control unit-Multifunction control unit	Read Codes		V1.00.001 or higher
GL/GLS (166)	Multifunction control unit-Multifunction control unit	Erase Codes		V1.00.001 or higher
GL/GLS (166)	Multifunction control unit-Multifunction control unit	Live Data		V1.00.001 or higher
GL/GLS (166)	Multifunction control unit-Multifunction control unit	Active Test		V1.00.001 or higher
GL/GLS (166)	KG - KEYLESS GO	ECU Information		V1.00.001 or higher
GL/GLS (166)	KG - KEYLESS GO	Read Codes		V1.00.001 or higher
GL/GLS (166)	KG - KEYLESS GO	Erase Codes		V1.00.001 or higher
GL/GLS (166)	KG - KEYLESS GO	Live Data		V1.00.001 or higher

GL/GLS (166)	KG - KEYLESS GO	Active Test		V1.00.001 or higher
GL/GLS (166)	HKS-Tailgate control (N121/1)	ECU Information		V1.00.001 or higher
GL/GLS (166)	HKS-Tailgate control (N121/1)	Read Codes		V1.00.001 or higher
GL/GLS (166)	HKS-Tailgate control (N121/1)	Erase Codes		V1.00.001 or higher
GL/GLS (166)	HKS-Tailgate control (N121/1)	Live Data		V1.00.001 or higher
GL/GLS (166)	SG-SOGE-E - Sound generator for electric vehicle	ECU Information		V1.00.001 or higher
GL/GLS (166)	SG-SOGE-E - Sound generator for electric vehicle	Read Codes		V1.00.001 or higher
GL/GLS (166)	SG-SOGE-E - Sound generator for electric vehicle	Erase Codes		V1.00.001 or higher
GL/GLS (166)	SG-SOGE-E - Sound generator for electric vehicle	Live Data		V1.00.001 or higher
GL/GLS (166)	SD - Control module Silding roof	ECU Information		V1.00.001 or higher
GL/GLS (166)	SD - Control module Silding roof	Read Codes		V1.00.001 or higher
GL/GLS (166)	SD - Control module Silding roof	Erase Codes		V1.00.001 or higher
GL/GLS (166)	SD - Control module Silding roof	Live Data		V1.00.001 or higher
GL/GLS (166)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
GL/GLS (166)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher

GL/GLS (166)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
GL/GLS (166)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
GL/GLS (166)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
GL/GLS (166)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
GL/GLS (166)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
GL/GLS (166)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
GL/GLS (166)	Trailer recognition module - Trailer recognition	ECU Information		V1.00.001 or higher
GL/GLS (166)	Trailer recognition module - Trailer recognition	Read Codes		V1.00.001 or higher
GL/GLS (166)	Trailer recognition module - Trailer recognition	Erase Codes		V1.00.001 or higher
GL/GLS (166)	Trailer recognition module - Trailer recognition	Live Data		V1.00.001 or higher



GL/GLS (166)	Trailer recognition module - Trailer recognition	Active Test		V1.00.001 or higher
GL/GLS (166)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher
GL/GLS (166)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
GL/GLS (166)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
GL/GLS (166)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
GL/GLS (166)	Rear-Rear control unit	ECU Information		V1.00.001 or higher
GL/GLS (166)	Rear-Rear control unit	Read Codes		V1.00.001 or higher
GL/GLS (166)	Rear-Rear control unit	Erase Codes		V1.00.001 or higher
GL/GLS (166)	Rear-Rear control unit	Live Data		V1.00.001 or higher
GL/GLS (166)	SG-SW-L - Left headlamp	ECU Information		V1.00.001 or higher
GL/GLS (166)	SG-SW-L - Left headlamp	Read Codes		V1.00.001 or higher
GL/GLS (166)	SG-SW-L - Left headlamp	Erase Codes		V1.00.001 or higher
GL/GLS (166)	SG-SW-L - Left headlamp	Live Data		V1.00.001 or higher
GL/GLS (166)	SG-SW-L - Left headlamp	Active Test		V1.00.001 or higher
GL/GLS (166)	SG-SW-R - Right headlamp	ECU Information		V1.00.001 or higher
GL/GLS (166)	SG-SW-R - Right headlamp	Read Codes		V1.00.001 or higher
GL/GLS (166)	SG-SW-R - Right headlamp	Erase Codes		V1.00.001 or higher

GL/GLS (166)	SG-SW-R - Right headlamp	Live Data		V1.00.001 or higher
GL/GLS (166)	SG-SW-R - Right headlamp	Active Test		V1.00.001 or higher
GL/GLS (166)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
GL/GLS (166)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
GL/GLS (166)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
GL/GLS (166)	IC - Instrument cluster	Live Data		V1.00.001 or higher
GL/GLS (166)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
GL/GLS (166)	IC - Instrument cluster	Active Test		V1.00.001 or higher
GL/GLS (166)	AVE-H - Controller unit Rear entertainment system	ECU Information		V1.00.001 or higher
GL/GLS (166)	AVE-H - Controller unit Rear entertainment system	Read Codes		V1.00.001 or higher
GL/GLS (166)	AVE-H - Controller unit Rear entertainment system	Erase Codes		V1.00.001 or higher
GL/GLS (166)	AVE-H - Controller unit Rear entertainment system	Live Data		V1.00.001 or higher
GL/GLS (166)	AVE-H - Controller unit Rear entertainment system	Active Test		V1.00.001 or higher
GL/GLS (166)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher

GL/GLS (166)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Read Codes		V1.00.001 or higher
GL/GLS (166)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
GL/GLS (166)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
GL/GLS (166)	NAV-Navigation module	ECU Information		V1.00.001 or higher
GL/GLS (166)	NAV-Navigation module	Read Codes		V1.00.001 or higher
GL/GLS (166)	NAV-Navigation module	Erase Codes		V1.00.001 or higher
GL/GLS (166)	NAV-Navigation module	Live Data		V1.00.001 or higher
GL/GLS (166)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
GL/GLS (166)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher
GL/GLS (166)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher
GL/GLS (166)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
GL/GLS (166)	SOUND - Sound system	ECU Information		V1.00.001 or higher
GL/GLS (166)	SOUND - Sound system	Read Codes		V1.00.001 or higher
GL/GLS (166)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
GL/GLS (166)	SOUND - Sound system	Live Data		V1.00.001 or higher
GL/GLS (166)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
GL/GLS (166)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
GL/GLS (166)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher

GL/GLS (166)	TELE AID-Control unit	Live Data		V1.00.001 or higher
GL/GLS (166)	TV - TV tuner	ECU Information		V1.00.001 or higher
GL/GLS (166)	TV - TV tuner	Read Codes		V1.00.001 or higher
GL/GLS (166)	TV - TV tuner	Erase Codes		V1.00.001 or higher
GL/GLS (166)	TV - TV tuner	Live Data		V1.00.001 or higher
GL/GLS (166)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
GL/GLS (166)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
GL/GLS (166)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
GL/GLS (166)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
GL/GLS (166)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
GL/GLS (166)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
GL/GLS (166)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
GL/GLS (166)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
GL/GLS (166)	Drive Kit Plus - Drive kit for iPhone	ECU Information		V1.00.001 or higher
GL/GLS (166)	Drive Kit Plus - Drive kit for iPhone	Read Codes		V1.00.001 or higher
GL/GLS (166)	Drive Kit Plus - Drive kit for iPhone	Erase Codes		V1.00.001 or higher
GL/GLS (166)	Drive Kit Plus - Drive kit for iPhone	Live Data		V1.00.001 or higher
GL/GLS (166)	Head-up display - Head-up display	ECU Information		V1.00.001 or higher

GL/GLS (166)	Head-up display - Head-up display	Read Codes		V1.00.001 or higher
GL/GLS (166)	Head-up display - Head-up display	Erase Codes		V1.00.001 or higher
GL/GLS (166)	Head-up display - Head-up display	Live Data		V1.00.001 or higher
GL/GLS (166)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
GL/GLS (166)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
GL/GLS (166)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
GL/GLS (166)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
GL/GLS (166)	MIF - Media interface	ECU Information		V1.00.001 or higher
GL/GLS (166)	MIF - Media interface	Read Codes		V1.00.001 or higher
GL/GLS (166)	MIF - Media interface	Erase Codes		V1.00.001 or higher
GL/GLS (166)	MIF - Media interface	Live Data		V1.00.001 or higher
GL/GLS (166)	D-FOL - Display in left rear passenger compartment	ECU Information		V1.00.001 or higher
GL/GLS (166)	D-FOL - Display in left rear passenger compartment	Read Codes		V1.00.001 or higher
GL/GLS (166)	D-FOL - Display in left rear passenger compartment	Erase Codes		V1.00.001 or higher
GL/GLS (166)	D-FOL - Display in left rear passenger compartment	Live Data		V1.00.001 or higher
GL/GLS (166)	D-FOL - Display in left rear passenger compartment	Active Test		V1.00.001 or higher

GL/GLS (166)	D-FOR - Display in right rear passenger compartment	ECU Information		V1.00.001 or higher
GL/GLS (166)	D-FOR - Display in right rear passenger compartment	Read Codes		V1.00.001 or higher
GL/GLS (166)	D-FOR - Display in right rear passenger compartment	Erase Codes		V1.00.001 or higher
GL/GLS (166)	D-FOR - Display in right rear passenger compartment	Live Data		V1.00.001 or higher
GL/GLS (166)	D-FOR - Display in right rear passenger compartment	Active Test		V1.00.001 or higher
GL/GLS (166)	TELE AID- Telematic service Emergency call	ECU Information		V1.00.001 or higher
GL/GLS (166)	TELE AID- Telematic service Emergency call	Read Codes		V1.00.001 or higher
GL/GLS (166)	TELE AID- Telematic service Emergency call	Erase Codes		V1.00.001 or higher
GL/GLS (166)	TELE AID- Telematic service Emergency call	Live Data		V1.00.001 or higher
GL/GLS (166)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher

GL/GLS (166)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
GL/GLS (166)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
GL/GLS (166)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
GL/GLS (166)	TELE AID- Telematic services Remote door unlocking	ECU Information		V1.00.001 or higher
GL/GLS (166)	TELE AID- Telematic services Remote door unlocking	Read Codes		V1.00.001 or higher
GL/GLS (166)	TELE AID- Telematic services Remote door unlocking	Erase Codes		V1.00.001 or higher
GL/GLS (166)	TELE AID- Telematic services Remote door unlocking	Live Data		V1.00.001 or higher
GL/GLS (166)	TELE AID- Telematic service Stolen vehicle tracking	ECU Information		V1.00.001 or higher
GL/GLS (166)	TELE AID- Telematic service Stolen vehicle tracking	Read Codes		V1.00.001 or higher

GL/GLS (166)	TELE AID- Telematic service Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
GL/GLS (166)	TELE AID- Telematic service Stolen vehicle tracking	Live Data		V1.00.001 or higher
GL/GLS (166)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
GL/GLS (166)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
GL/GLS (166)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
GL/GLS (166)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
GL/GLS (166)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher
GL/GLS (166)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
GL/GLS (166)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
GL/GLS (166)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
GL/GLS (166)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
GL/GLS (166)	PARK - Parking system	ECU Information		V1.00.001 or higher
GL/GLS (166)	PARK - Parking system	Read Codes		V1.00.001 or higher
GL/GLS (166)	PARK - Parking system	Erase Codes		V1.00.001 or higher
GL/GLS (166)	PARK - Parking system	Live Data		V1.00.001 or higher
GL/GLS (166)	PPAMKS - Pneumatic pump for multicontour seat	ECU Information		V1.00.001 or higher



GL/GLS (166)	PPAMKS - Pneumatic pump for multicontour seat	Read Codes		V1.00.001 or higher
GL/GLS (166)	PPAMKS - Pneumatic pump for multicontour seat	Erase Codes		V1.00.001 or higher
GL/GLS (166)	PPAMKS - Pneumatic pump for multicontour seat	Live Data		V1.00.001 or higher
GL/GLS (166)	PPAMKS - Pneumatic pump for multicontour seat	Active Test		V1.00.001 or higher
GL/GLS (166)	MKS-FS- Multicontour seat 'Driver'	ECU Information		V1.00.001 or higher
GL/GLS (166)	MKS-FS- Multicontour seat 'Driver'	Read Codes		V1.00.001 or higher
GL/GLS (166)	MKS-FS- Multicontour seat 'Driver'	Erase Codes		V1.00.001 or higher
GL/GLS (166)	MKS-FS- Multicontour seat 'Driver'	Live Data		V1.00.001 or higher
GL/GLS (166)	MKS-BFS- Multicontour seat 'Front passenger'	ECU Information		V1.00.001 or higher
GL/GLS (166)	MKS-BFS- Multicontour seat 'Front passenger'	Read Codes		V1.00.001 or higher
GL/GLS (166)	MKS-BFS- Multicontour seat 'Front passenger'	Erase Codes		V1.00.001 or higher
GL/GLS (166)	MKS-BFS- Multicontour seat 'Front passenger'	Live Data		V1.00.001 or higher

GL/GLS (166)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	ECU Information		V1.00.001 or higher
GL/GLS (166)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Read Codes		V1.00.001 or higher
GL/GLS (166)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Erase Codes		V1.00.001 or higher
GL/GLS (166)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Live Data		V1.00.001 or higher
GL/GLS (166)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	ECU Information		V1.00.001 or higher
GL/GLS (166)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Read Codes		V1.00.001 or higher
GL/GLS (166)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Erase Codes		V1.00.001 or higher
GL/GLS (166)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Live Data		V1.00.001 or higher

GL/GLS (166)	DCU-LF-Left front door	ECU Information		V1.00.001 or higher
GL/GLS (166)	DCU-LF-Left front door	Read Codes		V1.00.001 or higher
GL/GLS (166)	DCU-LF-Left front door	Erase Codes		V1.00.001 or higher
GL/GLS (166)	DCU-LF-Left front door	Live Data		V1.00.001 or higher
GL/GLS (166)	DCU-RF-Right front door	ECU Information		V1.00.001 or higher
GL/GLS (166)	DCU-RF-Right front door	Read Codes		V1.00.001 or higher
GL/GLS (166)	DCU-RF-Right front door	Erase Codes		V1.00.001 or higher
GL/GLS (166)	DCU-RF-Right front door	Live Data		V1.00.001 or higher
GL/GLS (166)	DCU-LR-Left rear door	ECU Information		V1.00.001 or higher
GL/GLS (166)	DCU-LR-Left rear door	Read Codes		V1.00.001 or higher
GL/GLS (166)	DCU-LR-Left rear door	Erase Codes		V1.00.001 or higher
GL/GLS (166)	DCU-LR-Left rear door	Live Data		V1.00.001 or higher
GL/GLS (166)	DCU-RR-Right rear door	ECU Information		V1.00.001 or higher
GL/GLS (166)	DCU-RR-Right rear door	Read Codes		V1.00.001 or higher
GL/GLS (166)	DCU-RR-Right rear door	Erase Codes		V1.00.001 or higher
GL/GLS (166)	DCU-RR-Right rear door	Live Data		V1.00.001 or higher
GL/GLS (166)	AAC-Air conditioning	ECU Information		V1.00.001 or higher
GL/GLS (166)	AAC-Air conditioning	Read Codes		V1.00.001 or higher
GL/GLS (166)	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
GL/GLS (166)	AAC-Air conditioning	Live Data		V1.00.001 or higher
GL/GLS (166)	STH-Stationary heater	ECU Information		V1.00.001 or higher
GL/GLS (166)	STH-Stationary heater	Read Codes		V1.00.001 or higher
GL/GLS (166)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
GL/GLS (166)	STH-Stationary heater	Live Data		V1.00.001 or higher

GL/GLS (166)	HBF-Rear control panel	ECU Information		V1.00.001 or higher
GL/GLS (166)	HBF-Rear control panel	Read Codes		V1.00.001 or higher
GL/GLS (166)	HBF-Rear control panel	Erase Codes		V1.00.001 or higher
GL/GLS (166)	HBF-Rear control panel	Live Data		V1.00.001 or higher
GL/GLS (166)	TPM-Tire pressure monitor	ECU Information		V1.00.001 or higher
GL/GLS (166)	TPM-Tire pressure monitor	Read Codes		V1.00.001 or higher
GL/GLS (166)	TPM-Tire pressure monitor	Erase Codes		V1.00.001 or higher
GL/GLS (166)	TPM-Tire pressure monitor	Live Data		V1.00.001 or higher
GL/GLS (166)	TPM-Tire pressure monitor	Active Test		V1.00.001 or higher
GL/GLS (166)	TPM-Tire pressure monitor	Control unit adaptations	Teach-in processes	V1.00.001 or higher
GL/GLS (166)	SGR - Radar sensors control unit	ECU Information		V1.00.001 or higher
GL/GLS (166)	SGR - Radar sensors control unit	Read Codes		V1.00.001 or higher
GL/GLS (166)	SGR - Radar sensors control unit	Erase Codes		V1.00.001 or higher
GL/GLS (166)	SGR - Radar sensors control unit	Live Data		V1.00.001 or higher
GL/GLS (166)	SGR - Radar sensors control unit	Active Test		V1.00.001 or higher
GL/GLS (166)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	ECU Information		V1.00.001 or higher
GL/GLS (166)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Read Codes		V1.00.001 or higher
GL/GLS (166)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Erase Codes		V1.00.001 or higher

GL/GLS (166)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Live Data		V1.00.001 or higher
GL/GLS (166)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Active Test		V1.00.001 or higher
GL/GLS (166)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
GL/GLS (166)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
GL/GLS (166)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
GL/GLS (166)	IRS-HRA - Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
GL/GLS (166)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
GL/GLS (166)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
GL/GLS (166)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
GL/GLS (166)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
GL/GLS (166)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
GL/GLS (166)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
GL/GLS (166)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
GL/GLS (166)	DTR - DISTRONIC	Live Data		V1.00.001 or higher

GL/GLS (166)	NSA - Night View Assist	ECU Information		V1.00.001 or higher
GL/GLS (166)	NSA - Night View Assist	Read Codes		V1.00.001 or higher
GL/GLS (166)	NSA - Night View Assist	Erase Codes		V1.00.001 or higher
GL/GLS (166)	NSA - Night View Assist	Live Data		V1.00.001 or higher
GL/GLS (166)	RFK - Backup camera	ECU Information		V1.00.001 or higher
GL/GLS (166)	RFK - Backup camera	Read Codes		V1.00.001 or higher
GL/GLS (166)	RFK - Backup camera	Erase Codes		V1.00.001 or higher
GL/GLS (166)	RFK - Backup camera	Live Data		V1.00.001 or higher
GL/GLS (166)	RFK - Backup camera	Active Test		V1.00.001 or higher
GL/GLS (166)	PARK - Parking system	ECU Information		V1.00.001 or higher
GL/GLS (166)	PARK - Parking system	Read Codes		V1.00.001 or higher
GL/GLS (166)	PARK - Parking system	Erase Codes		V1.00.001 or higher
GL/GLS (166)	PARK - Parking system	Live Data		V1.00.001 or higher
GL/GLS (166)	PARK - Parking system	Active Test		V1.00.001 or higher
GL (164)	ME 9.7-Motor electronics 9.7	ECU Information		V1.00.001 or higher
GL (164)	ME 9.7-Motor electronics 9.7	Read Codes		V1.00.001 or higher
GL (164)	ME 9.7-Motor electronics 9.7	Erase Codes		V1.00.001 or higher
GL (164)	ME 9.7-Motor electronics 9.7	Live Data		V1.00.001 or higher
GL (164)	ME 9.7-Motor electronics 9.7	Active Test		V1.00.001 or higher
GL (164)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Learning processes	V1.00.001 or higher
GL (164)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Correction programming	V1.00.001 or higher
GL (164)	ME 9.7-Motor electronics 9.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
GL (164)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher

GL (164)	ME 9.7-Motor electronics 9.7	Special functions	Variant coding	V1.00.001 or higher
GL (164)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
GL (164)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
GL (164)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
GL (164)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher
GL (164)	ETC-Electronic transmission control	Control unit adaptations	Detach the transport protection of control module 'ETC', personalize or activate the control module.	V1.00.001 or higher
GL (164)	ETC-Electronic transmission control	Control unit adaptations	Learning process: Y3/8s1 (Selection range sensor)	V1.00.001 or higher
GL (164)	ETC-Electronic transmission control	Control unit adaptations	Learning to the Drive Authorization System (DAS/FBS)	V1.00.001 or higher
GL (164)	ETC-Electronic transmission control	Special functions	Turn off the incline recognition for dynamometer mode.	V1.00.001 or higher
GL (164)	ETC-Electronic transmission control	Special functions	Transmission adaptation	V1.00.001 or higher
GL (164)	VG - Transfer case	ECU Information		V1.00.001 or higher
GL (164)	VG - Transfer case	Read Codes		V1.00.001 or higher
GL (164)	VG - Transfer case	Erase Codes		V1.00.001 or higher
GL (164)	VG - Transfer case	Active Test		V1.00.001 or higher

GL (164)	VG - Transfer case	Control unit adaptations	Calibration	V1.00.001 or higher
GL (164)	HAQ-Interwheel differential lock at rear axle	ECU Information		V1.00.001 or higher
GL (164)	HAQ-Interwheel differential lock at rear axle	Read Codes		V1.00.001 or higher
GL (164)	HAQ-Interwheel differential lock at rear axle	Erase Codes		V1.00.001 or higher
GL (164)	HAQ-Interwheel differential lock at rear axle	Live Data		V1.00.001 or higher
GL (164)	HAQ-Interwheel differential lock at rear axle	Active Test		V1.00.001 or higher
GL (164)	ISM-Intelligent servo module	ECU Information		V1.00.001 or higher
GL (164)	ISM-Intelligent servo module	Read Codes		V1.00.001 or higher
GL (164)	ISM-Intelligent servo module	Erase Codes		V1.00.001 or higher
GL (164)	ISM-Intelligent servo module	Live Data		V1.00.001 or higher
GL (164)	ISM-Intelligent servo module	Active Test		V1.00.001 or higher
GL (164)	ISM-Intelligent servo module	Control unit adaptations	Please calibrate.	V1.00.001 or higher
GL (164)	ISM-Intelligent servo module	Control unit adaptations	Detach the transport protection of control module 'Intelligent Servo Module', personalize or activate the control module.	V1.00.001 or higher
GL (164)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
GL (164)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
GL (164)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
GL (164)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
GL (164)	FSCU-Fuel pump	Active Test		V1.00.001 or higher



GL (164)	DTR-Distronic	ECU Information		V1.00.001 or higher
GL (164)	DTR-Distronic	Read Codes		V1.00.001 or higher
GL (164)	DTR-Distronic	Erase Codes		V1.00.001 or higher
GL (164)	DTR-Distronic	Live Data		V1.00.001 or higher
GL (164)	IRS-HRA-Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
GL (164)	IRS-HRA-Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
GL (164)	IRS-HRA-Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
GL (164)	IRS-HRA-Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
GL (164)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
GL (164)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
GL (164)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
GL (164)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
GL (164)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
GL (164)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
GL (164)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
GL (164)	ESP-Electronic stability program	Live Data		V1.00.001 or higher

GL (164)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
GL (164)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
GL (164)	ESP-Electronic stability program	Control unit adaptations	Tire pressure loss warner(Activating)	V1.00.001 or higher
GL (164)	ESP-Electronic stability program	Control unit adaptations	Clear the zero point offset error of the component 'N49 (Steering Angle Sensor (SAS))'.	V1.00.001 or higher
GL (164)	TPC-Tire pressure monitor	ECU Information		V1.00.001 or higher
GL (164)	TPC-Tire pressure monitor	Read Codes		V1.00.001 or higher
GL (164)	TPC-Tire pressure monitor	Erase Codes		V1.00.001 or higher
GL (164)	TPC-Tire pressure monitor	Live Data		V1.00.001 or higher
GL (164)	TPC-Tire pressure monitor	Active Test		V1.00.001 or higher
GL (164)	TPC-Tire pressure monitor	Special functions	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
GL (164)	TPC-Tire pressure monitor	Special functions	Initial start-up with manual settings input for new control module- For example: The previous control module cannot be read any longer.	V1.00.001 or higher
GL (164)	DTR-Distronic	ECU Information		V1.00.001 or higher
GL (164)	DTR-Distronic	Read Codes		V1.00.001 or higher
GL (164)	DTR-Distronic	Erase Codes		V1.00.001 or higher
GL (164)	DTR-Distronic	Live Data		V1.00.001 or higher

GL (164)	EHPS- Electrohydraulic Power Steering	ECU Information		V1.00.001 or higher
GL (164)	EHPS- Electrohydraulic Power Steering	Read Codes		V1.00.001 or higher
GL (164)	EHPS- Electrohydraulic Power Steering	Erase Codes		V1.00.001 or higher
GL (164)	EHPS- Electrohydraulic Power Steering	Live Data		V1.00.001 or higher
GL (164)	Suspension	ECU Information		V1.00.001 or higher
GL (164)	Suspension	Read Codes		V1.00.001 or higher
GL (164)	Suspension	Erase Codes		V1.00.001 or higher
GL (164)	Suspension	Live Data		V1.00.001 or higher
GL (164)	Suspension	Active Test		V1.00.001 or higher
GL (164)	Suspension	Special functions	Initial start-up	V1.00.001 or higher
GL (164)	Suspension	Special functions	Pneumatic tests	V1.00.001 or higher
GL (164)	AB-Airbag	ECU Information		V1.00.001 or higher
GL (164)	AB-Airbag	Read Codes		V1.00.001 or higher
GL (164)	AB-Airbag	Erase Codes		V1.00.001 or higher
GL (164)	AB-Airbag	Live Data		V1.00.001 or higher
GL (164)	AB-Airbag	Active Test		V1.00.001 or higher
GL (164)	CGW-Central gateway	ECU Information		V1.00.001 or higher
GL (164)	CGW-Central gateway	Read Codes		V1.00.001 or higher
GL (164)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
GL (164)	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher
GL (164)	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher

GL (164)	CGW-Central gateway	Special functions	All codes	V1.00.001 or higher
GL (164)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
GL (164)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
GL (164)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
GL (164)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
GL (164)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher
GL (164)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track with the workshop key.	V1.00.001 or higher
GL (164)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher
GL (164)	EZS-Electronic ignition switch	Control unit adaptations	Program the replacement keys.	V1.00.001 or higher
GL (164)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N73 (Electronic Ignition Switch (EIS/EZS) control module)'. '.	V1.00.001 or higher
GL (164)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
GL (164)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
GL (164)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
GL (164)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
GL (164)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
GL (164)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
GL (164)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
GL (164)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
GL (164)	OCP-Overhead control panel	Live Data		V1.00.001 or higher

GL (164)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
GL (164)	OCP-Overhead control panel	Control unit adaptations	SR/SHD (Tilting/Sliding Sunroof)	V1.00.001 or higher
GL (164)	OCP-Overhead control panel	Control unit adaptations	Panoramic sliding sunroof	V1.00.001 or higher
GL (164)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
GL (164)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
GL (164)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
GL (164)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
GL (164)	WSS-Weight sensing system	Control unit adaptations	•	V1.00.001 or higher
GL (164)	WSS-Weight sensing system	Initial startup	Initial start-up	V1.00.001 or higher
GL (164)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
GL (164)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
GL (164)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
GL (164)	UCP-Upper control panel	Live Data		V1.00.001 or higher
GL (164)	UCP-Upper control panel	Active Test		V1.00.001 or higher
GL (164)	HBF (Rear control panel)-Rear control field	ECU Information		V1.00.001 or higher
GL (164)	HBF (Rear control panel)-Rear control field	Read Codes		V1.00.001 or higher
GL (164)	HBF (Rear control panel)-Rear control field	Erase Codes		V1.00.001 or higher
GL (164)	HBF (Rear control panel)-Rear control field	Live Data		V1.00.001 or higher
GL (164)	HBF (Rear control panel)-Rear control field	Active Test		V1.00.001 or higher
GL (164)	SAM-F-Signal acquisition and actuation module front	ECU Information		V1.00.001 or higher

GL (164)	SAM-F-Signal acquisition and actuation module front	Read Codes		V1.00.001 or higher
GL (164)	SAM-F-Signal acquisition and actuation module front	Erase Codes		V1.00.001 or higher
GL (164)	SAM-F-Signal acquisition and actuation module front	Live Data		V1.00.001 or higher
GL (164)	SAM-F-Signal acquisition and actuation module front	Active Test		V1.00.001 or higher
GL (164)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
GL (164)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
GL (164)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
GL (164)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
GL (164)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
GL (164)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher

GL (164)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
GL (164)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
GL (164)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
GL (164)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
GL (164)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
GL (164)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
GL (164)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
GL (164)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
GL (164)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher

GL (164)	RevETR-LF-Left front reversible emergency tensioning retractor	Control unit adaptations	Reset the control module.	V1.00.001 or higher
GL (164)	XALWA-L-Xenon headlamp, left	ECU Information		V1.00.001 or higher
GL (164)	XALWA-L-Xenon headlamp, left	Read Codes		V1.00.001 or higher
GL (164)	XALWA-L-Xenon headlamp, left	Erase Codes		V1.00.001 or higher
GL (164)	XALWA-L-Xenon headlamp, left	Live Data		V1.00.001 or higher
GL (164)	XALWA-L-Xenon headlamp, left	Active Test		V1.00.001 or higher
GL (164)	XALWA-L-Xenon headlamp, left	Control unit adaptations	Zero position adjustment of axle or level sensors	V1.00.001 or higher
GL (164)	XALWA-R-Xenon headlamp, right	ECU Information		V1.00.001 or higher
GL (164)	XALWA-R-Xenon headlamp, right	Read Codes		V1.00.001 or higher
GL (164)	XALWA-R-Xenon headlamp, right	Erase Codes		V1.00.001 or higher
GL (164)	XALWA-R-Xenon headlamp, right	Live Data		V1.00.001 or higher
GL (164)	XALWA-R-Xenon headlamp, right	Active Test		V1.00.001 or higher
GL (164)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
GL (164)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
GL (164)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
GL (164)	IC-Instrument cluster	ECU Information		V1.00.001 or higher
GL (164)	IC-Instrument cluster	Read Codes		V1.00.001 or higher
GL (164)	IC-Instrument cluster	Erase Codes		V1.00.001 or higher
GL (164)	IC-Instrument cluster	Live Data		V1.00.001 or higher
GL (164)	IC-Instrument cluster	Active Test		V1.00.001 or higher
GL (164)	IC-Instrument cluster	Control unit adaptations	Setting days since initial registration	V1.00.001 or higher



GL (164)	IC-Instrument cluster	Control unit adaptations	Setting the main odometer forward and back	V1.00.001 or higher
GL (164)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
GL (164)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
GL (164)	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher
GL (164)	SCM [MRM]-Steering column module	Live Data		V1.00.001 or higher
GL (164)	SCM [MRM]-Steering column module	Active Test		V1.00.001 or higher
GL (164)	SCM [MRM]-Steering column module	Initial startup	•	V1.00.001 or higher
GL (164)	CM-Compass module	ECU Information		V1.00.001 or higher
GL (164)	CM-Compass module	Read Codes		V1.00.001 or higher
GL (164)	CM-Compass module	Erase Codes		V1.00.001 or higher
GL (164)	CM-Compass module	Live Data		V1.00.001 or higher
GL (164)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
GL (164)	ASSYST-Active Service System	Read Codes		V1.00.001 or higher
GL (164)	ASSYST-Active Service System	Erase Codes		V1.00.001 or higher
GL (164)	ASSYST-Active Service System	Live Data		V1.00.001 or higher
GL (164)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
GL (164)	ASSYST-Active Service System	Control unit adaptations	Reinitialization of AdBlue range	V1.00.001 or higher
GL (164)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
GL (164)	ASSYST PLUS-PLUS Active Service System	Read Codes		V1.00.001 or higher

GL (164)	ASSYST PLUS-PLUS Active Service System	Erase Codes		V1.00.001 or higher
GL (164)	ASSYST PLUS-PLUS Active Service System	Live Data		V1.00.001 or higher
GL (164)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
GL (164)	ASSYST PLUS-PLUS Active Service System	Control unit adaptations	Control module reset	V1.00.001 or higher
GL (164)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
GL (164)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
GL (164)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
GL (164)	PTS-Parktronic system	Live Data		V1.00.001 or higher
GL (164)	PTS-Parktronic system	Active Test		V1.00.001 or higher
GL (164)	RFK-Backup camera	ECU Information		V1.00.001 or higher
GL (164)	RFK-Backup camera	Read Codes		V1.00.001 or higher
GL (164)	RFK-Backup camera	Erase Codes		V1.00.001 or higher
GL (164)	RFK-Backup camera	Live Data		V1.00.001 or higher
GL (164)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher
GL (164)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher

GL (164)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
GL (164)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher
GL (164)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher
GL (164)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
GL (164)	CDC-CD changer	ECU Information		V1.00.001 or higher
GL (164)	CDC-CD changer	Read Codes		V1.00.001 or higher
GL (164)	CDC-CD changer	Erase Codes		V1.00.001 or higher
GL (164)	CDC-CD changer	Live Data		V1.00.001 or higher
GL (164)	CDC-CD changer	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
GL (164)	VCS-Voice control system	ECU Information		V1.00.001 or higher
GL (164)	VCS-Voice control system	Read Codes		V1.00.001 or higher
GL (164)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
GL (164)	VCS-Voice control system	Active Test		V1.00.001 or higher
GL (164)	COMAND or AUDIO	ECU Information		V1.00.001 or higher

GL (164)	COMAND or AUDIO	Read Codes		V1.00.001 or higher
GL (164)	COMAND or AUDIO	Erase Codes		V1.00.001 or higher
GL (164)	COMAND or AUDIO	Live Data		V1.00.001 or higher
GL (164)	COMAND or AUDIO	Active Test		V1.00.001 or higher
GL (164)	COMAND or AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
GL (164)	TV-TV tuner	ECU Information		V1.00.001 or higher
GL (164)	TV-TV tuner	Read Codes		V1.00.001 or higher
GL (164)	TV-TV tuner	Erase Codes		V1.00.001 or higher
GL (164)	TV-TV tuner	Live Data		V1.00.001 or higher
GL (164)	TV-TV tuner	Active Test		V1.00.001 or higher
GL (164)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
GL (164)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
GL (164)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
GL (164)	SDAR-Satellite radio	Live Data		V1.00.001 or higher
GL (164)	SOUND- Sound system	ECU Information		V1.00.001 or higher
GL (164)	SOUND- Sound system	Read Codes		V1.00.001 or higher
GL (164)	SOUND- Sound system	Erase Codes		V1.00.001 or higher
GL (164)	SOUND- Sound system	Live Data		V1.00.001 or higher
GL (164)	SOUND- Sound system	Active Test		V1.00.001 or higher
GL (164)	SOUND- Sound system	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
GL (164)	CTEL-Mobile phone adapter with universal interface	ECU Information		V1.00.001 or higher

GL (164)	CTEL-Mobile phone adapter with universal interface	Read Codes		V1.00.001 or higher
GL (164)	CTEL-Mobile phone adapter with universal interface	Erase Codes		V1.00.001 or higher
GL (164)	CTEL-Mobile phone adapter with universal interface	Live Data		V1.00.001 or higher
GL (164)	NAVI-Navigation system	ECU Information		V1.00.001 or higher
GL (164)	NAVI-Navigation system	Read Codes		V1.00.001 or higher
GL (164)	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
GL (164)	NAVI-Navigation system	Live Data		V1.00.001 or higher
GL (164)	NAVI-Navigation system	Active Test		V1.00.001 or higher
GL (164)	AVE-H-Rear audio video unit	ECU Information		V1.00.001 or higher
GL (164)	AVE-H-Rear audio video unit	Read Codes		V1.00.001 or higher
GL (164)	AVE-H-Rear audio video unit	Erase Codes		V1.00.001 or higher
GL (164)	AVE-H-Rear audio video unit	Live Data		V1.00.001 or higher
GL (164)	AVE-H-Rear audio video unit	Active Test		V1.00.001 or higher
GL (164)	CTEL-Cellular telephone	ECU Information		V1.00.001 or higher
GL (164)	CTEL-Cellular telephone	Read Codes		V1.00.001 or higher
GL (164)	CTEL-Cellular telephone	Erase Codes		V1.00.001 or higher
GL (164)	CTEL-Cellular telephone	Live Data		V1.00.001 or higher
GL (164)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher
GL (164)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
GL (164)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher
GL (164)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher

GL (164)	Sound system (Main amplifier)	Active Test		V1.00.001 or higher
GL (164)	UCI-Media interface	ECU Information		V1.00.001 or higher
GL (164)	UCI-Media interface	Read Codes		V1.00.001 or higher
GL (164)	UCI-Media interface	Erase Codes		V1.00.001 or higher
GL (164)	DAB-Digital radio	ECU Information		V1.00.001 or higher
GL (164)	DAB-Digital radio	Read Codes		V1.00.001 or higher
GL (164)	DAB-Digital radio	Erase Codes		V1.00.001 or higher
GL (164)	DAB-Digital radio	Live Data		V1.00.001 or higher
GL (164)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
GL (164)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
GL (164)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
GL (164)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
GL (164)	SDAR-Satellite radio(Valid for USA)	Active Test		V1.00.001 or higher
GL (164)	TV-TV tuner	ECU Information		V1.00.001 or higher
GL (164)	TV-TV tuner	Read Codes		V1.00.001 or higher
GL (164)	TV-TV tuner	Erase Codes		V1.00.001 or higher
GL (164)	TV-TV tuner	Live Data		V1.00.001 or higher
GL (164)	CTEL-Cellular telephone(JAPAN)	ECU Information		V1.00.001 or higher
GL (164)	CTEL-Cellular telephone(JAPAN)	Read Codes		V1.00.001 or higher
GL (164)	CTEL-Cellular telephone(JAPAN)	Erase Codes		V1.00.001 or higher

GL (164)	CTEL-Cellular telephone(JAPAN)	Live Data		V1.00.001 or higher
GL (164)	CTEL-Cellular telephone(JAPAN)	Active Test		V1.00.001 or higher
GL (164)	AVE-H - DVD player	ECU Information		V1.00.001 or higher
GL (164)	AVE-H - DVD player	Read Codes		V1.00.001 or higher
GL (164)	AVE-H - DVD player	Erase Codes		V1.00.001 or higher
GL (164)	AVE-H - DVD player	Live Data		V1.00.001 or higher
GL (164)	Left rear screen	ECU Information		V1.00.001 or higher
GL (164)	Left rear screen	Read Codes		V1.00.001 or higher
GL (164)	Left rear screen	Erase Codes		V1.00.001 or higher
GL (164)	Left rear screen	Live Data		V1.00.001 or higher
GL (164)	Left rear screen	Active Test		V1.00.001 or higher
GL (164)	Right rear screen	ECU Information		V1.00.001 or higher
GL (164)	Right rear screen	Read Codes		V1.00.001 or higher
GL (164)	Right rear screen	Erase Codes		V1.00.001 or higher
GL (164)	Right rear screen	Live Data		V1.00.001 or higher
GL (164)	Right rear screen	Active Test		V1.00.001 or higher
GL (164)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
GL (164)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
GL (164)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
GL (164)	TELE AID-Control unit	Live Data		V1.00.001 or higher
GL (164)	TELE AID-Telematic services Emergency call	ECU Information		V1.00.001 or higher

GL (164)	TELE AID- Telematic services Emergency call	Read Codes		V1.00.001 or higher
GL (164)	TELE AID- Telematic services Emergency call	Erase Codes		V1.00.001 or higher
GL (164)	TELE AID- Telematic services Emergency call	Live Data		V1.00.001 or higher
GL (164)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
GL (164)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
GL (164)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
GL (164)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
GL (164)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher
GL (164)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher



GL (164)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
GL (164)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher
GL (164)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher
GL (164)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
GL (164)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
GL (164)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher
GL (164)	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
GL (164)	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher
GL (164)	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher
GL (164)	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher
GL (164)	DCM-FL-Door control module front left	Active Test		V1.00.001 or higher

GL (164)	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
GL (164)	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher
GL (164)	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
GL (164)	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
GL (164)	DCM-FR-Door control module front right	Active Test		V1.00.001 or higher
GL (164)	ESA driver-Electric seat adjustment driver (with memory)	ECU Information		V1.00.001 or higher
GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Read Codes		V1.00.001 or higher
GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Erase Codes		V1.00.001 or higher
GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Live Data		V1.00.001 or higher
GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Active Test		V1.00.001 or higher
GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterize the Easy Entry/Exit.	V1.00.001 or higher

GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Increase the fore/aft adjustment range to rear.	V1.00.001 or higher
GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterize collision avoidance.	V1.00.001 or higher
GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Adjust the parameter for backrest adjustment.	V1.00.001 or higher
GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher
GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher
GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterization of the function for moving the driver seat out of way when folding down the rear seat	V1.00.001 or higher

GL (164)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Re-adjust the adjustment parameters.	V1.00.001 or higher
GL (164)	ESA passenger-Electric seat adjustment passenger	ECU Information		V1.00.001 or higher
GL (164)	ESA passenger-Electric seat adjustment passenger	Read Codes		V1.00.001 or higher
GL (164)	ESA passenger-Electric seat adjustment passenger	Erase Codes		V1.00.001 or higher
GL (164)	ESA passenger-Electric seat adjustment passenger	Live Data		V1.00.001 or higher
GL (164)	ESA passenger-Electric seat adjustment passenger	Active Test		V1.00.001 or higher
GL (164)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Parameterize collision avoidance.	V1.00.001 or higher
GL (164)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Adjust the parameter for backrest adjustment.	V1.00.001 or higher
GL (164)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
GL (164)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher
GL (164)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher

GL (164)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
GL (164)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
GL (164)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Parameterization of the function for moving the front passenger seat out of way when folding down the rear seat	V1.00.001 or higher
GL (164)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Re-adjust the adjustment parameters.	V1.00.001 or higher
GL (164)	DS-LF-Left front dynamic seat	ECU Information		V1.00.001 or higher
GL (164)	DS-LF-Left front dynamic seat	Read Codes		V1.00.001 or higher
GL (164)	DS-LF-Left front dynamic seat	Erase Codes		V1.00.001 or higher
GL (164)	DS-LF-Left front dynamic seat	Live Data		V1.00.001 or higher
GL (164)	DS-LF-Left front dynamic seat	Active Test		V1.00.001 or higher
GL (164)	DS-LF-Left front dynamic seat	Control unit adaptations	Air cushion calibration	V1.00.001 or higher
GL (164)	DS-RF-Right front dynamic seat	ECU Information		V1.00.001 or higher
GL (164)	DS-RF-Right front dynamic seat	Read Codes		V1.00.001 or higher
GL (164)	DS-RF-Right front dynamic seat	Erase Codes		V1.00.001 or higher
GL (164)	DS-RF-Right front dynamic seat	Live Data		V1.00.001 or higher
GL (164)	DS-RF-Right front dynamic seat	Active Test		V1.00.001 or higher
GL (164)	DS-RF-Right front dynamic seat	Control unit adaptations	Air cushion calibration	V1.00.001 or higher
GL (164)	DSP-Pneumatic pump for dynamic seat	ECU Information		V1.00.001 or higher

GL (164)	DSP-Pneumatic pump for dynamic seat	Read Codes		V1.00.001 or higher
GL (164)	DSP-Pneumatic pump for dynamic seat	Erase Codes		V1.00.001 or higher
GL (164)	DSP-Pneumatic pump for dynamic seat	Live Data		V1.00.001 or higher
GL (164)	DSP-Pneumatic pump for dynamic seat	Active Test		V1.00.001 or higher
GL (164)	ERA-Electric fold-down backrest system (3rd seat row)	ECU Information		V1.00.001 or higher
GL (164)	ERA-Electric fold-down backrest system (3rd seat row)	Read Codes		V1.00.001 or higher
GL (164)	ERA-Electric fold-down backrest system (3rd seat row)	Erase Codes		V1.00.001 or higher
GL (164)	ERA-Electric fold-down backrest system (3rd seat row)	Live Data		V1.00.001 or higher
GL (164)	ERA-Electric fold-down backrest system (3rd seat row)	Active Test		V1.00.001 or higher
GL (164)	REDC-Rear-end door closing control module	ECU Information		V1.00.001 or higher
GL (164)	REDC-Rear-end door closing control module	Read Codes		V1.00.001 or higher
GL (164)	REDC-Rear-end door closing control module	Erase Codes		V1.00.001 or higher
GL (164)	REDC-Rear-end door closing control module	Live Data		V1.00.001 or higher
GL (164)	REDC-Rear-end door closing control module	Active Test		V1.00.001 or higher

GL (164)	REDC-Rear-end door closing control module	Control unit adaptations	Intermediate position 'Tailgate'	V1.00.001 or higher
GL (164)	HS-Seat heater	ECU Information		V1.00.001 or higher
GL (164)	HS-Seat heater	Read Codes		V1.00.001 or higher
GL (164)	HS-Seat heater	Erase Codes		V1.00.001 or higher
GL (164)	HS-Seat heater	Live Data		V1.00.001 or higher
GL (164)	HS-Seat heater	Active Test		V1.00.001 or higher
GL (164)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
GL (164)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
GL (164)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
GL (164)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
GL (164)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
GL (164)	AAC-Automatic air conditioning	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
GL (164)	AAC-Automatic air conditioning	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
GL (164)	AAC-Automatic air conditioning	Control unit adaptations	Teach-in of the actuator motors after replacement of actuator motor	V1.00.001 or higher
GL (164)	AAC-Automatic air conditioning	Control unit adaptations	Break-in procedure after replacement of refrigerant compressor	V1.00.001 or higher
GL (164)	HSW-Heated steering wheel	ECU Information		V1.00.001 or higher
GL (164)	HSW-Heated steering wheel	Read Codes		V1.00.001 or higher
GL (164)	HSW-Heated steering wheel	Erase Codes		V1.00.001 or higher

GL (164)	HSW-Heated steering wheel	Live Data		V1.00.001 or higher
GL (164)	HSW-Heated steering wheel	Active Test		V1.00.001 or higher
GL (164)	STH-Stationary heater with remote control	ECU Information		V1.00.001 or higher
GL (164)	STH-Stationary heater with remote control	Read Codes		V1.00.001 or higher
GL (164)	STH-Stationary heater with remote control	Erase Codes		V1.00.001 or higher
GL (164)	STH-Stationary heater with remote control	Live Data		V1.00.001 or higher
GL (164)	STH-Stationary heater with remote control	Active Test		V1.00.001 or higher
GL (164)	STH-Stationary heater with remote control	Control unit adaptations	Learning component " A8/3 (Stationary Heater (STH) radio remote control transmitter)	V1.00.001 or higher
GL (164)	CDI 4-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
GL (164)	CDI 4-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
GL (164)	CDI 4-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
GL (164)	CDI 4-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
GL (164)	CDI 4-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher



GL (164)	CDI 60LS-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel Particulate Filter'	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B28/8 (Diesel Particulate Filter (DPF) differential pressure sensor)'	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y74 (Pressure control valve)'	V1.00.001 or higher

GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'G3/2 (Oxygen sensor upstream of the Three Way Catalyst (TWC/KAT))'	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel oxidation catalytic converter'	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Learning of the throttle valve stop	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Activate the fuel pump.	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Rapid teach-in of zero quantity calibration values	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher

GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Selective Catalytic Reduction'- Catalytic converter	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " B16/15 (Temperature sensor upstream of the Selective Catalytic Reduction (SCR) catalytic converter)	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " N37/7b1 (Nitrogen Oxide (NOx) sensor downstream of the Diesel Particulate Filter (DPF))	V1.00.001 or higher
GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " N37/8b1 (Nitrogen Oxide (NOx) sensor downstream of the Selective Catalytic Reduction (SCR) catalytic converter)	V1.00.001 or higher

GL (164)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " Y129 (AdBlue metering valve)	V1.00.001 or higher
GL (164)	SCR-Selective Catalytic Reduction	ECU Information		V1.00.001 or higher
GL (164)	SCR-Selective Catalytic Reduction	Read Codes		V1.00.001 or higher
GL (164)	SCR-Selective Catalytic Reduction	Erase Codes		V1.00.001 or higher
GL (164)	SCR-Selective Catalytic Reduction	Live Data		V1.00.001 or higher
GL (164)	SCR-Selective Catalytic Reduction	Active Test		V1.00.001 or higher
GL (164)	SCR-Selective Catalytic Reduction	Control unit adaptations	Refill the AdBlue.	V1.00.001 or higher
GL (164)	SCR-Selective Catalytic Reduction	Control unit adaptations	Clearing the adaptation values after replacement of AdBlue fluid	V1.00.001 or higher
GL (164)	SCR-Selective Catalytic Reduction	Control unit adaptations	Teach-in process after replacement of component 'Y129 (AdBlue metering valve)'	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Live Data		V1.00.001 or higher

GL (164)	CDI 6-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Learning of the throttle valve stop	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Selective Catalytic Reduction (SCR) exhaust aftertreatment system after replacement of ECM without transfer of values	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel oxidation catalytic converter'	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Selective Catalytic Reduction'-Catalytic converter	V1.00.001 or higher

GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B16/15 (Temperature sensor upstream of the Selective Catalytic Reduction (SCR) catalytic converter)'	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B28/8 (Diesel Particulate Filter (DPF) differential pressure sensor)'	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B28/16 (Diesel Particulate Filter (DPF) differential pressure sensor for OBD)'	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'G3/2 (Oxygen sensor upstream of the Three Way Catalyst (TWC/KAT))'	V1.00.001 or higher

GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Nitrogen Oxide (NOx) sensor upstream of the Selective Catalytic Reduction (SCR) catalytic converter'	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Nitrogen Oxide (NOx) sensor downstream of the Selective Catalytic Reduction (SCR) catalytic converter'	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y27/9 (EGR/ARF actuator)'	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y74 (Pressure control valve)'	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y129 (AdBlue metering valve)'	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Activate the fuel pump.	V1.00.001 or higher

GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Rapid teach-in of zero quantity calibration values	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Resetting the AdBlue quality factor	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel Particulate Filter'	V1.00.001 or higher
GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher



GL (164)	CDI 6-Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Diesel Particulate Filter (DPF) after replacement of ECM without transfer of values	V1.00.001 or higher
GL (164)	CDI 6BIN5-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
GL (164)	CDI 6BIN5-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
GL (164)	CDI 6BIN5-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
GL (164)	CDI 6BIN5-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
GL (164)	CDI 6BIN5-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
GL (164)	CDI 6BIN5-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
GL (164)	CDI 6BIN5-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
GL (164)	CDI 6BIN5-Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Selective Catalytic Reduction (SCR) exhaust aftertreatment system after replacement of ECM without transfer of values	V1.00.001 or higher

GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel oxidation catalytic converter'	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Selective Catalytic Reduction'- Catalytic converter	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B16/15 (Temperature sensor upstream of the Selective Catalytic Reduction (SCR) catalytic converter)'	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B28/8 (Diesel Particulate Filter (DPF) differential pressure sensor)'	V1.00.001 or higher

GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'G3/2 (Oxygen sensor upstream of the Three Way Catalyst (TWC/KAT))'	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Nitrogen Oxide (NOx) sensor upstream of the Selective Catalytic Reduction (SCR) catalytic converter'	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Nitrogen Oxide (NOx) sensor downstream of the Selective Catalytic Reduction (SCR) catalytic converter'	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y27/9 (EGR/ARF actuator)'	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y74 (Pressure control valve)'	V1.00.001 or higher

GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y129 (AdBlue metering valve)'	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Activate the fuel pump.	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Rapid teach-in of zero quantity calibration values	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Resetting the AdBlue quality factor	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Learning of the throttle valve stop	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher

GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Diesel Particulate Filter (DPF) after replacement of ECM without transfer of values	V1.00.001 or higher
GL (164)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " Diesel Particulate Filter	V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Learning of the throttle valve stop	V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Drive Authorization System (DAS/FBS)	V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Purge control Diesel Particulate Filter	V1.00.001 or higher

GL (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Replace the component 'Diesel Particulate Filter'.	V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Replace the component 'Y74 (Pressure control valve)'.	V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Teaching in the ECM after replacement of an exhaust-relevant component	V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
GL (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Prevention of regeneration	V1.00.001 or higher

GL (164)	CDI 5-Common Rail Diesel Injection	Control unit adaptations	Rapid teach-in of zero quantity calibration values	V1.00.001 or higher
GLC (253)	ME - Motor electronics	ECU Information		V1.00.001 or higher
GLC (253)	ME - Motor electronics	Read Codes		V1.00.001 or higher
GLC (253)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
GLC (253)	ME - Motor electronics	Live Data		V1.00.001 or higher
GLC (253)	ME - Motor electronics	Active Test		V1.00.001 or higher
GLC (253)	CDI-Motor electronics	ECU Information		V1.00.001 or higher
GLC (253)	CDI-Motor electronics	Read Codes		V1.00.001 or higher
GLC (253)	CDI-Motor electronics	Erase Codes		V1.00.001 or higher
GLC (253)	CDI-Motor electronics	Live Data		V1.00.001 or higher
GLC (253)	CDI-Motor electronics	Active Test		V1.00.001 or higher
GLC (253)	VGS - Transmission control	ECU Information		V1.00.001 or higher
GLC (253)	VGS - Transmission control	Read Codes		V1.00.001 or higher
GLC (253)	VGS - Transmission control	Erase Codes		V1.00.001 or higher
GLC (253)	VGS - Transmission control	Live Data		V1.00.001 or higher
GLC (253)	VGS - Transmission control	Active Test		V1.00.001 or higher
GLC (253)	ISM - Shift module	ECU Information		V1.00.001 or higher
GLC (253)	ISM - Shift module	Read Codes		V1.00.001 or higher
GLC (253)	ISM - Shift module	Erase Codes		V1.00.001 or higher
GLC (253)	ISM - Shift module	Live Data		V1.00.001 or higher

GLC (253)	FSCU08 - Control unit Fuel pump	ECU Information		V1.00.001 or higher
GLC (253)	FSCU08 - Control unit Fuel pump	Read Codes		V1.00.001 or higher
GLC (253)	FSCU08 - Control unit Fuel pump	Erase Codes		V1.00.001 or higher
GLC (253)	FSCU08 - Control unit Fuel pump	Live Data		V1.00.001 or higher
GLC (253)	SCR - Selective catalytic reduction	ECU Information		V1.00.001 or higher
GLC (253)	SCR - Selective catalytic reduction	Read Codes		V1.00.001 or higher
GLC (253)	SCR - Selective catalytic reduction	Erase Codes		V1.00.001 or higher
GLC (253)	SCR - Selective catalytic reduction	Live Data		V1.00.001 or higher
GLC (253)	PTCU - Control unit powertrain	ECU Information		V1.00.001 or higher
GLC (253)	PTCU - Control unit powertrain	Read Codes		V1.00.001 or higher
GLC (253)	PTCU - Control unit powertrain	Erase Codes		V1.00.001 or higher
GLC (253)	PTCU - Control unit powertrain	Live Data		V1.00.001 or higher
GLC (253)	SG-EM - Power electronics	ECU Information		V1.00.001 or higher
GLC (253)	SG-EM - Power electronics	Read Codes		V1.00.001 or higher
GLC (253)	SG-EM - Power electronics	Erase Codes		V1.00.001 or higher
GLC (253)	SG-EM - Power electronics	Live Data		V1.00.001 or higher
GLC (253)	ESP - Electric stability program	ECU Information		V1.00.001 or higher
GLC (253)	ESP - Electric stability program	Read Codes		V1.00.001 or higher
GLC (253)	ESP - Electric stability program	Erase Codes		V1.00.001 or higher
GLC (253)	ESP - Electric stability program	Active Test		V1.00.001 or higher
GLC (253)	ES - Electric power steering	ECU Information		V1.00.001 or higher
GLC (253)	ES - Electric power steering	Read Codes		V1.00.001 or higher



GLC (253)	ES - Electric power steering	Erase Codes		V1.00.001 or higher
GLC (253)	SRS - Supplemental restraint system	ECU Information		V1.00.001 or higher
GLC (253)	SRS - Supplemental restraint system	Read Codes		V1.00.001 or higher
GLC (253)	SRS - Supplemental restraint system	Erase Codes		V1.00.001 or higher
GLC (253)	SRS - Supplemental restraint system	Live Data		V1.00.001 or higher
GLC (253)	SRS - Supplemental restraint system	Active Test		V1.00.001 or higher
GLC (253)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher
GLC (253)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
GLC (253)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
GLC (253)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
GLC (253)	Rear SAM - Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
GLC (253)	Rear SAM - Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher

GLC (253)	Rear SAM - Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
GLC (253)	Rear SAM - Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
GLC (253)	ATA - ATA[EDW]/tow-away protection/interior protection	ECU Information		V1.00.001 or higher
GLC (253)	ATA - ATA[EDW]/tow-away protection/interior protection	Read Codes		V1.00.001 or higher
GLC (253)	ATA - ATA[EDW]/tow-away protection/interior protection	Erase Codes		V1.00.001 or higher
GLC (253)	ATA - ATA[EDW]/tow-away protection/interior protection	Live Data		V1.00.001 or higher
GLC (253)	Trailer recognition module - Trailer recognition	ECU Information		V1.00.001 or higher
GLC (253)	Trailer recognition module - Trailer recognition	Read Codes		V1.00.001 or higher
GLC (253)	Trailer recognition module - Trailer recognition	Erase Codes		V1.00.001 or higher
GLC (253)	Trailer recognition module - Trailer recognition	Live Data		V1.00.001 or higher

GLC (253)	Multifunction control unit - Multifunction control unit	ECU Information		V1.00.001 or higher
GLC (253)	Multifunction control unit - Multifunction control unit	Read Codes		V1.00.001 or higher
GLC (253)	Multifunction control unit - Multifunction control unit	Erase Codes		V1.00.001 or higher
GLC (253)	Multifunction control unit - Multifunction control unit	Live Data		V1.00.001 or higher
GLC (253)	SD - Control module Silding roof	ECU Information		V1.00.001 or higher
GLC (253)	SD - Control module Silding roof	Read Codes		V1.00.001 or higher
GLC (253)	SD - Control module Silding roof	Erase Codes		V1.00.001 or higher
GLC (253)	SD - Control module Silding roof	Live Data		V1.00.001 or higher
GLC (253)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
GLC (253)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
GLC (253)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
GLC (253)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
GLC (253)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
GLC (253)	RevETR-LF - Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
GLC (253)	RevETR-LF - Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher

GLC (253)	RevETR-LF - Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
GLC (253)	RevETR-LF - Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
GLC (253)	RevETR-RF - Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
GLC (253)	RevETR-RF - Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
GLC (253)	RevETR-RF - Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
GLC (253)	RevETR-RF - Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
GLC (253)	SOGESTAR2 - Sound generator for electric vehicle	ECU Information		V1.00.001 or higher
GLC (253)	SOGESTAR2 - Sound generator for electric vehicle	Read Codes		V1.00.001 or higher
GLC (253)	SOGESTAR2 - Sound generator for electric vehicle	Erase Codes		V1.00.001 or higher

GLC (253)	SOGESTAR2 - Sound generator for electric vehicle	Live Data		V1.00.001 or higher
GLC (253)	SG-LG - Charger	ECU Information		V1.00.001 or higher
GLC (253)	SG-LG - Charger	Read Codes		V1.00.001 or higher
GLC (253)	SG-LG - Charger	Erase Codes		V1.00.001 or higher
GLC (253)	SG-LG - Charger	Live Data		V1.00.001 or higher
GLC (253)	DC/DC - DC/DC converter	ECU Information		V1.00.001 or higher
GLC (253)	DC/DC - DC/DC converter	Read Codes		V1.00.001 or higher
GLC (253)	DC/DC - DC/DC converter	Erase Codes		V1.00.001 or higher
GLC (253)	DC/DC - DC/DC converter	Live Data		V1.00.001 or higher
GLC (253)	SCM - Steering column module	ECU Information		V1.00.001 or higher
GLC (253)	SCM - Steering column module	Read Codes		V1.00.001 or higher
GLC (253)	SCM - Steering column module	Erase Codes		V1.00.001 or higher
GLC (253)	SCM - Steering column module	Live Data		V1.00.001 or higher
GLC (253)	BMS - Battery management system	ECU Information		V1.00.001 or higher
GLC (253)	BMS - Battery management system	Read Codes		V1.00.001 or higher
GLC (253)	BMS - Battery management system	Erase Codes		V1.00.001 or higher
GLC (253)	BMS - Battery management system	Live Data		V1.00.001 or higher
GLC (253)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
GLC (253)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
GLC (253)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
GLC (253)	IC - Instrument cluster	Live Data		V1.00.001 or higher

GLC (253)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
GLC (253)	IC - Instrument cluster	Active Test		V1.00.001 or higher
GLC (253)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher
GLC (253)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Read Codes		V1.00.001 or higher
GLC (253)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
GLC (253)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
GLC (253)	TPAD - Touchpad	ECU Information		V1.00.001 or higher
GLC (253)	TPAD - Touchpad	Read Codes		V1.00.001 or higher
GLC (253)	TPAD - Touchpad	Erase Codes		V1.00.001 or higher
GLC (253)	TPAD - Touchpad	Live Data		V1.00.001 or higher
GLC (253)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
GLC (253)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher
GLC (253)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher
GLC (253)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
GLC (253)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher

GLC (253)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
GLC (253)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
GLC (253)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
GLC (253)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
GLC (253)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
GLC (253)	Head-up display - Head-up display	ECU Information		V1.00.001 or higher
GLC (253)	Head-up display - Head-up display	Read Codes		V1.00.001 or higher
GLC (253)	Head-up display - Head-up display	Erase Codes		V1.00.001 or higher
GLC (253)	Head-up display - Head-up display	Live Data		V1.00.001 or higher
GLC (253)	TB5 - TV tuner Tuner unit	ECU Information		V1.00.001 or higher
GLC (253)	TB5 - TV tuner Tuner unit	Read Codes		V1.00.001 or higher
GLC (253)	TB5 - TV tuner Tuner unit	Erase Codes		V1.00.001 or higher
GLC (253)	TB5 - TV tuner Tuner unit	Live Data		V1.00.001 or higher
GLC (253)	SOUND - Sound system	ECU Information		V1.00.001 or higher
GLC (253)	SOUND - Sound system	Read Codes		V1.00.001 or higher
GLC (253)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
GLC (253)	SOUND - Sound system	Live Data		V1.00.001 or higher
GLC (253)	DAB - Digital radio Tuner unit	ECU Information		V1.00.001 or higher
GLC (253)	DAB - Digital radio Tuner unit	Read Codes		V1.00.001 or higher
GLC (253)	DAB - Digital radio Tuner unit	Erase Codes		V1.00.001 or higher
GLC (253)	DAB - Digital radio Tuner unit	Live Data		V1.00.001 or higher

GLC (253)	DCU-LF - Left front door	ECU Information		V1.00.001 or higher
GLC (253)	DCU-LF - Left front door	Read Codes		V1.00.001 or higher
GLC (253)	DCU-LF - Left front door	Erase Codes		V1.00.001 or higher
GLC (253)	DCU-LF - Left front door	Live Data		V1.00.001 or higher
GLC (253)	DCU-RF - Right front door	ECU Information		V1.00.001 or higher
GLC (253)	DCU-RF - Right front door	Read Codes		V1.00.001 or higher
GLC (253)	DCU-RF - Right front door	Erase Codes		V1.00.001 or higher
GLC (253)	DCU-RF - Right front door	Live Data		V1.00.001 or higher
GLC (253)	DCU-LR - Left rear door	ECU Information		V1.00.001 or higher
GLC (253)	DCU-LR - Left rear door	Read Codes		V1.00.001 or higher
GLC (253)	DCU-LR - Left rear door	Erase Codes		V1.00.001 or higher
GLC (253)	DCU-LR - Left rear door	Live Data		V1.00.001 or higher
GLC (253)	DCU-RR - Right rear door	ECU Information		V1.00.001 or higher
GLC (253)	DCU-RR - Right rear door	Read Codes		V1.00.001 or higher
GLC (253)	DCU-RR - Right rear door	Erase Codes		V1.00.001 or higher
GLC (253)	DCU-RR - Right rear door	Live Data		V1.00.001 or higher
GLC (253)	ESA Driver - Electric seat adjustmnet Driver with memory function	ECU Information		V1.00.001 or higher
GLC (253)	ESA Driver - Electric seat adjustmnet Driver with memory function	Read Codes		V1.00.001 or higher
GLC (253)	ESA Driver - Electric seat adjustmnet Driver with memory function	Erase Codes		V1.00.001 or higher



GLC (253)	ESA Driver - Electric seat adjustmnet Driver with memory function	Live Data		V1.00.001 or higher
GLC (253)	ESA Front passenger - Electric seat adjustment Front passenger with memory function	ECU Information		V1.00.001 or higher
GLC (253)	ESA Front passenger - Electric seat adjustment Front passenger with memory function	Read Codes		V1.00.001 or higher
GLC (253)	ESA Front passenger - Electric seat adjustment Front passenger with memory function	Erase Codes		V1.00.001 or higher
GLC (253)	ESA Front passenger - Electric seat adjustment Front passenger with memory function	Live Data		V1.00.001 or higher
GLC (253)	HKS - Trunk lid control	ECU Information		V1.00.001 or higher
GLC (253)	HKS - Trunk lid control	Read Codes		V1.00.001 or higher
GLC (253)	HKS - Trunk lid control	Erase Codes		V1.00.001 or higher
GLC (253)	HKS - Trunk lid control	Live Data		V1.00.001 or higher
GLC (253)	PPAMKS - Pneumatic pump for multicontour seat	ECU Information		V1.00.001 or higher
GLC (253)	PPAMKS - Pneumatic pump for multicontour seat	Read Codes		V1.00.001 or higher

GLC (253)	PPAMKS - Pneumatic pump for multicontour seat	Erase Codes		V1.00.001 or higher
GLC (253)	PPAMKS - Pneumatic pump for multicontour seat	Live Data		V1.00.001 or higher
GLC (253)	AAC - Ari conditioning	ECU Information		V1.00.001 or higher
GLC (253)	AAC - Ari conditioning	Read Codes		V1.00.001 or higher
GLC (253)	AAC - Ari conditioning	Erase Codes		V1.00.001 or higher
GLC (253)	AAC - Ari conditioning	Live Data		V1.00.001 or higher
GLC (253)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher
GLC (253)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
GLC (253)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
GLC (253)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
GLC (253)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
GLC (253)	KAB - Control unit Camera cover	ECU Information		V1.00.001 or higher
GLC (253)	KAB - Control unit Camera cover	Read Codes		V1.00.001 or higher
GLC (253)	KAB - Control unit Camera cover	Erase Codes		V1.00.001 or higher
GLC (253)	KAB - Control unit Camera cover	Live Data		V1.00.001 or higher
GLC (253)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
GLC (253)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher

GLC (253)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
GLC (253)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
GLC (253)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
GLC (253)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
GLC (253)	RFK/360 - camera	ECU Information		V1.00.001 or higher
GLC (253)	RFK/360 - camera	Read Codes		V1.00.001 or higher
GLC (253)	RFK/360 - camera	Erase Codes		V1.00.001 or higher
GLC (253)	RFK/360 - camera	Live Data		V1.00.001 or higher
GLC (253)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
GLC (253)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
GLC (253)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
GLC (253)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
GLC (253)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	ECU Information		V1.00.001 or higher
GLC (253)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	Read Codes		V1.00.001 or higher
GLC (253)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	Erase Codes		V1.00.001 or higher

GLC (253)	SG-AWF - Control unit COLLISION PREVENTION ASSIST	Live Data		V1.00.001 or higher
GLC (253)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
GLC (253)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
GLC (253)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
GLC (253)	DTR - DISTRONIC	Live Data		V1.00.001 or higher
GLC (253)	SGR - Radar sensors control unit	ECU Information		V1.00.001 or higher
GLC (253)	SGR - Radar sensors control unit	Read Codes		V1.00.001 or higher
GLC (253)	SGR - Radar sensors control unit	Erase Codes		V1.00.001 or higher
GLC (253)	SGR - Radar sensors control unit	Live Data		V1.00.001 or higher
GLC (253)	PARK - Parking system	ECU Information		V1.00.001 or higher
GLC (253)	PARK - Parking system	Read Codes		V1.00.001 or higher
GLC (253)	PARK - Parking system	Erase Codes		V1.00.001 or higher
GLC (253)	PARK - Parking system	Live Data		V1.00.001 or higher
GLK (204)	ME - Motor electronics	ECU Information		V1.00.001 or higher
GLK (204)	ME - Motor electronics	Read Codes		V1.00.001 or higher
GLK (204)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
GLK (204)	ME - Motor electronics	Live Data		V1.00.001 or higher
GLK (204)	ME - Motor electronics	Active Test		V1.00.001 or higher
GLK (204)	ME - Motor electronics	Special functions	Variant coding	V1.00.001 or higher
GLK (204)	CDI-Motor electronics	ECU Information		V1.00.001 or higher
GLK (204)	CDI-Motor electronics	Read Codes		V1.00.001 or higher

GLK (204)	CDI-Motor electronics	Erase Codes		V1.00.001 or higher
GLK (204)	CDI-Motor electronics	Live Data		V1.00.001 or higher
GLK (204)	CDI-Motor electronics	Active Test		V1.00.001 or higher
GLK (204)	VGS - Transmission control	ECU Information		V1.00.001 or higher
GLK (204)	VGS - Transmission control	Read Codes		V1.00.001 or higher
GLK (204)	VGS - Transmission control	Erase Codes		V1.00.001 or higher
GLK (204)	VGS - Transmission control	Live Data		V1.00.001 or higher
GLK (204)	VGS - Transmission control	Active Test		V1.00.001 or higher
GLK (204)	VGS - Transmission control	Special functions	Standard-Fehlercode/Standard-Fehlercode/Standard-Fehlercode	V1.00.001 or higher
GLK (204)	VGS - Transmission control	Special functions	Standard-Fehlercode	V1.00.001 or higher
GLK (204)	VGS - Transmission control	Special functions	Communication with the alarm siren is not possible during the diagnosis session.	V1.00.001 or higher
GLK (204)	VGS - Transmission control	Special functions	Precautionary measures when working on high-voltage on-board electrical systems	V1.00.001 or higher
GLK (204)	SG-SOGE-AGA - Sound generator for exhaust system	ECU Information		V1.00.001 or higher

GLK (204)	SG-SOGE-AGA - Sound generator for exhaust system	Read Codes		V1.00.001 or higher
GLK (204)	SG-SOGE-AGA - Sound generator for exhaust system	Erase Codes		V1.00.001 or higher
GLK (204)	SG-SOGE-AGA - Sound generator for exhaust system	Live Data		V1.00.001 or higher
GLK (204)	SG-SOGE-AGA - Sound generator for exhaust system	Active Test		V1.00.001 or higher
GLK (204)	ISM-Shift module	ECU Information		V1.00.001 or higher
GLK (204)	ISM-Shift module	Read Codes		V1.00.001 or higher
GLK (204)	ISM-Shift module	Erase Codes		V1.00.001 or higher
GLK (204)	ISM-Shift module	Live Data		V1.00.001 or higher
GLK (204)	ISM-Shift module	Active Test		V1.00.001 or higher
GLK (204)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
GLK (204)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
GLK (204)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
GLK (204)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
GLK (204)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
GLK (204)	FSCU04 - Left fuel pump	ECU Information		V1.00.001 or higher
GLK (204)	FSCU04 - Left fuel pump	Read Codes		V1.00.001 or higher
GLK (204)	FSCU04 - Left fuel pump	Erase Codes		V1.00.001 or higher
GLK (204)	FSCU04 - Left fuel pump	Live Data		V1.00.001 or higher
GLK (204)	FSCU04 - Left fuel pump	Active Test		V1.00.001 or higher

GLK (204)	ESM[EWM] - Electronic selector module	ECU Information		V1.00.001 or higher
GLK (204)	ESM[EWM] - Electronic selector module	Read Codes		V1.00.001 or higher
GLK (204)	ESM[EWM] - Electronic selector module	Erase Codes		V1.00.001 or higher
GLK (204)	ESM[EWM] - Electronic selector module	Live Data		V1.00.001 or higher
GLK (204)	ESM[EWM] - Electronic selector module	Active Test		V1.00.001 or higher
GLK (204)	FSCU04 - Right fuel pump	ECU Information		V1.00.001 or higher
GLK (204)	FSCU04 - Right fuel pump	Read Codes		V1.00.001 or higher
GLK (204)	FSCU04 - Right fuel pump	Erase Codes		V1.00.001 or higher
GLK (204)	FSCU04 - Right fuel pump	Live Data		V1.00.001 or higher
GLK (204)	SCR-Selective Catalytic Reduction	ECU Information		V1.00.001 or higher
GLK (204)	SCR-Selective Catalytic Reduction	Read Codes		V1.00.001 or higher
GLK (204)	SCR-Selective Catalytic Reduction	Erase Codes		V1.00.001 or higher
GLK (204)	SCR-Selective Catalytic Reduction	Live Data		V1.00.001 or higher
GLK (204)	SCR-Selective Catalytic Reduction	Active Test		V1.00.001 or higher
GLK (204)	PTCU-Common powertrain controller	ECU Information		V1.00.001 or higher
GLK (204)	PTCU-Common powertrain controller	Read Codes		V1.00.001 or higher
GLK (204)	PTCU-Common powertrain controller	Erase Codes		V1.00.001 or higher

GLK (204)	PTCU-Common powertrain controller	Live Data		V1.00.001 or higher
GLK (204)	ESP - Electric stability program	ECU Information		V1.00.001 or higher
GLK (204)	ESP - Electric stability program	Read Codes		V1.00.001 or higher
GLK (204)	ESP - Electric stability program	Erase Codes		V1.00.001 or higher
GLK (204)	ESP - Electric stability program	Live Data		V1.00.001 or higher
GLK (204)	ESP - Electric stability program	Active Test		V1.00.001 or higher
GLK (204)	AMG DRVU-AMG DRIVE UNIT	ECU Information		V1.00.001 or higher
GLK (204)	AMG DRVU-AMG DRIVE UNIT	Read Codes		V1.00.001 or higher
GLK (204)	AMG DRVU-AMG DRIVE UNIT	Erase Codes		V1.00.001 or higher
GLK (204)	AMG DRVU-AMG DRIVE UNIT	Live Data		V1.00.001 or higher
GLK (204)	AMG DRVU-AMG DRIVE UNIT	Active Test		V1.00.001 or higher
GLK (204)	ADS - Adaptive damping system	ECU Information		V1.00.001 or higher
GLK (204)	ADS - Adaptive damping system	Read Codes		V1.00.001 or higher
GLK (204)	ADS - Adaptive damping system	Erase Codes		V1.00.001 or higher
GLK (204)	ADS - Adaptive damping system	Live Data		V1.00.001 or higher
GLK (204)	ADS - Adaptive damping system	Active Test		V1.00.001 or higher
GLK (204)	EHPS - Ectorhydraulic power sreeting	ECU Information		V1.00.001 or higher
GLK (204)	EHPS - Ectorhydraulic power sreeting	Read Codes		V1.00.001 or higher
GLK (204)	EHPS - Ectorhydraulic power sreeting	Erase Codes		V1.00.001 or higher
GLK (204)	EHPS - Ectorhydraulic power sreeting	Live Data		V1.00.001 or higher
GLK (204)	ES - Electric power steering	ECU Information		V1.00.001 or higher



GLK (204)	ES - Electric power steering	Read Codes		V1.00.001 or higher
GLK (204)	ES - Electric power steering	Erase Codes		V1.00.001 or higher
GLK (204)	ES - Electric power steering	Live Data		V1.00.001 or higher
GLK (204)	SRS - Supplemental restraint system	ECU Information		V1.00.001 or higher
GLK (204)	SRS - Supplemental restraint system	Read Codes		V1.00.001 or higher
GLK (204)	SRS - Supplemental restraint system	Erase Codes		V1.00.001 or higher
GLK (204)	SRS - Supplemental restraint system	Live Data		V1.00.001 or higher
GLK (204)	CGW-Central gateway	ECU Information		V1.00.001 or higher
GLK (204)	CGW-Central gateway	Read Codes		V1.00.001 or higher
GLK (204)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
GLK (204)	CGW-Central gateway	Live Data		V1.00.001 or higher
GLK (204)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher
GLK (204)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
GLK (204)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
GLK (204)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
GLK (204)	SCM - Steering column module	ECU Information		V1.00.001 or higher
GLK (204)	SCM - Steering column module	Read Codes		V1.00.001 or higher
GLK (204)	SCM - Steering column module	Erase Codes		V1.00.001 or higher
GLK (204)	SCM - Steering column module	Live Data		V1.00.001 or higher
GLK (204)	SCM - Steering column module	Active Test		V1.00.001 or higher
GLK (204)	Multifunction control unit - Multifunction control unit	ECU Information		V1.00.001 or higher

GLK (204)	Multifunction control unit - Multifunction control unit	Read Codes		V1.00.001 or higher
GLK (204)	Multifunction control unit - Multifunction control unit	Erase Codes		V1.00.001 or higher
GLK (204)	Multifunction control unit - Multifunction control unit	Live Data		V1.00.001 or higher
GLK (204)	Multifunction control unit - Multifunction control unit	Active Test		V1.00.001 or higher
GLK (204)	KG - KEYLESS GO	ECU Information		V1.00.001 or higher
GLK (204)	KG - KEYLESS GO	Read Codes		V1.00.001 or higher
GLK (204)	KG - KEYLESS GO	Erase Codes		V1.00.001 or higher
GLK (204)	KG - KEYLESS GO	Live Data		V1.00.001 or higher
GLK (204)	KG - KEYLESS GO	Active Test		V1.00.001 or higher
GLK (204)	HKS-Tailgate control (N121/1)	ECU Information		V1.00.001 or higher
GLK (204)	HKS-Tailgate control (N121/1)	Read Codes		V1.00.001 or higher
GLK (204)	HKS-Tailgate control (N121/1)	Erase Codes		V1.00.001 or higher
GLK (204)	HKS-Tailgate control (N121/1)	Live Data		V1.00.001 or higher
GLK (204)	HKS-Tailgate control (N121/1)	Active Test		V1.00.001 or higher
GLK (204)	PSD - Panoramic sliding sunroof	ECU Information		V1.00.001 or higher
GLK (204)	PSD - Panoramic sliding sunroof	Read Codes		V1.00.001 or higher
GLK (204)	PSD - Panoramic sliding sunroof	Erase Codes		V1.00.001 or higher
GLK (204)	PSD - Panoramic sliding sunroof	Live Data		V1.00.001 or higher
GLK (204)	PSD - Panoramic sliding sunroof	Active Test		V1.00.001 or higher

GLK (204)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
GLK (204)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
GLK (204)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
GLK (204)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
GLK (204)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
GLK (204)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
GLK (204)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
GLK (204)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
GLK (204)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
GLK (204)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
GLK (204)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
GLK (204)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher

GLK (204)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
GLK (204)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
GLK (204)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
GLK (204)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
GLK (204)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
GLK (204)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
GLK (204)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
GLK (204)	Trailer recognition module - Trailer recognition	ECU Information		V1.00.001 or higher
GLK (204)	Trailer recognition module - Trailer recognition	Read Codes		V1.00.001 or higher
GLK (204)	Trailer recognition module - Trailer recognition	Erase Codes		V1.00.001 or higher
GLK (204)	Trailer recognition module - Trailer recognition	Live Data		V1.00.001 or higher
GLK (204)	Trailer recognition module - Trailer recognition	Active Test		V1.00.001 or higher
GLK (204)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher

GLK (204)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
GLK (204)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
GLK (204)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
GLK (204)	Driver-side SAM - Front signal acquisition and actuation module	Active Test		V1.00.001 or higher
GLK (204)	Rear SAM - Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
GLK (204)	Rear SAM - Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
GLK (204)	Rear SAM - Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
GLK (204)	Rear SAM - Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
GLK (204)	Rear SAM - Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
GLK (204)	SG-SW-L - Left headlamp	ECU Information		V1.00.001 or higher

GLK (204)	SG-SW-L - Left headlamp	Read Codes		V1.00.001 or higher
GLK (204)	SG-SW-L - Left headlamp	Erase Codes		V1.00.001 or higher
GLK (204)	SG-SW-L - Left headlamp	Live Data		V1.00.001 or higher
GLK (204)	SG-SW-L - Left headlamp	Active Test		V1.00.001 or higher
GLK (204)	SG-SW-R - Right headlamp	ECU Information		V1.00.001 or higher
GLK (204)	SG-SW-R - Right headlamp	Read Codes		V1.00.001 or higher
GLK (204)	SG-SW-R - Right headlamp	Erase Codes		V1.00.001 or higher
GLK (204)	SG-SW-R - Right headlamp	Live Data		V1.00.001 or higher
GLK (204)	SG-SW-R - Right headlamp	Active Test		V1.00.001 or higher
GLK (204)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
GLK (204)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
GLK (204)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
GLK (204)	IC - Instrument cluster	Live Data		V1.00.001 or higher
GLK (204)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
GLK (204)	IC - Instrument cluster	Active Test		V1.00.001 or higher
GLK (204)	ICI-InCar Internet	ECU Information		V1.00.001 or higher
GLK (204)	ICI-InCar Internet	Read Codes		V1.00.001 or higher
GLK (204)	ICI-InCar Internet	Erase Codes		V1.00.001 or higher
GLK (204)	ICI-InCar Internet	Live Data		V1.00.001 or higher
GLK (204)	AVE-H - Controller unit Rear entertainment system	ECU Information		V1.00.001 or higher
GLK (204)	AVE-H - Controller unit Rear entertainment system	Read Codes		V1.00.001 or higher

GLK (204)	AVE-H - Controller unit Rear entertainment system	Erase Codes		V1.00.001 or higher
GLK (204)	AVE-H - Controller unit Rear entertainment system	Live Data		V1.00.001 or higher
GLK (204)	AVE-H - Controller unit Rear entertainment system	Active Test		V1.00.001 or higher
GLK (204)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher
GLK (204)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Read Codes		V1.00.001 or higher
GLK (204)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Erase Codes		V1.00.001 or higher
GLK (204)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	Live Data		V1.00.001 or higher
GLK (204)	AMG PM-AMG Performance Media	ECU Information		V1.00.001 or higher
GLK (204)	AMG PM-AMG Performance Media	Read Codes		V1.00.001 or higher
GLK (204)	AMG PM-AMG Performance Media	Erase Codes		V1.00.001 or higher

GLK (204)	AMG PM-AMG Performance Media	Live Data		V1.00.001 or higher
GLK (204)	NAV - Navigation module	ECU Information		V1.00.001 or higher
GLK (204)	NAV - Navigation module	Read Codes		V1.00.001 or higher
GLK (204)	NAV - Navigation module	Erase Codes		V1.00.001 or higher
GLK (204)	NAV - Navigation module	Live Data		V1.00.001 or higher
GLK (204)	Audio - Audio or COMAND	ECU Information		V1.00.001 or higher
GLK (204)	Audio - Audio or COMAND	Read Codes		V1.00.001 or higher
GLK (204)	Audio - Audio or COMAND	Erase Codes		V1.00.001 or higher
GLK (204)	Audio - Audio or COMAND	Live Data		V1.00.001 or higher
GLK (204)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher
GLK (204)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
GLK (204)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher
GLK (204)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher
GLK (204)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
GLK (204)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
GLK (204)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
GLK (204)	TELE AID-Control unit	Live Data		V1.00.001 or higher
GLK (204)	PTS - PARKTRONIC	ECU Information		V1.00.001 or higher
GLK (204)	PTS - PARKTRONIC	Read Codes		V1.00.001 or higher
GLK (204)	PTS - PARKTRONIC	Erase Codes		V1.00.001 or higher
GLK (204)	PTS - PARKTRONIC	Live Data		V1.00.001 or higher
GLK (204)	PTS - PARKTRONIC	Active Test		V1.00.001 or higher
GLK (204)	TV - TV tuner	ECU Information		V1.00.001 or higher



GLK (204)	TV - TV tuner	Read Codes		V1.00.001 or higher
GLK (204)	TV - TV tuner	Erase Codes		V1.00.001 or higher
GLK (204)	TV - TV tuner	Live Data		V1.00.001 or higher
GLK (204)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
GLK (204)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
GLK (204)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
GLK (204)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
GLK (204)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
GLK (204)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
GLK (204)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
GLK (204)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
GLK (204)	Drive Kit Plus - Drive kit for iPhone	ECU Information		V1.00.001 or higher
GLK (204)	Drive Kit Plus - Drive kit for iPhone	Read Codes		V1.00.001 or higher
GLK (204)	Drive Kit Plus - Drive kit for iPhone	Erase Codes		V1.00.001 or higher
GLK (204)	Drive Kit Plus - Drive kit for iPhone	Live Data		V1.00.001 or higher
GLK (204)	Head-up display - Head-up display	ECU Information		V1.00.001 or higher
GLK (204)	Head-up display - Head-up display	Read Codes		V1.00.001 or higher
GLK (204)	Head-up display - Head-up display	Erase Codes		V1.00.001 or higher

GLK (204)	Head-up display - Head-up display	Live Data		V1.00.001 or higher
GLK (204)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
GLK (204)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
GLK (204)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
GLK (204)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
GLK (204)	MIF - Media interface	ECU Information		V1.00.001 or higher
GLK (204)	MIF - Media interface	Read Codes		V1.00.001 or higher
GLK (204)	MIF - Media interface	Erase Codes		V1.00.001 or higher
GLK (204)	MIF - Media interface	Live Data		V1.00.001 or higher
GLK (204)	D-FOL - Display in left rear passenger compartment	ECU Information		V1.00.001 or higher
GLK (204)	D-FOL - Display in left rear passenger compartment	Read Codes		V1.00.001 or higher
GLK (204)	D-FOL - Display in left rear passenger compartment	Erase Codes		V1.00.001 or higher
GLK (204)	D-FOL - Display in left rear passenger compartment	Live Data		V1.00.001 or higher
GLK (204)	D-FOL - Display in left rear passenger compartment	Active Test		V1.00.001 or higher
GLK (204)	D-FOR - Display in right rear passenger compartment	ECU Information		V1.00.001 or higher

GLK (204)	D-FOR - Display in right rear passenger compartment	Read Codes		V1.00.001 or higher
GLK (204)	D-FOR - Display in right rear passenger compartment	Erase Codes		V1.00.001 or higher
GLK (204)	D-FOR - Display in right rear passenger compartment	Live Data		V1.00.001 or higher
GLK (204)	D-FOR - Display in right rear passenger compartment	Active Test		V1.00.001 or higher
GLK (204)	TELE AID- Telematic service Emergency call	ECU Information		V1.00.001 or higher
GLK (204)	TELE AID- Telematic service Emergency call	Read Codes		V1.00.001 or higher
GLK (204)	TELE AID- Telematic service Emergency call	Erase Codes		V1.00.001 or higher
GLK (204)	TELE AID- Telematic service Emergency call	Live Data		V1.00.001 or higher
GLK (204)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
GLK (204)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher

GLK (204)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
GLK (204)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
GLK (204)	TELE AID- Telematic services Remote door unlocking	ECU Information		V1.00.001 or higher
GLK (204)	TELE AID- Telematic services Remote door unlocking	Read Codes		V1.00.001 or higher
GLK (204)	TELE AID- Telematic services Remote door unlocking	Erase Codes		V1.00.001 or higher
GLK (204)	TELE AID- Telematic services Remote door unlocking	Live Data		V1.00.001 or higher
GLK (204)	TELE AID- Telematic service Stolen vehicle tracking	ECU Information		V1.00.001 or higher
GLK (204)	TELE AID- Telematic service Stolen vehicle tracking	Read Codes		V1.00.001 or higher
GLK (204)	TELE AID- Telematic service Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
GLK (204)	TELE AID- Telematic service Stolen vehicle tracking	Live Data		V1.00.001 or higher

GLK (204)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
GLK (204)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
GLK (204)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
GLK (204)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
GLK (204)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher
GLK (204)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
GLK (204)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
GLK (204)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
GLK (204)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher
GLK (204)	CTEL - Mobile phone	ECU Information		V1.00.001 or higher
GLK (204)	CTEL - Mobile phone	Read Codes		V1.00.001 or higher
GLK (204)	CTEL - Mobile phone	Erase Codes		V1.00.001 or higher
GLK (204)	CTEL - Mobile phone	Live Data		V1.00.001 or higher
GLK (204)	ESA Driver - Electric seat adjustmnet Driver	ECU Information		V1.00.001 or higher
GLK (204)	ESA Driver - Electric seat adjustmnet Driver	Read Codes		V1.00.001 or higher
GLK (204)	ESA Driver - Electric seat adjustmnet Driver	Erase Codes		V1.00.001 or higher

GLK (204)	ESA Driver - Electric seat adjustmnet Driver	Live Data		V1.00.001 or higher
GLK (204)	ESA Driver - Electric seat adjustmnet Driver	Active Test		V1.00.001 or higher
GLK (204)	ESA Front passenger - Electric seat adjustment Front passenger	ECU Information		V1.00.001 or higher
GLK (204)	ESA Front passenger - Electric seat adjustment Front passenger	Read Codes		V1.00.001 or higher
GLK (204)	ESA Front passenger - Electric seat adjustment Front passenger	Erase Codes		V1.00.001 or higher
GLK (204)	ESA Front passenger - Electric seat adjustment Front passenger	Live Data		V1.00.001 or higher
GLK (204)	ESA Front passenger - Electric seat adjustment Front passenger	Active Test		V1.00.001 or higher
GLK (204)	DCU-LF - Left front door	ECU Information		V1.00.001 or higher
GLK (204)	DCU-LF - Left front door	Read Codes		V1.00.001 or higher
GLK (204)	DCU-LF - Left front door	Erase Codes		V1.00.001 or higher
GLK (204)	DCU-LF - Left front door	Live Data		V1.00.001 or higher
GLK (204)	DCU-LF - Left front door	Active Test		V1.00.001 or higher
GLK (204)	DCU-RF - Right front door	ECU Information		V1.00.001 or higher
GLK (204)	DCU-RF - Right front door	Read Codes		V1.00.001 or higher

GLK (204)	DCU-RF - Right front door	Erase Codes		V1.00.001 or higher
GLK (204)	DCU-RF - Right front door	Live Data		V1.00.001 or higher
GLK (204)	DCU-RF - Right front door	Active Test		V1.00.001 or higher
GLK (204)	DCU-LR - Left rear door	ECU Information		V1.00.001 or higher
GLK (204)	DCU-LR - Left rear door	Read Codes		V1.00.001 or higher
GLK (204)	DCU-LR - Left rear door	Erase Codes		V1.00.001 or higher
GLK (204)	DCU-LR - Left rear door	Live Data		V1.00.001 or higher
GLK (204)	DCU-LR - Left rear door	Active Test		V1.00.001 or higher
GLK (204)	DCU-RR - Right rear door	ECU Information		V1.00.001 or higher
GLK (204)	DCU-RR - Right rear door	Read Codes		V1.00.001 or higher
GLK (204)	DCU-RR - Right rear door	Erase Codes		V1.00.001 or higher
GLK (204)	DCU-RR - Right rear door	Live Data		V1.00.001 or higher
GLK (204)	DCU-RR - Right rear door	Active Test		V1.00.001 or higher
GLK (204)	AAC-Air conditioning	ECU Information		V1.00.001 or higher
GLK (204)	AAC-Air conditioning	Read Codes		V1.00.001 or higher
GLK (204)	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
GLK (204)	AAC-Air conditioning	Live Data		V1.00.001 or higher
GLK (204)	AAC-Air conditioning	Active Test		V1.00.001 or higher
GLK (204)	STH - Stationary heater	ECU Information		V1.00.001 or higher
GLK (204)	STH - Stationary heater	Read Codes		V1.00.001 or higher
GLK (204)	STH - Stationary heater	Erase Codes		V1.00.001 or higher
GLK (204)	STH - Stationary heater	Live Data		V1.00.001 or higher
GLK (204)	STH - Stationary heater	Active Test		V1.00.001 or higher
GLK (204)	TPM - Tire pressure monitor	ECU Information		V1.00.001 or higher

GLK (204)	TPM - Tire pressure monitor	Read Codes		V1.00.001 or higher
GLK (204)	TPM - Tire pressure monitor	Erase Codes		V1.00.001 or higher
GLK (204)	TPM - Tire pressure monitor	Live Data		V1.00.001 or higher
GLK (204)	TPM - Tire pressure monitor	Active Test		V1.00.001 or higher
GLK (204)	TPM - Tire pressure monitor	Special functions	Write the wheel electronics ID number.	V1.00.001 or higher
GLK (204)	SGR - Radar sensors control unit	ECU Information		V1.00.001 or higher
GLK (204)	SGR - Radar sensors control unit	Read Codes		V1.00.001 or higher
GLK (204)	SGR - Radar sensors control unit	Erase Codes		V1.00.001 or higher
GLK (204)	SGR - Radar sensors control unit	Live Data		V1.00.001 or higher
GLK (204)	SGR - Radar sensors control unit	Active Test		V1.00.001 or higher
GLK (204)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
GLK (204)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
GLK (204)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
GLK (204)	IRS-HRA - Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
GLK (204)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher



GLK (204)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
GLK (204)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
GLK (204)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
GLK (204)	PTS - PARKTRONIC	ECU Information		V1.00.001 or higher
GLK (204)	PTS - PARKTRONIC	Read Codes		V1.00.001 or higher
GLK (204)	PTS - PARKTRONIC	Erase Codes		V1.00.001 or higher
GLK (204)	PTS - PARKTRONIC	Live Data		V1.00.001 or higher
GLK (204)	PTS - PARKTRONIC	Active Test		V1.00.001 or higher
GLK (204)	DTR - DISTRONIC	ECU Information		V1.00.001 or higher
GLK (204)	DTR - DISTRONIC	Read Codes		V1.00.001 or higher
GLK (204)	DTR - DISTRONIC	Erase Codes		V1.00.001 or higher
GLK (204)	DTR - DISTRONIC	Live Data		V1.00.001 or higher
GLK (204)	RFK - Backup camera	ECU Information		V1.00.001 or higher
GLK (204)	RFK - Backup camera	Read Codes		V1.00.001 or higher
GLK (204)	RFK - Backup camera	Erase Codes		V1.00.001 or higher
GLK (204)	RFK - Backup camera	Live Data		V1.00.001 or higher
GLK (204)	RFK - Backup camera	Active Test		V1.00.001 or higher
GLA (156)	ME - Motor electronics	ECU Information		V1.00.001 or higher
GLA (156)	ME - Motor electronics	Read Codes		V1.00.001 or higher
GLA (156)	ME - Motor electronics	Erase Codes		V1.00.001 or higher
GLA (156)	ME - Motor electronics	Live Data		V1.00.001 or higher

GLA (156)	ME - Motor electronics	Active Test		V1.00.001 or higher
GLA (156)	ME - Motor electronics	Control unit adaptations	Configuration	V1.00.001 or higher
GLA (156)	ME - Motor electronics	Control unit adaptations	Teach-in processes	V1.00.001 or higher
GLA (156)	CDI-Motor electronics	ECU Information		V1.00.001 or higher
GLA (156)	CDI-Motor electronics	Read Codes		V1.00.001 or higher
GLA (156)	CDI-Motor electronics	Erase Codes		V1.00.001 or higher
GLA (156)	CDI-Motor electronics	Live Data		V1.00.001 or higher
GLA (156)	CDI-Motor electronics	Active Test		V1.00.001 or higher
GLA (156)	DKG-Electronic transmission control for double-plate clutch transmission	ECU Information		V1.00.001 or higher
GLA (156)	DKG-Electronic transmission control for double-plate clutch transmission	Read Codes		V1.00.001 or higher
GLA (156)	DKG-Electronic transmission control for double-plate clutch transmission	Erase Codes		V1.00.001 or higher
GLA (156)	DKG-Electronic transmission control for double-plate clutch transmission	Live Data		V1.00.001 or higher
GLA (156)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
GLA (156)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
GLA (156)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
GLA (156)	FSCU-Fuel pump	Live Data		V1.00.001 or higher

GLA (156)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
GLA (156)	VG - All-wheel drive	ECU Information		V1.00.001 or higher
GLA (156)	VG - All-wheel drive	Read Codes		V1.00.001 or higher
GLA (156)	VG - All-wheel drive	Erase Codes		V1.00.001 or higher
GLA (156)	PTCU - Drivertrain	ECU Information		V1.00.001 or higher
GLA (156)	PTCU - Drivertrain	Read Codes		V1.00.001 or higher
GLA (156)	PTCU - Drivertrain	Erase Codes		V1.00.001 or higher
GLA (156)	PTCU - Drivertrain	Live Data		V1.00.001 or higher
GLA (156)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
GLA (156)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
GLA (156)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
GLA (156)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
GLA (156)	EFB-Electronic parking brake	ECU Information		V1.00.001 or higher
GLA (156)	EFB-Electronic parking brake	Read Codes		V1.00.001 or higher
GLA (156)	EFB-Electronic parking brake	Erase Codes		V1.00.001 or higher
GLA (156)	EFB-Electronic parking brake	Live Data		V1.00.001 or higher
GLA (156)	EFB-Electronic parking brake	Active Test		V1.00.001 or higher
GLA (156)	EFB-Electronic parking brake	Control unit adaptations	Calibration of control unit 'N128 (Electric parking brake control unit)'	V1.00.001 or higher
GLA (156)	ES-Electrical power steering	ECU Information		V1.00.001 or higher
GLA (156)	ES-Electrical power steering	Read Codes		V1.00.001 or higher
GLA (156)	ES-Electrical power steering	Erase Codes		V1.00.001 or higher
GLA (156)	ES-Electrical power steering	Live Data		V1.00.001 or higher

GLA (156)	DTR-DISTRONIC	ECU Information		V1.00.001 or higher
GLA (156)	DTR-DISTRONIC	Read Codes		V1.00.001 or higher
GLA (156)	DTR-DISTRONIC	Erase Codes		V1.00.001 or higher
GLA (156)	DTR-DISTRONIC	Live Data		V1.00.001 or higher
GLA (156)	SRS-Supplemental restraint system	ECU Information		V1.00.001 or higher
GLA (156)	SRS-Supplemental restraint system	Read Codes		V1.00.001 or higher
GLA (156)	SRS-Supplemental restraint system	Erase Codes		V1.00.001 or higher
GLA (156)	SRS-Supplemental restraint system	Live Data		V1.00.001 or higher
GLA (156)	SRS-Supplemental restraint system	Active Test		V1.00.001 or higher
GLA (156)	EZS - Electronic ignition lock	ECU Information		V1.00.001 or higher
GLA (156)	EZS - Electronic ignition lock	Read Codes		V1.00.001 or higher
GLA (156)	EZS - Electronic ignition lock	Erase Codes		V1.00.001 or higher
GLA (156)	EZS - Electronic ignition lock	Live Data		V1.00.001 or higher
GLA (156)	SCM-Steering column module	ECU Information		V1.00.001 or higher
GLA (156)	SCM-Steering column module	Read Codes		V1.00.001 or higher
GLA (156)	SCM-Steering column module	Erase Codes		V1.00.001 or higher
GLA (156)	SCM-Steering column module	Live Data		V1.00.001 or higher
GLA (156)	SCM-Steering column module	Active Test		V1.00.001 or higher
GLA (156)	ATA-ATA[EDW]/tow-away protection/interior protection	ECU Information		V1.00.001 or higher

GLA (156)	ATA-ATA[EDW]/tow-away protection/interior protection	Read Codes		V1.00.001 or higher
GLA (156)	ATA-ATA[EDW]/tow-away protection/interior protection	Erase Codes		V1.00.001 or higher
GLA (156)	ATA-ATA[EDW]/tow-away protection/interior protection	Live Data		V1.00.001 or higher
GLA (156)	Multifunction control unit-Multifunction control unit	ECU Information		V1.00.001 or higher
GLA (156)	Multifunction control unit-Multifunction control unit	Read Codes		V1.00.001 or higher
GLA (156)	Multifunction control unit-Multifunction control unit	Erase Codes		V1.00.001 or higher
GLA (156)	Multifunction control unit-Multifunction control unit	Live Data		V1.00.001 or higher
GLA (156)	Multifunction control unit-Multifunction control unit	Active Test		V1.00.001 or higher
GLA (156)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
GLA (156)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
GLA (156)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
GLA (156)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
GLA (156)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
GLA (156)	HKS - Tailgate control	ECU Information		V1.00.001 or higher

GLA (156)	HKS - Tailgate control	Read Codes		V1.00.001 or higher
GLA (156)	HKS - Tailgate control	Erase Codes		V1.00.001 or higher
GLA (156)	PSD-Control module 'Panoramic sliding roof '	ECU Information		V1.00.001 or higher
GLA (156)	PSD-Control module 'Panoramic sliding roof '	Read Codes		V1.00.001 or higher
GLA (156)	PSD-Control module 'Panoramic sliding roof '	Erase Codes		V1.00.001 or higher
GLA (156)	PSD-Control module 'Panoramic sliding roof '	Live Data		V1.00.001 or higher
GLA (156)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
GLA (156)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
GLA (156)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
GLA (156)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
GLA (156)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher

GLA (156)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
GLA (156)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
GLA (156)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
GLA (156)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
GLA (156)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
GLA (156)	Trailer recognition module - Trailer recognition	ECU Information		V1.00.001 or higher
GLA (156)	Trailer recognition module - Trailer recognition	Read Codes		V1.00.001 or higher
GLA (156)	Trailer recognition module - Trailer recognition	Erase Codes		V1.00.001 or higher
GLA (156)	Trailer recognition module - Trailer recognition	Live Data		V1.00.001 or higher
GLA (156)	Trailer recognition module - Trailer recognition	Active Test		V1.00.001 or higher

GLA (156)	Driver-side SAM - Front signal acquisition and actuation module	ECU Information		V1.00.001 or higher
GLA (156)	Driver-side SAM - Front signal acquisition and actuation module	Read Codes		V1.00.001 or higher
GLA (156)	Driver-side SAM - Front signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
GLA (156)	Driver-side SAM - Front signal acquisition and actuation module	Live Data		V1.00.001 or higher
GLA (156)	SG-SW-Control unit 'Headlamp'	ECU Information		V1.00.001 or higher
GLA (156)	SG-SW-Control unit 'Headlamp'	Read Codes		V1.00.001 or higher
GLA (156)	SG-SW-Control unit 'Headlamp'	Erase Codes		V1.00.001 or higher
GLA (156)	SG-SW-Control unit 'Headlamp'	Live Data		V1.00.001 or higher
GLA (156)	SG-SW-Control unit 'Headlamp'	Active Test		V1.00.001 or higher
GLA (156)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
GLA (156)	IC - Instrument cluster	Read Codes		V1.00.001 or higher
GLA (156)	IC - Instrument cluster	Erase Codes		V1.00.001 or higher
GLA (156)	IC - Instrument cluster	Live Data		V1.00.001 or higher
GLA (156)	IC - Instrument cluster	ECU Information		V1.00.001 or higher
GLA (156)	IC - Instrument cluster	Active Test		V1.00.001 or higher
GLA (156)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsystem	ECU Information		V1.00.001 or higher



GLA (156)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsy stem	Read Codes		V1.00.001 or higher
GLA (156)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsy stem	Erase Codes		V1.00.001 or higher
GLA (156)	KOMO/mbrace - Communication module 'Telematics services'/Notrufsy stem	Live Data		V1.00.001 or higher
GLA (156)	NAV-Navigation module	ECU Information		V1.00.001 or higher
GLA (156)	NAV-Navigation module	Read Codes		V1.00.001 or higher
GLA (156)	NAV-Navigation module	Erase Codes		V1.00.001 or higher
GLA (156)	NAV-Navigation module	Live Data		V1.00.001 or higher
GLA (156)	Audio-Audio or COMAND	ECU Information		V1.00.001 or higher
GLA (156)	Audio-Audio or COMAND	Read Codes		V1.00.001 or higher
GLA (156)	Audio-Audio or COMAND	Erase Codes		V1.00.001 or higher
GLA (156)	Audio-Audio or COMAND	Live Data		V1.00.001 or higher
GLA (156)	SOUND - Sound system	ECU Information		V1.00.001 or higher
GLA (156)	SOUND - Sound system	Read Codes		V1.00.001 or higher
GLA (156)	SOUND - Sound system	Erase Codes		V1.00.001 or higher
GLA (156)	SOUND - Sound system	Live Data		V1.00.001 or higher
GLA (156)	TV - TV tuner	ECU Information		V1.00.001 or higher
GLA (156)	TV - TV tuner	Read Codes		V1.00.001 or higher
GLA (156)	TV - TV tuner	Erase Codes		V1.00.001 or higher

GLA (156)	TV - TV tuner	Live Data		V1.00.001 or higher
GLA (156)	MFK - Multifunction camera	ECU Information		V1.00.001 or higher
GLA (156)	MFK - Multifunction camera	Read Codes		V1.00.001 or higher
GLA (156)	MFK - Multifunction camera	Erase Codes		V1.00.001 or higher
GLA (156)	MFK - Multifunction camera	Live Data		V1.00.001 or higher
GLA (156)	DAB - Digital Audio Broadcasting	ECU Information		V1.00.001 or higher
GLA (156)	DAB - Digital Audio Broadcasting	Read Codes		V1.00.001 or higher
GLA (156)	DAB - Digital Audio Broadcasting	Erase Codes		V1.00.001 or higher
GLA (156)	DAB - Digital Audio Broadcasting	Live Data		V1.00.001 or higher
GLA (156)	Drive Kit Plus - Drive kit for iPhone	ECU Information		V1.00.001 or higher
GLA (156)	Drive Kit Plus - Drive kit for iPhone	Read Codes		V1.00.001 or higher
GLA (156)	Drive Kit Plus - Drive kit for iPhone	Erase Codes		V1.00.001 or higher
GLA (156)	Drive Kit Plus - Drive kit for iPhone	Live Data		V1.00.001 or higher
GLA (156)	Head-up display - Head-up display	ECU Information		V1.00.001 or higher
GLA (156)	Head-up display - Head-up display	Read Codes		V1.00.001 or higher
GLA (156)	Head-up display - Head-up display	Erase Codes		V1.00.001 or higher
GLA (156)	Head-up display - Head-up display	Live Data		V1.00.001 or higher

GLA (156)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
GLA (156)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
GLA (156)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
GLA (156)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
GLA (156)	MIF - Media interface	ECU Information		V1.00.001 or higher
GLA (156)	MIF - Media interface	Read Codes		V1.00.001 or higher
GLA (156)	MIF - Media interface	Erase Codes		V1.00.001 or higher
GLA (156)	MIF - Media interface	Live Data		V1.00.001 or higher
GLA (156)	COU[ZBE] - Audio/COMAND operating unit	ECU Information		V1.00.001 or higher
GLA (156)	COU[ZBE] - Audio/COMAND operating unit	Read Codes		V1.00.001 or higher
GLA (156)	COU[ZBE] - Audio/COMAND operating unit	Erase Codes		V1.00.001 or higher
GLA (156)	COU[ZBE] - Audio/COMAND operating unit	Live Data		V1.00.001 or higher
GLA (156)	COU[ZBE] - Audio/COMAND operating unit	Active Test		V1.00.001 or higher
GLA (156)	ZAN - Audio/COMAND display	ECU Information		V1.00.001 or higher
GLA (156)	ZAN - Audio/COMAND display	Read Codes		V1.00.001 or higher
GLA (156)	ZAN - Audio/COMAND display	Erase Codes		V1.00.001 or higher
GLA (156)	ZAN - Audio/COMAND display	Live Data		V1.00.001 or higher

GLA (156)	DSI-DIRECT SELECT interface	ECU Information		V1.00.001 or higher
GLA (156)	DSI-DIRECT SELECT interface	Read Codes		V1.00.001 or higher
GLA (156)	DSI-DIRECT SELECT interface	Erase Codes		V1.00.001 or higher
GLA (156)	DSI-DIRECT SELECT interface	Live Data		V1.00.001 or higher
GLA (156)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	ECU Information		V1.00.001 or higher
GLA (156)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Read Codes		V1.00.001 or higher
GLA (156)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Erase Codes		V1.00.001 or higher
GLA (156)	ESA 'Driver'- Electrical seat adjustment 'Driver' with memory function	Live Data		V1.00.001 or higher
GLA (156)	ESA 'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	ECU Information		V1.00.001 or higher
GLA (156)	ESA 'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Read Codes		V1.00.001 or higher

GLA (156)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Erase Codes		V1.00.001 or higher
GLA (156)	ESA'Front passenger'-Electric seat adjustment 'Front passenger' with memory function	Live Data		V1.00.001 or higher
GLA (156)	DCU-LF-Left front door	ECU Information		V1.00.001 or higher
GLA (156)	DCU-LF-Left front door	Read Codes		V1.00.001 or higher
GLA (156)	DCU-LF-Left front door	Erase Codes		V1.00.001 or higher
GLA (156)	DCU-LF-Left front door	Live Data		V1.00.001 or higher
GLA (156)	DCU-RF-Right front door	ECU Information		V1.00.001 or higher
GLA (156)	DCU-RF-Right front door	Read Codes		V1.00.001 or higher
GLA (156)	DCU-RF-Right front door	Erase Codes		V1.00.001 or higher
GLA (156)	DCU-RF-Right front door	Live Data		V1.00.001 or higher
GLA (156)	AAC-Air conditioning	ECU Information		V1.00.001 or higher
GLA (156)	AAC-Air conditioning	Read Codes		V1.00.001 or higher
GLA (156)	AAC-Air conditioning	Erase Codes		V1.00.001 or higher
GLA (156)	AAC-Air conditioning	Live Data		V1.00.001 or higher
GLA (156)	STH-Stationary heater	ECU Information		V1.00.001 or higher
GLA (156)	STH-Stationary heater	Read Codes		V1.00.001 or higher
GLA (156)	STH-Stationary heater	Erase Codes		V1.00.001 or higher
GLA (156)	STH-Stationary heater	Live Data		V1.00.001 or higher
GLA (156)	TPM-Tire pressure monitor	ECU Information		V1.00.001 or higher

GLA (156)	TPM-Tire pressure monitor	Read Codes		V1.00.001 or higher
GLA (156)	TPM-Tire pressure monitor	Erase Codes		V1.00.001 or higher
GLA (156)	TPM-Tire pressure monitor	Live Data		V1.00.001 or higher
GLA (156)	TPM-Tire pressure monitor	Active Test		V1.00.001 or higher
GLA (156)	TPM-Tire pressure monitor	Control unit adaptations	Teach-in processes	V1.00.001 or higher
GLA (156)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	ECU Information		V1.00.001 or higher
GLA (156)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Read Codes		V1.00.001 or higher
GLA (156)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Erase Codes		V1.00.001 or higher
GLA (156)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Live Data		V1.00.001 or higher
GLA (156)	SG-AWF-Control unit 'COLLISION PREVENTION ASSIST'	Active Test		V1.00.001 or higher
GLA (156)	IRS-HRA - Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
GLA (156)	IRS-HRA - Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
GLA (156)	IRS-HRA - Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
GLA (156)	IRS-HRA - Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher

GLA (156)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
GLA (156)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
GLA (156)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
GLA (156)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
GLA (156)	DTR-DISTRONIC	ECU Information		V1.00.001 or higher
GLA (156)	DTR-DISTRONIC	Read Codes		V1.00.001 or higher
GLA (156)	DTR-DISTRONIC	Erase Codes		V1.00.001 or higher
GLA (156)	DTR-DISTRONIC	Live Data		V1.00.001 or higher
GLA (156)	RFK - Backup camera	ECU Information		V1.00.001 or higher
GLA (156)	RFK - Backup camera	Read Codes		V1.00.001 or higher
GLA (156)	RFK - Backup camera	Erase Codes		V1.00.001 or higher
GLA (156)	RFK - Backup camera	Live Data		V1.00.001 or higher
GLA (156)	RFK - Backup camera	Active Test		V1.00.001 or higher
GLA (156)	PARK - Parking system	ECU Information		V1.00.001 or higher
GLA (156)	PARK - Parking system	Read Codes		V1.00.001 or higher
GLA (156)	PARK - Parking system	Erase Codes		V1.00.001 or higher
GLA (156)	PARK - Parking system	Live Data		V1.00.001 or higher
GLA (156)	PARK - Parking system	Active Test		V1.00.001 or higher
GLA (156)	KAB-Control unit 'Camera cover'	ECU Information		V1.00.001 or higher
GLA (156)	KAB-Control unit 'Camera cover'	Read Codes		V1.00.001 or higher

GLA (156)	KAB-Control unit 'Camera cover'	Erase Codes		V1.00.001 or higher
GLA (156)	KAB-Control unit 'Camera cover'	Live Data		V1.00.001 or higher
R (251)	ME 9.7-Motor electronics 9.7	ECU Information		V1.00.001 or higher
R (251)	ME 9.7-Motor electronics 9.7	Read Codes		V1.00.001 or higher
R (251)	ME 9.7-Motor electronics 9.7	Erase Codes		V1.00.001 or higher
R (251)	ME 9.7-Motor electronics 9.7	Live Data		V1.00.001 or higher
R (251)	ME 9.7-Motor electronics 9.7	Active Test		V1.00.001 or higher
R (251)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Learning processes	V1.00.001 or higher
R (251)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Correction programming	V1.00.001 or higher
R (251)	ME 9.7-Motor electronics 9.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
R (251)	ME 9.7-Motor electronics 9.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
R (251)	ME 9.7-Motor electronics 9.7	Special functions	Variant coding	V1.00.001 or higher
R (251)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
R (251)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
R (251)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher
R (251)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher
R (251)	ETC-Electronic transmission control	Control unit adaptations	Detach the transport protection of control module 'ETC', personalize or activate the control module.	V1.00.001 or higher



R (251)	ETC-Electronic transmission control	Control unit adaptations	Learning process: Y3/8s1 (Selection range sensor)	V1.00.001 or higher
R (251)	ETC-Electronic transmission control	Control unit adaptations	Learning to the Drive Authorization System (DAS/FBS)	V1.00.001 or higher
R (251)	ETC-Electronic transmission control	Special functions	Turn off the incline recognition for dynamometer mode.	V1.00.001 or higher
R (251)	ETC-Electronic transmission control	Special functions	Transmission adaptation	V1.00.001 or higher
R (251)	ISM-Intelligent servo module	ECU Information		V1.00.001 or higher
R (251)	ISM-Intelligent servo module	Read Codes		V1.00.001 or higher
R (251)	ISM-Intelligent servo module	Erase Codes		V1.00.001 or higher
R (251)	ISM-Intelligent servo module	Live Data		V1.00.001 or higher
R (251)	ISM-Intelligent servo module	Active Test		V1.00.001 or higher
R (251)	ISM-Intelligent servo module	Control unit adaptations	Please calibrate.	V1.00.001 or higher
R (251)	ISM-Intelligent servo module	Control unit adaptations	Detach the transport protection of control module 'Intelligent Servo Module', personalize or activate the control module.	V1.00.001 or higher
R (251)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
R (251)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
R (251)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
R (251)	FSCU-Fuel pump	Live Data		V1.00.001 or higher

R (251)	FSCU-Fuel pump	Active Test		V1.00.001 or higher
R (251)	DTR-Distronic	ECU Information		V1.00.001 or higher
R (251)	DTR-Distronic	Read Codes		V1.00.001 or higher
R (251)	DTR-Distronic	Erase Codes		V1.00.001 or higher
R (251)	DTR-Distronic	Live Data		V1.00.001 or higher
R (251)	IRS-HRA-Outer right rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
R (251)	IRS-HRA-Outer right rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
R (251)	IRS-HRA-Outer right rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
R (251)	IRS-HRA-Outer right rear intelligent radar sensor system	Live Data		V1.00.001 or higher
R (251)	IRS-HLA - Outer left rear intelligent radar sensor system	ECU Information		V1.00.001 or higher
R (251)	IRS-HLA - Outer left rear intelligent radar sensor system	Read Codes		V1.00.001 or higher
R (251)	IRS-HLA - Outer left rear intelligent radar sensor system	Erase Codes		V1.00.001 or higher
R (251)	IRS-HLA - Outer left rear intelligent radar sensor system	Live Data		V1.00.001 or higher
R (251)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
R (251)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
R (251)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher

R (251)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
R (251)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
R (251)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
R (251)	ESP-Electronic stability program	Control unit adaptations	Tire pressure loss warner(Activating)	V1.00.001 or higher
R (251)	ESP-Electronic stability program	Control unit adaptations	Clear the zero point offset error of the component 'N49 (Steering Angle Sensor (SAS))'.	V1.00.001 or higher
R (251)	TPC-Tire pressure monitor	ECU Information		V1.00.001 or higher
R (251)	TPC-Tire pressure monitor	Read Codes		V1.00.001 or higher
R (251)	TPC-Tire pressure monitor	Erase Codes		V1.00.001 or higher
R (251)	TPC-Tire pressure monitor	Live Data		V1.00.001 or higher
R (251)	TPC-Tire pressure monitor	Active Test		V1.00.001 or higher
R (251)	TPC-Tire pressure monitor	Special functions	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher
R (251)	TPC-Tire pressure monitor	Special functions	Initial start-up with manual settings input for new control module- For example: The previous control module cannot be read any longer.	V1.00.001 or higher
R (251)	DTR-Distronic	ECU Information		V1.00.001 or higher
R (251)	DTR-Distronic	Read Codes		V1.00.001 or higher
R (251)	DTR-Distronic	Erase Codes		V1.00.001 or higher

R (251)	DTR-Distronic	Live Data		V1.00.001 or higher
R (251)	Suspension	ECU Information		V1.00.001 or higher
R (251)	Suspension	Read Codes		V1.00.001 or higher
R (251)	Suspension	Erase Codes		V1.00.001 or higher
R (251)	Suspension	Live Data		V1.00.001 or higher
R (251)	Suspension	Active Test		V1.00.001 or higher
R (251)	Suspension	Special functions	Initial start-up	V1.00.001 or higher
R (251)	Suspension	Special functions	Pneumatic tests	V1.00.001 or higher
R (251)	EHPS- Electrohydraulic Power Steering	ECU Information		V1.00.001 or higher
R (251)	EHPS- Electrohydraulic Power Steering	Read Codes		V1.00.001 or higher
R (251)	EHPS- Electrohydraulic Power Steering	Erase Codes		V1.00.001 or higher
R (251)	EHPS- Electrohydraulic Power Steering	Live Data		V1.00.001 or higher
R (251)	AB-Airbag	ECU Information		V1.00.001 or higher
R (251)	AB-Airbag	Read Codes		V1.00.001 or higher
R (251)	AB-Airbag	Erase Codes		V1.00.001 or higher
R (251)	AB-Airbag	Live Data		V1.00.001 or higher
R (251)	AB-Airbag	Active Test		V1.00.001 or higher
R (251)	CGW-Central gateway	ECU Information		V1.00.001 or higher
R (251)	CGW-Central gateway	Read Codes		V1.00.001 or higher
R (251)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
R (251)	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher

R (251)	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher
R (251)	CGW-Central gateway	Special functions	All codes	V1.00.001 or higher
R (251)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
R (251)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
R (251)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
R (251)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
R (251)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher
R (251)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track with the workshop key.	V1.00.001 or higher
R (251)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher
R (251)	EZS-Electronic ignition switch	Control unit adaptations	Program the replacement keys.	V1.00.001 or higher
R (251)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N73 (Electronic Ignition Switch (EIS/EZS) control module)'. '.	V1.00.001 or higher
R (251)	KG-KEYLESS GO	ECU Information		V1.00.001 or higher
R (251)	KG-KEYLESS GO	Read Codes		V1.00.001 or higher
R (251)	KG-KEYLESS GO	Erase Codes		V1.00.001 or higher
R (251)	KG-KEYLESS GO	Live Data		V1.00.001 or higher
R (251)	KG-KEYLESS GO	Active Test		V1.00.001 or higher
R (251)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
R (251)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
R (251)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher

R (251)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
R (251)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
R (251)	OCP-Overhead control panel	Control unit adaptations	SR/SHD (Tilting/Sliding Sunroof)	V1.00.001 or higher
R (251)	OCP-Overhead control panel	Control unit adaptations	Panoramic sliding sunroof	V1.00.001 or higher
R (251)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
R (251)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
R (251)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
R (251)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
R (251)	WSS-Weight sensing system	Control unit adaptations	•	V1.00.001 or higher
R (251)	WSS-Weight sensing system	Initial startup	Initial start-up	V1.00.001 or higher
R (251)	UCP-Upper control panel	ECU Information		V1.00.001 or higher
R (251)	UCP-Upper control panel	Read Codes		V1.00.001 or higher
R (251)	UCP-Upper control panel	Erase Codes		V1.00.001 or higher
R (251)	UCP-Upper control panel	Live Data		V1.00.001 or higher
R (251)	UCP-Upper control panel	Active Test		V1.00.001 or higher
R (251)	HBF (Rear control panel)-Rear control field	ECU Information		V1.00.001 or higher
R (251)	HBF (Rear control panel)-Rear control field	Read Codes		V1.00.001 or higher
R (251)	HBF (Rear control panel)-Rear control field	Erase Codes		V1.00.001 or higher
R (251)	HBF (Rear control panel)-Rear control field	Live Data		V1.00.001 or higher
R (251)	HBF (Rear control panel)-Rear control field	Active Test		V1.00.001 or higher

R (251)	SAM-F-Signal acquisition and actuation module front	ECU Information		V1.00.001 or higher
R (251)	SAM-F-Signal acquisition and actuation module front	Read Codes		V1.00.001 or higher
R (251)	SAM-F-Signal acquisition and actuation module front	Erase Codes		V1.00.001 or higher
R (251)	SAM-F-Signal acquisition and actuation module front	Live Data		V1.00.001 or higher
R (251)	SAM-F-Signal acquisition and actuation module front	Active Test		V1.00.001 or higher
R (251)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
R (251)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
R (251)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
R (251)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher
R (251)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher

R (251)	RevETR-LF-Left front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
R (251)	RevETR-LF-Left front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
R (251)	RevETR-LF-Left front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
R (251)	RevETR-LF-Left front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher
R (251)	RevETR-LF-Left front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
R (251)	RevETR-RF-Right front reversible emergency tensioning retractor	ECU Information		V1.00.001 or higher
R (251)	RevETR-RF-Right front reversible emergency tensioning retractor	Read Codes		V1.00.001 or higher
R (251)	RevETR-RF-Right front reversible emergency tensioning retractor	Erase Codes		V1.00.001 or higher
R (251)	RevETR-RF-Right front reversible emergency tensioning retractor	Live Data		V1.00.001 or higher



R (251)	RevETR-RF-Right front reversible emergency tensioning retractor	Active Test		V1.00.001 or higher
R (251)	XALWA-L-Xenon headlamp, left	ECU Information		V1.00.001 or higher
R (251)	XALWA-L-Xenon headlamp, left	Read Codes		V1.00.001 or higher
R (251)	XALWA-L-Xenon headlamp, left	Erase Codes		V1.00.001 or higher
R (251)	XALWA-L-Xenon headlamp, left	Live Data		V1.00.001 or higher
R (251)	XALWA-L-Xenon headlamp, left	Active Test		V1.00.001 or higher
R (251)	XALWA-L-Xenon headlamp, left	Control unit adaptations	Zero position adjustment of axle or level sensors	V1.00.001 or higher
R (251)	HRA-FR-Front right headlamp range control	ECU Information		V1.00.001 or higher
R (251)	HRA-FR-Front right headlamp range control	Read Codes		V1.00.001 or higher
R (251)	HRA-FR-Front right headlamp range control	Erase Codes		V1.00.001 or higher
R (251)	HRA-FR-Front right headlamp range control	Live Data		V1.00.001 or higher
R (251)	HRA-FR-Front right headlamp range control	Active Test		V1.00.001 or higher
R (251)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
R (251)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
R (251)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
R (251)	IC-Instrument cluster	ECU Information		V1.00.001 or higher
R (251)	IC-Instrument cluster	Read Codes		V1.00.001 or higher
R (251)	IC-Instrument cluster	Erase Codes		V1.00.001 or higher
R (251)	IC-Instrument cluster	Live Data		V1.00.001 or higher

R (251)	IC-Instrument cluster	Active Test		V1.00.001 or higher
R (251)	IC-Instrument cluster	Control unit adaptations	Setting days since initial registration	V1.00.001 or higher
R (251)	IC-Instrument cluster	Control unit adaptations	Setting the main odometer forward and back	V1.00.001 or higher
R (251)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
R (251)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
R (251)	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher
R (251)	SCM [MRM]-Steering column module	Live Data		V1.00.001 or higher
R (251)	SCM [MRM]-Steering column module	Active Test		V1.00.001 or higher
R (251)	SCM [MRM]-Steering column module	Initial startup	●	V1.00.001 or higher
R (251)	CM-Compass module	ECU Information		V1.00.001 or higher
R (251)	CM-Compass module	Read Codes		V1.00.001 or higher
R (251)	CM-Compass module	Erase Codes		V1.00.001 or higher
R (251)	CM-Compass module	Live Data		V1.00.001 or higher
R (251)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
R (251)	ASSYST-Active Service System	Read Codes		V1.00.001 or higher
R (251)	ASSYST-Active Service System	Erase Codes		V1.00.001 or higher
R (251)	ASSYST-Active Service System	Live Data		V1.00.001 or higher
R (251)	ASSYST-Active Service System	ECU Information		V1.00.001 or higher
R (251)	ASSYST-Active Service System	Control unit adaptations	Reinitialization of AdBlue range	V1.00.001 or higher

R (251)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
R (251)	ASSYST PLUS-PLUS Active Service System	Read Codes		V1.00.001 or higher
R (251)	ASSYST PLUS-PLUS Active Service System	Erase Codes		V1.00.001 or higher
R (251)	ASSYST PLUS-PLUS Active Service System	Live Data		V1.00.001 or higher
R (251)	ASSYST PLUS-PLUS Active Service System	ECU Information		V1.00.001 or higher
R (251)	ASSYST PLUS-PLUS Active Service System	Control unit adaptations	Control module reset	V1.00.001 or higher
R (251)	PTS-Parktronic system	ECU Information		V1.00.001 or higher
R (251)	PTS-Parktronic system	Read Codes		V1.00.001 or higher
R (251)	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
R (251)	PTS-Parktronic system	Live Data		V1.00.001 or higher
R (251)	PTS-Parktronic system	Active Test		V1.00.001 or higher
R (251)	RFK-Backup camera	ECU Information		V1.00.001 or higher
R (251)	RFK-Backup camera	Read Codes		V1.00.001 or higher
R (251)	RFK-Backup camera	Erase Codes		V1.00.001 or higher
R (251)	RFK-Backup camera	Live Data		V1.00.001 or higher
R (251)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher

R (251)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher
R (251)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
R (251)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher
R (251)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher
R (251)	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
R (251)	CDC-CD changer	ECU Information		V1.00.001 or higher
R (251)	CDC-CD changer	Read Codes		V1.00.001 or higher
R (251)	CDC-CD changer	Erase Codes		V1.00.001 or higher
R (251)	CDC-CD changer	Live Data		V1.00.001 or higher
R (251)	CDC-CD changer	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
R (251)	VCS-Voice control system	ECU Information		V1.00.001 or higher

R (251)	VCS-Voice control system	Read Codes		V1.00.001 or higher
R (251)	VCS-Voice control system	Erase Codes		V1.00.001 or higher
R (251)	VCS-Voice control system	Active Test		V1.00.001 or higher
R (251)	COMAND or AUDIO	ECU Information		V1.00.001 or higher
R (251)	COMAND or AUDIO	Read Codes		V1.00.001 or higher
R (251)	COMAND or AUDIO	Erase Codes		V1.00.001 or higher
R (251)	COMAND or AUDIO	Live Data		V1.00.001 or higher
R (251)	COMAND or AUDIO	Active Test		V1.00.001 or higher
R (251)	COMAND or AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
R (251)	TV-TV tuner	ECU Information		V1.00.001 or higher
R (251)	TV-TV tuner	Read Codes		V1.00.001 or higher
R (251)	TV-TV tuner	Erase Codes		V1.00.001 or higher
R (251)	TV-TV tuner	Live Data		V1.00.001 or higher
R (251)	TV-TV tuner	Active Test		V1.00.001 or higher
R (251)	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
R (251)	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
R (251)	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
R (251)	SDAR-Satellite radio	Live Data		V1.00.001 or higher
R (251)	SOUND- Sound system	ECU Information		V1.00.001 or higher
R (251)	SOUND- Sound system	Read Codes		V1.00.001 or higher
R (251)	SOUND- Sound system	Erase Codes		V1.00.001 or higher
R (251)	SOUND- Sound system	Live Data		V1.00.001 or higher
R (251)	SOUND- Sound system	Active Test		V1.00.001 or higher

R (251)	SOUND- Sound system	Control unit adaptations	Restart of optical ring	V1.00.001 or higher
R (251)	CTEL-Mobile phone adapter with universal interface	ECU Information		V1.00.001 or higher
R (251)	CTEL-Mobile phone adapter with universal interface	Read Codes		V1.00.001 or higher
R (251)	CTEL-Mobile phone adapter with universal interface	Erase Codes		V1.00.001 or higher
R (251)	CTEL-Mobile phone adapter with universal interface	Live Data		V1.00.001 or higher
R (251)	NAVI-Navigation system	ECU Information		V1.00.001 or higher
R (251)	NAVI-Navigation system	Read Codes		V1.00.001 or higher
R (251)	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
R (251)	NAVI-Navigation system	Live Data		V1.00.001 or higher
R (251)	NAVI-Navigation system	Active Test		V1.00.001 or higher
R (251)	AVE-H-Rear audio video unit	ECU Information		V1.00.001 or higher
R (251)	AVE-H-Rear audio video unit	Read Codes		V1.00.001 or higher
R (251)	AVE-H-Rear audio video unit	Erase Codes		V1.00.001 or higher
R (251)	AVE-H-Rear audio video unit	Live Data		V1.00.001 or higher
R (251)	AVE-H-Rear audio video unit	Active Test		V1.00.001 or higher
R (251)	CTEL-Cellular telephone	ECU Information		V1.00.001 or higher
R (251)	CTEL-Cellular telephone	Read Codes		V1.00.001 or higher
R (251)	CTEL-Cellular telephone	Erase Codes		V1.00.001 or higher
R (251)	CTEL-Cellular telephone	Live Data		V1.00.001 or higher
R (251)	Sound system (Main amplifier)	ECU Information		V1.00.001 or higher

R (251)	Sound system (Main amplifier)	Read Codes		V1.00.001 or higher
R (251)	Sound system (Main amplifier)	Erase Codes		V1.00.001 or higher
R (251)	Sound system (Main amplifier)	Live Data		V1.00.001 or higher
R (251)	Sound system (Main amplifier)	Active Test		V1.00.001 or higher
R (251)	UCI-Media interface	ECU Information		V1.00.001 or higher
R (251)	UCI-Media interface	Read Codes		V1.00.001 or higher
R (251)	UCI-Media interface	Erase Codes		V1.00.001 or higher
R (251)	DAB-Digital radio	ECU Information		V1.00.001 or higher
R (251)	DAB-Digital radio	Read Codes		V1.00.001 or higher
R (251)	DAB-Digital radio	Erase Codes		V1.00.001 or higher
R (251)	DAB-Digital radio	Live Data		V1.00.001 or higher
R (251)	SDAR-Satellite radio(Valid for USA)	ECU Information		V1.00.001 or higher
R (251)	SDAR-Satellite radio(Valid for USA)	Read Codes		V1.00.001 or higher
R (251)	SDAR-Satellite radio(Valid for USA)	Erase Codes		V1.00.001 or higher
R (251)	SDAR-Satellite radio(Valid for USA)	Live Data		V1.00.001 or higher
R (251)	SDAR-Satellite radio(Valid for USA)	Active Test		V1.00.001 or higher
R (251)	TV-TV tuner	ECU Information		V1.00.001 or higher
R (251)	TV-TV tuner	Read Codes		V1.00.001 or higher
R (251)	TV-TV tuner	Erase Codes		V1.00.001 or higher
R (251)	TV-TV tuner	Live Data		V1.00.001 or higher
R (251)	CTEL-Cellular telephone(JAPAN)	ECU Information		V1.00.001 or higher

R (251)	CTEL-Cellular telephone(JAPAN)	Read Codes		V1.00.001 or higher
R (251)	CTEL-Cellular telephone(JAPAN)	Erase Codes		V1.00.001 or higher
R (251)	CTEL-Cellular telephone(JAPAN)	Live Data		V1.00.001 or higher
R (251)	CTEL-Cellular telephone(JAPAN)	Active Test		V1.00.001 or higher
R (251)	AVE-H - DVD player	ECU Information		V1.00.001 or higher
R (251)	AVE-H - DVD player	Read Codes		V1.00.001 or higher
R (251)	AVE-H - DVD player	Erase Codes		V1.00.001 or higher
R (251)	AVE-H - DVD player	Live Data		V1.00.001 or higher
R (251)	Left rear screen	ECU Information		V1.00.001 or higher
R (251)	Left rear screen	Read Codes		V1.00.001 or higher
R (251)	Left rear screen	Erase Codes		V1.00.001 or higher
R (251)	Left rear screen	Live Data		V1.00.001 or higher
R (251)	Left rear screen	Active Test		V1.00.001 or higher
R (251)	Right rear screen	ECU Information		V1.00.001 or higher
R (251)	Right rear screen	Read Codes		V1.00.001 or higher
R (251)	Right rear screen	Erase Codes		V1.00.001 or higher
R (251)	Right rear screen	Live Data		V1.00.001 or higher
R (251)	Right rear screen	Active Test		V1.00.001 or higher
R (251)	TELE AID-Control unit	ECU Information		V1.00.001 or higher
R (251)	TELE AID-Control unit	Read Codes		V1.00.001 or higher
R (251)	TELE AID-Control unit	Erase Codes		V1.00.001 or higher
R (251)	TELE AID-Control unit	Live Data		V1.00.001 or higher



R (251)	TELE AID- Telematic services Emergency call	ECU Information		V1.00.001 or higher
R (251)	TELE AID- Telematic services Emergency call	Read Codes		V1.00.001 or higher
R (251)	TELE AID- Telematic services Emergency call	Erase Codes		V1.00.001 or higher
R (251)	TELE AID- Telematic services Emergency call	Live Data		V1.00.001 or higher
R (251)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
R (251)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
R (251)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
R (251)	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
R (251)	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher

R (251)	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
R (251)	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
R (251)	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher
R (251)	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher
R (251)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
R (251)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
R (251)	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher
R (251)	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
R (251)	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher
R (251)	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher
R (251)	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher

R (251)	DCM-FL-Door control module front left	Active Test		V1.00.001 or higher
R (251)	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
R (251)	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher
R (251)	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
R (251)	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
R (251)	DCM-FR-Door control module front right	Active Test		V1.00.001 or higher
R (251)	ESA driver-Electric seat adjustment driver (with memory)	ECU Information		V1.00.001 or higher
R (251)	ESA driver-Electric seat adjustment driver (with memory)	Read Codes		V1.00.001 or higher
R (251)	ESA driver-Electric seat adjustment driver (with memory)	Erase Codes		V1.00.001 or higher
R (251)	ESA driver-Electric seat adjustment driver (with memory)	Live Data		V1.00.001 or higher
R (251)	ESA driver-Electric seat adjustment driver (with memory)	Active Test		V1.00.001 or higher
R (251)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterize the Easy Entry/Exit.	V1.00.001 or higher

R (251)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Increase the fore/aft adjustment range to rear.	V1.00.001 or higher
R (251)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterize collision avoidance.	V1.00.001 or higher
R (251)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Adjust the parameter for backrest adjustment.	V1.00.001 or higher
R (251)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
R (251)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher
R (251)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher
R (251)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
R (251)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
R (251)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Parameterization of the function for moving the driver seat out of way when folding down the rear seat	V1.00.001 or higher

R (251)	ESA driver-Electric seat adjustment driver (with memory)	Control unit adaptations	Re-adjust the adjustment parameters.	V1.00.001 or higher
R (251)	ESA passenger-Electric seat adjustment passenger	ECU Information		V1.00.001 or higher
R (251)	ESA passenger-Electric seat adjustment passenger	Read Codes		V1.00.001 or higher
R (251)	ESA passenger-Electric seat adjustment passenger	Erase Codes		V1.00.001 or higher
R (251)	ESA passenger-Electric seat adjustment passenger	Live Data		V1.00.001 or higher
R (251)	ESA passenger-Electric seat adjustment passenger	Active Test		V1.00.001 or higher
R (251)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Parameterize collision avoidance.	V1.00.001 or higher
R (251)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Adjust the parameter for backrest adjustment.	V1.00.001 or higher
R (251)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Normalization of the forward/back adjustment	V1.00.001 or higher
R (251)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at front	V1.00.001 or higher
R (251)	ESA passenger-Electric seat adjustment passenger	Control unit adaptations	Normalization of the height adjustment at rear	V1.00.001 or higher

R (251)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the head restraint adjustment	V1.00.001 or higher
R (251)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Normalization of the backrest adjustment	V1.00.001 or higher
R (251)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Parameterization of the function for moving the front passenger seat out of way when folding down the rear seat	V1.00.001 or higher
R (251)	ESA passenger- Electric seat adjustment passenger	Control unit adaptations	Re-adjust the adjustment parameters.	V1.00.001 or higher
R (251)	DS-LF-Left front dynamic seat	ECU Information		V1.00.001 or higher
R (251)	DS-LF-Left front dynamic seat	Read Codes		V1.00.001 or higher
R (251)	DS-LF-Left front dynamic seat	Erase Codes		V1.00.001 or higher
R (251)	DS-LF-Left front dynamic seat	Live Data		V1.00.001 or higher
R (251)	DS-LF-Left front dynamic seat	Active Test		V1.00.001 or higher
R (251)	DS-LF-Left front dynamic seat	Control unit adaptations	Air cushion calibration	V1.00.001 or higher
R (251)	DS-RF-Right front dynamic seat	ECU Information		V1.00.001 or higher
R (251)	DS-RF-Right front dynamic seat	Read Codes		V1.00.001 or higher
R (251)	DS-RF-Right front dynamic seat	Erase Codes		V1.00.001 or higher
R (251)	DS-RF-Right front dynamic seat	Live Data		V1.00.001 or higher
R (251)	DS-RF-Right front dynamic seat	Active Test		V1.00.001 or higher
R (251)	DS-RF-Right front dynamic seat	Control unit adaptations	Air cushion calibration	V1.00.001 or higher
R (251)	DSP-Pneumatic pump for dynamic seat	ECU Information		V1.00.001 or higher

R (251)	DSP-Pneumatic pump for dynamic seat	Read Codes		V1.00.001 or higher
R (251)	DSP-Pneumatic pump for dynamic seat	Erase Codes		V1.00.001 or higher
R (251)	DSP-Pneumatic pump for dynamic seat	Live Data		V1.00.001 or higher
R (251)	DSP-Pneumatic pump for dynamic seat	Active Test		V1.00.001 or higher
R (251)	REDC-Rear-end door closing control module	ECU Information		V1.00.001 or higher
R (251)	REDC-Rear-end door closing control module	Read Codes		V1.00.001 or higher
R (251)	REDC-Rear-end door closing control module	Erase Codes		V1.00.001 or higher
R (251)	REDC-Rear-end door closing control module	Live Data		V1.00.001 or higher
R (251)	REDC-Rear-end door closing control module	Active Test		V1.00.001 or higher
R (251)	REDC-Rear-end door closing control module	Control unit adaptations	Intermediate position 'Tailgate'	V1.00.001 or higher
R (251)	HS-Seat heater	ECU Information		V1.00.001 or higher
R (251)	HS-Seat heater	Read Codes		V1.00.001 or higher
R (251)	HS-Seat heater	Erase Codes		V1.00.001 or higher
R (251)	HS-Seat heater	Live Data		V1.00.001 or higher
R (251)	HS-Seat heater	Active Test		V1.00.001 or higher
R (251)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
R (251)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
R (251)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
R (251)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher

R (251)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
R (251)	AAC-Automatic air conditioning	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
R (251)	AAC-Automatic air conditioning	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
R (251)	AAC-Automatic air conditioning	Control unit adaptations	Teach-in of the actuator motors after replacement of actuator motor	V1.00.001 or higher
R (251)	AAC-Automatic air conditioning	Control unit adaptations	Break-in procedure after replacement of refrigerant compressor	V1.00.001 or higher
R (251)	STH-Stationary heater with remote control	ECU Information		V1.00.001 or higher
R (251)	STH-Stationary heater with remote control	Read Codes		V1.00.001 or higher
R (251)	STH-Stationary heater with remote control	Erase Codes		V1.00.001 or higher
R (251)	STH-Stationary heater with remote control	Live Data		V1.00.001 or higher
R (251)	STH-Stationary heater with remote control	Active Test		V1.00.001 or higher
R (251)	STH-Stationary heater with remote control	Control unit adaptations	Learning component " A8/3 (Stationary Heater (STH) radio remote control transmitter)	V1.00.001 or higher
R (251)	HSW-Heated steering wheel	ECU Information		V1.00.001 or higher
R (251)	HSW-Heated steering wheel	Read Codes		V1.00.001 or higher



R (251)	HSW-Heated steering wheel	Erase Codes		V1.00.001 or higher
R (251)	HSW-Heated steering wheel	Live Data		V1.00.001 or higher
R (251)	HSW-Heated steering wheel	Active Test		V1.00.001 or higher
R (251)	MED 17.7-Motor electronics for direct injection 17.7	ECU Information		V1.00.001 or higher
R (251)	MED 17.7-Motor electronics for direct injection 17.7	Read Codes		V1.00.001 or higher
R (251)	MED 17.7-Motor electronics for direct injection 17.7	Erase Codes		V1.00.001 or higher
R (251)	MED 17.7-Motor electronics for direct injection 17.7	Live Data		V1.00.001 or higher
R (251)	MED 17.7-Motor electronics for direct injection 17.7	Active Test		V1.00.001 or higher
R (251)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	Variant coding	V1.00.001 or higher
R (251)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	Learning processes	V1.00.001 or higher
R (251)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	Correction programming	V1.00.001 or higher
R (251)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
R (251)	MED 17.7-Motor electronics for direct injection 17.7	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
R (251)	FSCU-Fuel pump	ECU Information		V1.00.001 or higher

R (251)	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
R (251)	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
R (251)	FSCU-Fuel pump	Live Data		V1.00.001 or higher
R (251)	ME2-SFI-Motor electronics 2	ECU Information		V1.00.001 or higher
R (251)	ME2-SFI-Motor electronics 2	Read Codes		V1.00.001 or higher
R (251)	ME2-SFI-Motor electronics 2	Erase Codes		V1.00.001 or higher
R (251)	ME2-SFI-Motor electronics 2	Live Data		V1.00.001 or higher
R (251)	ME2-SFI-Motor electronics 2	Active Test		V1.00.001 or higher
R (251)	ME2-SFI-Motor electronics 2	Special functions	Learning processes	V1.00.001 or higher
R (251)	ME2-SFI-Motor electronics 2	Special functions	Correction programming	V1.00.001 or higher
R (251)	ME2-SFI-Motor electronics 2	Special functions	Fault path tests are carried out.	V1.00.001 or higher
R (251)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	ECU Information		V1.00.001 or higher
R (251)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Read Codes		V1.00.001 or higher
R (251)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Erase Codes		V1.00.001 or higher
R (251)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Live Data		V1.00.001 or higher
R (251)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Active Test		V1.00.001 or higher
R (251)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Learning processes	V1.00.001 or higher

R (251)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Correction programming	V1.00.001 or higher
R (251)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	OBD I/M check (Valid for USA)	V1.00.001 or higher
R (251)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Control unit adaptations	Emissions inspection (Not valid for USA)	V1.00.001 or higher
R (251)	ME 9.7 (AMG)- Motor electronics 9.7 (AMG)	Special functions	Variant coding	V1.00.001 or higher
R (251)	FSCU Left-Control unit 'Left fuel pump'	ECU Information		V1.00.001 or higher
R (251)	FSCU Left-Control unit 'Left fuel pump'	Read Codes		V1.00.001 or higher
R (251)	FSCU Left-Control unit 'Left fuel pump'	Erase Codes		V1.00.001 or higher
R (251)	FSCU Left-Control unit 'Left fuel pump'	Active Test		V1.00.001 or higher
R (251)	FSCU Left-Control unit 'Left fuel pump'	Control unit adaptations	Assignment of the control modules to plug connections	V1.00.001 or higher
R (251)	FSCU Right- Control unit 'Right fuel pump'	ECU Information		V1.00.001 or higher
R (251)	FSCU Right- Control unit 'Right fuel pump'	Read Codes		V1.00.001 or higher
R (251)	FSCU Right- Control unit 'Right fuel pump'	Erase Codes		V1.00.001 or higher
R (251)	FSCU Right- Control unit 'Right fuel pump'	Active Test		V1.00.001 or higher
R (251)	FSCU Right- Control unit 'Right fuel pump'	Control unit adaptations	Assignment of the control modules to plug connections	V1.00.001 or higher

R (251)	CDI 4-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
R (251)	CDI 4-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
R (251)	CDI 4-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
R (251)	CDI 4-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
R (251)	CDI 4-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Live Data		V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Active Test		V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel Particulate Filter'	V1.00.001 or higher

R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B28/8 (Diesel Particulate Filter (DPF) differential pressure sensor)'	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y74 (Pressure control valve)'	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'G3/2 (Oxygen sensor upstream of the Three Way Catalyst (TWC/KAT))'	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel oxidation catalytic converter'	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Learning of the throttle valve stop	V1.00.001 or higher

R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Activate the fuel pump.	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Rapid teach-in of zero quantity calibration values	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Selective Catalytic Reduction'-Catalytic converter	V1.00.001 or higher

R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " B16/15 (Temperature sensor upstream of the Selective Catalytic Reduction (SCR) catalytic converter)	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " N37/7b1 (Nitrogen Oxide (NOx) sensor downstream of the Diesel Particulate Filter (DPF))	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " N37/8b1 (Nitrogen Oxide (NOx) sensor downstream of the Selective Catalytic Reduction (SCR) catalytic converter)	V1.00.001 or higher
R (251)	CDI 60LS-Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " Y129 (AdBlue metering valve)	V1.00.001 or higher
R (251)	CDI 6BIN5-Common Rail Diesel Injection	ECU Information		V1.00.001 or higher

R (251)	CDI 6BIN5- Common Rail Diesel Injection	Read Codes		V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Erase Codes		V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Live Data		V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Active Test		V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Variant coding	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Adjustment of the injector injection quantities	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Selective Catalytic Reduction (SCR) exhaust aftertreatment system after replacement of ECM without transfer of values	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Diesel oxidation catalytic converter'	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Selective Catalytic Reduction'- Catalytic converter	V1.00.001 or higher



R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B16/15 (Temperature sensor upstream of the Selective Catalytic Reduction (SCR) catalytic converter)'	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'B28/8 (Diesel Particulate Filter (DPF) differential pressure sensor)'	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'G3/2 (Oxygen sensor upstream of the Three Way Catalyst (TWC/KAT))'	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Nitrogen Oxide (NOx) sensor upstream of the Selective Catalytic Reduction (SCR) catalytic converter'	V1.00.001 or higher

R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Nitrogen Oxide (NOx) sensor downstream of the Selective Catalytic Reduction (SCR) catalytic converter'	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y27/9 (EGR/ARF actuator)'	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y74 (Pressure control valve)'	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component 'Y129 (AdBlue metering valve)'	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Activate the fuel pump.	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Reset the quantity mean value adaptation data.	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Rapid teach-in of zero quantity calibration values	V1.00.001 or higher

R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Reset the values for HFM (Hot Film Engine Management) drift compensation.	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Resetting the AdBlue quality factor	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Resetting the learned values of air filter after replacement of the air filter	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Learning of the throttle valve stop	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Regeneration of the Diesel Particulate Filter (DPF) when driving	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teaching in the Diesel Particulate Filter (DPF) after replacement of ECM	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in of the Diesel Particulate Filter (DPF) after replacement of ECM without transfer of values	V1.00.001 or higher
R (251)	CDI 6BIN5- Common Rail Diesel Injection	Control unit adaptations	Teach-in process after replacement of component " Diesel Particulate Filter	V1.00.001 or higher

R (251)	SCR-Selective Catalytic Reduction	ECU Information		V1.00.001 or higher
R (251)	SCR-Selective Catalytic Reduction	Read Codes		V1.00.001 or higher
R (251)	SCR-Selective Catalytic Reduction	Erase Codes		V1.00.001 or higher
R (251)	SCR-Selective Catalytic Reduction	Live Data		V1.00.001 or higher
R (251)	SCR-Selective Catalytic Reduction	Active Test		V1.00.001 or higher
R (251)	SCR-Selective Catalytic Reduction	Control unit adaptations	Refill the AdBlue.	V1.00.001 or higher
R (251)	SCR-Selective Catalytic Reduction	Control unit adaptations	Clearing the adaptation values after replacement of AdBlue fluid	V1.00.001 or higher
R (251)	SCR-Selective Catalytic Reduction	Control unit adaptations	Teach-in process after replacement of component 'Y129 (AdBlue metering valve)'	V1.00.001 or higher
R (251)	MED 17.7-Motor electronics for direct injection 17.7	ECU Information		V1.00.001 or higher
R (251)	MED 17.7-Motor electronics for direct injection 17.7	Read Codes		V1.00.001 or higher
R (251)	MED 17.7-Motor electronics for direct injection 17.7	Erase Codes		V1.00.001 or higher
R (251)	MED 17.7-Motor electronics for direct injection 17.7	Live Data		V1.00.001 or higher
Maybach 240	ME-SFI 2.7.1-Motor electronics 2.7.1	ECU Information		V1.00.001 or higher

Maybach 240	ME-SFI 2.7.1- Motor electronics 2.7.1	Read Codes		V1.00.001 or higher
Maybach 240	ME-SFI 2.7.1- Motor electronics 2.7.1	Erase Codes		V1.00.001 or higher
Maybach 240	ME-SFI 2.7.1- Motor electronics 2.7.1	Live Data		V1.00.001 or higher
Maybach 240	ME-SFI 2.7.1- Motor electronics 2.7.1	Active Test		V1.00.001 or higher
Maybach 240	ME-SFI 2.7.1- Motor electronics 2.7.1	Control unit adaptations	Learning processes	V1.00.001 or higher
Maybach 240	ME-SFI 2.7.1- Motor electronics 2.7.1	Control unit adaptations	Correction programming	V1.00.001 or higher
Maybach 240	ME-SFI 2.7.1- Motor electronics 2.7.1	Special functions	Variant coding	V1.00.001 or higher
Maybach 240	Transmission	ECU Information		V1.00.001 or higher
Maybach 240	Transmission	Read Codes		V1.00.001 or higher
Maybach 240	Transmission	Erase Codes		V1.00.001 or higher
Maybach 240	Transmission	Live Data		V1.00.001 or higher
Maybach 240	Transmission	Active Test		V1.00.001 or higher
Maybach 240	Transmission	Control unit adaptations	Definition	V1.00.001 or higher
Maybach 240	Transmission	Control unit adaptations	Assignment of the hydraulic shift elements	V1.00.001 or higher
Maybach 240	Transmission	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
Maybach 240	Transmission	Control unit adaptations	Important information on the combination possibilities for adaptation end stop values	V1.00.001 or higher

Maybach 240	Transmission	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
Maybach 240	Transmission	Control unit adaptations	Performing adaptation	V1.00.001 or higher
Maybach 240	Transmission	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
Maybach 240	Transmission	Special functions	Warranty or goodwill processing	V1.00.001 or higher
Maybach 240	Transmission	Special functions	Diagnosis routines	V1.00.001 or higher
Maybach 240	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
Maybach 240	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
Maybach 240	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
Maybach 240	ESM-Electronic selector module	Live Data		V1.00.001 or higher
Maybach 240	ESM-Electronic selector module	Active Test		V1.00.001 or higher
Maybach 240	ESM-Electronic selector module	Control unit adaptations	Detach the transport protection of control module 'N15/5 (Electronic Selector Module (ESM/EWM))', personalize or activate the control module.	V1.00.001 or higher
Maybach 240	SGR-Radar sensors control unit	ECU Information		V1.00.001 or higher
Maybach 240	SGR-Radar sensors control unit	Read Codes		V1.00.001 or higher
Maybach 240	SGR-Radar sensors control unit	Erase Codes		V1.00.001 or higher
Maybach 240	SGR-Radar sensors control unit	Live Data		V1.00.001 or higher

Maybach 240	DTR-Distronic	ECU Information		V1.00.001 or higher
Maybach 240	DTR-Distronic	Read Codes		V1.00.001 or higher
Maybach 240	DTR-Distronic	Erase Codes		V1.00.001 or higher
Maybach 240	DTR-Distronic	Live Data		V1.00.001 or higher
Maybach 240	DTR-Distronic	Control unit adaptations	●	V1.00.001 or higher
Maybach 240	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
Maybach 240	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
Maybach 240	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
Maybach 240	ESP-Electronic stability program	Live Data		V1.00.001 or higher
Maybach 240	ESP-Electronic stability program	Active Test		V1.00.001 or higher
Maybach 240	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
Maybach 240	SBC-Sensotronic Brake Control	ECU Information		V1.00.001 or higher
Maybach 240	SBC-Sensotronic Brake Control	Read Codes		V1.00.001 or higher
Maybach 240	SBC-Sensotronic Brake Control	Erase Codes		V1.00.001 or higher
Maybach 240	SBC-Sensotronic Brake Control	Live Data		V1.00.001 or higher
Maybach 240	SBC-Sensotronic Brake Control	Special functions	●	V1.00.001 or higher
Maybach 240	SBC-Right Sensotronic Brake Control	ECU Information		V1.00.001 or higher
Maybach 240	SBC-Right Sensotronic Brake Control	Read Codes		V1.00.001 or higher
Maybach 240	SBC-Right Sensotronic Brake Control	Erase Codes		V1.00.001 or higher
Maybach 240	SBC-Right Sensotronic Brake Control	Live Data		V1.00.001 or higher
Maybach 240	SBC-Right Sensotronic Brake Control	Special functions	●	V1.00.001 or higher

Maybach 240	TPC-Tire pressure monitor	ECU Information		V1.00.001 or higher
Maybach 240	TPC-Tire pressure monitor	Read Codes		V1.00.001 or higher
Maybach 240	TPC-Tire pressure monitor	Erase Codes		V1.00.001 or higher
Maybach 240	TPC-Tire pressure monitor	Live Data		V1.00.001 or higher
Maybach 240	TPC-Tire pressure monitor	Active Test		V1.00.001 or higher
Maybach 240	TPC-Tire pressure monitor	Control unit adaptations	•	V1.00.001 or higher
Maybach 240	AIRmatic	ECU Information		V1.00.001 or higher
Maybach 240	AIRmatic	Read Codes		V1.00.001 or higher
Maybach 240	AIRmatic	Erase Codes		V1.00.001 or higher
Maybach 240	AIRmatic	Live Data		V1.00.001 or higher
Maybach 240	AIRmatic	Active Test		V1.00.001 or higher
Maybach 240	AIRmatic	Special functions	Initial start-up	V1.00.001 or higher
Maybach 240	AIRmatic	Special functions	Pneumatic tests	V1.00.001 or higher
Maybach 240	AB-Airbag	ECU Information		V1.00.001 or higher
Maybach 240	AB-Airbag	Read Codes		V1.00.001 or higher
Maybach 240	AB-Airbag	Erase Codes		V1.00.001 or higher
Maybach 240	AB-Airbag	Live Data		V1.00.001 or higher
Maybach 240	CGW-Central gateway	ECU Information		V1.00.001 or higher
Maybach 240	CGW-Central gateway	Read Codes		V1.00.001 or higher
Maybach 240	CGW-Central gateway	Erase Codes		V1.00.001 or higher
Maybach 240	CGW-Central gateway	Live Data		V1.00.001 or higher
Maybach 240	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher
Maybach 240	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher



Maybach 240	CGW-Central gateway	Special functions	All codes	V1.00.001 or higher
Maybach 240	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
Maybach 240	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
Maybach 240	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
Maybach 240	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
Maybach 240	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
Maybach 240	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
Maybach 240	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
Maybach 240	WSS-Weight sensing system	Live Data		V1.00.001 or higher
Maybach 240	WSS-Weight sensing system	Initial startup	Initial start-up	V1.00.001 or higher
Maybach 240	BNS-Vehicle power supply control module	ECU Information		V1.00.001 or higher
Maybach 240	BNS-Vehicle power supply control module	Read Codes		V1.00.001 or higher
Maybach 240	BNS-Vehicle power supply control module	Erase Codes		V1.00.001 or higher
Maybach 240	BNS-Vehicle power supply control module	Live Data		V1.00.001 or higher
Maybach 240	Dr-side SAM-Driver signal acquisition and actuation module	ECU Information		V1.00.001 or higher
Maybach 240	Dr-side SAM-Driver signal acquisition and actuation module	Read Codes		V1.00.001 or higher
Maybach 240	Dr-side SAM-Driver signal acquisition and actuation module	Erase Codes		V1.00.001 or higher

Maybach 240	Dr-side SAM- Driver signal acquisition and actuation module	Live Data		V1.00.001 or higher
Maybach 240	Dr-side SAM- Driver signal acquisition and actuation module	Active Test		V1.00.001 or higher
Maybach 240	Pass-side SAM- Passenger-side signal acquisition and actuation module	ECU Information		V1.00.001 or higher
Maybach 240	Pass-side SAM- Passenger-side signal acquisition and actuation module	Read Codes		V1.00.001 or higher
Maybach 240	Pass-side SAM- Passenger-side signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
Maybach 240	Pass-side SAM- Passenger-side signal acquisition and actuation module	Live Data		V1.00.001 or higher
Maybach 240	Pass-side SAM- Passenger-side signal acquisition and actuation module	Active Test		V1.00.001 or higher
Maybach 240	Rear SAM 1-Rear signal acquisition and actuation module1	ECU Information		V1.00.001 or higher

Maybach 240	Rear SAM 1-Rear signal acquisition and actuation module1	Read Codes		V1.00.001 or higher
Maybach 240	Rear SAM 1-Rear signal acquisition and actuation module1	Erase Codes		V1.00.001 or higher
Maybach 240	Rear SAM 1-Rear signal acquisition and actuation module1	Live Data		V1.00.001 or higher
Maybach 240	Rear SAM 1-Rear signal acquisition and actuation module1	Active Test		V1.00.001 or higher
Maybach 240	Rear SAM 2-Rear signal acquisition and actuation module2	ECU Information		V1.00.001 or higher
Maybach 240	Rear SAM 2-Rear signal acquisition and actuation module2	Read Codes		V1.00.001 or higher
Maybach 240	Rear SAM 2-Rear signal acquisition and actuation module2	Erase Codes		V1.00.001 or higher
Maybach 240	Rear SAM 2-Rear signal acquisition and actuation module2	Live Data		V1.00.001 or higher
Maybach 240	Rear SAM 2-Rear signal acquisition and actuation module2	Active Test		V1.00.001 or higher

Maybach 240	MSS-Special vehicle multifunction control module	ECU Information		V1.00.001 or higher
Maybach 240	MSS-Special vehicle multifunction control module	Read Codes		V1.00.001 or higher
Maybach 240	MSS-Special vehicle multifunction control module	Erase Codes		V1.00.001 or higher
Maybach 240	MSS-Special vehicle multifunction control module	Live Data		V1.00.001 or higher
Maybach 240	MSS-Special vehicle multifunction control module	Active Test		V1.00.001 or higher
Maybach 240	MSS-Special vehicle multifunction control module	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
Maybach 240	VBF (Front control panel)-Front control panel	ECU Information		V1.00.001 or higher
Maybach 240	VBF (Front control panel)-Front control panel	Read Codes		V1.00.001 or higher
Maybach 240	VBF (Front control panel)-Front control panel	Erase Codes		V1.00.001 or higher
Maybach 240	VBF (Front control panel)-Front control panel	Live Data		V1.00.001 or higher
Maybach 240	VBF (Front control panel)-Front control panel	Active Test		V1.00.001 or higher
Maybach 240	HBF (Rear control panel)-Rear control field	ECU Information		V1.00.001 or higher

Maybach 240	HBF (Rear control panel)-Rear control field	Read Codes		V1.00.001 or higher
Maybach 240	HBF (Rear control panel)-Rear control field	Erase Codes		V1.00.001 or higher
Maybach 240	HBF (Rear control panel)-Rear control field	Live Data		V1.00.001 or higher
Maybach 240	HBF (Rear control panel)-Rear control field	Active Test		V1.00.001 or higher
Maybach 240	BCG-Remote control(Rear control field)	ECU Information		V1.00.001 or higher
Maybach 240	BCG-Remote control(Rear control field)	Read Codes		V1.00.001 or higher
Maybach 240	BCG-Remote control(Rear control field)	Erase Codes		V1.00.001 or higher
Maybach 240	BCG-Remote control(Rear control field)	Live Data		V1.00.001 or higher
Maybach 240	BCG-Remote control(Rear control field)	Active Test		V1.00.001 or higher
Maybach 240	BCG-Remote control(Rear control field)	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
Maybach 240	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
Maybach 240	OCP-Overhead control panel	Read Codes		V1.00.001 or higher
Maybach 240	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
Maybach 240	OCP-Overhead control panel	Live Data		V1.00.001 or higher
Maybach 240	OCP-Overhead control panel	Active Test		V1.00.001 or higher
Maybach 240	CRN-Center roof node	ECU Information		V1.00.001 or higher
Maybach 240	CRN-Center roof node	Read Codes		V1.00.001 or higher
Maybach 240	CRN-Center roof node	Erase Codes		V1.00.001 or higher
Maybach 240	CRN-Center roof node	Live Data		V1.00.001 or higher

Maybach 240	CRN-Center roof node	Active Test		V1.00.001 or higher
Maybach 240	PSE-Pneumatic system equipment	ECU Information		V1.00.001 or higher
Maybach 240	PSE-Pneumatic system equipment	Read Codes		V1.00.001 or higher
Maybach 240	PSE-Pneumatic system equipment	Erase Codes		V1.00.001 or higher
Maybach 240	PSE-Pneumatic system equipment	Live Data		V1.00.001 or higher
Maybach 240	PSE-Pneumatic system equipment	Active Test		V1.00.001 or higher
Maybach 240	HRA-Automatic headlamp range adjustment and headlamp control	ECU Information		V1.00.001 or higher
Maybach 240	HRA-Automatic headlamp range adjustment and headlamp control	Read Codes		V1.00.001 or higher
Maybach 240	HRA-Automatic headlamp range adjustment and headlamp control	Erase Codes		V1.00.001 or higher
Maybach 240	HRA-Automatic headlamp range adjustment and headlamp control	Live Data		V1.00.001 or higher
Maybach 240	HRA-Automatic headlamp range adjustment and headlamp control	Active Test		V1.00.001 or higher
Maybach 240	HRA-Automatic headlamp range adjustment and headlamp control	Control unit adaptations	Zero position adjustment of axle or level sensors	V1.00.001 or higher

Maybach 240	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
Maybach 240	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
Maybach 240	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
Maybach 240	ICM-Instrument cluster	ECU Information		V1.00.001 or higher
Maybach 240	ICM-Instrument cluster	Read Codes		V1.00.001 or higher
Maybach 240	ICM-Instrument cluster	Erase Codes		V1.00.001 or higher
Maybach 240	ICM-Instrument cluster	Live Data		V1.00.001 or higher
Maybach 240	ICM-Instrument cluster	ECU Information		V1.00.001 or higher
Maybach 240	ICM-Instrument cluster	Active Test		V1.00.001 or higher
Maybach 240	PTS-Parktronic system	ECU Information		V1.00.001 or higher
Maybach 240	PTS-Parktronic system	Read Codes		V1.00.001 or higher
Maybach 240	PTS-Parktronic system	Erase Codes		V1.00.001 or higher
Maybach 240	PTS-Parktronic system	Live Data		V1.00.001 or higher
Maybach 240	PTS-Parktronic system	Active Test		V1.00.001 or higher
Maybach 240	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
Maybach 240	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
Maybach 240	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher
Maybach 240	SCM [MRM]-Steering column module	Live Data		V1.00.001 or higher
Maybach 240	SCM [MRM]-Steering column module	Active Test		V1.00.001 or higher
Maybach 240	SCM [MRM]-Steering column module	Initial startup	•	V1.00.001 or higher

Maybach 240	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	ECU Information		V1.00.001 or higher
Maybach 240	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Read Codes		V1.00.001 or higher
Maybach 240	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Erase Codes		V1.00.001 or higher
Maybach 240	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Live Data		V1.00.001 or higher
Maybach 240	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Active Test		V1.00.001 or higher
Maybach 240	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
Maybach 240	CTEL-Control unit Telecommunication for telematics services	ECU Information		V1.00.001 or higher



Maybach 240	CTEL-Control unit Telecommunicatio n for telematics services	Read Codes		V1.00.001 or higher
Maybach 240	CTEL-Control unit Telecommunicatio n for telematics services	Erase Codes		V1.00.001 or higher
Maybach 240	CTEL-Control unit Telecommunicatio n for telematics services	Live Data		V1.00.001 or higher
Maybach 240	COMAND or AUDIO	ECU Information		V1.00.001 or higher
Maybach 240	COMAND or AUDIO	Read Codes		V1.00.001 or higher
Maybach 240	COMAND or AUDIO	Erase Codes		V1.00.001 or higher
Maybach 240	COMAND or AUDIO	Live Data		V1.00.001 or higher
Maybach 240	COMAND or AUDIO	Active Test		V1.00.001 or higher
Maybach 240	COMAND or AUDIO	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
Maybach 240	NAVI-Navigation system	ECU Information		V1.00.001 or higher
Maybach 240	NAVI-Navigation system	Read Codes		V1.00.001 or higher
Maybach 240	NAVI-Navigation system	Erase Codes		V1.00.001 or higher
Maybach 240	NAVI-Navigation system	Live Data		V1.00.001 or higher
Maybach 240	NAVI-Navigation system	Active Test		V1.00.001 or higher
Maybach 240	VCS-Voice control system	ECU Information		V1.00.001 or higher
Maybach 240	VCS-Voice control system	Read Codes		V1.00.001 or higher
Maybach 240	VCS-Voice control system	Erase Codes		V1.00.001 or higher
Maybach 240	VCS-Voice control system	Active Test		V1.00.001 or higher
Maybach 240	TV-TV tuner	ECU Information		V1.00.001 or higher

Maybach 240	TV-TV tuner	Read Codes		V1.00.001 or higher
Maybach 240	TV-TV tuner	Erase Codes		V1.00.001 or higher
Maybach 240	TV-TV tuner	Live Data		V1.00.001 or higher
Maybach 240	TV-TV tuner	Active Test		V1.00.001 or higher
Maybach 240	SOUND-Bose sound system	ECU Information		V1.00.001 or higher
Maybach 240	SOUND-Bose sound system	Read Codes		V1.00.001 or higher
Maybach 240	SOUND-Bose sound system	Erase Codes		V1.00.001 or higher
Maybach 240	SOUND-Bose sound system	Live Data		V1.00.001 or higher
Maybach 240	SDAR-Satellite radio	ECU Information		V1.00.001 or higher
Maybach 240	SDAR-Satellite radio	Read Codes		V1.00.001 or higher
Maybach 240	SDAR-Satellite radio	Erase Codes		V1.00.001 or higher
Maybach 240	SDAR-Satellite radio	Live Data		V1.00.001 or higher
Maybach 240	AVC-Audio video controller	ECU Information		V1.00.001 or higher
Maybach 240	AVC-Audio video controller	Read Codes		V1.00.001 or higher
Maybach 240	AVC-Audio video controller	Erase Codes		V1.00.001 or higher
Maybach 240	AVC-Audio video controller	Live Data		V1.00.001 or higher
Maybach 240	AVC-Audio video controller	Active Test		V1.00.001 or higher
Maybach 240	TV-TV tuner	ECU Information		V1.00.001 or higher
Maybach 240	TV-TV tuner	Read Codes		V1.00.001 or higher
Maybach 240	TV-TV tuner	Erase Codes		V1.00.001 or higher
Maybach 240	TV-TV tuner	Live Data		V1.00.001 or higher
Maybach 240	CDC-CD changer(REAR)	ECU Information		V1.00.001 or higher
Maybach 240	CDC-CD changer(REAR)	Read Codes		V1.00.001 or higher
Maybach 240	CDC-CD changer(REAR)	Erase Codes		V1.00.001 or higher

Maybach 240	CDC-CD changer(REAR)	Live Data		V1.00.001 or higher
Maybach 240	KTL-Left headphone transmitter	ECU Information		V1.00.001 or higher
Maybach 240	KTL-Left headphone transmitter	Read Codes		V1.00.001 or higher
Maybach 240	KTL-Left headphone transmitter	Erase Codes		V1.00.001 or higher
Maybach 240	KTL-Left headphone transmitter	Live Data		V1.00.001 or higher
Maybach 240	KTR-Right headphone transmitter	ECU Information		V1.00.001 or higher
Maybach 240	KTR-Right headphone transmitter	Read Codes		V1.00.001 or higher
Maybach 240	KTR-Right headphone transmitter	Erase Codes		V1.00.001 or higher
Maybach 240	KTR-Right headphone transmitter	Live Data		V1.00.001 or higher
Maybach 240	Control unit TELE AID	ECU Information		V1.00.001 or higher
Maybach 240	Control unit TELE AID	Read Codes		V1.00.001 or higher
Maybach 240	Control unit TELE AID	Erase Codes		V1.00.001 or higher
Maybach 240	Control unit TELE AID	Live Data		V1.00.001 or higher
Maybach 240	TELE AID- Telematic services Emergency call	ECU Information		V1.00.001 or higher
Maybach 240	TELE AID- Telematic services Emergency call	Read Codes		V1.00.001 or higher
Maybach 240	TELE AID- Telematic services Emergency call	Erase Codes		V1.00.001 or higher

Maybach 240	TELE AID- Telematic services Emergency call	Live Data		V1.00.001 or higher
Maybach 240	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	ECU Information		V1.00.001 or higher
Maybach 240	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Read Codes		V1.00.001 or higher
Maybach 240	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Erase Codes		V1.00.001 or higher
Maybach 240	TELE AID- Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)	Live Data		V1.00.001 or higher
Maybach 240	TELE AID- Telematic services Stolen vehicle tracking	ECU Information		V1.00.001 or higher
Maybach 240	TELE AID- Telematic services Stolen vehicle tracking	Read Codes		V1.00.001 or higher
Maybach 240	TELE AID- Telematic services Stolen vehicle tracking	Erase Codes		V1.00.001 or higher
Maybach 240	TELE AID- Telematic services Stolen vehicle tracking	Live Data		V1.00.001 or higher

Maybach 240	TELE AID- Telematic services Remote door unlocking,Remote door locking	ECU Information		V1.00.001 or higher
Maybach 240	TELE AID- Telematic services Remote door unlocking,Remote door locking	Read Codes		V1.00.001 or higher
Maybach 240	TELE AID- Telematic services Remote door unlocking,Remote door locking	Erase Codes		V1.00.001 or higher
Maybach 240	TELE AID- Telematic services Remote door unlocking,Remote door locking	Live Data		V1.00.001 or higher
Maybach 240	ESA-FL-Electric seat adjustment front left	ECU Information		V1.00.001 or higher
Maybach 240	ESA-FL-Electric seat adjustment front left	Read Codes		V1.00.001 or higher
Maybach 240	ESA-FL-Electric seat adjustment front left	Erase Codes		V1.00.001 or higher
Maybach 240	ESA-FL-Electric seat adjustment front left	Live Data		V1.00.001 or higher
Maybach 240	ESA-FL-Electric seat adjustment front left	Active Test		V1.00.001 or higher
Maybach 240	ESA-FR-Electric seat adjustment front right	ECU Information		V1.00.001 or higher
Maybach 240	ESA-FR-Electric seat adjustment front right	Read Codes		V1.00.001 or higher
Maybach 240	ESA-FR-Electric seat adjustment front right	Erase Codes		V1.00.001 or higher

Maybach 240	ESA-FR-Electric seat adjustment front right	Live Data		V1.00.001 or higher
Maybach 240	ESA-FR-Electric seat adjustment front right	Active Test		V1.00.001 or higher
Maybach 240	ESA-LR-Left rear electrical seat adjustment	ECU Information		V1.00.001 or higher
Maybach 240	ESA-LR-Left rear electrical seat adjustment	Read Codes		V1.00.001 or higher
Maybach 240	ESA-LR-Left rear electrical seat adjustment	Erase Codes		V1.00.001 or higher
Maybach 240	ESA-LR-Left rear electrical seat adjustment	Live Data		V1.00.001 or higher
Maybach 240	ESA-LR-Left rear electrical seat adjustment	Active Test		V1.00.001 or higher
Maybach 240	ESA-RR-Right rear electrical seat adjustment	ECU Information		V1.00.001 or higher
Maybach 240	ESA-RR-Right rear electrical seat adjustment	Read Codes		V1.00.001 or higher
Maybach 240	ESA-RR-Right rear electrical seat adjustment	Erase Codes		V1.00.001 or higher
Maybach 240	ESA-RR-Right rear electrical seat adjustment	Live Data		V1.00.001 or higher
Maybach 240	ESA-RR-Right rear electrical seat adjustment	Active Test		V1.00.001 or higher
Maybach 240	OSB-FL-Multicontour backrest front left	ECU Information		V1.00.001 or higher
Maybach 240	OSB-FL-Multicontour backrest front left	Read Codes		V1.00.001 or higher
Maybach 240	OSB-FL-Multicontour backrest front left	Erase Codes		V1.00.001 or higher

Maybach 240	OSB-FL- Multicontour backrest front left	Live Data		V1.00.001 or higher
Maybach 240	OSB-FL- Multicontour backrest front left	Active Test		V1.00.001 or higher
Maybach 240	OSB-FR- Multicontour backrest front right	ECU Information		V1.00.001 or higher
Maybach 240	OSB-FR- Multicontour backrest front right	Read Codes		V1.00.001 or higher
Maybach 240	OSB-FR- Multicontour backrest front right	Erase Codes		V1.00.001 or higher
Maybach 240	OSB-FR- Multicontour backrest front right	Live Data		V1.00.001 or higher
Maybach 240	OSB-FR- Multicontour backrest front right	Active Test		V1.00.001 or higher
Maybach 240	MKL-HL-Rear left multicontour backrest	ECU Information		V1.00.001 or higher
Maybach 240	MKL-HL-Rear left multicontour backrest	Read Codes		V1.00.001 or higher
Maybach 240	MKL-HL-Rear left multicontour backrest	Erase Codes		V1.00.001 or higher
Maybach 240	MKL-HL-Rear left multicontour backrest	Live Data		V1.00.001 or higher
Maybach 240	MKL-HL-Rear left multicontour backrest	Active Test		V1.00.001 or higher
Maybach 240	MKL-HR-Rear right multicontour backrest	ECU Information		V1.00.001 or higher

Maybach 240	MKL-HR-Rear right multicontour backrest	Read Codes		V1.00.001 or higher
Maybach 240	MKL-HR-Rear right multicontour backrest	Erase Codes		V1.00.001 or higher
Maybach 240	MKL-HR-Rear right multicontour backrest	Live Data		V1.00.001 or higher
Maybach 240	MKL-HR-Rear right multicontour backrest	Active Test		V1.00.001 or higher
Maybach 240	DCM-FL-Door control module front left	ECU Information		V1.00.001 or higher
Maybach 240	DCM-FL-Door control module front left	Read Codes		V1.00.001 or higher
Maybach 240	DCM-FL-Door control module front left	Erase Codes		V1.00.001 or higher
Maybach 240	DCM-FL-Door control module front left	Live Data		V1.00.001 or higher
Maybach 240	DCM-FL-Door control module front left	Active Test		V1.00.001 or higher
Maybach 240	DCM-FR-Door control module front right	ECU Information		V1.00.001 or higher
Maybach 240	DCM-FR-Door control module front right	Read Codes		V1.00.001 or higher
Maybach 240	DCM-FR-Door control module front right	Erase Codes		V1.00.001 or higher
Maybach 240	DCM-FR-Door control module front right	Live Data		V1.00.001 or higher
Maybach 240	DCM-FR-Door control module front right	Active Test		V1.00.001 or higher



Maybach 240	DCM-RL-Door control module rear left	ECU Information		V1.00.001 or higher
Maybach 240	DCM-RL-Door control module rear left	Read Codes		V1.00.001 or higher
Maybach 240	DCM-RL-Door control module rear left	Erase Codes		V1.00.001 or higher
Maybach 240	DCM-RL-Door control module rear left	Live Data		V1.00.001 or higher
Maybach 240	DCM-RL-Door control module rear left	Active Test		V1.00.001 or higher
Maybach 240	DCM-RR-Door control module rear right	ECU Information		V1.00.001 or higher
Maybach 240	DCM-RR-Door control module rear right	Read Codes		V1.00.001 or higher
Maybach 240	DCM-RR-Door control module rear right	Erase Codes		V1.00.001 or higher
Maybach 240	DCM-RR-Door control module rear right	Live Data		V1.00.001 or higher
Maybach 240	DCM-RR-Door control module rear right	Active Test		V1.00.001 or higher
Maybach 240	PWC-Partition wall control module	ECU Information		V1.00.001 or higher
Maybach 240	PWC-Partition wall control module	Read Codes		V1.00.001 or higher
Maybach 240	PWC-Partition wall control module	Erase Codes		V1.00.001 or higher
Maybach 240	PWC-Partition wall control module	Live Data		V1.00.001 or higher
Maybach 240	LDCA-Electric left door closing assist	ECU Information		V1.00.001 or higher
Maybach 240	LDCA-Electric left door closing assist	Read Codes		V1.00.001 or higher

Maybach 240	LDCA-Electric left door closing assist	Erase Codes		V1.00.001 or higher
Maybach 240	LDCA-Electric left door closing assist	Live Data		V1.00.001 or higher
Maybach 240	RDCA-Electric right door closing assist	ECU Information		V1.00.001 or higher
Maybach 240	RDCA-Electric right door closing assist	Read Codes		V1.00.001 or higher
Maybach 240	RDCA-Electric right door closing assist	Erase Codes		V1.00.001 or higher
Maybach 240	RDCA-Electric right door closing assist	Live Data		V1.00.001 or higher
Maybach 240	TLC-Trunk lid control	ECU Information		V1.00.001 or higher
Maybach 240	TLC-Trunk lid control	Read Codes		V1.00.001 or higher
Maybach 240	TLC-Trunk lid control	Erase Codes		V1.00.001 or higher
Maybach 240	TLC-Trunk lid control	Live Data		V1.00.001 or higher
Maybach 240	TLC-Trunk lid control	Active Test		V1.00.001 or higher
Maybach 240	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
Maybach 240	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
Maybach 240	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
Maybach 240	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
Maybach 240	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
Maybach 240	AAC-Automatic air conditioning	Special functions	Read the coding and change as necessary.	V1.00.001 or higher
Maybach 240	REAR AC-Rear air conditioning	ECU Information		V1.00.001 or higher
Maybach 240	REAR AC-Rear air conditioning	Read Codes		V1.00.001 or higher
Maybach 240	REAR AC-Rear air conditioning	Erase Codes		V1.00.001 or higher

Maybach 240	REAR AC-Rear air conditioning	Live Data		V1.00.001 or higher
Maybach 240	REAR AC-Rear air conditioning	Active Test		V1.00.001 or higher
Maybach 240	STH-Stationary heater	ECU Information		V1.00.001 or higher
Maybach 240	STH-Stationary heater	Read Codes		V1.00.001 or higher
Maybach 240	STH-Stationary heater	Erase Codes		V1.00.001 or higher
Maybach 240	STH-Stationary heater	Live Data		V1.00.001 or higher
Maybach 240	STH-Stationary heater	Active Test		V1.00.001 or higher
Maybach 240	STH-Stationary heater	Control unit adaptations	Learning component 'A8/3 (Stationary Heater (STH) radio remote control transmitter)'	V1.00.001 or higher
Maybach 240	HSW-Heated steering wheel	ECU Information		V1.00.001 or higher
Maybach 240	HSW-Heated steering wheel	Read Codes		V1.00.001 or higher
Maybach 240	HSW-Heated steering wheel	Erase Codes		V1.00.001 or higher
Maybach 240	HSW-Heated steering wheel	Live Data		V1.00.001 or higher
Maybach 240	HSW-Heated steering wheel	Active Test		V1.00.001 or higher
Maybach 240	HSW-Heated steering wheel	Control unit adaptations	Read the coding and change as necessary.	V1.00.001 or higher
Maybach 240	HSW-Heated steering wheel	Initial startup	Initial start-up with automatic takeover of settings from the old control module	V1.00.001 or higher

Maybach 240	HSW-Heated steering wheel	Initial startup	Initial start-up with manual settings input for new control module(For example: The previous control module cannot be read any longer.)	V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	ECU Information		V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Read Codes		V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Erase Codes		V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Live Data		V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Special functions	Variant coding	V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Special functions	Learning process	V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Special functions	Correction programming	V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Special functions	Emissions inspection (Not valid for USA)	V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Special functions	OBd I/M check (Valid for USA)	V1.00.001 or higher
Maybach 240	AB-Airbag	ECU Information		V1.00.001 or higher
Maybach 240	AB-Airbag	Read Codes		V1.00.001 or higher
Maybach 240	AB-Airbag	Erase Codes		V1.00.001 or higher
Maybach 240	AB-Airbag	Live Data		V1.00.001 or higher
Maybach 240	AB-Airbag	Active Test		V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	ECU Information		V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Read Codes		V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Erase Codes		V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Live Data		V1.00.001 or higher

Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Active Test		V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Special functions	Variant coding	V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Special functions	Learning process	V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Special functions	Correction programming	V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Special functions	Emissions inspection (Not valid for USA)	V1.00.001 or higher
Maybach 240	ME 2.7.2-Motor electronics 2.7.2	Special functions	OBD I/M check (Valid for USA)	V1.00.001 or higher
Maybach 240	FSCU-Fuel pump	ECU Information		V1.00.001 or higher
Maybach 240	FSCU-Fuel pump	Read Codes		V1.00.001 or higher
Maybach 240	FSCU-Fuel pump	Erase Codes		V1.00.001 or higher
Maybach 240	FSCU-Fuel pump	Active Test		V1.00.001 or higher
SLR (199)	ME-SFI 2.8-Motor electronics 2.8	ECU Information		V1.00.001 or higher
SLR (199)	ME-SFI 2.8-Motor electronics 2.8	Read Codes		V1.00.001 or higher
SLR (199)	ME-SFI 2.8-Motor electronics 2.8	Erase Codes		V1.00.001 or higher
SLR (199)	ME-SFI 2.8-Motor electronics 2.8	Live Data		V1.00.001 or higher
SLR (199)	ME-SFI 2.8-Motor electronics 2.8	Active Test		V1.00.001 or higher
SLR (199)	ME-SFI 2.8-Motor electronics 2.8	Special functions	Variant coding	V1.00.001 or higher
SLR (199)	ME-SFI 2.8-Motor electronics 2.8	Special functions	Learning processes	V1.00.001 or higher
SLR (199)	ME-SFI 2.8-Motor electronics 2.8	Special functions	Correction programming	V1.00.001 or higher
SLR (199)	ME-SFI 2.8-Motor electronics 2.8	Special functions	Fault path tests are carried out.	V1.00.001 or higher
SLR (199)	ETC-Electronic transmission control	ECU Information		V1.00.001 or higher
SLR (199)	ETC-Electronic transmission control	Read Codes		V1.00.001 or higher
SLR (199)	ETC-Electronic transmission control	Erase Codes		V1.00.001 or higher

SLR (199)	ETC-Electronic transmission control	Live Data		V1.00.001 or higher
SLR (199)	ETC-Electronic transmission control	Active Test		V1.00.001 or higher
SLR (199)	ETC-Electronic transmission control	Control unit adaptations	Definition	V1.00.001 or higher
SLR (199)	ETC-Electronic transmission control	Control unit adaptations	Assignment of the hydraulic shift elements	V1.00.001 or higher
SLR (199)	ETC-Electronic transmission control	Control unit adaptations	Important information on the adaptation limit values	V1.00.001 or higher
SLR (199)	ETC-Electronic transmission control	Control unit adaptations	Important information on the combination possibilities for adaptation end stop values	V1.00.001 or higher
SLR (199)	ETC-Electronic transmission control	Control unit adaptations	Display and reset of adaptation data	V1.00.001 or higher
SLR (199)	ETC-Electronic transmission control	Control unit adaptations	Performing adaptation	V1.00.001 or higher
SLR (199)	ETC-Electronic transmission control	Special functions	Initial Test/Oil condition check/Oil level check	V1.00.001 or higher
SLR (199)	ETC-Electronic transmission control	Special functions	Warranty or goodwill processing	V1.00.001 or higher
SLR (199)	ETC-Electronic transmission control	Special functions	Diagnosis routines	V1.00.001 or higher
SLR (199)	ESM-Electronic selector module	ECU Information		V1.00.001 or higher
SLR (199)	ESM-Electronic selector module	Read Codes		V1.00.001 or higher
SLR (199)	ESM-Electronic selector module	Erase Codes		V1.00.001 or higher
SLR (199)	ESM-Electronic selector module	Live Data		V1.00.001 or higher
SLR (199)	ESM-Electronic selector module	Active Test		V1.00.001 or higher

SLR (199)	ESM-Electronic selector module	Control unit adaptations	Detach the transport protection of control module 'N15/5 (Electronic Selector Module (ESM/EWM))', personalize or activate the control module.	V1.00.001 or higher
SLR (199)	ESP-Electronic stability program	ECU Information		V1.00.001 or higher
SLR (199)	ESP-Electronic stability program	Read Codes		V1.00.001 or higher
SLR (199)	ESP-Electronic stability program	Erase Codes		V1.00.001 or higher
SLR (199)	ESP-Electronic stability program	Live Data		V1.00.001 or higher
SLR (199)	ESP-Electronic stability program	Active Test		V1.00.001 or higher
SLR (199)	ESP-Electronic stability program	Control unit adaptations	Road test	V1.00.001 or higher
SLR (199)	SBC-Sensotronic Brake Control	ECU Information		V1.00.001 or higher
SLR (199)	SBC-Sensotronic Brake Control	Read Codes		V1.00.001 or higher
SLR (199)	SBC-Sensotronic Brake Control	Erase Codes		V1.00.001 or higher
SLR (199)	SBC-Sensotronic Brake Control	Live Data		V1.00.001 or higher
SLR (199)	SBC-Sensotronic Brake Control	Special functions	•	V1.00.001 or higher
SLR (199)	TPC-Tire pressure monitor	ECU Information		V1.00.001 or higher
SLR (199)	TPC-Tire pressure monitor	Read Codes		V1.00.001 or higher
SLR (199)	TPC-Tire pressure monitor	Erase Codes		V1.00.001 or higher
SLR (199)	TPC-Tire pressure monitor	Live Data		V1.00.001 or higher
SLR (199)	TPC-Tire pressure monitor	Active Test		V1.00.001 or higher
SLR (199)	TPC-Tire pressure monitor	Control unit adaptations	•	V1.00.001 or higher
SLR (199)	AB-Airbag	ECU Information		V1.00.001 or higher

SLR (199)	AB-Airbag	Read Codes		V1.00.001 or higher
SLR (199)	AB-Airbag	Erase Codes		V1.00.001 or higher
SLR (199)	AB-Airbag	Live Data		V1.00.001 or higher
SLR (199)	EZS-Electronic ignition switch	ECU Information		V1.00.001 or higher
SLR (199)	EZS-Electronic ignition switch	Read Codes		V1.00.001 or higher
SLR (199)	EZS-Electronic ignition switch	Erase Codes		V1.00.001 or higher
SLR (199)	EZS-Electronic ignition switch	Live Data		V1.00.001 or higher
SLR (199)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track.	V1.00.001 or higher
SLR (199)	EZS-Electronic ignition switch	Control unit adaptations	Disable the key or key track with the workshop key.	V1.00.001 or higher
SLR (199)	EZS-Electronic ignition switch	Control unit adaptations	Program the replacement keys.	V1.00.001 or higher
SLR (199)	EZS-Electronic ignition switch	Control unit adaptations	Authorize the key or key track once again.	V1.00.001 or higher
SLR (199)	EZS-Electronic ignition switch	Control unit adaptations	Key assignment or key track assignment to a memory block number	V1.00.001 or higher
SLR (199)	EZS-Electronic ignition switch	Control unit adaptations	Activate the Electronic Ignition Switch (EIS/EZS).	V1.00.001 or higher
SLR (199)	EZS-Electronic ignition switch	Control unit adaptations	Activate the control module 'N26/5 (Electric steering lock control module)'. '.	V1.00.001 or higher
SLR (199)	EZS-Electronic ignition switch	Control unit adaptations	Writing of the VIN	V1.00.001 or higher
SLR (199)	OCP-Overhead control panel	ECU Information		V1.00.001 or higher
SLR (199)	OCP-Overhead control panel	Read Codes		V1.00.001 or higher



SLR (199)	OCP-Overhead control panel	Erase Codes		V1.00.001 or higher
SLR (199)	OCP-Overhead control panel	Live Data		V1.00.001 or higher
SLR (199)	OCP-Overhead control panel	Active Test		V1.00.001 or higher
SLR (199)	LCP-Lower control panel	ECU Information		V1.00.001 or higher
SLR (199)	LCP-Lower control panel	Read Codes		V1.00.001 or higher
SLR (199)	LCP-Lower control panel	Erase Codes		V1.00.001 or higher
SLR (199)	LCP-Lower control panel	Live Data		V1.00.001 or higher
SLR (199)	LCP-Lower control panel	Active Test		V1.00.001 or higher
SLR (199)	Dr-side SAM- Driver signal acquisition and actuation module	ECU Information		V1.00.001 or higher
SLR (199)	Dr-side SAM- Driver signal acquisition and actuation module	Read Codes		V1.00.001 or higher
SLR (199)	Dr-side SAM- Driver signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
SLR (199)	Dr-side SAM- Driver signal acquisition and actuation module	Live Data		V1.00.001 or higher
SLR (199)	Dr-side SAM- Driver signal acquisition and actuation module	Active Test		V1.00.001 or higher
SLR (199)	Pass-side SAM- Passenger-side signal acquisition and actuation module	ECU Information		V1.00.001 or higher

SLR (199)	Pass-side SAM-Passenger-side signal acquisition and actuation module	Read Codes		V1.00.001 or higher
SLR (199)	Pass-side SAM-Passenger-side signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
SLR (199)	Pass-side SAM-Passenger-side signal acquisition and actuation module	Live Data		V1.00.001 or higher
SLR (199)	Pass-side SAM-Passenger-side signal acquisition and actuation module	Active Test		V1.00.001 or higher
SLR (199)	REAR SAM-Rear signal acquisition and actuation module	ECU Information		V1.00.001 or higher
SLR (199)	REAR SAM-Rear signal acquisition and actuation module	Read Codes		V1.00.001 or higher
SLR (199)	REAR SAM-Rear signal acquisition and actuation module	Erase Codes		V1.00.001 or higher
SLR (199)	REAR SAM-Rear signal acquisition and actuation module	Live Data		V1.00.001 or higher

SLR (199)	REAR SAM-Rear signal acquisition and actuation module	Active Test		V1.00.001 or higher
SLR (199)	BNS-Vehicle power supply control module	ECU Information		V1.00.001 or higher
SLR (199)	BNS-Vehicle power supply control module	Read Codes		V1.00.001 or higher
SLR (199)	BNS-Vehicle power supply control module	Erase Codes		V1.00.001 or higher
SLR (199)	BNS-Vehicle power supply control module	Live Data		V1.00.001 or higher
SLR (199)	HRA-FL-Front left headlamp range control	ECU Information		V1.00.001 or higher
SLR (199)	HRA-FL-Front left headlamp range control	Read Codes		V1.00.001 or higher
SLR (199)	HRA-FL-Front left headlamp range control	Erase Codes		V1.00.001 or higher
SLR (199)	HRA-FL-Front left headlamp range control	Live Data		V1.00.001 or higher
SLR (199)	HRA-FL-Front left headlamp range control	Active Test		V1.00.001 or higher
SLR (199)	HRA-FL-Front left headlamp range control	Control unit adaptations	Zero position adjustment	V1.00.001 or higher
SLR (199)	HRA-FR-Front right headlamp range control	ECU Information		V1.00.001 or higher
SLR (199)	HRA-FR-Front right headlamp range control	Read Codes		V1.00.001 or higher
SLR (199)	HRA-FR-Front right headlamp range control	Erase Codes		V1.00.001 or higher
SLR (199)	HRA-FR-Front right headlamp range control	Live Data		V1.00.001 or higher

SLR (199)	RS-Roadster soft top	ECU Information		V1.00.001 or higher
SLR (199)	RS-Roadster soft top	Read Codes		V1.00.001 or higher
SLR (199)	RS-Roadster soft top	Erase Codes		V1.00.001 or higher
SLR (199)	RS-Roadster soft top	Live Data		V1.00.001 or higher
SLR (199)	CGW-Central gateway	ECU Information		V1.00.001 or higher
SLR (199)	CGW-Central gateway	Read Codes		V1.00.001 or higher
SLR (199)	CGW-Central gateway	Erase Codes		V1.00.001 or higher
SLR (199)	CGW-Central gateway	Special functions	Vehicle data	V1.00.001 or higher
SLR (199)	CGW-Central gateway	Special functions	Modification year or model year	V1.00.001 or higher
SLR (199)	CGW-Central gateway	Special functions	All codes	V1.00.001 or higher
SLR (199)	WSS-Weight sensing system	ECU Information		V1.00.001 or higher
SLR (199)	WSS-Weight sensing system	Read Codes		V1.00.001 or higher
SLR (199)	WSS-Weight sensing system	Erase Codes		V1.00.001 or higher
SLR (199)	WSS-Weight sensing system	Live Data		V1.00.001 or higher
SLR (199)	WSS-Weight sensing system	Initial startup	Initial start-up	V1.00.001 or higher
SLR (199)	ACL [ZLB]-Air brake (spoiler) and central locking control unit	ECU Information		V1.00.001 or higher
SLR (199)	ACL [ZLB]-Air brake (spoiler) and central locking control unit	Read Codes		V1.00.001 or higher
SLR (199)	ACL [ZLB]-Air brake (spoiler) and central locking control unit	Erase Codes		V1.00.001 or higher

SLR (199)	ACL [ZLB]-Air brake (spoiler) and central locking control unit	Live Data		V1.00.001 or higher
SLR (199)	ACL [ZLB]-Air brake (spoiler) and central locking control unit	Active Test		V1.00.001 or higher
SLR (199)	BKGS-Brake cooling and gearshift	ECU Information		V1.00.001 or higher
SLR (199)	BKGS-Brake cooling and gearshift	Read Codes		V1.00.001 or higher
SLR (199)	BKGS-Brake cooling and gearshift	Erase Codes		V1.00.001 or higher
SLR (199)	BKGS-Brake cooling and gearshift	Live Data		V1.00.001 or higher
SLR (199)	System diagnosis(CAN)	ECU Information		V1.00.001 or higher
SLR (199)	System diagnosis(CAN)	Read Codes		V1.00.001 or higher
SLR (199)	System diagnosis(CAN)	Erase Codes		V1.00.001 or higher
SLR (199)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher
SLR (199)	ICM-Instrument cluster with maintenance interval display	Read Codes		V1.00.001 or higher
SLR (199)	ICM-Instrument cluster with maintenance interval display	Erase Codes		V1.00.001 or higher
SLR (199)	ICM-Instrument cluster with maintenance interval display	Live Data		V1.00.001 or higher
SLR (199)	ICM-Instrument cluster with maintenance interval display	ECU Information		V1.00.001 or higher

SLR (199)	ICM-Instrument cluster with maintenance interval display	Active Test		V1.00.001 or higher
SLR (199)	SCM [MRM]-Steering column module	ECU Information		V1.00.001 or higher
SLR (199)	SCM [MRM]-Steering column module	Read Codes		V1.00.001 or higher
SLR (199)	SCM [MRM]-Steering column module	Erase Codes		V1.00.001 or higher
SLR (199)	SCM [MRM]-Steering column module	Live Data		V1.00.001 or higher
SLR (199)	SCM [MRM]-Steering column module	Active Test		V1.00.001 or higher
SLR (199)	AUDIO	ECU Information		V1.00.001 or higher
SLR (199)	AUDIO	Read Codes		V1.00.001 or higher
SLR (199)	AUDIO	Erase Codes		V1.00.001 or higher
SLR (199)	AUDIO	Live Data		V1.00.001 or higher
SLR (199)	AUDIO	Active Test		V1.00.001 or higher
SLR (199)	CDC-CD changer	ECU Information		V1.00.001 or higher
SLR (199)	CDC-CD changer	Read Codes		V1.00.001 or higher
SLR (199)	CDC-CD changer	Erase Codes		V1.00.001 or higher
SLR (199)	SOUND- Sound system	ECU Information		V1.00.001 or higher
SLR (199)	SOUND- Sound system	Read Codes		V1.00.001 or higher
SLR (199)	SOUND- Sound system	Erase Codes		V1.00.001 or higher
SLR (199)	SOUND- Sound system	Live Data		V1.00.001 or higher
SLR (199)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	ECU Information		V1.00.001 or higher

SLR (199)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Read Codes		V1.00.001 or higher
SLR (199)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Erase Codes		V1.00.001 or higher
SLR (199)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Live Data		V1.00.001 or higher
SLR (199)	CTEL- Cellular telephone 1 (fixed installation or portable)(D2B)	Active Test		V1.00.001 or higher
SLR (199)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	ECU Information		V1.00.001 or higher
SLR (199)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Read Codes		V1.00.001 or higher
SLR (199)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Erase Codes		V1.00.001 or higher
SLR (199)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Live Data		V1.00.001 or higher
SLR (199)	TELE AID, E-call or cellular telephone-Telematic system(K-wire)	Active Test		V1.00.001 or higher
SLR (199)	DCM-L-Door control module left	ECU Information		V1.00.001 or higher

SLR (199)	DCM-L-Door control module left	Read Codes		V1.00.001 or higher
SLR (199)	DCM-L-Door control module left	Erase Codes		V1.00.001 or higher
SLR (199)	DCM-L-Door control module left	Live Data		V1.00.001 or higher
SLR (199)	DCM-R-Door control module right	ECU Information		V1.00.001 or higher
SLR (199)	DCM-R-Door control module right	Read Codes		V1.00.001 or higher
SLR (199)	DCM-R-Door control module right	Erase Codes		V1.00.001 or higher
SLR (199)	DCM-R-Door control module right	Live Data		V1.00.001 or higher
SLR (199)	AAC-Automatic air conditioning	ECU Information		V1.00.001 or higher
SLR (199)	AAC-Automatic air conditioning	Read Codes		V1.00.001 or higher
SLR (199)	AAC-Automatic air conditioning	Erase Codes		V1.00.001 or higher
SLR (199)	AAC-Automatic air conditioning	Live Data		V1.00.001 or higher
SLR (199)	AAC-Automatic air conditioning	Active Test		V1.00.001 or higher
SLR (199)	AAC-Automatic air conditioning	Control unit adaptations	Normalization of the positioning motors	V1.00.001 or higher
SLR (199)	AAC-Automatic air conditioning	Control unit adaptations	Check of the adjustment range of positioning motors	V1.00.001 or higher
SLR (199)	AAC-Automatic air conditioning	Control unit adaptations	Teach-in of the rotary potentiometer for center nozzle and side outlets	V1.00.001 or higher