

BMW\_V01.30 OIL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Series	Model Series	OIL
1 Series	E81/E82/E87/E88	●
1 Series	F20_F21	●
2 Series	F22_F23	●
2 Series	F45_F46	●
3 Series	E30	●
3 Series	E36	●
3 Series	E46	●
3 Series	E90/E91/E92/E93	●
3 Series	F30_F31_F34_F35	●
3 Series	F80	●
4 Series	F32_F33_F36	●
4 Series	F82_F83	●
5 Series	E28	●
5 Series	E34	●
5 Series	E39	●
5 Series	E60_E61	●
5 Series	F07	●
5 Series	F10_F11_F18	●
5 Series	G38	●
6 Series	E24	●
6 Series	E63_E64	●
6 Series	F06_F12_F13	●
7 Series	E23	●
7 Series	E32	●
7 Series	E38	●
7 Series	E65_E66_E68	●
7 Series	F01_F02_F03_F04	●
8 Series	E31	●
I Series	I01_I12	●
X1 Series	E84	●
X1 Series	F48	●
X3 Series	E83	●
X3 Series	F25	●
X4 Series	F26	●
X5 Series	E53	●
X5 Series	E70	●
X5 Series	F15_F85	●
X6 Series	E71	●
X6 Series	E72	●
X6 Series	F16_F86	●
Z1 Series	E30	●
Z3 Series	E36	●
Z4 Series	E85_E86	●
Z4 Series	E89	●
Z8 Series	E52	●