

| Series | Model | Part | SystemName | FunctionName | SubFunction | Version |
|---------|-----------------|---------|---------------------------------------|------------------|-------------|---------------------|
| 1Series | E81/E82/E87/E88 | Drive | CAS Car access system | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | CAS Car access system | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | CAS Car access system | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | CAS Car access system | Live Data | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | CAS Car access system | Active test | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | CAS Car access system | Special Function | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | DME/DDE(Engine Electronics) | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | DME/DDE(Engine Electronics) | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | DME/DDE(Engine Electronics) | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | DME/DDE(Engine Electronics) | Live Data | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | DME/DDE(Engine Electronics) | Active test | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | DME/DDE(Engine Electronics) | Special Function | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | EGS/AGS(Transmission Control) | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | EGS/AGS(Transmission Control) | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | EGS/AGS(Transmission Control) | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | EGS/AGS(Transmission Control) | Live Data | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | EGS/AGS(Transmission Control) | Active test | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | EGS/AGS(Transmission Control) | Special Function | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | EKPS fuel-pump control | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | EKPS fuel-pump control | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | EKPS fuel-pump control | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | EKPS fuel-pump control | Live Data | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | EKPS fuel-pump control | Active test | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Drive | EKPS fuel-pump control | Special Function | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | AL active front steering(AFS70) | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | AL active front steering(AFS70) | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | AL active front steering(AFS70) | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | AL active front steering(AFS70) | Live Data | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | AL active front steering(AFS70) | Special Function | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | AL active steering | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | AL active steering | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | AL active steering | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | AL active steering | Live Data | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | AL active steering | Special Function | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | EPS Electronic Power Steering | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | EPS Electronic Power Steering | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | EPS Electronic Power Steering | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | EPS Electronic Power Steering | Live Data | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | EPS Electronic Power Steering | Active test | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | EPS Electronic Power Steering | Special Function | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | RDC tyre pressure control | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | RDC tyre pressure control | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | RDC tyre pressure control | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | RDC tyre pressure control | Live Data | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | RDC tyre pressure control | Active test | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Chassis | RDC tyre pressure control | Special Function | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | Airbag-MRS Multiple Restraint system | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | Airbag-MRS Multiple Restraint system | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | Airbag-MRS Multiple Restraint system | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | Airbag-MRS Multiple Restraint system | Live Data | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | Airbag-MRS Multiple Restraint system | Special Function | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | AHM trailer module | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | AHM trailer module | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | AHM trailer module | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | AHM trailer module | Live Data | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | AHM trailer module | Active test | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | AHM trailer module | Special Function | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | AMP amplifier | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | AMP amplifier | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | AMP amplifier | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | AMP amplifier | Live Data | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | AMP amplifier | Active test | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | AMP amplifier | Special Function | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | CA Comfort access system | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | CA Comfort access system | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | CA Comfort access system | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | CA Comfort access system | Live Data | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | CA Comfort access system | Special Function | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | CAN communication analysis | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | CAN communication analysis | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | CAN communication analysis | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | CAN communication analysis | Special Function | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | CCC-A applications | ECU information | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | CCC-A applications | Read codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | CCC-A applications | Erase codes | | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | CCC-A applications | Live Data | | V1.10.001 or higher |

| | | | | | |
|---------|-----------------|---------|--|------------------|---------------------|
| 1Series | E81/E82/E87/E88 | Body | RAD2-GW Gateway | ECU information | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | RAD2-GW Gateway | Read codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | RAD2-GW Gateway | Erase codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | RAD2-GW Gateway | Live Data | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | RAD2-GW Gateway | Active test | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | RAD2-GW Gateway | Special Function | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | RLSS Rain/light solar sensor | ECU information | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | RLSS Rain/light solar sensor | Read codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | RLSS Rain/light solar sensor | Erase codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | RLSS Rain/light solar sensor | Live Data | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | RLSS Rain/light solar sensor | Special Function | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SDARS Satellite tuner | ECU information | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SDARS Satellite tuner | Read codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SDARS Satellite tuner | Erase codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SDARS Satellite tuner | Live Data | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SDARS Satellite tuner | Active test | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SDARS Satellite tuner | Special Function | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SMBF Seat memory,front passenger | ECU information | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SMBF Seat memory,front passenger | Read codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SMBF Seat memory,front passenger | Erase codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SMBF Seat memory,front passenger | Special Function | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | TCU Telematic Control Unit | ECU information | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | TCU Telematic Control Unit | Read codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | TCU Telematic Control Unit | Erase codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | TCU Telematic Control Unit | Live Data | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | TCU Telematic Control Unit | Active test | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | TCU Telematic Control Unit | Special Function | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | ULF Universal charging and hands-free facility | ECU information | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | ULF Universal charging and hands-free facility | Read codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | ULF Universal charging and hands-free facility | Erase codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | ULF Universal charging and hands-free facility | Live Data | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | ULF Universal charging and hands-free facility | Active test | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | ULF Universal charging and hands-free facility | Special Function | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | ULF-SBX-H interface box High | ECU information | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | ULF-SBX-H interface box High | Read codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | ULF-SBX-H interface box High | Erase codes | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | ULF-SBX-H interface box High | Live Data | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | ULF-SBX-H interface box High | Active test | V1.10.001 or higher |
| 1Series | E81/E82/E87/E88 | Body | ULF-SBX-H interface box High | Special Function | V1.10.001 or higher |
| 3Series | E30 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| 3Series | E30 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| 3Series | E30 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| 3Series | E30 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| 3Series | E30 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| 3Series | E30 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| 3Series | E30 | Drive | 2 EML(Engine-Power Control) | ECU information | V1.10.001 or higher |
| 3Series | E30 | Drive | 2 EML(Engine-Power Control) | Read codes | V1.10.001 or higher |
| 3Series | E30 | Drive | 2 EML(Engine-Power Control) | Erase codes | V1.10.001 or higher |
| 3Series | E30 | Drive | 2 EML(Engine-Power Control) | Live Data | V1.10.001 or higher |
| 3Series | E30 | Drive | 2 EML(Engine-Power Control) | Special Function | V1.10.001 or higher |
| 3Series | E30 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| 3Series | E30 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| 3Series | E30 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| 3Series | E30 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| 3Series | E30 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| 3Series | E30 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| 3Series | E30 | Drive | 16 EWS(Electronic car Immobilisation system) | ECU information | V1.10.001 or higher |
| 3Series | E30 | Drive | 16 EWS(Electronic car Immobilisation system) | Read codes | V1.10.001 or higher |
| 3Series | E30 | Drive | 16 EWS(Electronic car Immobilisation system) | Erase codes | V1.10.001 or higher |
| 3Series | E30 | Drive | 16 EWS(Electronic car Immobilisation system) | Live Data | V1.10.001 or higher |
| 3Series | E30 | Drive | 16 EWS(Electronic car Immobilisation system) | Special Function | V1.10.001 or higher |
| 3Series | E30 | Drive | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 3Series | E30 | Drive | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 3Series | E30 | Drive | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 3Series | E30 | Drive | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 3Series | E30 | Drive | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 3Series | E30 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 3Series | E30 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 3Series | E30 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 3Series | E30 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 3Series | E30 | Chassis | 17 GSR(Cruise control) | Active test | V1.10.001 or higher |
| 3Series | E30 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|---------------------------------------|------------------|---------------------|
| 3Series | E30 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 3Series | E30 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 3Series | E30 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 3Series | E30 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 3Series | E30 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 3Series | E30 | Chassis | 56 ABS/ASC tester | ECU information | V1.10.001 or higher |
| 3Series | E30 | Chassis | 56 ABS/ASC tester | Read codes | V1.10.001 or higher |
| 3Series | E30 | Chassis | 56 ABS/ASC tester | Erase codes | V1.10.001 or higher |
| 3Series | E30 | Chassis | 56 ABS/ASC tester | Live Data | V1.10.001 or higher |
| 3Series | E30 | Chassis | 56 ABS/ASC tester | Special Function | V1.10.001 or higher |
| 3Series | E30 | Body | 13 KOM(Instrument cluster) | ECU information | V1.10.001 or higher |
| 3Series | E30 | Body | 13 KOM(Instrument cluster) | Read codes | V1.10.001 or higher |
| 3Series | E30 | Body | 13 KOM(Instrument cluster) | Erase codes | V1.10.001 or higher |
| 3Series | E30 | Body | 13 KOM(Instrument cluster) | Special Function | V1.10.001 or higher |
| 3Series | E30 | Body | 19 AB(airbag) | ECU information | V1.10.001 or higher |
| 3Series | E30 | Body | 19 AB(airbag) | Read codes | V1.10.001 or higher |
| 3Series | E30 | Body | 19 AB(airbag) | Erase codes | V1.10.001 or higher |
| 3Series | E30 | Body | 19 AB(airbag) | Live Data | V1.10.001 or higher |
| 3Series | E30 | Body | 19 AB(airbag) | Special Function | V1.10.001 or higher |
| 3Series | E30 | Body | 20 SPM/SM(Seat/mirror memory) | ECU information | V1.10.001 or higher |
| 3Series | E30 | Body | 20 SPM/SM(Seat/mirror memory) | Read codes | V1.10.001 or higher |
| 3Series | E30 | Body | 20 SPM/SM(Seat/mirror memory) | Erase codes | V1.10.001 or higher |
| 3Series | E30 | Body | 20 SPM/SM(Seat/mirror memory) | Live Data | V1.10.001 or higher |
| 3Series | E30 | Body | 20 SPM/SM(Seat/mirror memory) | Special Function | V1.10.001 or higher |
| 3Series | E30 | Body | 30 IHK(Heater-A/C system) | ECU information | V1.10.001 or higher |
| 3Series | E30 | Body | 30 IHK(Heater-A/C system) | Read codes | V1.10.001 or higher |
| 3Series | E30 | Body | 30 IHK(Heater-A/C system) | Erase codes | V1.10.001 or higher |
| 3Series | E30 | Body | 30 IHK(Heater-A/C system) | Live Data | V1.10.001 or higher |
| 3Series | E30 | Body | 30 IHK(Heater-A/C system) | Special Function | V1.10.001 or higher |
| 3Series | E30 | Body | 55 ADS(Throttle-valve control) | ECU information | V1.10.001 or higher |
| 3Series | E30 | Body | 55 ADS(Throttle-valve control) | Read codes | V1.10.001 or higher |
| 3Series | E30 | Body | 55 ADS(Throttle-valve control) | Erase codes | V1.10.001 or higher |
| 3Series | E30 | Body | 55 ADS(Throttle-valve control) | Live Data | V1.10.001 or higher |
| 3Series | E30 | Body | 55 ADS(Throttle-valve control) | Special Function | V1.10.001 or higher |
| 3Series | E46 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| 3Series | E46 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| 3Series | E46 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| 3Series | E46 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| 3Series | E46 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| 3Series | E46 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| 3Series | E46 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| 3Series | E46 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| 3Series | E46 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| 3Series | E46 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| 3Series | E46 | Drive | EKP Fuel pump | ECU information | V1.10.001 or higher |
| 3Series | E46 | Drive | EKP Fuel pump | Read codes | V1.10.001 or higher |
| 3Series | E46 | Drive | EKP Fuel pump | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Drive | EKP Fuel pump | Live Data | V1.10.001 or higher |
| 3Series | E46 | Drive | EKP Fuel pump | Active test | V1.10.001 or higher |
| 3Series | E46 | Drive | EKP Fuel pump | Special Function | V1.10.001 or higher |
| 3Series | E46 | Drive | EWS Vehicle immobilizer | ECU information | V1.10.001 or higher |
| 3Series | E46 | Drive | EWS Vehicle immobilizer | Read codes | V1.10.001 or higher |
| 3Series | E46 | Drive | EWS Vehicle immobilizer | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Drive | EWS Vehicle immobilizer | Live Data | V1.10.001 or higher |
| 3Series | E46 | Drive | EWS Vehicle immobilizer | Active test | V1.10.001 or higher |
| 3Series | E46 | Drive | EWS Vehicle immobilizer | Special Function | V1.10.001 or higher |
| 3Series | E46 | Drive | GR Cruise control | ECU information | V1.10.001 or higher |
| 3Series | E46 | Drive | GR Cruise control | Read codes | V1.10.001 or higher |
| 3Series | E46 | Drive | GR Cruise control | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Drive | GR Cruise control | Live Data | V1.10.001 or higher |
| 3Series | E46 | Drive | GR Cruise control | Active test | V1.10.001 or higher |
| 3Series | E46 | Drive | GR Cruise control | Special Function | V1.10.001 or higher |
| 3Series | E46 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| 3Series | E46 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| 3Series | E46 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| 3Series | E46 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| 3Series | E46 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| 3Series | E46 | Chassis | DDS Deflation Detection System | ECU information | V1.10.001 or higher |
| 3Series | E46 | Chassis | DDS Deflation Detection System | Read codes | V1.10.001 or higher |
| 3Series | E46 | Chassis | DDS Deflation Detection System | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Chassis | DDS Deflation Detection System | Live Data | V1.10.001 or higher |
| 3Series | E46 | Chassis | DDS Deflation Detection System | Special Function | V1.10.001 or higher |
| 3Series | E46 | Chassis | LWS Steering angle sensor | ECU information | V1.10.001 or higher |
| 3Series | E46 | Chassis | LWS Steering angle sensor | Read codes | V1.10.001 or higher |
| 3Series | E46 | Chassis | LWS Steering angle sensor | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Chassis | LWS Steering angle sensor | Live Data | V1.10.001 or higher |
| 3Series | E46 | Chassis | LWS Steering angle sensor | Special Function | V1.10.001 or higher |
| 3Series | E46 | Chassis | MFL Multifunction steering wheel I | ECU information | V1.10.001 or higher |
| 3Series | E46 | Chassis | MFL Multifunction steering wheel I | Read codes | V1.10.001 or higher |
| 3Series | E46 | Chassis | MFL Multifunction steering wheel I | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--------------------------------------|------------------|---------------------|
| 3Series | E46 | Chassis | MFL Multifunction steering wheel I | Live Data | V1.10.001 or higher |
| 3Series | E46 | Chassis | MFL Multifunction steering wheel I | Special Function | V1.10.001 or higher |
| 3Series | E46 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 3Series | E46 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 3Series | E46 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 3Series | E46 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 3Series | E46 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | Airbag-MRS Multiple Restraint system | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | Airbag-MRS Multiple Restraint system | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | Airbag-MRS Multiple Restraint system | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | Airbag-MRS Multiple Restraint system | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | Airbag-MRS Multiple Restraint system | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | AHL Adaptive directional headlights | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | AHL Adaptive directional headlights | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | AHL Adaptive directional headlights | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | AHL Adaptive directional headlights | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | AHL Adaptive directional headlights | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | AHL Adaptive directional headlights | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | AIC Automatic interval control | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | AIC Automatic interval control | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | AIC Automatic interval control | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | AIC Automatic interval control | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | AIC Automatic interval control | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | BIT Basis Interface Telephone | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | BIT Basis Interface Telephone | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | BIT Basis Interface Telephone | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | BIT Basis Interface Telephone | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | BIT Basis Interface Telephone | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | BM On-board monitor | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | BM On-board monitor | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | BM On-board monitor | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | BM On-board monitor | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | BM On-board monitor | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | BM On-board monitor | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | IHKA Heater/automatic A/C control | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | IHKA Heater/automatic A/C control | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | IHKA Heater/automatic A/C control | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | IHKA Heater/automatic A/C control | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | IHKA Heater/automatic A/C control | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | IHKA Heater/automatic A/C control | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | IHKR Heater and A/C control | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | IHKR Heater and A/C control | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | IHKR Heater and A/C control | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | IHKR Heater and A/C control | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | IHKR Heater and A/C control | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | IHKR Heater and A/C control | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | JBIT Japan Basis Interface Telephone | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | JBIT Japan Basis Interface Telephone | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | JBIT Japan Basis Interface Telephone | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | KOM Instrument cluster | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | KOM Instrument cluster | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | KOM Instrument cluster | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | KOM Instrument cluster | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | KOM Instrument cluster | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | KOM Instrument cluster | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | LSZ Light switching centre | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | LSZ Light switching centre | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | LSZ Light switching centre | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | LSZ Light switching centre | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | LSZ Light switching centre | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | LSZ Light switching centre | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | MIR Multi-Information Radio | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | MIR Multi-Information Radio | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | MIR Multi-Information Radio | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | MIR Multi-Information Radio | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | MIR Multi-Information Radio | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | NAJ Navigation computer,Japan | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | NAJ Navigation computer,Japan | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | NAJ Navigation computer,Japan | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | NAJ Navigation computer,Japan | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | NAJ Navigation computer,Japan | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | NAJ Navigation computer,Japan | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | NAR Navigation radio | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | NAR Navigation radio | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | NAR Navigation radio | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | NAR Navigation radio | Active test | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|-------------------------------------|------------------|---------------------|
| 3Series | E46 | Body | NAR Navigation radio | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | NAV Navigation computer | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | NAV Navigation computer | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | NAV Navigation computer | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | NAV Navigation computer | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | NAV Navigation computer | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | NAV Navigation computer | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | NAV Navigation computer MKII | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | NAV Navigation computer MKII | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | NAV Navigation computer MKII | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | NAV Navigation computer MKII | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | NAV Navigation computer MKII | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | RLS Rain/Light Sensor | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | RLS Rain/Light Sensor | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | RLS Rain/Light Sensor | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | RLS Rain/Light Sensor | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | RLS Rain/Light Sensor | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | SES language-input system | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | SES language-input system | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | SES language-input system | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | SES language-input system | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | SES language-input system | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | SHD Sliding/tilting sunroof | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | SHD Sliding/tilting sunroof | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | SHD Sliding/tilting sunroof | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | SHD Sliding/tilting sunroof | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | SHD Sliding/tilting sunroof | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | SHD Sliding/tilting sunroof | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | SMB Entrance aid,passenger | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | SMB Entrance aid,passenger | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | SMB Entrance aid,passenger | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | SMB Entrance aid,passenger | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | SMB Entrance aid,passenger | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | SMF Entrance aid,driver | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | SMF Entrance aid,driver | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | SMF Entrance aid,driver | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | SMF Entrance aid,driver | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | SMF Entrance aid,driver | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | SMF Entrance aid,driver | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | SMF Seat memory,driver | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | SMF Seat memory,driver | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | SMF Seat memory,driver | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | SMF Seat memory,driver | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | SMF Seat memory,driver | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | SMF Seat memory,driver | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | SPMBT Mirror memory,passenger | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | SPMBT Mirror memory,passenger | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | SPMBT Mirror memory,passenger | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | SPMBT Mirror memory,passenger | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | SPMBT Mirror memory,passenger | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | SPMBT Mirror memory,passenger | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | SPMFT Mirror memory,driver | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | SPMFT Mirror memory,driver | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | SPMFT Mirror memory,driver | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | SPMFT Mirror memory,driver | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | SPMFT Mirror memory,driver | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | SPMFT Mirror memory,driver | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | SZM Switching centre,centre console | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | SZM Switching centre,centre console | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | SZM Switching centre,centre console | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | SZM Switching centre,centre console | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | SZM Switching centre,centre console | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | SZM Switching centre,centre console | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | TCU Telematic Control Unit | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | TCU Telematic Control Unit | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | TCU Telematic Control Unit | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | TCU Telematic Control Unit | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | TCU Telematic Control Unit | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | TCU Telematic Control Unit | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | TEL Telephone interface | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | TEL Telephone interface | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|-----------------|---------|--|------------------|---------------------|
| 3Series | E46 | Body | TEL Telephone interface | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | TEL Telephone interface | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | TEL Telephone interface | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | ULF Universal charging and hands-free facility | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | ULF Universal charging and hands-free facility | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | ULF Universal charging and hands-free facility | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | ULF Universal charging and hands-free facility | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | ULF Universal charging and hands-free facility | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | ULF Universal charging and hands-free facility | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | URS Rollover sensor | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | URS Rollover sensor | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | URS Rollover sensor | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | URS Rollover sensor | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | URS Rollover sensor | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | VID Video module | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | VID Video module | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | VID Video module | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | VID Video module | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | VID Video module III | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | VID Video module III | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | VID Video module III | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | VID Video module III | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | ZKE Central body electronics | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | ZKE Central body electronics | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | ZKE Central body electronics | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | ZKE Central body electronics | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | ZKE Central body electronics | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | ZKE Central body electronics | Special Function | V1.10.001 or higher |
| 3Series | E46 | Body | ZUH Auxiliary heater | ECU information | V1.10.001 or higher |
| 3Series | E46 | Body | ZUH Auxiliary heater | Read codes | V1.10.001 or higher |
| 3Series | E46 | Body | ZUH Auxiliary heater | Erase codes | V1.10.001 or higher |
| 3Series | E46 | Body | ZUH Auxiliary heater | Live Data | V1.10.001 or higher |
| 3Series | E46 | Body | ZUH Auxiliary heater | Active test | V1.10.001 or higher |
| 3Series | E46 | Body | ZUH Auxiliary heater | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | DKG Twin-clutch gearbox | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | DKG Twin-clutch gearbox | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | DKG Twin-clutch gearbox | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | DKG Twin-clutch gearbox | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | DKG Twin-clutch gearbox | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | DKG Twin-clutch gearbox | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | VTG Transfer case | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | VTG Transfer case | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | VTG Transfer case | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | VTG Transfer case | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Drive | VTG Transfer case | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | ACC Active Cruise Control | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|-----------------|---------|--------------------------------------|------------------|---------------------|
| 3Series | E90/E91/E92/E93 | Chassis | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | AL active front steering(AFS70) | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | AL active front steering(AFS70) | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | AL active front steering(AFS70) | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | AL active front steering(AFS70) | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | AL active front steering(AFS70) | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | EDC Damper Control | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | EDC Damper Control | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | EDC Damper Control | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | EDC Damper Control | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | EDC Damper Control | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | EDC Damper Control | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | LDM Longitudinal Dynamics Management | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | LDM Longitudinal Dynamics Management | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | LDM Longitudinal Dynamics Management | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | LDM Longitudinal Dynamics Management | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | LDM Longitudinal Dynamics Management | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | Airbag-MRS Multiple Restraint system | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | Airbag-MRS Multiple Restraint system | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | Airbag-MRS Multiple Restraint system | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | Airbag-MRS Multiple Restraint system | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | Airbag-MRS Multiple Restraint system | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | AMP amplifier | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | AMP amplifier | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | AMP amplifier | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | AMP amplifier | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | AMP amplifier | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | AMP amplifier | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CA Comfort access system | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CA Comfort access system | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CA Comfort access system | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CA Comfort access system | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CA Comfort access system | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CAN communication analysis | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CAN communication analysis | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CAN communication analysis | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-A applications | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-A applications | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-A applications | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-A applications | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-A applications | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-A applications | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-ANT Aerial tuner | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-ANT Aerial tuner | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-ANT Aerial tuner | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-ANT Aerial tuner | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-ANT Aerial tuner | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-ANT Aerial tuner | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-ASK Audio system controller | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-ASK Audio system controller | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-ASK Audio system controller | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-ASK Audio system controller | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-ASK Audio system controller | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-ASK Audio system controller | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-BO User interface | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-BO User interface | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-BO User interface | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | CCC-BO User interface | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|-----------------|-------|--|------------------|---------------------|
| 3Series | E90/E91/E92/E93 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD2-BO User interface | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD2-BO User interface | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD2-BO User interface | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD2-BO User interface | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD2-BO User interface | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD2-BO User interface | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD2-GW Gateway | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD2-GW Gateway | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD2-GW Gateway | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD2-GW Gateway | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD2-GW Gateway | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RAD2-GW Gateway | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RLSS Rain/light solar sensor | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RLSS Rain/light solar sensor | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RLSS Rain/light solar sensor | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RLSS Rain/light solar sensor | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | RLSS Rain/light solar sensor | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SDARS Satellite tuner | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SDARS Satellite tuner | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | TCU Telematic Control Unit | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | TCU Telematic Control Unit | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | TCU Telematic Control Unit | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | TCU Telematic Control Unit | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | TCU Telematic Control Unit | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | TCU Telematic Control Unit | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | ULF Universal charging and hands-free facility | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | ULF Universal charging and hands-free facility | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | ULF Universal charging and hands-free facility | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | ULF Universal charging and hands-free facility | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | ULF Universal charging and hands-free facility | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | ULF Universal charging and hands-free facility | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | ULF-SBX-H interface box High | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | ULF-SBX-H interface box High | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | ULF-SBX-H interface box High | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | ULF-SBX-H interface box High | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | ULF-SBX-H interface box High | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | ULF-SBX-H interface box High | Special Function | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | VM Video module | Active test | V1.10.001 or higher |
| 3Series | E90/E91/E92/E93 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 5Series | E28 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| 5Series | E28 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| 5Series | E28 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| 5Series | E28 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| 5Series | E28 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| 5Series | E28 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| 5Series | E28 | Drive | 2 EML(Engine-Power Control) | ECU information | V1.10.001 or higher |
| 5Series | E28 | Drive | 2 EML(Engine-Power Control) | Read codes | V1.10.001 or higher |
| 5Series | E28 | Drive | 2 EML(Engine-Power Control) | Erase codes | V1.10.001 or higher |
| 5Series | E28 | Drive | 2 EML(Engine-Power Control) | Live Data | V1.10.001 or higher |
| 5Series | E28 | Drive | 2 EML(Engine-Power Control) | Active test | V1.10.001 or higher |
| 5Series | E28 | Drive | 2 EML(Engine-Power Control) | Special Function | V1.10.001 or higher |
| 5Series | E28 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| 5Series | E28 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| 5Series | E28 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| 5Series | E28 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| 5Series | E28 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| 5Series | E28 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| 5Series | E28 | Drive | 16 EWS(Electronic car Immobilisation system) | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--|------------------|---------------------|
| 5Series | E28 | Drive | 16 EWS(Electronic car Immobilisation system) | Read codes | V1.10.001 or higher |
| 5Series | E28 | Drive | 16 EWS(Electronic car Immobilisation system) | Erase codes | V1.10.001 or higher |
| 5Series | E28 | Drive | 16 EWS(Electronic car Immobilisation system) | Live Data | V1.10.001 or higher |
| 5Series | E28 | Drive | 16 EWS(Electronic car Immobilisation system) | Special Function | V1.10.001 or higher |
| 5Series | E28 | Drive | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 5Series | E28 | Drive | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 5Series | E28 | Drive | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 5Series | E28 | Drive | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 5Series | E28 | Drive | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 5Series | E28 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 5Series | E28 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 5Series | E28 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 5Series | E28 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 5Series | E28 | Chassis | 17 GSR(Cruise control) | Active test | V1.10.001 or higher |
| 5Series | E28 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 5Series | E28 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 5Series | E28 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 5Series | E28 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 5Series | E28 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 5Series | E28 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 5Series | E28 | Chassis | 56 ABS/ASC tester | ECU information | V1.10.001 or higher |
| 5Series | E28 | Chassis | 56 ABS/ASC tester | Read codes | V1.10.001 or higher |
| 5Series | E28 | Chassis | 56 ABS/ASC tester | Erase codes | V1.10.001 or higher |
| 5Series | E28 | Chassis | 56 ABS/ASC tester | Live Data | V1.10.001 or higher |
| 5Series | E28 | Chassis | 56 ABS/ASC tester | Special Function | V1.10.001 or higher |
| 5Series | E28 | Body | 13 KOM(Instrument cluster) | ECU information | V1.10.001 or higher |
| 5Series | E28 | Body | 13 KOM(Instrument cluster) | Read codes | V1.10.001 or higher |
| 5Series | E28 | Body | 13 KOM(Instrument cluster) | Erase codes | V1.10.001 or higher |
| 5Series | E28 | Body | 13 KOM(Instrument cluster) | Special Function | V1.10.001 or higher |
| 5Series | E28 | Body | 19 AB(airbag) | ECU information | V1.10.001 or higher |
| 5Series | E28 | Body | 19 AB(airbag) | Read codes | V1.10.001 or higher |
| 5Series | E28 | Body | 19 AB(airbag) | Erase codes | V1.10.001 or higher |
| 5Series | E28 | Body | 19 AB(airbag) | Live Data | V1.10.001 or higher |
| 5Series | E28 | Body | 19 AB(airbag) | Special Function | V1.10.001 or higher |
| 5Series | E28 | Body | 20 SPM/SM(Seat/mirror memory) | ECU information | V1.10.001 or higher |
| 5Series | E28 | Body | 20 SPM/SM(Seat/mirror memory) | Read codes | V1.10.001 or higher |
| 5Series | E28 | Body | 20 SPM/SM(Seat/mirror memory) | Erase codes | V1.10.001 or higher |
| 5Series | E28 | Body | 20 SPM/SM(Seat/mirror memory) | Live Data | V1.10.001 or higher |
| 5Series | E28 | Body | 20 SPM/SM(Seat/mirror memory) | Special Function | V1.10.001 or higher |
| 5Series | E28 | Body | 30 IHK(Heater-A/C system) | ECU information | V1.10.001 or higher |
| 5Series | E28 | Body | 30 IHK(Heater-A/C system) | Read codes | V1.10.001 or higher |
| 5Series | E28 | Body | 30 IHK(Heater-A/C system) | Erase codes | V1.10.001 or higher |
| 5Series | E28 | Body | 30 IHK(Heater-A/C system) | Live Data | V1.10.001 or higher |
| 5Series | E28 | Body | 30 IHK(Heater-A/C system) | Special Function | V1.10.001 or higher |
| 5Series | E28 | Body | 55 ADS(Throttle-valve control) | ECU information | V1.10.001 or higher |
| 5Series | E28 | Body | 55 ADS(Throttle-valve control) | Read codes | V1.10.001 or higher |
| 5Series | E28 | Body | 55 ADS(Throttle-valve control) | Erase codes | V1.10.001 or higher |
| 5Series | E28 | Body | 55 ADS(Throttle-valve control) | Live Data | V1.10.001 or higher |
| 5Series | E28 | Body | 55 ADS(Throttle-valve control) | Special Function | V1.10.001 or higher |
| 5Series | E34 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| 5Series | E34 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| 5Series | E34 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| 5Series | E34 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| 5Series | E34 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| 5Series | E34 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| 5Series | E34 | Drive | 2 EML(Engine-Power Control) | ECU information | V1.10.001 or higher |
| 5Series | E34 | Drive | 2 EML(Engine-Power Control) | Read codes | V1.10.001 or higher |
| 5Series | E34 | Drive | 2 EML(Engine-Power Control) | Erase codes | V1.10.001 or higher |
| 5Series | E34 | Drive | 2 EML(Engine-Power Control) | Live Data | V1.10.001 or higher |
| 5Series | E34 | Drive | 2 EML(Engine-Power Control) | Special Function | V1.10.001 or higher |
| 5Series | E34 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| 5Series | E34 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| 5Series | E34 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| 5Series | E34 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| 5Series | E34 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| 5Series | E34 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| 5Series | E34 | Drive | 16 EWS(Electronic car Immobilisation system) | ECU information | V1.10.001 or higher |
| 5Series | E34 | Drive | 16 EWS(Electronic car Immobilisation system) | Read codes | V1.10.001 or higher |
| 5Series | E34 | Drive | 16 EWS(Electronic car Immobilisation system) | Erase codes | V1.10.001 or higher |
| 5Series | E34 | Drive | 16 EWS(Electronic car Immobilisation system) | Live Data | V1.10.001 or higher |
| 5Series | E34 | Drive | 16 EWS(Electronic car Immobilisation system) | Special Function | V1.10.001 or higher |
| 5Series | E34 | Drive | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 5Series | E34 | Drive | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 5Series | E34 | Drive | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 5Series | E34 | Drive | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 5Series | E34 | Drive | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 5Series | E34 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 5Series | E34 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 5Series | E34 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 5Series | E34 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 5Series | E34 | Chassis | 17 GSR(Cruise control) | Active test | V1.10.001 or higher |
| 5Series | E34 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 5Series | E34 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|---------------------------------------|------------------|---------------------|
| 5Series | E34 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 5Series | E34 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 5Series | E34 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 5Series | E34 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 5Series | E34 | Chassis | 56 ABS/ASC tester | ECU information | V1.10.001 or higher |
| 5Series | E34 | Chassis | 56 ABS/ASC tester | Read codes | V1.10.001 or higher |
| 5Series | E34 | Chassis | 56 ABS/ASC tester | Erase codes | V1.10.001 or higher |
| 5Series | E34 | Chassis | 56 ABS/ASC tester | Live Data | V1.10.001 or higher |
| 5Series | E34 | Chassis | 56 ABS/ASC tester | Special Function | V1.10.001 or higher |
| 5Series | E34 | Body | 13 KOM(Instrument cluster) | ECU information | V1.10.001 or higher |
| 5Series | E34 | Body | 13 KOM(Instrument cluster) | Read codes | V1.10.001 or higher |
| 5Series | E34 | Body | 13 KOM(Instrument cluster) | Erase codes | V1.10.001 or higher |
| 5Series | E34 | Body | 13 KOM(Instrument cluster) | Live Data | V1.10.001 or higher |
| 5Series | E34 | Body | 13 KOM(Instrument cluster) | Special Function | V1.10.001 or higher |
| 5Series | E34 | Body | 19 AB(airbag) | ECU information | V1.10.001 or higher |
| 5Series | E34 | Body | 19 AB(airbag) | Read codes | V1.10.001 or higher |
| 5Series | E34 | Body | 19 AB(airbag) | Erase codes | V1.10.001 or higher |
| 5Series | E34 | Body | 19 AB(airbag) | Live Data | V1.10.001 or higher |
| 5Series | E34 | Body | 19 AB(airbag) | Special Function | V1.10.001 or higher |
| 5Series | E34 | Body | 20 SPM/SM(Seat/mirror memory) | ECU information | V1.10.001 or higher |
| 5Series | E34 | Body | 20 SPM/SM(Seat/mirror memory) | Read codes | V1.10.001 or higher |
| 5Series | E34 | Body | 20 SPM/SM(Seat/mirror memory) | Erase codes | V1.10.001 or higher |
| 5Series | E34 | Body | 20 SPM/SM(Seat/mirror memory) | Live Data | V1.10.001 or higher |
| 5Series | E34 | Body | 20 SPM/SM(Seat/mirror memory) | Special Function | V1.10.001 or higher |
| 5Series | E34 | Body | 30 IHK(Heater-A/C system) | ECU information | V1.10.001 or higher |
| 5Series | E34 | Body | 30 IHK(Heater-A/C system) | Read codes | V1.10.001 or higher |
| 5Series | E34 | Body | 30 IHK(Heater-A/C system) | Erase codes | V1.10.001 or higher |
| 5Series | E34 | Body | 30 IHK(Heater-A/C system) | Live Data | V1.10.001 or higher |
| 5Series | E34 | Body | 30 IHK(Heater-A/C system) | Special Function | V1.10.001 or higher |
| 5Series | E34 | Body | 55 ADS(Throttle-valve control) | ECU information | V1.10.001 or higher |
| 5Series | E34 | Body | 55 ADS(Throttle-valve control) | Read codes | V1.10.001 or higher |
| 5Series | E34 | Body | 55 ADS(Throttle-valve control) | Erase codes | V1.10.001 or higher |
| 5Series | E34 | Body | 55 ADS(Throttle-valve control) | Live Data | V1.10.001 or higher |
| 5Series | E34 | Body | 55 ADS(Throttle-valve control) | Special Function | V1.10.001 or higher |
| 5Series | E39 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| 5Series | E39 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| 5Series | E39 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| 5Series | E39 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| 5Series | E39 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| 5Series | E39 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| 5Series | E39 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| 5Series | E39 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| 5Series | E39 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| 5Series | E39 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| 5Series | E39 | Drive | EWS Vehicle immobilizer | ECU information | V1.10.001 or higher |
| 5Series | E39 | Drive | EWS Vehicle immobilizer | Read codes | V1.10.001 or higher |
| 5Series | E39 | Drive | EWS Vehicle immobilizer | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Drive | EWS Vehicle immobilizer | Live Data | V1.10.001 or higher |
| 5Series | E39 | Drive | EWS Vehicle immobilizer | Active test | V1.10.001 or higher |
| 5Series | E39 | Drive | EWS Vehicle immobilizer | Special Function | V1.10.001 or higher |
| 5Series | E39 | Drive | GR Cruise control | ECU information | V1.10.001 or higher |
| 5Series | E39 | Drive | GR Cruise control | Read codes | V1.10.001 or higher |
| 5Series | E39 | Drive | GR Cruise control | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Drive | GR Cruise control | Live Data | V1.10.001 or higher |
| 5Series | E39 | Drive | GR Cruise control | Active test | V1.10.001 or higher |
| 5Series | E39 | Drive | GR Cruise control | Special Function | V1.10.001 or higher |
| 5Series | E39 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| 5Series | E39 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| 5Series | E39 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| 5Series | E39 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| 5Series | E39 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| 5Series | E39 | Chassis | DDS Deflation Detection System | ECU information | V1.10.001 or higher |
| 5Series | E39 | Chassis | DDS Deflation Detection System | Read codes | V1.10.001 or higher |
| 5Series | E39 | Chassis | DDS Deflation Detection System | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Chassis | DDS Deflation Detection System | Live Data | V1.10.001 or higher |
| 5Series | E39 | Chassis | DDS Deflation Detection System | Special Function | V1.10.001 or higher |
| 5Series | E39 | Chassis | EDC Damper Control | ECU information | V1.10.001 or higher |
| 5Series | E39 | Chassis | EDC Damper Control | Read codes | V1.10.001 or higher |
| 5Series | E39 | Chassis | EDC Damper Control | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Chassis | EDC Damper Control | Live Data | V1.10.001 or higher |
| 5Series | E39 | Chassis | EDC Damper Control | Active test | V1.10.001 or higher |
| 5Series | E39 | Chassis | EDC Damper Control | Special Function | V1.10.001 or higher |
| 5Series | E39 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 5Series | E39 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| 5Series | E39 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 5Series | E39 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 5Series | E39 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 5Series | E39 | Chassis | LEW Steering-angle sensor | ECU information | V1.10.001 or higher |
| 5Series | E39 | Chassis | LEW Steering-angle sensor | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--|------------------|---------------------|
| 5Series | E39 | Chassis | LEW Steering-angle sensor | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Chassis | LEW Steering-angle sensor | Live Data | V1.10.001 or higher |
| 5Series | E39 | Chassis | LEW Steering-angle sensor | Special Function | V1.10.001 or higher |
| 5Series | E39 | Chassis | MFL Multifunction steering wheel I | ECU information | V1.10.001 or higher |
| 5Series | E39 | Chassis | MFL Multifunction steering wheel I | Read codes | V1.10.001 or higher |
| 5Series | E39 | Chassis | MFL Multifunction steering wheel I | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Chassis | MFL Multifunction steering wheel I | Live Data | V1.10.001 or higher |
| 5Series | E39 | Chassis | MFL Multifunction steering wheel I | Special Function | V1.10.001 or higher |
| 5Series | E39 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 5Series | E39 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 5Series | E39 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 5Series | E39 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 5Series | E39 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | Airbag-MRS Multiple Restraint system | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | Airbag-MRS Multiple Restraint system | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | Airbag-MRS Multiple Restraint system | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | Airbag-MRS Multiple Restraint system | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | Airbag-MRS Multiple Restraint system | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | AIC Automatic interval control | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | AIC Automatic interval control | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | AIC Automatic interval control | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | AIC Automatic interval control | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | AIC Automatic interval control | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | BIT Basis Interface Telephone | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | BIT Basis Interface Telephone | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | BIT Basis Interface Telephone | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | BM On-board monitor | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | BM On-board monitor | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | BM On-board monitor | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | BM On-board monitor | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | BM On-board monitor | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | BM On-board monitor | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | DSP Digital Sound Processor | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | DSP Digital Sound Processor | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | DSP Digital Sound Processor | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | DSP Digital Sound Processor | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | DSP Digital Sound Processor | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | GM base module | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | GM base module | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | GM base module | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | GM base module | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | GM base module | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | GM base module | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | GSR Cruise control | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | GSR Cruise control | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | GSR Cruise control | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | GSR Cruise control | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | GSR Cruise control | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | HKM Boot-lid module | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | HKM Boot-lid module | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | HKM Boot-lid module | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | HKM Boot-lid module | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | IHKA Heater/automatic A/C control | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | IHKA Heater/automatic A/C control | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | IHKA Heater/automatic A/C control | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | IHKA Heater/automatic A/C control | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | IHKA Heater/automatic A/C control | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | IHKA Heater/automatic A/C control | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | IHKR Heater and A/C control | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | IHKR Heater and A/C control | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | IHKR Heater and A/C control | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | IHKR Heater and A/C control | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | IHKR Heater and A/C control | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | IHKR Heater and A/C control | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | IHR Integrated heater control | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | IHR Integrated heater control | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | IHR Integrated heater control | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | IHR Integrated heater control | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | IHR Integrated heater control | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | IHR Integrated heater control | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | IKE Instrument-cluster electronics | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | IKE Instrument-cluster electronics | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | IKE Instrument-cluster electronics | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | IKE Instrument-cluster electronics | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | IKE Instrument-cluster electronics | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | IRIS Integrated Radio-Information System | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | IRIS Integrated Radio-Information System | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | IRIS Integrated Radio-Information System | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | IRIS Integrated Radio-Information System | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | IRIS Integrated Radio-Information System | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | JBIT Japan Basis Interface Telephone | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | JBIT Japan Basis Interface Telephone | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 5Series | E39 | Body | JBIT Japan Basis Interface Telephone | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | JBIT Japan Basis Interface Telephone | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | JBIT Japan Basis Interface Telephone | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | KOM Instrument cluster | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | KOM Instrument cluster | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | KOM Instrument cluster | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | KOM Instrument cluster | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | KOM Instrument cluster | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | KOM Instrument cluster | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | LCM Light Check Module | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | LCM Light Check Module | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | LCM Light Check Module | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | LCM Light Check Module | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | LCM Light Check Module | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | LCM Light Check Module | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | LCM Light Check Module IV | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | LCM Light Check Module IV | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | LCM Light Check Module IV | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | LCM Light Check Module IV | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | LCM Light Check Module IV | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | LCM Light Check Module IV | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | LRA Automatic headlight vertical aim control | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | LRA Automatic headlight vertical aim control | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | LRA Automatic headlight vertical aim control | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | LRA Automatic headlight vertical aim control | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | LRA Automatic headlight vertical aim control | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | LRA Automatic headlight vertical aim control | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | MID Multi Information Display | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | MID Multi Information Display | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | MID Multi Information Display | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | MID Multi Information Display | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | NAJ Navigation computer,Japan | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | NAJ Navigation computer,Japan | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | NAJ Navigation computer,Japan | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | NAJ Navigation computer,Japan | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | NAJ Navigation computer,Japan | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | NAJ Navigation computer,Japan | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | NAV Navigation computer | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | NAV Navigation computer | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | NAV Navigation computer | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | NAV Navigation computer | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | NAV Navigation computer | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | NAV Navigation computer | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | RLS Rain/Light Sensor | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | RLS Rain/Light Sensor | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | RLS Rain/Light Sensor | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | RLS Rain/Light Sensor | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | RLS Rain/Light Sensor | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | SES language-input system | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | SES language-input system | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | SES language-input system | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | SES language-input system | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | SES language-input system | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | SM/LSM Seat/steering-column memory | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | SM/LSM Seat/steering-column memory | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | SM/LSM Seat/steering-column memory | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | STH park heating | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | STH park heating | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | STH park heating | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | STH park heating | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | STH park heating | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | STH park heating | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | SZM Switching centre,centre console | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | SZM Switching centre,centre console | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | SZM Switching centre,centre console | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | SZM Switching centre,centre console | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | SZM Switching centre,centre console | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | SZM Switching centre,centre console | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | TCU Telematic Control Unit | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | TCU Telematic Control Unit | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | TCU Telematic Control Unit | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|--|------------------|---------------------|
| 5Series | E39 | Body | TCU Telematic Control Unit | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | TCU Telematic Control Unit | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | TCU Telematic Control Unit | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | TEL Telephone interface | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | TEL Telephone interface | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | TEL Telephone interface | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | ULF Universal charging and hands-free facility | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | ULF Universal charging and hands-free facility | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | ULF Universal charging and hands-free facility | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | ULF Universal charging and hands-free facility | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | ULF Universal charging and hands-free facility | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | ULF Universal charging and hands-free facility | Special Function | V1.10.001 or higher |
| 5Series | E39 | Body | ZKE Central body electronics | ECU information | V1.10.001 or higher |
| 5Series | E39 | Body | ZKE Central body electronics | Read codes | V1.10.001 or higher |
| 5Series | E39 | Body | ZKE Central body electronics | Erase codes | V1.10.001 or higher |
| 5Series | E39 | Body | ZKE Central body electronics | Live Data | V1.10.001 or higher |
| 5Series | E39 | Body | ZKE Central body electronics | Active test | V1.10.001 or higher |
| 5Series | E39 | Body | ZKE Central body electronics | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | VTC Valvetronic | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | VTC Valvetronic | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | VTC2 Valvetronic 2 | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | VTC2 Valvetronic 2 | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | VTG Transfer case | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | VTG Transfer case | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | VTG Transfer case | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | VTG Transfer case | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Drive | VTG Transfer case | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ACC2 Active cruise control 2 | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ACC2 Active cruise control 2 | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ACC2 Active cruise control 2 | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ACC2 Active cruise control 2 | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | AL active front steering(AFS70) | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | AL active front steering(AFS70) | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | AL active front steering(AFS70) | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | AL active front steering(AFS70) | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | AL active front steering(AFS70) | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ARS Dynamic Drive 2 | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|---|------------------|---------------------|
| 5Series | E60/E61 | Chassis | ARS Dynamic Drive 2 | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ARS Dynamic Drive 2 | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ARS Dynamic Drive 2 | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ARS Dynamic Drive 2 | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | ARS Dynamic Drive 2 | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | EDC Damper Control | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | EDC Damper Control | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | EDC Damper Control | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | EDC Damper Control | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | EDC Damper Control | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | EDC Damper Control | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | LDM Longitudinal Dynamics Management | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | LDM Longitudinal Dynamics Management | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | LDM Longitudinal Dynamics Management | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | LDM Longitudinal Dynamics Management | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | LDM Longitudinal Dynamics Management | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | LRR Long-range sensor | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | LRR Long-range sensor | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | LRR Long-range sensor | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | LRR Long-range sensor | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-MRS Multiple Restraint system | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-MRS Multiple Restraint system | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-MRS Multiple Restraint system | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-MRS Multiple Restraint system | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-MRS Multiple Restraint system | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AHL Adaptive directional headlights | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AHL Adaptive directional headlights | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AHL Adaptive directional headlights | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AHL Adaptive directional headlights | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AHL Adaptive directional headlights | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AHL Adaptive directional headlights | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ALBBF active backrest width,front passenger | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ALBBF active backrest width,front passenger | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ALBBF active backrest width,front passenger | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ALBBF active backrest width,front passenger | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ALBBF active backrest width,front passenger | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ALBBF active backrest width,front passenger | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ALBFA active backrest width,driver | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ALBFA active backrest width,driver | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ALBFA active backrest width,driver | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ALBFA active backrest width,driver | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ALBFA active backrest width,driver | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ALBFA active backrest width,driver | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AMP amplifier | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AMP amplifier | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AMP amplifier | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AMP amplifier | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AMP amplifier | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | AMP amplifier | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CA Comfort access system | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CA Comfort access system | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CA Comfort access system | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CA Comfort access system | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CA Comfort access system | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CAN communication analysis | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CAN communication analysis | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CAN communication analysis | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-A applications | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-A applications | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-A applications | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-A applications | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-A applications | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-A applications | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-ANT Aerial tuner | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-ANT Aerial tuner | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|---------------------------------|------------------|---------------------|
| 5Series | E60/E61 | Body | CCC-ANT Aerial tuner | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-ANT Aerial tuner | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-ANT Aerial tuner | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-ANT Aerial tuner | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-ASK Audio system controller | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-ASK Audio system controller | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-ASK Audio system controller | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-ASK Audio system controller | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-ASK Audio system controller | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-ASK Audio system controller | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-BO User interface | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-BO User interface | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-BO User interface | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-BO User interface | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-BO User interface | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-BO User interface | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-GW Gateway | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-GW Gateway | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-GW Gateway | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-GW Gateway | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-GW Gateway | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CCC-GW Gateway | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CDC CD changer | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CDC CD changer | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CDC CD changer | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CDC CD changer | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CDC CD changer | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CHAMP-BO User interface | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CHAMP-BO User interface | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CHAMP-BO User interface | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CHAMP-BO User interface | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CHAMP-BO User interface | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CHAMP-BO User interface | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CHAMP-GW Gateway | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CHAMP-GW Gateway | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CHAMP-GW Gateway | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CHAMP-GW Gateway | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CHAMP-GW Gateway | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CHAMP-GW Gateway | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CIC-GW Gateway | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CIC-GW Gateway | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CIC-GW Gateway | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CIC-GW Gateway | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CIC-GW Gateway | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CNAV Navigation system,China | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CNAV Navigation system,China | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CNAV Navigation system,China | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CNAV Navigation system,China | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CNAV Navigation system,China | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CNAV Navigation system,China | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CON Controller | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DAB Digital tuner | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DAB Digital tuner | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DAB Digital tuner | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DAB Digital tuner | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DAB Digital tuner | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DAB Digital tuner | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DWA anti-theft alarm system | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DWA anti-theft alarm system | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DWA anti-theft alarm system | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DWA anti-theft alarm system | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|-----------------------------------|------------------|---------------------|
| 5Series | E60/E61 | Body | DWA anti-theft alarm system | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | DWA anti-theft alarm system | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FBI Flexible bus interface | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FBI Flexible bus interface | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FBI Flexible bus interface | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FBI Flexible bus interface | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FBI Flexible bus interface | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FD Rear-compartment display | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FD Rear-compartment display | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FD Rear-compartment display | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FD Rear-compartment display | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FD Rear-compartment display | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FD Rear-compartment display | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FD2 Rear-compartment display 2 | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FD2 Rear-compartment display 2 | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FD2 Rear-compartment display 2 | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FD2 Rear-compartment display 2 | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FD2 Rear-compartment display 2 | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FD2 Rear-compartment display 2 | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | IHKA Heater/automatic A/C control | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | IHKA Heater/automatic A/C control | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | IHKA Heater/automatic A/C control | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | IHKA Heater/automatic A/C control | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | IHKA Heater/automatic A/C control | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | IHKA Heater/automatic A/C control | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | JNAV Navigation system,Japan | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | JNAV Navigation system,Japan | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | JNAV Navigation system,Japan | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | JNAV Navigation system,Japan | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | JNAV Navigation system,Japan | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | JNAV Navigation system,Japan | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KBM Body basic module | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KBM Body basic module | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KBM Body basic module | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KBM Body basic module | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KBM Body basic module | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KBM Body basic module | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KGM Body Gateway Module | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KGM Body Gateway Module | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KGM Body Gateway Module | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KGM Body Gateway Module | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KGM Body Gateway Module | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KGM Body Gateway Module | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KHI Headset interface | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KHI Headset interface | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KHI Headset interface | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KHI Headset interface | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KHI Headset interface | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KHI Headset interface | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KNAV Navigation system,Korea | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KNAV Navigation system,Korea | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KNAV Navigation system,Korea | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KNAV Navigation system,Korea | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KNAV Navigation system,Korea | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | KNAV Navigation system,Korea | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 Light module 2 | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 Light module 2 | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 Light module 2 | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 Light module 2 | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|---|------------------|---------------------|
| 5Series | E60/E61 | Body | LM2 Light module 2 | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 Light module 2 | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 Light module 2 with adaptive headlight | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 Light module 2 with adaptive headlight | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 Light module 2 with adaptive headlight | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 Light module 2 with adaptive headlight | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 Light module 2 with adaptive headlight | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 Light module 2 with adaptive headlight | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-BO User interface | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-BO User interface | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-BO User interface | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-BO User interface | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-BO User interface | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-BO User interface | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-GW Gateway | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-GW Gateway | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-GW Gateway | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-GW Gateway | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-GW Gateway | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-GW Gateway | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-NAV Navigation system | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-NAV Navigation system | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-NAV Navigation system | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-NAV Navigation system | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-NAV Navigation system | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | M-ASK-NAV Navigation system | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | MOST system analysis | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | MOST system analysis | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | MOST system analysis | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | MOST system analysis | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | MPM Micro-power module | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | MPM Micro-power module | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | MPM Micro-power module | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | MPM Micro-power module | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | MPM Micro-power module | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | MPM Micro-power module | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | NVE Night Vision Electronics | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | NVE Night Vision Electronics | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | NVE Night Vision Electronics | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | NVE Night Vision Electronics | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | NVE Night Vision Electronics | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | NVE Night Vision Electronics | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | NVK Night Vision camera | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | NVK Night Vision camera | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | NVK Night Vision camera | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | NVK Night Vision camera | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | NVK Night Vision camera | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | NVK Night Vision camera | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RLS Rain/Light Sensor | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RLS Rain/Light Sensor | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RLS Rain/Light Sensor | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RLS Rain/Light Sensor | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RLS Rain/Light Sensor | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RLSS Rain/light solar sensor | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RLSS Rain/light solar sensor | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RLSS Rain/light solar sensor | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RLSS Rain/light solar sensor | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RLSS Rain/light solar sensor | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RSE Rear Seat Entertainment | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RSE Rear Seat Entertainment | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RSE Rear Seat Entertainment | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RSE Rear Seat Entertainment | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RSE Rear Seat Entertainment | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | RSE Rear Seat Entertainment | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SBSL Satellite,B-pillar,left | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SBSL Satellite,B-pillar,left | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SBSL Satellite,B-pillar,left | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SBSL Satellite,B-pillar,left | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SBSL Satellite,B-pillar,left | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SBSR Satellite,B-pillar,right | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SBSR Satellite,B-pillar,right | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|---|------------------|---------------------|
| 5Series | E60/E61 | Body | SBSR Satellite,B-pillar,right | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SBSR Satellite,B-pillar,right | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SBSR Satellite,B-pillar,right | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SBSR Satellite,B-pillar,right | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SDARS Satellite tuner | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SDARS Satellite tuner | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SDARS Satellite tuner | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SDARS Satellite tuner | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SDARS Satellite tuner | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SDARS Satellite tuner | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SFZ Satellite vehicle centre | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SFZ Satellite vehicle centre | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SFZ Satellite vehicle centre | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SFZ Satellite vehicle centre | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SFZ Satellite vehicle centre | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SGM-ZGM Safety and Gateway Module(ZGM) | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SGM-ZGM Safety and Gateway Module(ZGM) | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SGM-ZGM Safety and Gateway Module(ZGM) | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SGM-ZGM Safety and Gateway Module(ZGM) | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SHD Sliding/tilting sunroof | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SHD Sliding/tilting sunroof | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SHD Sliding/tilting sunroof | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SHD Sliding/tilting sunroof | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SHD Sliding/tilting sunroof | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SHD Sliding/tilting sunroof | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SHZH Independent/auxiliary heater | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SHZH Independent/auxiliary heater | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SHZH Independent/auxiliary heater | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SHZH Independent/auxiliary heater | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SHZH Independent/auxiliary heater | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SHZH Independent/auxiliary heater | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SVS Language processing system | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SVS Language processing system | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SVS Language processing system | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SVS Language processing system | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SVS Language processing system | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SZL Steering column switch centre 2 | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SZL Steering column switch centre 2 | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SZL Steering column switch centre 2 | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SZL Steering column switch centre 2 | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SZL Steering column switch centre 2 | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SZL Steering column switch centre 2 | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SZM Switching centre,centre console | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SZM Switching centre,centre console | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SZM Switching centre,centre console | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SZM Switching centre,centre console | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SZM Switching centre,centre console | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | SZM Switching centre,centre console | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TCU Telematic Control Unit | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TCU Telematic Control Unit | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TCU Telematic Control Unit | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TCU Telematic Control Unit | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TCU Telematic Control Unit | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TCU Telematic Control Unit | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|--|------------------|---------------------|
| 5Series | E60/E61 | Body | TLC Lane Departure Warning | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TLC Lane Departure Warning | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TLC Lane Departure Warning | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TLC Lane Departure Warning | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TLC Lane Departure Warning | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TLC Lane Departure Warning | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TMBF Door module,front passenger | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TMBF Door module,front passenger | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TMBF Door module,front passenger | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TMBF Door module,front passenger | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TMBF Door module,front passenger | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TMBF Door module,front passenger | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TMFA Door module,driver | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TMFA Door module,driver | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TMFA Door module,driver | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TMFA Door module,driver | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | TMFA Door module,driver | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ULF Universal charging and hands-free facility | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ULF Universal charging and hands-free facility | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ULF Universal charging and hands-free facility | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ULF Universal charging and hands-free facility | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ULF Universal charging and hands-free facility | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ULF Universal charging and hands-free facility | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ULF-SBX-H interface box High | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ULF-SBX-H interface box High | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ULF-SBX-H interface box High | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ULF-SBX-H interface box High | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ULF-SBX-H interface box High | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | ULF-SBX-H interface box High | Special Function | V1.10.001 or higher |
| 5Series | E60/E61 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 5Series | E60/E61 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 5Series | E60/E61 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 5Series | E60/E61 | Body | VM Video module | Active test | V1.10.001 or higher |
| 5Series | E60/E61 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 6Series | E24 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| 6Series | E24 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| 6Series | E24 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| 6Series | E24 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| 6Series | E24 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| 6Series | E24 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| 6Series | E24 | Drive | 2 EML(Engine-Power Control) | ECU information | V1.10.001 or higher |
| 6Series | E24 | Drive | 2 EML(Engine-Power Control) | Read codes | V1.10.001 or higher |
| 6Series | E24 | Drive | 2 EML(Engine-Power Control) | Erase codes | V1.10.001 or higher |
| 6Series | E24 | Drive | 2 EML(Engine-Power Control) | Live Data | V1.10.001 or higher |
| 6Series | E24 | Drive | 2 EML(Engine-Power Control) | Special Function | V1.10.001 or higher |
| 6Series | E24 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| 6Series | E24 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| 6Series | E24 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| 6Series | E24 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| 6Series | E24 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| 6Series | E24 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| 6Series | E24 | Drive | 16 EWS(Electronic car Immobilisation system) | ECU information | V1.10.001 or higher |
| 6Series | E24 | Drive | 16 EWS(Electronic car Immobilisation system) | Read codes | V1.10.001 or higher |
| 6Series | E24 | Drive | 16 EWS(Electronic car Immobilisation system) | Erase codes | V1.10.001 or higher |
| 6Series | E24 | Drive | 16 EWS(Electronic car Immobilisation system) | Live Data | V1.10.001 or higher |
| 6Series | E24 | Drive | 16 EWS(Electronic car Immobilisation system) | Special Function | V1.10.001 or higher |
| 6Series | E24 | Drive | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 6Series | E24 | Drive | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 6Series | E24 | Drive | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 6Series | E24 | Drive | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 6Series | E24 | Drive | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 6Series | E24 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 6Series | E24 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 6Series | E24 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 6Series | E24 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 6Series | E24 | Chassis | 17 GSR(Cruise control) | Active test | V1.10.001 or higher |
| 6Series | E24 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 6Series | E24 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 6Series | E24 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 6Series | E24 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 6Series | E24 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 6Series | E24 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 6Series | E24 | Chassis | 56 ABS/ASC tester | ECU information | V1.10.001 or higher |
| 6Series | E24 | Chassis | 56 ABS/ASC tester | Read codes | V1.10.001 or higher |
| 6Series | E24 | Chassis | 56 ABS/ASC tester | Erase codes | V1.10.001 or higher |
| 6Series | E24 | Chassis | 56 ABS/ASC tester | Live Data | V1.10.001 or higher |
| 6Series | E24 | Chassis | 56 ABS/ASC tester | Special Function | V1.10.001 or higher |
| 6Series | E24 | Body | 13 KOM(Instrument cluster) | ECU information | V1.10.001 or higher |
| 6Series | E24 | Body | 13 KOM(Instrument cluster) | Read codes | V1.10.001 or higher |
| 6Series | E24 | Body | 13 KOM(Instrument cluster) | Erase codes | V1.10.001 or higher |
| 6Series | E24 | Body | 13 KOM(Instrument cluster) | Special Function | V1.10.001 or higher |
| 6Series | E24 | Body | 19 AB(airbag) | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|---------------------------------------|------------------|---------------------|
| 6Series | E24 | Body | 19 AB(airbag) | Read codes | V1.10.001 or higher |
| 6Series | E24 | Body | 19 AB(airbag) | Erase codes | V1.10.001 or higher |
| 6Series | E24 | Body | 19 AB(airbag) | Live Data | V1.10.001 or higher |
| 6Series | E24 | Body | 19 AB(airbag) | Special Function | V1.10.001 or higher |
| 6Series | E24 | Body | 20 SPM/SM(Seat/mirror memory) | ECU information | V1.10.001 or higher |
| 6Series | E24 | Body | 20 SPM/SM(Seat/mirror memory) | Read codes | V1.10.001 or higher |
| 6Series | E24 | Body | 20 SPM/SM(Seat/mirror memory) | Erase codes | V1.10.001 or higher |
| 6Series | E24 | Body | 20 SPM/SM(Seat/mirror memory) | Live Data | V1.10.001 or higher |
| 6Series | E24 | Body | 20 SPM/SM(Seat/mirror memory) | Special Function | V1.10.001 or higher |
| 6Series | E24 | Body | 30 IHK(Heater-A/C system) | ECU information | V1.10.001 or higher |
| 6Series | E24 | Body | 30 IHK(Heater-A/C system) | Read codes | V1.10.001 or higher |
| 6Series | E24 | Body | 30 IHK(Heater-A/C system) | Erase codes | V1.10.001 or higher |
| 6Series | E24 | Body | 30 IHK(Heater-A/C system) | Live Data | V1.10.001 or higher |
| 6Series | E24 | Body | 30 IHK(Heater-A/C system) | Special Function | V1.10.001 or higher |
| 6Series | E24 | Body | 55 ADS(Throttle-valve control) | ECU information | V1.10.001 or higher |
| 6Series | E24 | Body | 55 ADS(Throttle-valve control) | Read codes | V1.10.001 or higher |
| 6Series | E24 | Body | 55 ADS(Throttle-valve control) | Erase codes | V1.10.001 or higher |
| 6Series | E24 | Body | 55 ADS(Throttle-valve control) | Live Data | V1.10.001 or higher |
| 6Series | E24 | Body | 55 ADS(Throttle-valve control) | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | VTC Valvetronic | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | VTC Valvetronic | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | VTC2 Valvetronic 2 | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Drive | VTC2 Valvetronic 2 | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ACC2 Active cruise control 2 | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ACC2 Active cruise control 2 | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ACC2 Active cruise control 2 | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ACC2 Active cruise control 2 | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | AL active front steering(AFS70) | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | AL active front steering(AFS70) | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | AL active front steering(AFS70) | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | AL active front steering(AFS70) | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | AL active front steering(AFS70) | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ARS Dynamic drive | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ARS Dynamic drive | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ARS Dynamic drive | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ARS Dynamic drive | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ARS Dynamic drive | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ARS Dynamic drive | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ARS Dynamic Drive 2 | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ARS Dynamic Drive 2 | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ARS Dynamic Drive 2 | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ARS Dynamic Drive 2 | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|--------------------------------------|------------------|---------------------|
| 6Series | E63/E64 | Chassis | ARS Dynamic Drive 2 | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | ARS Dynamic Drive 2 | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | EDC Damper Control | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | EDC Damper Control | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | EDC Damper Control | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | EDC Damper Control | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | EDC Damper Control | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | EDC Damper Control | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | LDM Longitudinal Dynamics Management | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | LDM Longitudinal Dynamics Management | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | LDM Longitudinal Dynamics Management | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | LDM Longitudinal Dynamics Management | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | LDM Longitudinal Dynamics Management | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | LRR Long-range sensor | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | LRR Long-range sensor | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | LRR Long-range sensor | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | LRR Long-range sensor | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-MRS Multiple Restraint system | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-MRS Multiple Restraint system | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-MRS Multiple Restraint system | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-MRS Multiple Restraint system | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-MRS Multiple Restraint system | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | AHL Adaptive directional headlights | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | AHL Adaptive directional headlights | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | AHL Adaptive directional headlights | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | AHL Adaptive directional headlights | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | AHL Adaptive directional headlights | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | AHL Adaptive directional headlights | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | AMP amplifier | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | AMP amplifier | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | AMP amplifier | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | AMP amplifier | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | AMP amplifier | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | AMP amplifier | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CA Comfort access system | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CA Comfort access system | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CA Comfort access system | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CA Comfort access system | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CA Comfort access system | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CAN communication analysis | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CAN communication analysis | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CAN communication analysis | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-A applications | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-A applications | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-A applications | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-A applications | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-A applications | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-A applications | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-ANT Aerial tuner | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-ANT Aerial tuner | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-ANT Aerial tuner | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-ANT Aerial tuner | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-ANT Aerial tuner | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-ANT Aerial tuner | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-ASK Audio system controller | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-ASK Audio system controller | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-ASK Audio system controller | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-ASK Audio system controller | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-ASK Audio system controller | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-ASK Audio system controller | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-BO User interface | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-BO User interface | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-BO User interface | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-BO User interface | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-BO User interface | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-BO User interface | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-GW Gateway | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-GW Gateway | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-GW Gateway | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-GW Gateway | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-GW Gateway | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CCC-GW Gateway | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CDC CD changer | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CDC CD changer | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CDC CD changer | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CDC CD changer | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CDC CD changer | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|-----------------------------------|------------------|---------------------|
| 6Series | E63/E64 | Body | CHAMP-BO User interface | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CHAMP-BO User interface | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CHAMP-BO User interface | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CHAMP-BO User interface | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CHAMP-BO User interface | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CHAMP-BO User interface | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CHAMP-GW Gateway | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CHAMP-GW Gateway | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CHAMP-GW Gateway | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CHAMP-GW Gateway | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CHAMP-GW Gateway | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CHAMP-GW Gateway | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CIC-GW Gateway | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CIC-GW Gateway | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CIC-GW Gateway | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CIC-GW Gateway | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CIC-GW Gateway | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CNAV Navigation system,China | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CNAV Navigation system,China | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CNAV Navigation system,China | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CNAV Navigation system,China | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CNAV Navigation system,China | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CNAV Navigation system,China | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CON Controller | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DAB Digital tuner | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DAB Digital tuner | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DAB Digital tuner | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DAB Digital tuner | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DAB Digital tuner | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DAB Digital tuner | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DWA anti-theft alarm system | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DWA anti-theft alarm system | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DWA anti-theft alarm system | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DWA anti-theft alarm system | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DWA anti-theft alarm system | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | DWA anti-theft alarm system | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | IBOC Digital tuner US | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | IBOC Digital tuner US | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | IBOC Digital tuner US | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | IBOC Digital tuner US | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | IBOC Digital tuner US | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | IHKA Heater/automatic A/C control | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | IHKA Heater/automatic A/C control | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|---|------------------|---------------------|
| 6Series | E63/E64 | Body | IHKA Heater/automatic A/C control | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | IHKA Heater/automatic A/C control | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | IHKA Heater/automatic A/C control | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | IHKA Heater/automatic A/C control | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | JNAV Navigation system,Japan | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | JNAV Navigation system,Japan | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | JNAV Navigation system,Japan | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | JNAV Navigation system,Japan | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | JNAV Navigation system,Japan | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | JNAV Navigation system,Japan | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KBM Body basic module | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KBM Body basic module | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KBM Body basic module | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KBM Body basic module | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KBM Body basic module | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KBM Body basic module | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KGM Body Gateway Module | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KGM Body Gateway Module | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KGM Body Gateway Module | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KGM Body Gateway Module | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KGM Body Gateway Module | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KGM Body Gateway Module | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KNAV Navigation system,Korea | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KNAV Navigation system,Korea | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KNAV Navigation system,Korea | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KNAV Navigation system,Korea | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KNAV Navigation system,Korea | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | KNAV Navigation system,Korea | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 Light module 2 | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 Light module 2 | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 Light module 2 | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 Light module 2 | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 Light module 2 | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 Light module 2 | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 AHL light module 2 with adaptive headlight | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 AHL light module 2 with adaptive headlight | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 AHL light module 2 with adaptive headlight | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 AHL light module 2 with adaptive headlight | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 AHL light module 2 with adaptive headlight | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 AHL light module 2 with adaptive headlight | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | M-ASK-BO User interface | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | M-ASK-BO User interface | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | M-ASK-BO User interface | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | M-ASK-BO User interface | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | M-ASK-BO User interface | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | M-ASK-BO User interface | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | M-ASK-GW Gateway | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | M-ASK-GW Gateway | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | M-ASK-GW Gateway | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | M-ASK-GW Gateway | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | M-ASK-GW Gateway | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | M-ASK-GW Gateway | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | MOST system analysis | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | MOST system analysis | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | MOST system analysis | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | MOST system analysis | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | MPM Micro-power module | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | MPM Micro-power module | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | MPM Micro-power module | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | MPM Micro-power module | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | MPM Micro-power module | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | MPM Micro-power module | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | NVE Night Vision Electronics | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | NVE Night Vision Electronics | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | NVE Night Vision Electronics | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | NVE Night Vision Electronics | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | NVE Night Vision Electronics | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | NVE Night Vision Electronics | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | NVK Night Vision camera | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | NVK Night Vision camera | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | NVK Night Vision camera | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|---|------------------|---------------------|
| 6Series | E63/E64 | Body | NVK Night Vision camera | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | NVK Night Vision camera | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | NVK Night Vision camera | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | RLS Rain/Light Sensor | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | RLS Rain/Light Sensor | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | RLS Rain/Light Sensor | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | RLS Rain/Light Sensor | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | RLS Rain/Light Sensor | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | RLS Rain/Light Sensor | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | RLSS Rain/light solar sensor | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | RLSS Rain/light solar sensor | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | RLSS Rain/light solar sensor | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | RLSS Rain/light solar sensor | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | RLSS Rain/light solar sensor | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | RLSS Rain/light solar sensor | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SBSL Satellite,B-pillar,left | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SBSL Satellite,B-pillar,left | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SBSL Satellite,B-pillar,left | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SBSL Satellite,B-pillar,left | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SBSL Satellite,B-pillar,left | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SBSR Satellite,B-pillar,right | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SBSR Satellite,B-pillar,right | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SBSR Satellite,B-pillar,right | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SBSR Satellite,B-pillar,right | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SBSR Satellite,B-pillar,right | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SBSR Satellite,B-pillar,right | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SDARS Satellite tuner | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SDARS Satellite tuner | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SDARS Satellite tuner | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SDARS Satellite tuner | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SDARS Satellite tuner | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SDARS Satellite tuner | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SFZ Satellite vehicle centre | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SFZ Satellite vehicle centre | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SFZ Satellite vehicle centre | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SFZ Satellite vehicle centre | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SFZ Satellite vehicle centre | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SGM-ZGM Safety and Gateway Module(ZGM) | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SGM-ZGM Safety and Gateway Module(ZGM) | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SGM-ZGM Safety and Gateway Module(ZGM) | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SGM-ZGM Safety and Gateway Module(ZGM) | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SHZH Independent/auxiliary heater | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SHZH Independent/auxiliary heater | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SHZH Independent/auxiliary heater | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SHZH Independent/auxiliary heater | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SHZH Independent/auxiliary heater | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SHZH Independent/auxiliary heater | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SMF Seat memory,driver | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SMF Seat memory,driver | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SMF Seat memory,driver | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SMF Seat memory,driver | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SMF Seat memory,driver | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SMF Seat memory,driver | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SVS Language processing system | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SVS Language processing system | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SVS Language processing system | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SVS Language processing system | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SVS Language processing system | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SZL Steering column switch centre 2 | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SZL Steering column switch centre 2 | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SZL Steering column switch centre 2 | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SZL Steering column switch centre 2 | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SZL Steering column switch centre 2 | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SZL Steering column switch centre 2 | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SZM Switching centre,centre console | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|--|------------------|---------------------|
| 6Series | E63/E64 | Body | SZM Switching centre,centre console | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SZM Switching centre,centre console | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SZM Switching centre,centre console | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SZM Switching centre,centre console | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | SZM Switching centre,centre console | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TCU Telematic Control Unit | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TCU Telematic Control Unit | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TCU Telematic Control Unit | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TCU Telematic Control Unit | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TCU Telematic Control Unit | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TCU Telematic Control Unit | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TLC Lane Departure Warning | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TLC Lane Departure Warning | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TLC Lane Departure Warning | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TLC Lane Departure Warning | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TLC Lane Departure Warning | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TLC Lane Departure Warning | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TMBF Door module,front passenger | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TMBF Door module,front passenger | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TMBF Door module,front passenger | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TMBF Door module,front passenger | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TMBF Door module,front passenger | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TMBF Door module,front passenger | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TMFA Door module,driver | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TMFA Door module,driver | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TMFA Door module,driver | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TMFA Door module,driver | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | TMFA Door module,driver | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | ULF Universal charging and hands-free facility | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | ULF Universal charging and hands-free facility | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | ULF Universal charging and hands-free facility | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | ULF Universal charging and hands-free facility | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | ULF Universal charging and hands-free facility | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | ULF Universal charging and hands-free facility | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | ULF-SBX-H interface box High | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | ULF-SBX-H interface box High | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | ULF-SBX-H interface box High | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | ULF-SBX-H interface box High | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | ULF-SBX-H interface box High | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | ULF-SBX-H interface box High | Special Function | V1.10.001 or higher |
| 6Series | E63/E64 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 6Series | E63/E64 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 6Series | E63/E64 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 6Series | E63/E64 | Body | VM Video module | Active test | V1.10.001 or higher |
| 6Series | E63/E64 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 7Series | E23 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| 7Series | E23 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| 7Series | E23 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| 7Series | E23 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| 7Series | E23 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| 7Series | E23 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| 7Series | E23 | Drive | 2 EML(Engine-Power Control) | ECU information | V1.10.001 or higher |
| 7Series | E23 | Drive | 2 EML(Engine-Power Control) | Read codes | V1.10.001 or higher |
| 7Series | E23 | Drive | 2 EML(Engine-Power Control) | Erase codes | V1.10.001 or higher |
| 7Series | E23 | Drive | 2 EML(Engine-Power Control) | Live Data | V1.10.001 or higher |
| 7Series | E23 | Drive | 2 EML(Engine-Power Control) | Special Function | V1.10.001 or higher |
| 7Series | E23 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| 7Series | E23 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| 7Series | E23 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| 7Series | E23 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| 7Series | E23 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| 7Series | E23 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| 7Series | E23 | Drive | 16 EWS(Electronic car Immobilisation system) | ECU information | V1.10.001 or higher |
| 7Series | E23 | Drive | 16 EWS(Electronic car Immobilisation system) | Read codes | V1.10.001 or higher |
| 7Series | E23 | Drive | 16 EWS(Electronic car Immobilisation system) | Erase codes | V1.10.001 or higher |
| 7Series | E23 | Drive | 16 EWS(Electronic car Immobilisation system) | Live Data | V1.10.001 or higher |
| 7Series | E23 | Drive | 16 EWS(Electronic car Immobilisation system) | Special Function | V1.10.001 or higher |
| 7Series | E23 | Drive | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 7Series | E23 | Drive | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 7Series | E23 | Drive | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 7Series | E23 | Drive | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 7Series | E23 | Drive | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 7Series | E23 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 7Series | E23 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 7Series | E23 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 7Series | E23 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 7Series | E23 | Chassis | 17 GSR(Cruise control) | Active test | V1.10.001 or higher |
| 7Series | E23 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 7Series | E23 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 7Series | E23 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 7Series | E23 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 7Series | E23 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--|------------------|---------------------|
| 7Series | E23 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 7Series | E23 | Chassis | 56 ABS/ASC tester | ECU information | V1.10.001 or higher |
| 7Series | E23 | Chassis | 56 ABS/ASC tester | Read codes | V1.10.001 or higher |
| 7Series | E23 | Chassis | 56 ABS/ASC tester | Erase codes | V1.10.001 or higher |
| 7Series | E23 | Chassis | 56 ABS/ASC tester | Live Data | V1.10.001 or higher |
| 7Series | E23 | Chassis | 56 ABS/ASC tester | Special Function | V1.10.001 or higher |
| 7Series | E23 | Body | 13 KOM(Instrument cluster) | ECU information | V1.10.001 or higher |
| 7Series | E23 | Body | 13 KOM(Instrument cluster) | Read codes | V1.10.001 or higher |
| 7Series | E23 | Body | 13 KOM(Instrument cluster) | Erase codes | V1.10.001 or higher |
| 7Series | E23 | Body | 13 KOM(Instrument cluster) | Live Data | V1.10.001 or higher |
| 7Series | E23 | Body | 13 KOM(Instrument cluster) | Special Function | V1.10.001 or higher |
| 7Series | E23 | Body | 19 AB(airbag) | ECU information | V1.10.001 or higher |
| 7Series | E23 | Body | 19 AB(airbag) | Read codes | V1.10.001 or higher |
| 7Series | E23 | Body | 19 AB(airbag) | Erase codes | V1.10.001 or higher |
| 7Series | E23 | Body | 19 AB(airbag) | Live Data | V1.10.001 or higher |
| 7Series | E23 | Body | 19 AB(airbag) | Special Function | V1.10.001 or higher |
| 7Series | E23 | Body | 20 SPM/SM(Seat/mirror memory) | ECU information | V1.10.001 or higher |
| 7Series | E23 | Body | 20 SPM/SM(Seat/mirror memory) | Read codes | V1.10.001 or higher |
| 7Series | E23 | Body | 20 SPM/SM(Seat/mirror memory) | Erase codes | V1.10.001 or higher |
| 7Series | E23 | Body | 20 SPM/SM(Seat/mirror memory) | Live Data | V1.10.001 or higher |
| 7Series | E23 | Body | 20 SPM/SM(Seat/mirror memory) | Special Function | V1.10.001 or higher |
| 7Series | E23 | Body | 30 IHK(Heater-A/C system) | ECU information | V1.10.001 or higher |
| 7Series | E23 | Body | 30 IHK(Heater-A/C system) | Read codes | V1.10.001 or higher |
| 7Series | E23 | Body | 30 IHK(Heater-A/C system) | Erase codes | V1.10.001 or higher |
| 7Series | E23 | Body | 30 IHK(Heater-A/C system) | Live Data | V1.10.001 or higher |
| 7Series | E23 | Body | 30 IHK(Heater-A/C system) | Special Function | V1.10.001 or higher |
| 7Series | E23 | Body | 55 ADS(Throttle-valve control) | ECU information | V1.10.001 or higher |
| 7Series | E23 | Body | 55 ADS(Throttle-valve control) | Read codes | V1.10.001 or higher |
| 7Series | E23 | Body | 55 ADS(Throttle-valve control) | Erase codes | V1.10.001 or higher |
| 7Series | E23 | Body | 55 ADS(Throttle-valve control) | Live Data | V1.10.001 or higher |
| 7Series | E23 | Body | 55 ADS(Throttle-valve control) | Special Function | V1.10.001 or higher |
| 7Series | E32 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| 7Series | E32 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| 7Series | E32 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| 7Series | E32 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| 7Series | E32 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| 7Series | E32 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| 7Series | E32 | Drive | 2 EML(Engine-Power Control) | ECU information | V1.10.001 or higher |
| 7Series | E32 | Drive | 2 EML(Engine-Power Control) | Read codes | V1.10.001 or higher |
| 7Series | E32 | Drive | 2 EML(Engine-Power Control) | Erase codes | V1.10.001 or higher |
| 7Series | E32 | Drive | 2 EML(Engine-Power Control) | Live Data | V1.10.001 or higher |
| 7Series | E32 | Drive | 2 EML(Engine-Power Control) | Special Function | V1.10.001 or higher |
| 7Series | E32 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| 7Series | E32 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| 7Series | E32 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| 7Series | E32 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| 7Series | E32 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| 7Series | E32 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| 7Series | E32 | Drive | 16 EWS(Electronic car Immobilisation system) | ECU information | V1.10.001 or higher |
| 7Series | E32 | Drive | 16 EWS(Electronic car Immobilisation system) | Read codes | V1.10.001 or higher |
| 7Series | E32 | Drive | 16 EWS(Electronic car Immobilisation system) | Erase codes | V1.10.001 or higher |
| 7Series | E32 | Drive | 16 EWS(Electronic car Immobilisation system) | Live Data | V1.10.001 or higher |
| 7Series | E32 | Drive | 16 EWS(Electronic car Immobilisation system) | Special Function | V1.10.001 or higher |
| 7Series | E32 | Drive | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 7Series | E32 | Drive | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 7Series | E32 | Drive | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 7Series | E32 | Drive | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 7Series | E32 | Drive | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 7Series | E32 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 7Series | E32 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 7Series | E32 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 7Series | E32 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 7Series | E32 | Chassis | 17 GSR(Cruise control) | Active test | V1.10.001 or higher |
| 7Series | E32 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 7Series | E32 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 7Series | E32 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 7Series | E32 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 7Series | E32 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 7Series | E32 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 7Series | E32 | Chassis | 56 ABS/ASC tester | ECU information | V1.10.001 or higher |
| 7Series | E32 | Chassis | 56 ABS/ASC tester | Read codes | V1.10.001 or higher |
| 7Series | E32 | Chassis | 56 ABS/ASC tester | Erase codes | V1.10.001 or higher |
| 7Series | E32 | Chassis | 56 ABS/ASC tester | Live Data | V1.10.001 or higher |
| 7Series | E32 | Chassis | 56 ABS/ASC tester | Special Function | V1.10.001 or higher |
| 7Series | E32 | Body | 13 KOM(Instrument cluster) | ECU information | V1.10.001 or higher |
| 7Series | E32 | Body | 13 KOM(Instrument cluster) | Read codes | V1.10.001 or higher |
| 7Series | E32 | Body | 13 KOM(Instrument cluster) | Erase codes | V1.10.001 or higher |
| 7Series | E32 | Body | 13 KOM(Instrument cluster) | Special Function | V1.10.001 or higher |
| 7Series | E32 | Body | 19 AB(airbag) | ECU information | V1.10.001 or higher |
| 7Series | E32 | Body | 19 AB(airbag) | Read codes | V1.10.001 or higher |
| 7Series | E32 | Body | 19 AB(airbag) | Erase codes | V1.10.001 or higher |
| 7Series | E32 | Body | 19 AB(airbag) | Live Data | V1.10.001 or higher |
| 7Series | E32 | Body | 19 AB(airbag) | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--|------------------|---------------------|
| 7Series | E32 | Body | 20 SPM/SM(Seat/mirror memory) | ECU information | V1.10.001 or higher |
| 7Series | E32 | Body | 20 SPM/SM(Seat/mirror memory) | Read codes | V1.10.001 or higher |
| 7Series | E32 | Body | 20 SPM/SM(Seat/mirror memory) | Erase codes | V1.10.001 or higher |
| 7Series | E32 | Body | 20 SPM/SM(Seat/mirror memory) | Live Data | V1.10.001 or higher |
| 7Series | E32 | Body | 20 SPM/SM(Seat/mirror memory) | Special Function | V1.10.001 or higher |
| 7Series | E32 | Body | 30 IHK(Heater-A/C system) | ECU information | V1.10.001 or higher |
| 7Series | E32 | Body | 30 IHK(Heater-A/C system) | Read codes | V1.10.001 or higher |
| 7Series | E32 | Body | 30 IHK(Heater-A/C system) | Erase codes | V1.10.001 or higher |
| 7Series | E32 | Body | 30 IHK(Heater-A/C system) | Live Data | V1.10.001 or higher |
| 7Series | E32 | Body | 30 IHK(Heater-A/C system) | Special Function | V1.10.001 or higher |
| 7Series | E32 | Body | 55 ADS(Throttle-valve control) | ECU information | V1.10.001 or higher |
| 7Series | E32 | Body | 55 ADS(Throttle-valve control) | Read codes | V1.10.001 or higher |
| 7Series | E32 | Body | 55 ADS(Throttle-valve control) | Erase codes | V1.10.001 or higher |
| 7Series | E32 | Body | 55 ADS(Throttle-valve control) | Live Data | V1.10.001 or higher |
| 7Series | E32 | Body | 55 ADS(Throttle-valve control) | Special Function | V1.10.001 or higher |
| 7Series | E38 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| 7Series | E38 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| 7Series | E38 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| 7Series | E38 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| 7Series | E38 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| 7Series | E38 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| 7Series | E38 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| 7Series | E38 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| 7Series | E38 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| 7Series | E38 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| 7Series | E38 | Drive | EML Electronic engine-power control | ECU information | V1.10.001 or higher |
| 7Series | E38 | Drive | EML Electronic engine-power control | Read codes | V1.10.001 or higher |
| 7Series | E38 | Drive | EML Electronic engine-power control | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Drive | EML Electronic engine-power control | Special Function | V1.10.001 or higher |
| 7Series | E38 | Drive | EWS Vehicle immobilizer | ECU information | V1.10.001 or higher |
| 7Series | E38 | Drive | EWS Vehicle immobilizer | Read codes | V1.10.001 or higher |
| 7Series | E38 | Drive | EWS Vehicle immobilizer | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Drive | EWS Vehicle immobilizer | Live Data | V1.10.001 or higher |
| 7Series | E38 | Drive | EWS Vehicle immobilizer | Active test | V1.10.001 or higher |
| 7Series | E38 | Drive | EWS Vehicle immobilizer | Special Function | V1.10.001 or higher |
| 7Series | E38 | Drive | TRS Electronic battery isolator switch | ECU information | V1.10.001 or higher |
| 7Series | E38 | Drive | TRS Electronic battery isolator switch | Read codes | V1.10.001 or higher |
| 7Series | E38 | Drive | TRS Electronic battery isolator switch | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Drive | TRS Electronic battery isolator switch | Special Function | V1.10.001 or higher |
| 7Series | E38 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| 7Series | E38 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| 7Series | E38 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| 7Series | E38 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| 7Series | E38 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| 7Series | E38 | Chassis | EDC Damper Control | ECU information | V1.10.001 or higher |
| 7Series | E38 | Chassis | EDC Damper Control | Read codes | V1.10.001 or higher |
| 7Series | E38 | Chassis | EDC Damper Control | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Chassis | EDC Damper Control | Live Data | V1.10.001 or higher |
| 7Series | E38 | Chassis | EDC Damper Control | Active test | V1.10.001 or higher |
| 7Series | E38 | Chassis | EDC Damper Control | Special Function | V1.10.001 or higher |
| 7Series | E38 | Chassis | LEW Steering-angle sensor | ECU information | V1.10.001 or higher |
| 7Series | E38 | Chassis | LEW Steering-angle sensor | Read codes | V1.10.001 or higher |
| 7Series | E38 | Chassis | LEW Steering-angle sensor | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Chassis | LEW Steering-angle sensor | Live Data | V1.10.001 or higher |
| 7Series | E38 | Chassis | LEW Steering-angle sensor | Special Function | V1.10.001 or higher |
| 7Series | E38 | Chassis | MFL Multifunction steering wheel I | ECU information | V1.10.001 or higher |
| 7Series | E38 | Chassis | MFL Multifunction steering wheel I | Read codes | V1.10.001 or higher |
| 7Series | E38 | Chassis | MFL Multifunction steering wheel I | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Chassis | MFL Multifunction steering wheel I | Live Data | V1.10.001 or higher |
| 7Series | E38 | Chassis | MFL Multifunction steering wheel I | Special Function | V1.10.001 or higher |
| 7Series | E38 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 7Series | E38 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 7Series | E38 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 7Series | E38 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 7Series | E38 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 7Series | E38 | Chassis | RDW tyre-blowout warning | ECU information | V1.10.001 or higher |
| 7Series | E38 | Chassis | RDW tyre-blowout warning | Read codes | V1.10.001 or higher |
| 7Series | E38 | Chassis | RDW tyre-blowout warning | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Chassis | RDW tyre-blowout warning | Live Data | V1.10.001 or higher |
| 7Series | E38 | Chassis | RDW tyre-blowout warning | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | Airbag-MRS Multiple Restraint system | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | Airbag-MRS Multiple Restraint system | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | Airbag-MRS Multiple Restraint system | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | Airbag-MRS Multiple Restraint system | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | Airbag-MRS Multiple Restraint system | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | AIC Automatic interval control | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | AIC Automatic interval control | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | AIC Automatic interval control | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | AIC Automatic interval control | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 7Series | E38 | Body | AIC Automatic interval control | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | BIT Basis Interface Telephone | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | BIT Basis Interface Telephone | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | BIT Basis Interface Telephone | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | BIT Basis Interface Telephone | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | BIT Basis Interface Telephone | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | BM On-board monitor | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | BM On-board monitor | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | BM On-board monitor | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | BM On-board monitor | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | BM On-board monitor | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | BM On-board monitor | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | BMBT On-board monitor,control panel | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | BMBT On-board monitor,control panel | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | BMBT On-board monitor,control panel | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | BMBT On-board monitor,control panel | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | BMBT On-board monitor,control panel | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | CCM Check control module | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | CCM Check control module | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | CCM Check control module | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | CCM Check control module | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | DSP Digital Sound Processor | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | DSP Digital Sound Processor | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | DSP Digital Sound Processor | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | DSP Digital Sound Processor | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | DSP Digital Sound Processor | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | FBZV Radio-control system | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | FBZV Radio-control system | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | FBZV Radio-control system | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | FBZV Radio-control system | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | FGB rear compartment blower | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | FGB rear compartment blower | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | FGB rear compartment blower | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | FGB rear compartment blower | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | FHK rear-compartment heating/air conditioning | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | FHK rear-compartment heating/air conditioning | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | FHK rear-compartment heating/air conditioning | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | FHK rear-compartment heating/air conditioning | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | FID Rear-compartment information display | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | FID Rear-compartment information display | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | FID Rear-compartment information display | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | FID Rear-compartment information display | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | FMBT Rear-compartment monitor,control panel | | V1.10.001 or higher |
| 7Series | E38 | Body | FMBT Rear-compartment monitor,control panel | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | FMGT Rear-compartment monitor,graphics section | | V1.10.001 or higher |
| 7Series | E38 | Body | FMGT Rear-compartment monitor,graphics section | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | HKM Boot-lid module | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | HKM Boot-lid module | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | HKM Boot-lid module | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | HKM Boot-lid module | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | IHKA Heater/automatic A/C control | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | IHKA Heater/automatic A/C control | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | IHKA Heater/automatic A/C control | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | IHKA Heater/automatic A/C control | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | IHKA Heater/automatic A/C control | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | IHKA Heater/automatic A/C control | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | IHKR Heater and A/C control | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | IHKR Heater and A/C control | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | IHKR Heater and A/C control | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | IHKR Heater and A/C control | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | IHKR Heater and A/C control | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | IHKR Heater and A/C control | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | IKE Instrument-cluster electronics | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | IKE Instrument-cluster electronics | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | IKE Instrument-cluster electronics | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | IKE Instrument-cluster electronics | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | IR Infrared compact locking system | | V1.10.001 or higher |
| 7Series | E38 | Body | IR Infrared compact locking system | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | IR Radio/infrared locking system | | V1.10.001 or higher |
| 7Series | E38 | Body | IR Radio/infrared locking system | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | JBIT Japan Basis Interface Telephone | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | JBIT Japan Basis Interface Telephone | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | JBIT Japan Basis Interface Telephone | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | LCM Light Check Module | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | LCM Light Check Module | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | LCM Light Check Module | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | LCM Light Check Module | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | LCM Light Check Module | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | LCM Light Check Module | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | LM Lights module | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | LM Lights module | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | LM Lights module | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | LM Lights module | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 7Series | E38 | Body | LM Lights module | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | LM Lights module | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | LRA Automatic headlight vertical aim control | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | LRA Automatic headlight vertical aim control | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | LRA Automatic headlight vertical aim control | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | LRA Automatic headlight vertical aim control | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | LRA Automatic headlight vertical aim control | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | LRA Automatic headlight vertical aim control | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | MID Multi Information Display | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | MID Multi Information Display | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | MID Multi Information Display | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | MID Multi Information Display | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | NAJ Navigation computer,Japan | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | NAJ Navigation computer,Japan | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | NAJ Navigation computer,Japan | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | NAJ Navigation computer,Japan | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | NAJ Navigation computer,Japan | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | NAJ Navigation computer,Japan | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | NAV Navigation computer | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | NAV Navigation computer | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | NAV Navigation computer | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | NAV Navigation computer | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | NAV Navigation computer | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | NAV Navigation computer | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | NAV Navigation computer MKIII | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | NAV Navigation computer MKIII | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | NAV Navigation computer MKIII | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | NAV Navigation computer MKIII | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | NAV Navigation computer MKIII | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | RCC Radio-clock module | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | RCC Radio-clock module | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | RCC Radio-clock module | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | SES language-input system | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | SES language-input system | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | SES language-input system | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | SES language-input system | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | SES language-input system | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | SHD Sliding/tilting sunroof | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | SHD Sliding/tilting sunroof | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | SHD Sliding/tilting sunroof | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | SHD Sliding/tilting sunroof | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | SHD Sliding/tilting sunroof | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | SHD Sliding/tilting sunroof | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | SM/LSM Seat/steering-column memory | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | SM/LSM Seat/steering-column memory | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | SM/LSM Seat/steering-column memory | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | SMB passenger seat memory | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | SMB passenger seat memory | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | SMB passenger seat memory | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | SMB passenger seat memory | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | SMB passenger seat memory | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | STH park heating | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | STH park heating | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | STH park heating | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | STH park heating | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | STH park heating | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | STH park heating | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | SZM Switching centre,centre console | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | SZM Switching centre,centre console | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | SZM Switching centre,centre console | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | SZM Switching centre,centre console | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | SZM Switching centre,centre console | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | SZM Switching centre,centre console | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | TEL Telephone interface | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | TEL Telephone interface | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | TEL Telephone interface | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | URS Rollover sensor | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | URS Rollover sensor | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | URS Rollover sensor | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | URS Rollover sensor | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | URS Rollover sensor | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|---------------------------------------|------------------|---------------------|
| 7Series | E38 | Body | VID Video module | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | VID Video module | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | VID Video module | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | VID Video module | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | VID Video module III | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | VID Video module III | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | VID Video module III | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | VID Video module III | Special Function | V1.10.001 or higher |
| 7Series | E38 | Body | ZKE Central body electronics | ECU information | V1.10.001 or higher |
| 7Series | E38 | Body | ZKE Central body electronics | Read codes | V1.10.001 or higher |
| 7Series | E38 | Body | ZKE Central body electronics | Erase codes | V1.10.001 or higher |
| 7Series | E38 | Body | ZKE Central body electronics | Live Data | V1.10.001 or higher |
| 7Series | E38 | Body | ZKE Central body electronics | Active test | V1.10.001 or higher |
| 7Series | E38 | Body | ZKE Central body electronics | Special Function | V1.10.001 or higher |
| 7Series | E65 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 7Series | E65 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 7Series | E65 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 7Series | E65 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 7Series | E65 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 7Series | E65 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| 7Series | E65 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| 7Series | E65 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| 7Series | E65 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| 7Series | E65 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| 7Series | E65 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| 7Series | E65 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| 7Series | E65 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| 7Series | E65 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| 7Series | E65 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| 7Series | E65 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 7Series | E65 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 7Series | E65 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 7Series | E65 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 7Series | E65 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 7Series | E65 | Drive | VTC Valvetronic | ECU information | V1.10.001 or higher |
| 7Series | E65 | Drive | VTC Valvetronic | Special Function | V1.10.001 or higher |
| 7Series | E65 | Drive | VTC2 Valvetronic 2 | ECU information | V1.10.001 or higher |
| 7Series | E65 | Drive | VTC2 Valvetronic 2 | Special Function | V1.10.001 or higher |
| 7Series | E65 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| 7Series | E65 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| 7Series | E65 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| 7Series | E65 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| 7Series | E65 | Chassis | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 7Series | E65 | Chassis | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 7Series | E65 | Chassis | ACC2 Active cruise control 2 | ECU information | V1.10.001 or higher |
| 7Series | E65 | Chassis | ACC2 Active cruise control 2 | Read codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | ACC2 Active cruise control 2 | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | ACC2 Active cruise control 2 | Special Function | V1.10.001 or higher |
| 7Series | E65 | Chassis | ARS Dynamic drive | ECU information | V1.10.001 or higher |
| 7Series | E65 | Chassis | ARS Dynamic drive | Read codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | ARS Dynamic drive | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | ARS Dynamic drive | Live Data | V1.10.001 or higher |
| 7Series | E65 | Chassis | ARS Dynamic drive | Active test | V1.10.001 or higher |
| 7Series | E65 | Chassis | ARS Dynamic drive | Special Function | V1.10.001 or higher |
| 7Series | E65 | Chassis | ARS Dynamic Drive 2 | ECU information | V1.10.001 or higher |
| 7Series | E65 | Chassis | ARS Dynamic Drive 2 | Read codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | ARS Dynamic Drive 2 | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | ARS Dynamic Drive 2 | Live Data | V1.10.001 or higher |
| 7Series | E65 | Chassis | ARS Dynamic Drive 2 | Active test | V1.10.001 or higher |
| 7Series | E65 | Chassis | ARS Dynamic Drive 2 | Special Function | V1.10.001 or higher |
| 7Series | E65 | Chassis | CIM Chassis Integration Module | ECU information | V1.10.001 or higher |
| 7Series | E65 | Chassis | CIM Chassis Integration Module | Read codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | CIM Chassis Integration Module | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | CIM Chassis Integration Module | Live Data | V1.10.001 or higher |
| 7Series | E65 | Chassis | CIM Chassis Integration Module | Active test | V1.10.001 or higher |
| 7Series | E65 | Chassis | CIM Chassis Integration Module | Special Function | V1.10.001 or higher |
| 7Series | E65 | Chassis | CIM2 Chassis Integration Module 2 | ECU information | V1.10.001 or higher |
| 7Series | E65 | Chassis | CIM2 Chassis Integration Module 2 | Read codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | CIM2 Chassis Integration Module 2 | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | CIM2 Chassis Integration Module 2 | Live Data | V1.10.001 or higher |
| 7Series | E65 | Chassis | CIM2 Chassis Integration Module 2 | Active test | V1.10.001 or higher |
| 7Series | E65 | Chassis | CIM2 Chassis Integration Module 2 | Special Function | V1.10.001 or higher |
| 7Series | E65 | Chassis | EDC Damper Control | ECU information | V1.10.001 or higher |
| 7Series | E65 | Chassis | EDC Damper Control | Read codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | EDC Damper Control | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|-------------------------------------|------------------|---------------------|
| 7Series | E65 | Chassis | EDC Damper Control | Live Data | V1.10.001 or higher |
| 7Series | E65 | Chassis | EDC Damper Control | Active test | V1.10.001 or higher |
| 7Series | E65 | Chassis | EDC Damper Control | Special Function | V1.10.001 or higher |
| 7Series | E65 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 7Series | E65 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 7Series | E65 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 7Series | E65 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 7Series | E65 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 7Series | E65 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 7Series | E65 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 7Series | E65 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| 7Series | E65 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 7Series | E65 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 7Series | E65 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 7Series | E65 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | AHL Adaptive directional headlights | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | AHL Adaptive directional headlights | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | AHL Adaptive directional headlights | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | AHL Adaptive directional headlights | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | AHL Adaptive directional headlights | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | AHL Adaptive directional headlights | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | AMP amplifier | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | AMP amplifier | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | AMP amplifier | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | AMP amplifier | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | AMP amplifier | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | AMP amplifier | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | ANT Aerial/antenna tuner | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | ANT Aerial/antenna tuner | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | ANT Aerial/antenna tuner | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | ANT Aerial/antenna tuner | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | ANT Aerial/antenna tuner | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | ANT Aerial/antenna tuner | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | ASK Audio system controller | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | ASK Audio system controller | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | ASK Audio system controller | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | ASK Audio system controller | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | ASK Audio system controller | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | ASK Audio system controller | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | BZM Control centre,centre console | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | BZM Control centre,centre console | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | BZM Control centre,centre console | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | BZM Control centre,centre console | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | BZM Control centre,centre console | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | BZM Control centre,centre console | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | CA Comfort access system | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | CA Comfort access system | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | CA Comfort access system | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | CA Comfort access system | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | CA Comfort access system | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | CAN communication analysis | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | CAN communication analysis | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | CAN communication analysis | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | CD Control display | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | CD Control display | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | CD Control display | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | CD Control display | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | CD Control display | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | CDC CD changer | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | CDC CD changer | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | CDC CD changer | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | CDC CD changer | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | CDC CD changer | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | CD-GW Control Display(Gateway) | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | CD-GW Control Display(Gateway) | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | CD-GW Control Display(Gateway) | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | CD-GW Control Display(Gateway) | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | CD-GW Control Display(Gateway) | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | CD-GW Control Display(Gateway) | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | CEM Clean Energy Module | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | CEM Clean Energy Module | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|---|------------------|---------------------|
| 7Series | E65 | Body | CEM Clean Energy Module | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | CEM Clean Energy Module | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | CEM Clean Energy Module | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | CNAV Navigation system,China | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | CNAV Navigation system,China | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | CNAV Navigation system,China | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | CNAV Navigation system,China | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | CNAV Navigation system,China | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | CNAV Navigation system,China | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | CON Controller | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | DAB Digital tuner | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | DAB Digital tuner | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | DAB Digital tuner | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | DAB Digital tuner | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | DAB Digital tuner | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | DAB Digital tuner | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | DWA anti-theft alarm system | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | DWA anti-theft alarm system | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | DWA anti-theft alarm system | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | DWA anti-theft alarm system | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | DWA anti-theft alarm system | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | DWA anti-theft alarm system | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | FBI Flexible bus interface | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | FBI Flexible bus interface | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | FBI Flexible bus interface | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | FBI Flexible bus interface | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | FBI Flexible bus interface | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | FBZM Rear compartment,control centre,centre console | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | FBZM Rear compartment,control centre,centre console | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | FBZM Rear compartment,control centre,centre console | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | FBZM Rear compartment,control centre,centre console | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | FBZM Rear compartment,control centre,centre console | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | FBZM Rear compartment,control centre,centre console | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | FCON Rear compartment controller | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | FCON Rear compartment controller | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | FCON Rear compartment controller | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | FCON Rear compartment controller | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | FCON Rear compartment controller | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | FCON Rear compartment controller | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | FD Rear-compartment display | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | FD Rear-compartment display | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | FD Rear-compartment display | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | FD Rear-compartment display | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | FD Rear-compartment display | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | FD Rear-compartment display | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | FKA Rear heater/air conditioning | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | FKA Rear heater/air conditioning | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | FKA Rear heater/air conditioning | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | FKA Rear heater/air conditioning | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | FKA Rear heater/air conditioning | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | FKA Rear heater/air conditioning | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | IBOC Digital tuner US | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | IBOC Digital tuner US | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | IBOC Digital tuner US | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | IBOC Digital tuner US | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | IBOC Digital tuner US | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | IHKA Heater/automatic A/C control | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | IHKA Heater/automatic A/C control | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | IHKA Heater/automatic A/C control | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | IHKA Heater/automatic A/C control | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | IHKA Heater/automatic A/C control | Active test | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|---|------------------|---------------------|
| 7Series | E65 | Body | IHKA Heater/automatic A/C control | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | JBIT Japan Basis Interface Telephone | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | JBIT Japan Basis Interface Telephone | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | JBIT Japan Basis Interface Telephone | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | JNAV Navigation system,Japan | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | JNAV Navigation system,Japan | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | JNAV Navigation system,Japan | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | JNAV Navigation system,Japan | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | JNAV Navigation system,Japan | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | JNAV Navigation system,Japan | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | KHI Headset interface | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | KHI Headset interface | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | KHI Headset interface | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | KHI Headset interface | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | KHI Headset interface | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | KHI Headset interface | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | KNAV Navigation system,Korea | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | KNAV Navigation system,Korea | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | KNAV Navigation system,Korea | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | KNAV Navigation system,Korea | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | KNAV Navigation system,Korea | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | KNAV Navigation system,Korea | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | LM Lights module | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | LM Lights module | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | LM Lights module | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | LM Lights module | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | LM Lights module | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | LM Lights module | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 Light module 2 | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 Light module 2 | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 Light module 2 | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 Light module 2 | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 Light module 2 | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 Light module 2 | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 Light module 2 with adaptive headlight | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 Light module 2 with adaptive headlight | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 Light module 2 with adaptive headlight | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 Light module 2 with adaptive headlight | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 Light module 2 with adaptive headlight | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 Light module 2 with adaptive headlight | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | MOST system analysis | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | MOST system analysis | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | MOST system analysis | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | MOST system analysis | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | NAJ Navigation computer,Japan | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | NAJ Navigation computer,Japan | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | NAJ Navigation computer,Japan | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | NAJ Navigation computer,Japan | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | NAJ Navigation computer,Japan | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | NAJ Navigation computer,Japan | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | NAV Navigation computer | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | NAV Navigation computer | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | NAV Navigation computer | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | NAV Navigation computer | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | NAV Navigation computer | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | NAV Navigation computer | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | NVE Night Vision Electronics | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | NVE Night Vision Electronics | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | NVE Night Vision Electronics | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | NVE Night Vision Electronics | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | NVE Night Vision Electronics | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | NVE Night Vision Electronics | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | NVK Night Vision camera | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | NVK Night Vision camera | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | NVK Night Vision camera | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | NVK Night Vision camera | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | NVK Night Vision camera | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | NVK Night Vision camera | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|---|------------------|---------------------|
| 7Series | E65 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | PM Power module | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | PM Power module | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | PM Power module | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | PM Power module | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | PM Power module | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | PM Power module | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | RLS Rain/Light Sensor | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | RLS Rain/Light Sensor | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | RLS Rain/Light Sensor | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | RLS Rain/Light Sensor | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | RLS Rain/Light Sensor | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SASL Satellite,A-pillar,left | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SASL Satellite,A-pillar,left | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SASL Satellite,A-pillar,left | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SASL Satellite,A-pillar,left | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SASL Satellite,A-pillar,left | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SASR Satellite,A-pillar,right | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SASR Satellite,A-pillar,right | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SASR Satellite,A-pillar,right | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SASR Satellite,A-pillar,right | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SASR Satellite,A-pillar,right | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SBSL Satellite,B-pillar,left | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SBSL Satellite,B-pillar,left | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SBSL Satellite,B-pillar,left | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SBSL Satellite,B-pillar,left | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SBSL Satellite,B-pillar,left | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SBSR Satellite,B-pillar,right | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SBSR Satellite,B-pillar,right | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SBSR Satellite,B-pillar,right | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SBSR Satellite,B-pillar,right | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | SBSR Satellite,B-pillar,right | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | SBSR Satellite,B-pillar,right | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SDARS Satellite tuner | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SDARS Satellite tuner | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SDARS Satellite tuner | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SDARS Satellite tuner | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | SDARS Satellite tuner | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | SDARS Satellite tuner | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SFZ Satellite vehicle centre | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SFZ Satellite vehicle centre | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SFZ Satellite vehicle centre | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SFZ Satellite vehicle centre | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SFZ Satellite vehicle centre | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SG-FD Control unit,rear-compartment display | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SG-FD Control unit,rear-compartment display | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SG-FD Control unit,rear-compartment display | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SG-FD Control unit,rear-compartment display | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | SG-FD Control unit,rear-compartment display | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SG-FD-GW Control unit,rear-compartment display(gateway) | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SG-FD-GW Control unit,rear-compartment display(gateway) | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SG-FD-GW Control unit,rear-compartment display(gateway) | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SG-FD-GW Control unit,rear-compartment display(gateway) | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | SG-FD-GW Control unit,rear-compartment display(gateway) | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | SG-FD-GW Control unit,rear-compartment display(gateway) | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SGM-SIM Safety and Gateway Module(SIM) | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SGM-ZGM Safety and Gateway Module(ZGM) | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SGM-ZGM Safety and Gateway Module(ZGM) | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SGM-ZGM Safety and Gateway Module(ZGM) | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SGM-ZGM Safety and Gateway Module(ZGM) | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SHD Sliding/tilting sunroof | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SHD Sliding/tilting sunroof | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SHD Sliding/tilting sunroof | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SHD Sliding/tilting sunroof | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | SHD Sliding/tilting sunroof | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | SHD Sliding/tilting sunroof | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SHZH Independent/auxiliary heater | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SHZH Independent/auxiliary heater | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SHZH Independent/auxiliary heater | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SHZH Independent/auxiliary heater | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|---|------------------|---------------------|
| 7Series | E65 | Body | SHZH Independent/auxiliary heater | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | SHZH Independent/auxiliary heater | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SIM Safety and information module | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SIM Safety and information module | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SIM Safety and information module | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SIM Safety and information module | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | SIM Safety and information module | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | SIM Safety and information module | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SSBF Satellite,seat,passenger | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SSBF Satellite,seat,passenger | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SSBF Satellite,seat,passenger | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SSBF Satellite,seat,passenger | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SSBF Satellite,seat,passenger | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SSFA Satellite,seat,driver | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SSFA Satellite,seat,driver | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SSFA Satellite,seat,driver | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SSFA Satellite,seat,driver | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SSFA Satellite,seat,driver | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | SVS Language processing system | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | SVS Language processing system | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | SVS Language processing system | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | SVS Language processing system | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | SVS Language processing system | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | TCU Telematic Control Unit | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | TCU Telematic Control Unit | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | TCU Telematic Control Unit | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | TCU Telematic Control Unit | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | TCU Telematic Control Unit | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | TCU Telematic Control Unit | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | TEL Telephone interface | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | TEL Telephone interface | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | TEL Telephone interface | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | TEL Telephone(USA) | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | TEL Telephone(USA) | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | TEL Telephone(USA) | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | TEL Telephone(USA) | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | TEL Telephone(USA) | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | TMBFH Door module,passenger's side, rear | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | TMBFH Door module,passenger's side, rear | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | TMBFH Door module,passenger's side, rear | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | TMBFH Door module,passenger's side, rear | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | TMBFH Door module,passenger's side, rear | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | TMBFT Door module,passenger door | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | TMBFT Door module,passenger door | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | TMBFT Door module,passenger door | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | TMBFT Door module,passenger door | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | TMBFT Door module,passenger door | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | TMFAH Door module,driver's side, rear | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--|------------------|---------------------|
| 7Series | E65 | Body | TMFAH Door module,driver's side, rear | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | TMFAH Door module,driver's side, rear | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | TMFAH Door module,driver's side, rear | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | TMFAH Door module,driver's side, rear | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | TMFAT Door module,driver's door | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | TMFAT Door module,driver's door | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | TMFAT Door module,driver's door | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | TMFAT Door module,driver's door | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | TMFAT Door module,driver's door | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | VM Video module | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | WIM Wiper module | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | WIM Wiper module | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | WIM Wiper module | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | WIM Wiper module | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | WIM Wiper module | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | WIM Wiper module | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | ZBM Two-battery management | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | ZBM Two-battery management | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | ZBM Two-battery management | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | ZBM Two-battery management | Live Data | V1.10.001 or higher |
| 7Series | E65 | Body | ZBM Two-battery management | Active test | V1.10.001 or higher |
| 7Series | E65 | Body | ZBM Two-battery management | Special Function | V1.10.001 or higher |
| 7Series | E65 | Body | ZGM Central gateway module | ECU information | V1.10.001 or higher |
| 7Series | E65 | Body | ZGM Central gateway module | Read codes | V1.10.001 or higher |
| 7Series | E65 | Body | ZGM Central gateway module | Erase codes | V1.10.001 or higher |
| 7Series | E65 | Body | ZGM Central gateway module | Special Function | V1.10.001 or higher |
| 8Series | E31 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| 8Series | E31 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| 8Series | E31 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| 8Series | E31 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| 8Series | E31 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| 8Series | E31 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| 8Series | E31 | Drive | 2 EML(Engine-Power Control) | ECU information | V1.10.001 or higher |
| 8Series | E31 | Drive | 2 EML(Engine-Power Control) | Read codes | V1.10.001 or higher |
| 8Series | E31 | Drive | 2 EML(Engine-Power Control) | Erase codes | V1.10.001 or higher |
| 8Series | E31 | Drive | 2 EML(Engine-Power Control) | Live Data | V1.10.001 or higher |
| 8Series | E31 | Drive | 2 EML(Engine-Power Control) | Special Function | V1.10.001 or higher |
| 8Series | E31 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| 8Series | E31 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| 8Series | E31 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| 8Series | E31 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| 8Series | E31 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| 8Series | E31 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| 8Series | E31 | Drive | 16 EWS(Electronic car Immobilisation system) | ECU information | V1.10.001 or higher |
| 8Series | E31 | Drive | 16 EWS(Electronic car Immobilisation system) | Read codes | V1.10.001 or higher |
| 8Series | E31 | Drive | 16 EWS(Electronic car Immobilisation system) | Erase codes | V1.10.001 or higher |
| 8Series | E31 | Drive | 16 EWS(Electronic car Immobilisation system) | Live Data | V1.10.001 or higher |
| 8Series | E31 | Drive | 16 EWS(Electronic car Immobilisation system) | Special Function | V1.10.001 or higher |
| 8Series | E31 | Drive | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 8Series | E31 | Drive | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 8Series | E31 | Drive | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 8Series | E31 | Drive | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 8Series | E31 | Drive | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 8Series | E31 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 8Series | E31 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 8Series | E31 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 8Series | E31 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 8Series | E31 | Chassis | 17 GSR(Cruise control) | Active test | V1.10.001 or higher |
| 8Series | E31 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 8Series | E31 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| 8Series | E31 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| 8Series | E31 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| 8Series | E31 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| 8Series | E31 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| 8Series | E31 | Chassis | 56 ABS/ASC tester | ECU information | V1.10.001 or higher |
| 8Series | E31 | Chassis | 56 ABS/ASC tester | Read codes | V1.10.001 or higher |
| 8Series | E31 | Chassis | 56 ABS/ASC tester | Erase codes | V1.10.001 or higher |
| 8Series | E31 | Chassis | 56 ABS/ASC tester | Live Data | V1.10.001 or higher |
| 8Series | E31 | Chassis | 56 ABS/ASC tester | Special Function | V1.10.001 or higher |
| 8Series | E31 | Body | 19 AB(airbag) | ECU information | V1.10.001 or higher |
| 8Series | E31 | Body | 19 AB(airbag) | Read codes | V1.10.001 or higher |
| 8Series | E31 | Body | 19 AB(airbag) | Erase codes | V1.10.001 or higher |
| 8Series | E31 | Body | 19 AB(airbag) | Live Data | V1.10.001 or higher |
| 8Series | E31 | Body | 19 AB(airbag) | Special Function | V1.10.001 or higher |
| 8Series | E31 | Body | 20 SPM/SM(Seat/mirror memory) | ECU information | V1.10.001 or higher |
| 8Series | E31 | Body | 20 SPM/SM(Seat/mirror memory) | Read codes | V1.10.001 or higher |
| 8Series | E31 | Body | 20 SPM/SM(Seat/mirror memory) | Erase codes | V1.10.001 or higher |
| 8Series | E31 | Body | 20 SPM/SM(Seat/mirror memory) | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--------------------------------------|------------------|---------------------|
| 8Series | E31 | Body | 20 SPM/SM(Seat/mirror memory) | Special Function | V1.10.001 or higher |
| 8Series | E31 | Body | 30 IHK(Heater-A/C system) | ECU information | V1.10.001 or higher |
| 8Series | E31 | Body | 30 IHK(Heater-A/C system) | Read codes | V1.10.001 or higher |
| 8Series | E31 | Body | 30 IHK(Heater-A/C system) | Erase codes | V1.10.001 or higher |
| 8Series | E31 | Body | 30 IHK(Heater-A/C system) | Live Data | V1.10.001 or higher |
| 8Series | E31 | Body | 30 IHK(Heater-A/C system) | Special Function | V1.10.001 or higher |
| 8Series | E31 | Body | 13 KOM(Instrument cluster) | ECU information | V1.10.001 or higher |
| 8Series | E31 | Body | 13 KOM(Instrument cluster) | Read codes | V1.10.001 or higher |
| 8Series | E31 | Body | 13 KOM(Instrument cluster) | Erase codes | V1.10.001 or higher |
| 8Series | E31 | Body | 13 KOM(Instrument cluster) | Live Data | V1.10.001 or higher |
| 8Series | E31 | Body | 13 KOM(Instrument cluster) | Special Function | V1.10.001 or higher |
| 8Series | E31 | Body | 55 ADS(Throttle-valve control) | ECU information | V1.10.001 or higher |
| 8Series | E31 | Body | 55 ADS(Throttle-valve control) | Read codes | V1.10.001 or higher |
| 8Series | E31 | Body | 55 ADS(Throttle-valve control) | Erase codes | V1.10.001 or higher |
| 8Series | E31 | Body | 55 ADS(Throttle-valve control) | Live Data | V1.10.001 or higher |
| 8Series | E31 | Body | 55 ADS(Throttle-valve control) | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | Airbag-MRS Multiple Restraint system | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | Airbag-MRS Multiple Restraint system | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | Airbag-MRS Multiple Restraint system | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | Airbag-MRS Multiple Restraint system | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | Airbag-MRS Multiple Restraint system | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | AHL Adaptive directional headlights | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | AHL Adaptive directional headlights | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | AHL Adaptive directional headlights | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | AHL Adaptive directional headlights | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | AHL Adaptive directional headlights | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | AHL Adaptive directional headlights | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | CDC CD changer | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | CDC CD changer | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | CDC CD changer | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | CDC CD changer | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | CDC CD changer | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | DSP Digital Sound Processor | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | DSP Digital Sound Processor | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | DSP Digital Sound Processor | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | DSP Digital Sound Processor | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | DSP Digital Sound Processor | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | GM base module | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | GM base module | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | GM base module | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | GM base module | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | GM base module | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | GM base module | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | IHKA Heater/automatic A/C control | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | IHKA Heater/automatic A/C control | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | IHKA Heater/automatic A/C control | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | IHKA Heater/automatic A/C control | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | IHKA Heater/automatic A/C control | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | IHKA Heater/automatic A/C control | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | IHKR Heater and A/C control | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | IHKR Heater and A/C control | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | IHKR Heater and A/C control | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | IHKR Heater and A/C control | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | IHKR Heater and A/C control | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | IHKR Heater and A/C control | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | JBIT Japan Basis Interface Telephone | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | JBIT Japan Basis Interface Telephone | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | JBIT Japan Basis Interface Telephone | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | LM Lights module | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | LM Lights module | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | LM Lights module | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | LM Lights module | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | LM Lights module | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | LM Lights module | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | LSZ Light switch centre II | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | LSZ Light switch centre II | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | LSZ Light switch centre II | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | LSZ Light switch centre II | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | LSZ Light switch centre II | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | LSZ Light switch centre II | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | MIR Multi-Information Radio | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|--|------------------|---------------------|
| XSeries | X3_E83 | Body | MIR Multi-Information Radio | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | MIR Multi-Information Radio | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | MIR Multi-Information Radio | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | MIR Multi-Information Radio | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | NAJ Navigation computer,Japan | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | NAJ Navigation computer,Japan | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | NAJ Navigation computer,Japan | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | NAJ Navigation computer,Japan | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | NAJ Navigation computer,Japan | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | NAJ Navigation computer,Japan | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | NAV Navigation computer | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | NAV Navigation computer | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | NAV Navigation computer | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | NAV Navigation computer | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | NAV Navigation computer | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | NAV Navigation computer | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | RAD Radio | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | RLS Rain/Light Sensor | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | RLS Rain/Light Sensor | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | RLS Rain/Light Sensor | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | RLS Rain/Light Sensor | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | RLS Rain/Light Sensor | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SBBF Seat occupancy,passenger | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SBBF Seat occupancy,passenger | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SBBF Seat occupancy,passenger | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SBBF Seat occupancy,passenger | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SES language-input system | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SES language-input system | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SES language-input system | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SES language-input system | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SES language-input system | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SHD Sliding/tilting sunroof | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SHD Sliding/tilting sunroof | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SHD Sliding/tilting sunroof | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SHD Sliding/tilting sunroof | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SHD Sliding/tilting sunroof | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SHD Sliding/tilting sunroof | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SMF Seat memory,driver | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SMF Seat memory,driver | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SMF Seat memory,driver | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SMF Seat memory,driver | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SMF Seat memory,driver | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SMF Seat memory,driver | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SZM Switching centre,centre console | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SZM Switching centre,centre console | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SZM Switching centre,centre console | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SZM Switching centre,centre console | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SZM Switching centre,centre console | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | SZM Switching centre,centre console | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | TCU Telematic Control Unit | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | TCU Telematic Control Unit | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | TCU Telematic Control Unit | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | TCU Telematic Control Unit | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | TCU Telematic Control Unit | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | TCU Telematic Control Unit | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Body | ULF Universal charging and hands-free facility | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Body | ULF Universal charging and hands-free facility | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | ULF Universal charging and hands-free facility | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Body | ULF Universal charging and hands-free facility | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Body | ULF Universal charging and hands-free facility | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Body | ULF Universal charging and hands-free facility | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | LWS Steering angle sensor | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | LWS Steering angle sensor | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | LWS Steering angle sensor | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | LWS Steering angle sensor | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | LWS Steering angle sensor | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|--------------------------------------|------------------|---------------------|
| XSeries | X3_E83 | Chassis | MFL Multifunction steering wheel I | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | MFL Multifunction steering wheel I | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | MFL Multifunction steering wheel I | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | MFL Multifunction steering wheel I | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | MFL Multifunction steering wheel I | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | SVT Servotronic | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | SVT Servotronic | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | SVT Servotronic | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | SVT Servotronic | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Chassis | SVT Servotronic | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EWS Vehicle immobilizer | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EWS Vehicle immobilizer | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EWS Vehicle immobilizer | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EWS Vehicle immobilizer | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EWS Vehicle immobilizer | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | EWS Vehicle immobilizer | Special Function | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | VTG Transfer case | ECU information | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | VTG Transfer case | Read codes | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | VTG Transfer case | Erase codes | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | VTG Transfer case | Live Data | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | VTG Transfer case | Active test | V1.10.001 or higher |
| XSeries | X3_E83 | Drive | VTG Transfer case | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | Airbag-MRS Multiple Restraint system | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | Airbag-MRS Multiple Restraint system | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | Airbag-MRS Multiple Restraint system | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | Airbag-MRS Multiple Restraint system | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | Airbag-MRS Multiple Restraint system | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | AHL Adaptive directional headlights | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | AHL Adaptive directional headlights | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | AHL Adaptive directional headlights | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | AHL Adaptive directional headlights | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | AHL Adaptive directional headlights | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | AHL Adaptive directional headlights | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | AIC Automatic interval control | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | AIC Automatic interval control | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | AIC Automatic interval control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | AIC Automatic interval control | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | AIC Automatic interval control | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | BIT Basis Interface Telephone | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | BIT Basis Interface Telephone | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | BIT Basis Interface Telephone | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | BIT Basis Interface Telephone | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | BIT Basis Interface Telephone | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | BM On-board monitor | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | BM On-board monitor | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | BM On-board monitor | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | BM On-board monitor | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | BM On-board monitor | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | BM On-board monitor | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | DSP Digital Sound Processor | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | DSP Digital Sound Processor | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | DSP Digital Sound Processor | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | DSP Digital Sound Processor | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | DSP Digital Sound Processor | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IHKA Heater/automatic A/C control | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IHKA Heater/automatic A/C control | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IHKA Heater/automatic A/C control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IHKA Heater/automatic A/C control | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IHKA Heater/automatic A/C control | Active test | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--|------------------|---------------------|
| XSeries | X5_E53 | Body | IHKA Heater/automatic A/C control | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IHKR Heater and A/C control | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IHKR Heater and A/C control | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IHKR Heater and A/C control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IHKR Heater and A/C control | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IHKR Heater and A/C control | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IHKR Heater and A/C control | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IKE Instrument-cluster electronics | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IKE Instrument-cluster electronics | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IKE Instrument-cluster electronics | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | IKE Instrument-cluster electronics | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | JBIT Japan Basis Interface Telephone | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | JBIT Japan Basis Interface Telephone | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | JBIT Japan Basis Interface Telephone | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | KOM Instrument cluster | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | KOM Instrument cluster | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | KOM Instrument cluster | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | KOM Instrument cluster | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | KOM Instrument cluster | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | KOM Instrument cluster | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LCM Light Check Module | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LCM Light Check Module | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LCM Light Check Module | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LCM Light Check Module | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LCM Light Check Module | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LCM Light Check Module | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LCM Light Check Module IV | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LCM Light Check Module IV | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LCM Light Check Module IV | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LCM Light Check Module IV | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LCM Light Check Module IV | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LCM Light Check Module IV | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LRA Automatic headlight vertical aim control | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LRA Automatic headlight vertical aim control | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LRA Automatic headlight vertical aim control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LRA Automatic headlight vertical aim control | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LRA Automatic headlight vertical aim control | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | LRA Automatic headlight vertical aim control | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | MID Multi Information Display | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | MID Multi Information Display | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | MID Multi Information Display | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | MID Multi Information Display | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAJ Navigation computer,Japan | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAJ Navigation computer,Japan | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAJ Navigation computer,Japan | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAJ Navigation computer,Japan | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAJ Navigation computer,Japan | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAJ Navigation computer,Japan | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAV Navigation computer | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAV Navigation computer | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAV Navigation computer | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAV Navigation computer | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAV Navigation computer | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAV Navigation computer | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAV Navigation computer MKII | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAV Navigation computer MKII | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAV Navigation computer MKII | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAV Navigation computer MKII | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | NAV Navigation computer MKII | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | PDC2 Park Distance Control 2 | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | PDC2 Park Distance Control 2 | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | PDC2 Park Distance Control 2 | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | PDC2 Park Distance Control 2 | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | PDC2 Park Distance Control 2 | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | PDC2 Park Distance Control 2 | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | RAD Radio | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | RLS Rain/Light Sensor | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | RLS Rain/Light Sensor | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | RLS Rain/Light Sensor | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | RLS Rain/Light Sensor | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | RLS Rain/Light Sensor | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SBBF Seat occupancy,passenger | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|--|------------------|---------------------|
| XSeries | X5_E53 | Body | SBBF Seat occupancy,passenger | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SBBF Seat occupancy,passenger | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SBBF Seat occupancy,passenger | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SES language-input system | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SES language-input system | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SES language-input system | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SES language-input system | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SES language-input system | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SHD Sliding/tilting sunroof | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SHD Sliding/tilting sunroof | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SHD Sliding/tilting sunroof | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SHD Sliding/tilting sunroof | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SHD Sliding/tilting sunroof | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SHD Sliding/tilting sunroof | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SM/SLM Seat/steering-column memory | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SM/SLM Seat/steering-column memory | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SM/SLM Seat/steering-column memory | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SM/SLM Seat/steering-column memory | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SM/SLM Seat/steering-column memory | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SM/SLM Seat/steering-column memory | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | STH park heating | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | STH park heating | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | STH park heating | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | STH park heating | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | STH park heating | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | STH park heating | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SZM Switching centre,centre console | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SZM Switching centre,centre console | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SZM Switching centre,centre console | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SZM Switching centre,centre console | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SZM Switching centre,centre console | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | SZM Switching centre,centre console | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | TCU Telematic Control Unit | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | TCU Telematic Control Unit | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | TCU Telematic Control Unit | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | TCU Telematic Control Unit | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | TCU Telematic Control Unit | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | TCU Telematic Control Unit | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | TEL Telephone interface | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | TEL Telephone interface | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | TEL Telephone interface | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | TEL Telephone interface | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | TEL Telephone interface | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | TEL Telephone interface | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | ULF Universal charging and hands-free facility | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | ULF Universal charging and hands-free facility | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | ULF Universal charging and hands-free facility | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | ULF Universal charging and hands-free facility | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | ULF Universal charging and hands-free facility | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | ULF Universal charging and hands-free facility | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Body | ZKE Central body electronics | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Body | ZKE Central body electronics | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | ZKE Central body electronics | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Body | ZKE Central body electronics | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Body | ZKE Central body electronics | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Body | ZKE Central body electronics | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | EHC2 Electronic ride-level control | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | EHC2 Electronic ride-level control | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | EHC2 Electronic ride-level control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | EHC2 Electronic ride-level control | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | LEW Steering-angle sensor | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | LEW Steering-angle sensor | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | LEW Steering-angle sensor | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | LEW Steering-angle sensor | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | LEW Steering-angle sensor | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | MFL Multifunction steering wheel I | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | MFL Multifunction steering wheel I | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | MFL Multifunction steering wheel I | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | MFL Multifunction steering wheel I | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | MFL Multifunction steering wheel I | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|--------------------------------------|------------------|---------------------|
| XSeries | X5_E53 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | EWS Vehicle immobilizer | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | EWS Vehicle immobilizer | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | EWS Vehicle immobilizer | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | EWS Vehicle immobilizer | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | EWS Vehicle immobilizer | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | EWS Vehicle immobilizer | Special Function | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | VTG Transfer case | ECU information | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | VTG Transfer case | Read codes | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | VTG Transfer case | Erase codes | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | VTG Transfer case | Live Data | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | VTG Transfer case | Active test | V1.10.001 or higher |
| XSeries | X5_E53 | Drive | VTG Transfer case | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | Airbag-MRS Multiple Restraint system | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | Airbag-MRS Multiple Restraint system | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | Airbag-MRS Multiple Restraint system | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | Airbag-MRS Multiple Restraint system | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | Airbag-MRS Multiple Restraint system | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AMPT Top Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AMPT Top Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CA Comfort access system | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CA Comfort access system | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CA Comfort access system | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CA Comfort access system | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CA Comfort access system | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CAN communication analysis | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CAN communication analysis | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CAN communication analysis | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-A applications | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-A applications | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-A applications | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-A applications | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-A applications | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-A applications | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-ANT Aerial tuner | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-ANT Aerial tuner | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-ANT Aerial tuner | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-ANT Aerial tuner | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-ANT Aerial tuner | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-ANT Aerial tuner | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-ASK Audio system controller | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-ASK Audio system controller | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-ASK Audio system controller | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-ASK Audio system controller | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-ASK Audio system controller | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-ASK Audio system controller | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-BO User interface | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-BO User interface | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-BO User interface | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-BO User interface | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-BO User interface | Active test | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|----------------------------------|------------------|---------------------|
| XSeries | X5_E70 | Body | CCC-BO User interface | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-GW Gateway | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-GW Gateway | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-GW Gateway | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-GW Gateway | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-GW Gateway | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CCC-GW Gateway | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CDC CD changer | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CDC CD changer | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CDC CD changer | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CDC CD changer | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CDC CD changer | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CHAMP-BO User interface | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CHAMP-BO User interface | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CHAMP-BO User interface | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CHAMP-BO User interface | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CHAMP-BO User interface | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CHAMP-BO User interface | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CHAMP-GW Gateway | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CHAMP-GW Gateway | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CHAMP-GW Gateway | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CHAMP-GW Gateway | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CHAMP-GW Gateway | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CHAMP-GW Gateway | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CNAV Navigation system,China | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CNAV Navigation system,China | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CNAV Navigation system,China | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CNAV Navigation system,China | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CNAV Navigation system,China | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CNAV Navigation system,China | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CON Controller | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CON Controller | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CON Controller | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CON Controller | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CON Controller | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | DAB Digital tuner | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | DAB Digital tuner | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | DAB Digital tuner | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | DAB Digital tuner | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | DAB Digital tuner | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | DAB Digital tuner | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FD Rear-compartment display | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FD Rear-compartment display | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FD Rear-compartment display | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FD Rear-compartment display | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FD Rear-compartment display | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FD Rear-compartment display | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FKA Rear heater/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FKA Rear heater/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FKA Rear heater/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FKA Rear heater/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FKA Rear heater/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FKA Rear heater/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|-----------------------------------|------------------|---------------------|
| XSeries | X5_E70 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | IBOC Digital tuner US | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | IBOC Digital tuner US | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | IBOC Digital tuner US | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | IBOC Digital tuner US | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | IBOC Digital tuner US | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | IHKA Heater/automatic A/C control | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | IHKA Heater/automatic A/C control | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | IHKA Heater/automatic A/C control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | IHKA Heater/automatic A/C control | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | IHKA Heater/automatic A/C control | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | IHKA Heater/automatic A/C control | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | JBE2 Junction Box electronics | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | JBE2 Junction Box electronics | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | JBE2 Junction Box electronics | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | JBE2 Junction Box electronics | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | JBE2 Junction Box electronics | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | JBE2 Junction Box electronics | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | JNAV Navigation system,Japan | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | JNAV Navigation system,Japan | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | JNAV Navigation system,Japan | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | JNAV Navigation system,Japan | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | JNAV Navigation system,Japan | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | JNAV Navigation system,Japan | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | KNAV Navigation system,Korea | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | KNAV Navigation system,Korea | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | KNAV Navigation system,Korea | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | KNAV Navigation system,Korea | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | KNAV Navigation system,Korea | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | KNAV Navigation system,Korea | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | M-ASK-BO User interface | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | M-ASK-BO User interface | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | M-ASK-BO User interface | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | M-ASK-BO User interface | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | M-ASK-BO User interface | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | M-ASK-BO User interface | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | M-ASK-GW Gateway | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | M-ASK-GW Gateway | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | M-ASK-GW Gateway | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | M-ASK-GW Gateway | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | M-ASK-GW Gateway | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | M-ASK-GW Gateway | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | MOST system analysis | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | MOST system analysis | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | MOST system analysis | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | MOST system analysis | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RFK Reversing camera | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RFK Reversing camera | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RFK Reversing camera | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RFK Reversing camera | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RFK Reversing camera | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RFK Reversing camera | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RLSS Rain/light solar sensor | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RLSS Rain/light solar sensor | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RLSS Rain/light solar sensor | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RLSS Rain/light solar sensor | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RLSS Rain/light solar sensor | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RSE Rear Seat Entertainment | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RSE Rear Seat Entertainment | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RSE Rear Seat Entertainment | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|---------------------------------------|------------------|---------------------|
| XSeries | X5_E70 | Body | RSE Rear Seat Entertainment | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RSE Rear Seat Entertainment | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | RSE Rear Seat Entertainment | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SDARS Satellite tuner | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SDARS Satellite tuner | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SDARS Satellite tuner | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SDARS Satellite tuner | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SDARS Satellite tuner | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SDARS Satellite tuner | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | TCU Telematic Control Unit | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | TCU Telematic Control Unit | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | TCU Telematic Control Unit | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | TCU Telematic Control Unit | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | TCU Telematic Control Unit | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | TCU Telematic Control Unit | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | ULF-SBX interface box | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | ULF-SBX interface box | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | ULF-SBX interface box | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | ULF-SBX interface box | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | ULF-SBX interface box | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | ULF-SBX interface box | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | ULF-SBX-H interface box High | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | ULF-SBX-H interface box High | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | ULF-SBX-H interface box High | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | ULF-SBX-H interface box High | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | ULF-SBX-H interface box High | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | ULF-SBX-H interface box High | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | VM Video module | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | VM Video module | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | VM Video module | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | VM Video module | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | VM Video module | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Body | VSW video switch | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Body | VSW video switch | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | VSW video switch | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Body | VSW video switch | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Body | VSW video switch | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Body | VSW video switch | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | AL active front steering(AFS70) | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | AL active front steering(AFS70) | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | AL active front steering(AFS70) | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | AL active front steering(AFS70) | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | AL active front steering(AFS70) | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | ARS Dynamic drive | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | ARS Dynamic drive | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | ARS Dynamic drive | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | ARS Dynamic drive | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | ARS Dynamic drive | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | ARS Dynamic drive | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSHL Damper satellite, rear left | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSHL Damper satellite, rear left | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSHL Damper satellite, rear left | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSHL Damper satellite, rear left | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSHL Damper satellite, rear left | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSHL Damper satellite, rear left | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSHR Damper satellite, rear right | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSHR Damper satellite, rear right | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSHR Damper satellite, rear right | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSHR Damper satellite, rear right | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|--------------------------------------|------------------|---------------------|
| XSeries | X5_E70 | Chassis | EDCSHR Damper satellite, rear right | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSHR Damper satellite, rear right | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSVL Damper satellite, front left | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSVL Damper satellite, front left | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSVL Damper satellite, front left | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSVL Damper satellite, front left | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSVL Damper satellite, front left | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSVL Damper satellite, front left | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSVR Damper satellite, front right | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSVR Damper satellite, front right | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSVR Damper satellite, front right | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSVR Damper satellite, front right | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSVR Damper satellite, front right | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EDCSVR Damper satellite, front right | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | VTC Valvetronic | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | VTC Valvetronic | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | VTC2 Valvetronic 2 | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | VTC2 Valvetronic 2 | Special Function | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | VTG Transfer case | ECU information | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | VTG Transfer case | Read codes | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | VTG Transfer case | Erase codes | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | VTG Transfer case | Live Data | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | VTG Transfer case | Active test | V1.10.001 or higher |
| XSeries | X5_E70 | Drive | VTG Transfer case | Special Function | V1.10.001 or higher |
| Xeries | X6_E71 | Body | Airbag-MRS Multiple Restraint system | ECU information | V1.10.001 or higher |
| Xeries | X6_E71 | Body | Airbag-MRS Multiple Restraint system | Read codes | V1.10.001 or higher |
| Xeries | X6_E71 | Body | Airbag-MRS Multiple Restraint system | Erase codes | V1.10.001 or higher |
| Xeries | X6_E71 | Body | Airbag-MRS Multiple Restraint system | Live Data | V1.10.001 or higher |
| Xeries | X6_E71 | Body | Airbag-MRS Multiple Restraint system | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|---------------------------------|------------------|---------------------|
| XSeries | X6_E71 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AMPT Top Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AMPT Top Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CA Comfort access system | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CA Comfort access system | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CA Comfort access system | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CA Comfort access system | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CA Comfort access system | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CAN communication analysis | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CAN communication analysis | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CAN communication analysis | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-A applications | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-A applications | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-A applications | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-A applications | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-A applications | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-A applications | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-ANT Aerial tuner | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-ANT Aerial tuner | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-ANT Aerial tuner | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-ANT Aerial tuner | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-ANT Aerial tuner | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-ANT Aerial tuner | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-ASK Audio system controller | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-ASK Audio system controller | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-ASK Audio system controller | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-ASK Audio system controller | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-ASK Audio system controller | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-ASK Audio system controller | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-BO User interface | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-BO User interface | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-BO User interface | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-BO User interface | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-BO User interface | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-BO User interface | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-GW Gateway | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-GW Gateway | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-GW Gateway | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-GW Gateway | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-GW Gateway | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CCC-GW Gateway | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CDC CD changer | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CDC CD changer | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CDC CD changer | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CDC CD changer | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CDC CD changer | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CHAMP-BO User interface | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CHAMP-BO User interface | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CHAMP-BO User interface | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CHAMP-BO User interface | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CHAMP-BO User interface | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CHAMP-BO User interface | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CHAMP-GW Gateway | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CHAMP-GW Gateway | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CHAMP-GW Gateway | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CHAMP-GW Gateway | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CHAMP-GW Gateway | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CHAMP-GW Gateway | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CNAV Navigation system,China | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CNAV Navigation system,China | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CNAV Navigation system,China | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CNAV Navigation system,China | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|-----------------------------------|------------------|---------------------|
| XSeries | X6_E71 | Body | CNAV Navigation system,China | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CNAV Navigation system,China | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CON Controller | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CON Controller | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CON Controller | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CON Controller | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CON Controller | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | DAB Digital tuner | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | DAB Digital tuner | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | DAB Digital tuner | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | DAB Digital tuner | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | DAB Digital tuner | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | DAB Digital tuner | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FD Rear-compartment display | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FD Rear-compartment display | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FD Rear-compartment display | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FD Rear-compartment display | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FD Rear-compartment display | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FD Rear-compartment display | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FKA Rear heater/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FKA Rear heater/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FKA Rear heater/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FKA Rear heater/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FKA Rear heater/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FKA Rear heater/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | IBOC Digital tuner US | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | IBOC Digital tuner US | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | IBOC Digital tuner US | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | IBOC Digital tuner US | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | IBOC Digital tuner US | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | IHKA Heater/automatic A/C control | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | IHKA Heater/automatic A/C control | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | IHKA Heater/automatic A/C control | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | IHKA Heater/automatic A/C control | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | IHKA Heater/automatic A/C control | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | IHKA Heater/automatic A/C control | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | JBE2 Junction Box electronics | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | JBE2 Junction Box electronics | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | JBE2 Junction Box electronics | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | JBE2 Junction Box electronics | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | JBE2 Junction Box electronics | Active test | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|-------------------------------|------------------|---------------------|
| XSeries | X6_E71 | Body | JBE2 Junction Box electronics | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | JNAV Navigation system,Japan | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | JNAV Navigation system,Japan | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | JNAV Navigation system,Japan | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | JNAV Navigation system,Japan | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | JNAV Navigation system,Japan | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | JNAV Navigation system,Japan | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | KNAV Navigation system,Korea | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | KNAV Navigation system,Korea | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | KNAV Navigation system,Korea | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | KNAV Navigation system,Korea | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | KNAV Navigation system,Korea | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | KNAV Navigation system,Korea | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | M-ASK-BO User interface | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | M-ASK-BO User interface | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | M-ASK-BO User interface | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | M-ASK-BO User interface | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | M-ASK-BO User interface | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | M-ASK-BO User interface | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | M-ASK-GW Gateway | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | M-ASK-GW Gateway | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | M-ASK-GW Gateway | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | M-ASK-GW Gateway | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | M-ASK-GW Gateway | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | M-ASK-GW Gateway | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | MOST system analysis | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | MOST system analysis | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | MOST system analysis | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | MOST system analysis | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RFK Reversing camera | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RFK Reversing camera | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RFK Reversing camera | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RFK Reversing camera | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RFK Reversing camera | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RFK Reversing camera | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RLSS Rain/light solar sensor | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RLSS Rain/light solar sensor | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RLSS Rain/light solar sensor | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RLSS Rain/light solar sensor | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RLSS Rain/light solar sensor | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RSE Rear Seat Entertainment | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RSE Rear Seat Entertainment | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RSE Rear Seat Entertainment | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RSE Rear Seat Entertainment | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RSE Rear Seat Entertainment | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | RSE Rear Seat Entertainment | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SDARS Satellite tuner | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SDARS Satellite tuner | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SDARS Satellite tuner | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SDARS Satellite tuner | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SDARS Satellite tuner | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SDARS Satellite tuner | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | TCU Telematic Control Unit | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | TCU Telematic Control Unit | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | TCU Telematic Control Unit | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | TCU Telematic Control Unit | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | TCU Telematic Control Unit | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | TCU Telematic Control Unit | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | ULF-SBX interface box | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | ULF-SBX interface box | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|---------------------------------------|------------------|---------------------|
| XSeries | X6_E71 | Body | ULF-SBX interface box | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | ULF-SBX interface box | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | ULF-SBX interface box | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | ULF-SBX interface box | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | ULF-SBX-H interface box High | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | ULF-SBX-H interface box High | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | ULF-SBX-H interface box High | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | ULF-SBX-H interface box High | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | ULF-SBX-H interface box High | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | ULF-SBX-H interface box High | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | VM Video module | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | VM Video module | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | VM Video module | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | VM Video module | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | VM Video module | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Body | VSW video switch | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Body | VSW video switch | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | VSW video switch | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Body | VSW video switch | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Body | VSW video switch | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Body | VSW video switch | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ARS Dynamic Drive 2 | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ARS Dynamic Drive 2 | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ARS Dynamic Drive 2 | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ARS Dynamic Drive 2 | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ARS Dynamic Drive 2 | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ARS Dynamic Drive 2 | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSHL Damper satellite, rear left | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSHL Damper satellite, rear left | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSHL Damper satellite, rear left | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSHL Damper satellite, rear left | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSHL Damper satellite, rear left | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSHL Damper satellite, rear left | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSHR Damper satellite, rear right | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSHR Damper satellite, rear right | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSHR Damper satellite, rear right | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSHR Damper satellite, rear right | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSHR Damper satellite, rear right | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSHR Damper satellite, rear right | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSVL Damper satellite, front left | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSVL Damper satellite, front left | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSVL Damper satellite, front left | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSVL Damper satellite, front left | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSVL Damper satellite, front left | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSVL Damper satellite, front left | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSVR Damper satellite, front right | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSVR Damper satellite, front right | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSVR Damper satellite, front right | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSVR Damper satellite, front right | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSVR Damper satellite, front right | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EDCSVR Damper satellite, front right | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|--|------------------|---------------------|
| XSeries | X6_E71 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | QMVH Lateral-moment distribution,rear axle | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | QMVH Lateral-moment distribution,rear axle | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | QMVH Lateral-moment distribution,rear axle | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | QMVH Lateral-moment distribution,rear axle | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | QMVH Lateral-moment distribution,rear axle | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | QMVH Lateral-moment distribution,rear axle | Special Function | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | VTG Transfer case | ECU information | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | VTG Transfer case | Read codes | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | VTG Transfer case | Erase codes | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | VTG Transfer case | Live Data | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | VTG Transfer case | Active test | V1.10.001 or higher |
| XSeries | X6_E71 | Drive | VTG Transfer case | Special Function | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 2 EML(Engine-Power Control) | ECU information | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 2 EML(Engine-Power Control) | Read codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 2 EML(Engine-Power Control) | Erase codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 2 EML(Engine-Power Control) | Live Data | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 2 EML(Engine-Power Control) | Special Function | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 13 KOM(Instrument cluster) | ECU information | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 13 KOM(Instrument cluster) | Read codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 13 KOM(Instrument cluster) | Erase codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 13 KOM(Instrument cluster) | Special Function | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 16 EWS(Electronic car Immobilisation system) | ECU information | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 16 EWS(Electronic car Immobilisation system) | Read codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 16 EWS(Electronic car Immobilisation system) | Erase codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 16 EWS(Electronic car Immobilisation system) | Live Data | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 16 EWS(Electronic car Immobilisation system) | Special Function | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| ZSeries | Z1_E30 | Drive | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 19 AB(airbag) | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|---------------------------------------|------------------|---------------------|
| ZSeries | Z1_E30 | Body | 19 AB(airbag) | Read codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 19 AB(airbag) | Erase codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 19 AB(airbag) | Live Data | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 19 AB(airbag) | Special Function | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 20 SPM/SM(Seat/mirror memory) | ECU information | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 20 SPM/SM(Seat/mirror memory) | Read codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 20 SPM/SM(Seat/mirror memory) | Erase codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 20 SPM/SM(Seat/mirror memory) | Live Data | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 20 SPM/SM(Seat/mirror memory) | Special Function | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 30 IHK(Heater-A/C system) | ECU information | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 30 IHK(Heater-A/C system) | Read codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 30 IHK(Heater-A/C system) | Erase codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 30 IHK(Heater-A/C system) | Live Data | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 30 IHK(Heater-A/C system) | Special Function | V1.10.001 or higher |
| ZSeries | Z1_E30 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| ZSeries | Z1_E30 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| ZSeries | Z1_E30 | Chassis | 17 GSR(Cruise control) | Active test | V1.10.001 or higher |
| ZSeries | Z1_E30 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| ZSeries | Z1_E30 | Chassis | 17 GSR(Cruise control) | ECU information | V1.10.001 or higher |
| ZSeries | Z1_E30 | Chassis | 17 GSR(Cruise control) | Read codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Chassis | 17 GSR(Cruise control) | Erase codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Chassis | 17 GSR(Cruise control) | Live Data | V1.10.001 or higher |
| ZSeries | Z1_E30 | Chassis | 17 GSR(Cruise control) | Special Function | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 55 ADS(Throttle-valve control) | ECU information | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 55 ADS(Throttle-valve control) | Read codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 55 ADS(Throttle-valve control) | Erase codes | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 55 ADS(Throttle-valve control) | Live Data | V1.10.001 or higher |
| ZSeries | Z1_E30 | Body | 55 ADS(Throttle-valve control) | Special Function | V1.10.001 or higher |
| ZSeries | E30 | Chassis | 56 ABS/ASC tester | ECU information | V1.10.001 or higher |
| ZSeries | E30 | Chassis | 56 ABS/ASC tester | Read codes | V1.10.001 or higher |
| ZSeries | E30 | Chassis | 56 ABS/ASC tester | Erase codes | V1.10.001 or higher |
| ZSeries | E30 | Chassis | 56 ABS/ASC tester | Live Data | V1.10.001 or higher |
| ZSeries | E30 | Chassis | 56 ABS/ASC tester | Special Function | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | Airbag-MRS Multiple Restraint system | ECU information | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | Airbag-MRS Multiple Restraint system | Read codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | Airbag-MRS Multiple Restraint system | Erase codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | Airbag-MRS Multiple Restraint system | Live Data | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | Airbag-MRS Multiple Restraint system | Special Function | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | IR Radio/infrared locking system | | |
| ZSeries | Z3_E36 | Body | IR Radio/infrared locking system | Special Function | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | KOM Instrument cluster | ECU information | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | KOM Instrument cluster | Read codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | KOM Instrument cluster | Erase codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | KOM Instrument cluster | Live Data | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | KOM Instrument cluster | Active test | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | KOM Instrument cluster | Special Function | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | ZKE Central body electronics | ECU information | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | ZKE Central body electronics | Read codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | ZKE Central body electronics | Erase codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | ZKE Central body electronics | Live Data | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | ZKE Central body electronics | Active test | V1.10.001 or higher |
| ZSeries | Z3_E36 | Body | ZKE Central body electronics | Special Function | V1.10.001 or higher |
| ZSeries | Z3_E36 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| ZSeries | Z3_E36 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| ZSeries | Z3_E36 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| ZSeries | Z3_E36 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| ZSeries | Z3_E36 | Chassis | LEW Steering-angle sensor | ECU information | V1.10.001 or higher |
| ZSeries | Z3_E36 | Chassis | LEW Steering-angle sensor | Read codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Chassis | LEW Steering-angle sensor | Erase codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Chassis | LEW Steering-angle sensor | Live Data | V1.10.001 or higher |
| ZSeries | Z3_E36 | Chassis | LEW Steering-angle sensor | Special Function | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | EWS Vehicle immobilizer | ECU information | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | EWS Vehicle immobilizer | Read codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | EWS Vehicle immobilizer | Erase codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | EWS Vehicle immobilizer | Live Data | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | EWS Vehicle immobilizer | Active test | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | EWS Vehicle immobilizer | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|------------|-------|--|------------------|---------------------|
| ZSeries | Z3_E36 | Drive | GR Cruise control | ECU information | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | GR Cruise control | Read codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | GR Cruise control | Erase codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | GR Cruise control | Live Data | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | GR Cruise control | Active test | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | GR Cruise control | Special Function | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | TOENS Thermal oil-level sensor | ECU information | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | TOENS Thermal oil-level sensor | Read codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | TOENS Thermal oil-level sensor | Erase codes | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | TOENS Thermal oil-level sensor | Live Data | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | TOENS Thermal oil-level sensor | Active test | V1.10.001 or higher |
| ZSeries | Z3_E36 | Drive | TOENS Thermal oil-level sensor | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | Airbag-MRS Multiple Restraint system | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | Airbag-MRS Multiple Restraint system | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | Airbag-MRS Multiple Restraint system | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | Airbag-MRS Multiple Restraint system | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | Airbag-MRS Multiple Restraint system | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CDC CD changer | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CDC CD changer | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CDC CD changer | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CDC CD changer | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CDC CD changer | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | DSP Digital Sound Processor | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | DSP Digital Sound Processor | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | DSP Digital Sound Processor | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | DSP Digital Sound Processor | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | DSP Digital Sound Processor | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | GM5 General module 5 | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | GM5 General module 5 | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | GM5 General module 5 | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | GM5 General module 5 | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | GM5 General module 5 | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | GM5 General module 5 | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | IHKA Heater/automatic A/C control | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | IHKA Heater/automatic A/C control | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | IHKA Heater/automatic A/C control | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | IHKA Heater/automatic A/C control | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | IHKA Heater/automatic A/C control | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | IHKA Heater/automatic A/C control | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | IHKS Integrated heating/air-conditioning control | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | IHKS Integrated heating/air-conditioning control | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | IHKS Integrated heating/air-conditioning control | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | IHKS Integrated heating/air-conditioning control | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | IHKS Integrated heating/air-conditioning control | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | IHKS Integrated heating/air-conditioning control | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | LSZ Light switch centre II | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | LSZ Light switch centre II | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | LSZ Light switch centre II | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | LSZ Light switch centre II | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | LSZ Light switch centre II | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | LSZ Light switch centre II | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | MIR Multi-Information Radio | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | MIR Multi-Information Radio | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | MIR Multi-Information Radio | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | MIR Multi-Information Radio | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | MIR Multi-Information Radio | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | NAJ Navigation computer,Japan | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | NAJ Navigation computer,Japan | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | NAJ Navigation computer,Japan | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | NAJ Navigation computer,Japan | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | NAJ Navigation computer,Japan | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | NAJ Navigation computer,Japan | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | NAV Navigation computer | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | NAV Navigation computer | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | NAV Navigation computer | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|------------|---------|--|------------------|---------------------|
| ZSeries | Z4_E85/E86 | Body | NAV Navigation computer | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | NAV Navigation computer | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | NAV Navigation computer | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | RAD Radio | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | RLS Rain/Light Sensor | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | RLS Rain/Light Sensor | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | RLS Rain/Light Sensor | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | RLS Rain/Light Sensor | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | RLS Rain/Light Sensor | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SBBF Seat occupancy,passenger | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SBBF Seat occupancy,passenger | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SBBF Seat occupancy,passenger | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SBBF Seat occupancy,passenger | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | Airbag-SBSL Satellite,B-pillar,left | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | Airbag-SBSL Satellite,B-pillar,left | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | Airbag-SBSL Satellite,B-pillar,left | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | Airbag-SBSL Satellite,B-pillar,left | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | Airbag-SBSL Satellite,B-pillar,left | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SBSR Satellite,B-pillar,right | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SBSR Satellite,B-pillar,right | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SBSR Satellite,B-pillar,right | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SBSR Satellite,B-pillar,right | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SBSR Satellite,B-pillar,right | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SBSR Satellite,B-pillar,right | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SES language-input system | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SES language-input system | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SES language-input system | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SES language-input system | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SES language-input system | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SIM Safety and information module | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SIM Safety and information module | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SIM Safety and information module | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SIM Safety and information module | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SIM Safety and information module | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SIM Safety and information module | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SMF Seat memory,driver | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SMF Seat memory,driver | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SMF Seat memory,driver | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SMF Seat memory,driver | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SMF Seat memory,driver | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SMF Seat memory,driver | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SZM Switching centre,centre console | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SZM Switching centre,centre console | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SZM Switching centre,centre console | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SZM Switching centre,centre console | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SZM Switching centre,centre console | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | SZM Switching centre,centre console | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | TCU Telematic Control Unit | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | TCU Telematic Control Unit | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | TCU Telematic Control Unit | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | TCU Telematic Control Unit | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | TCU Telematic Control Unit | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | TCU Telematic Control Unit | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | ULF Universal charging and hands-free facility | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | ULF Universal charging and hands-free facility | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | ULF Universal charging and hands-free facility | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | ULF Universal charging and hands-free facility | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | ULF Universal charging and hands-free facility | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Body | ULF Universal charging and hands-free facility | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | LWS Steering angle sensor | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|------------|---------|--|------------------|---------------------|
| ZSeries | Z4_E85/E86 | Chassis | LWS Steering angle sensor | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | LWS Steering angle sensor | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | LWS Steering angle sensor | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | LWS Steering angle sensor | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | LWS Steering angle sensor | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | MFL Multifunction steering wheel I | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | MFL Multifunction steering wheel I | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | MFL Multifunction steering wheel I | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | MFL Multifunction steering wheel I | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | MFL Multifunction steering wheel I | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | MFL Multifunction steering wheel I | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EWS Vehicle immobilizer | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EWS Vehicle immobilizer | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EWS Vehicle immobilizer | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EWS Vehicle immobilizer | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EWS Vehicle immobilizer | Active test | V1.10.001 or higher |
| ZSeries | Z4_E85/E86 | Drive | EWS Vehicle immobilizer | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | Airbag-MRS Multiple Restraint system | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | Airbag-MRS Multiple Restraint system | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | Airbag-MRS Multiple Restraint system | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | Airbag-MRS Multiple Restraint system | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | Airbag-MRS Multiple Restraint system | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | BIT Basis Interface Telephone | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | BIT Basis Interface Telephone | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | BIT Basis Interface Telephone | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | BIT Basis Interface Telephone | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | BIT Basis Interface Telephone | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | DSP Digital Sound Processor | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | DSP Digital Sound Processor | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | DSP Digital Sound Processor | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | DSP Digital Sound Processor | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | DSP Digital Sound Processor | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | GM base module | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | GM base module | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | GM base module | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | GM base module | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | GM base module | Active test | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | GM base module | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | IHKS Integrated heating/air-conditioning control | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | IHKS Integrated heating/air-conditioning control | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | IHKS Integrated heating/air-conditioning control | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | IHKS Integrated heating/air-conditioning control | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | IHKS Integrated heating/air-conditioning control | Active test | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | IHKS Integrated heating/air-conditioning control | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | KOM Instrument cluster | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | KOM Instrument cluster | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | KOM Instrument cluster | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | KOM Instrument cluster | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | KOM Instrument cluster | Active test | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | KOM Instrument cluster | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LCM Light Check Module | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LCM Light Check Module | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LCM Light Check Module | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|--|------------------|---------------------|
| ZSeries | Z8_E52 | Body | LCM Light Check Module | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LCM Light Check Module | Active test | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LCM Light Check Module | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LCM Light Check Module IV | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LCM Light Check Module IV | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LCM Light Check Module IV | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LCM Light Check Module IV | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LCM Light Check Module IV | Active test | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LCM Light Check Module IV | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LRA Automatic headlight vertical aim control | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LRA Automatic headlight vertical aim control | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LRA Automatic headlight vertical aim control | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LRA Automatic headlight vertical aim control | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LRA Automatic headlight vertical aim control | Active test | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | LRA Automatic headlight vertical aim control | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | MIR Multi-Information Radio | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | MIR Multi-Information Radio | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | MIR Multi-Information Radio | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | MIR Multi-Information Radio | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | MIR Multi-Information Radio | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | NAV Navigation computer MKII | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | NAV Navigation computer MKII | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | NAV Navigation computer MKII | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | NAV Navigation computer MKII | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | NAV Navigation computer MKII | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | NAV Navigation computer MKIII | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | NAV Navigation computer MKIII | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | NAV Navigation computer MKIII | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | NAV Navigation computer MKIII | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | NAV Navigation computer MKIII | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | RAD Radio | Active test | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | TEL Telephone interface | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | TEL Telephone interface | Active test | V1.10.001 or higher |
| ZSeries | Z8_E52 | Body | TEL Telephone interface | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | DDS Deflation Detection System | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | DDS Deflation Detection System | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | DDS Deflation Detection System | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | DDS Deflation Detection System | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | DDS Deflation Detection System | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | ELV Electronic steering-column locking | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | ELV Electronic steering-column locking | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | ELV Electronic steering-column locking | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | ELV Electronic steering-column locking | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | ELV Electronic steering-column locking | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | LEW Steering-angle sensor | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | LEW Steering-angle sensor | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | LEW Steering-angle sensor | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | LEW Steering-angle sensor | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Chassis | LEW Steering-angle sensor | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | EWS Vehicle immobilizer | ECU information | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | EWS Vehicle immobilizer | Read codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | EWS Vehicle immobilizer | Erase codes | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | EWS Vehicle immobilizer | Live Data | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | EWS Vehicle immobilizer | Active test | V1.10.001 or higher |
| ZSeries | Z8_E52 | Drive | EWS Vehicle immobilizer | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | CAS Car access system | Active test | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|---------------------------------------|------------------|---------------------|
| ZSeries | Z4_E89 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | DKG Twin-clutch gearbox | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | DKG Twin-clutch gearbox | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | DKG Twin-clutch gearbox | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | DKG Twin-clutch gearbox | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | DKG Twin-clutch gearbox | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | DKG Twin-clutch gearbox | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | DME/DDE(Engine Electronics) | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | DME/DDE(Engine Electronics) | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | DME/DDE(Engine Electronics) | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | DME/DDE(Engine Electronics) | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | DME/DDE(Engine Electronics) | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | DME/DDE(Engine Electronics) | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | EGS/AGS(Transmission Control) | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | EGS/AGS(Transmission Control) | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | EGS/AGS(Transmission Control) | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | EGS/AGS(Transmission Control) | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | EGS/AGS(Transmission Control) | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | EGS/AGS(Transmission Control) | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | ABS/ASC/DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EDC Damper Control | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EDC Damper Control | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EDC Damper Control | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EDC Damper Control | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EDC Damper Control | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EDC Damper Control | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | AMP amplifier | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | AMP amplifier | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | AMP amplifier | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | AMP amplifier | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | AMP amplifier | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | AMP amplifier | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CA Comfort access system | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CA Comfort access system | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CA Comfort access system | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CA Comfort access system | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CA Comfort access system | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CAN communication analysis | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CAN communication analysis | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CAN communication analysis | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CDC CD changer | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CDC CD changer | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CDC CD changer | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CDC CD changer | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CDC CD changer | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|-----------------------------------|------------------|---------------------|
| ZSeries | Z4_E89 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CIC-GW Gateway | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CIC-GW Gateway | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CIC-GW Gateway | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CIC-GW Gateway | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CIC-GW Gateway | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CNAV Navigation system,China | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CNAV Navigation system,China | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CNAV Navigation system,China | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CNAV Navigation system,China | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CNAV Navigation system,China | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CNAV Navigation system,China | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CON Controller | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CON Controller | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CON Controller | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CON Controller | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CON Controller | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CTM Convertible-top module | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CTM Convertible-top module | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CTM Convertible-top module | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CTM Convertible-top module | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CTM Convertible-top module | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CTM Convertible-top module | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DAB Digital tuner | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DAB Digital tuner | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DAB Digital tuner | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DAB Digital tuner | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DAB Digital tuner | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DAB Digital tuner | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DWA anti-theft alarm system | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DWA anti-theft alarm system | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DWA anti-theft alarm system | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DWA anti-theft alarm system | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DWA anti-theft alarm system | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | DWA anti-theft alarm system | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHKA Heater/automatic A/C control | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHKA Heater/automatic A/C control | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHKA Heater/automatic A/C control | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHKA Heater/automatic A/C control | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHKA Heater/automatic A/C control | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHKA Heater/automatic A/C control | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHKR Heater and A/C control | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHKR Heater and A/C control | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHKR Heater and A/C control | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHKR Heater and A/C control | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHKR Heater and A/C control | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHKR Heater and A/C control | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHR Integrated heater control | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHR Integrated heater control | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHR Integrated heater control | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHR Integrated heater control | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--------------------------------------|------------------|---------------------|
| ZSeries | Z4_E89 | Body | IHR Integrated heater control | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | IHR Integrated heater control | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | JBE2 Junction Box electronics | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | JBE2 Junction Box electronics | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | JBE2 Junction Box electronics | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | JBE2 Junction Box electronics | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | JBE2 Junction Box electronics | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | JBE2 Junction Box electronics | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | JNAV Navigation system,Japan | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | JNAV Navigation system,Japan | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | JNAV Navigation system,Japan | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | JNAV Navigation system,Japan | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | JNAV Navigation system,Japan | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | JNAV Navigation system,Japan | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | KNAV Navigation system,Korea | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | KNAV Navigation system,Korea | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | KNAV Navigation system,Korea | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | KNAV Navigation system,Korea | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | KNAV Navigation system,Korea | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | KNAV Navigation system,Korea | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | M-ASK-BO User interface | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | M-ASK-BO User interface | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | M-ASK-BO User interface | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | M-ASK-BO User interface | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | M-ASK-BO User interface | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | M-ASK-BO User interface | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | M-ASK-BO User interface | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | M-ASK-BO User interface | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | M-ASK-BO User interface | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | M-ASK-BO User interface | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | M-ASK-BO User interface | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | M-ASK-BO User interface | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | MOST system analysis | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | MOST system analysis | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | MOST system analysis | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | MOST system analysis | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | Airbag-MRS Multiple Restraint system | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | Airbag-MRS Multiple Restraint system | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | Airbag-MRS Multiple Restraint system | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | Airbag-MRS Multiple Restraint system | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | Airbag-MRS Multiple Restraint system | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD Radio | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD2-BO User interface | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD2-BO User interface | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD2-BO User interface | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD2-BO User interface | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD2-BO User interface | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD2-BO User interface | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD2-GW Gateway | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD2-GW Gateway | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD2-GW Gateway | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD2-GW Gateway | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD2-GW Gateway | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RAD2-GW Gateway | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RLSS Rain/light solar sensor | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RLSS Rain/light solar sensor | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RLSS Rain/light solar sensor | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RLSS Rain/light solar sensor | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | RLSS Rain/light solar sensor | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SDARS Satellite tuner | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SDARS Satellite tuner | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SDARS Satellite tuner | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SDARS Satellite tuner | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SDARS Satellite tuner | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SDARS Satellite tuner | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|--|------------------|---------------------|
| ZSeries | Z4_E89 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | TCU Telematic Control Unit | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | TCU Telematic Control Unit | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | TCU Telematic Control Unit | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | TCU Telematic Control Unit | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | TCU Telematic Control Unit | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | TCU Telematic Control Unit | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | ULF Universal charging and hands-free facility | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | ULF Universal charging and hands-free facility | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | ULF Universal charging and hands-free facility | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | ULF Universal charging and hands-free facility | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | ULF Universal charging and hands-free facility | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | ULF Universal charging and hands-free facility | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | ULF-SBX-H interface box High | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | ULF-SBX-H interface box High | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | ULF-SBX-H interface box High | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | ULF-SBX-H interface box High | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | ULF-SBX-H interface box High | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | ULF-SBX-H interface box High | Special Function | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | VM Video module | ECU information | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | VM Video module | Read codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | VM Video module | Live Data | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | VM Video module | Active test | V1.10.001 or higher |
| ZSeries | Z4_E89 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 1Series | F20 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 1Series | F20 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 1Series | F20 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 1Series | F20 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 1Series | F20 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 1Series | F20 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 1Series | F20 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 1Series | F20 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 1Series | F20 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 1Series | F20 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 1Series | F20 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 1Series | F20 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 1Series | F20 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 1Series | F20 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 1Series | F20 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 1Series | F20 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 1Series | F20 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 1Series | F20 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 1Series | F20 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 1Series | F20 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 1Series | F20 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 1Series | F20 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 1Series | F20 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 1Series | F20 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 1Series | F20 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 1Series | F20 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | CON Controller | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | FCON Rear compartment controller | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | FCON Rear compartment controller | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | FCON Rear compartment controller | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | FCON Rear compartment controller | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | FCON Rear compartment controller | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | FCON Rear compartment controller | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | FEM Front Electronic Module | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | FEM Front Electronic Module | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | FEM Front Electronic Module | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | FEM Front Electronic Module | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | FEM Front Electronic Module | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | FEM Front Electronic Module | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|-----|-------|---|------------------|---------------------|
| 1Series | F20 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | REM Rear Electronic Module | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | REM Rear Electronic Module | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | REM Rear Electronic Module | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | REM Rear Electronic Module | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | REM Rear Electronic Module | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | REM Rear Electronic Module | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | TRSVC allround-view camera | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | TRSVC allround-view camera | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | TRSVC allround-view camera | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | TRSVC allround-view camera | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | TRSVC allround-view camera | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | TRSVC allround-view camera | Special Function | V1.10.001 or higher |
| 1Series | F20 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 1Series | F20 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 1Series | F20 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 1Series | F20 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 1Series | F20 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 1Series | F20 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 3Series | F30 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 3Series | F30 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 3Series | F30 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 3Series | F30 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 3Series | F30 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 3Series | F30 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 3Series | F30 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 3Series | F30 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 3Series | F30 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 3Series | F30 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 3Series | F30 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 3Series | F30 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 3Series | F30 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 3Series | F30 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|----------------------------------|------------------|---------------------|
| 3Series | F30 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 3Series | F30 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 3Series | F30 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 3Series | F30 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 3Series | F30 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 3Series | F30 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 3Series | F30 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 3Series | F30 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 3Series | F30 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 3Series | F30 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 3Series | F30 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | CON Controller | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | FCON Rear compartment controller | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | FCON Rear compartment controller | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | FCON Rear compartment controller | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | FCON Rear compartment controller | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 3Series | F30 | Body | FCON Rear compartment controller | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | FCON Rear compartment controller | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | FEM Front Electronic Module | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | FEM Front Electronic Module | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | FEM Front Electronic Module | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | FEM Front Electronic Module | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | FEM Front Electronic Module | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | FEM Front Electronic Module | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | REM Rear Electronic Module | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | REM Rear Electronic Module | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | REM Rear Electronic Module | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | REM Rear Electronic Module | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | REM Rear Electronic Module | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | REM Rear Electronic Module | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|---|------------------|---------------------|
| 3Series | F30 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | SCR Selective Catalytic Reduction | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | SCR Selective Catalytic Reduction | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | SCR Selective Catalytic Reduction | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | SCR Selective Catalytic Reduction | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | SCR Selective Catalytic Reduction | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | SCR Selective Catalytic Reduction | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | TRSV allround-view camera | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | TRSV allround-view camera | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | TRSV allround-view camera | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | TRSV allround-view camera | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | TRSV allround-view camera | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | TRSV allround-view camera | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | VM Video module | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 3Series | F30 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 3Series | F30 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 3Series | F30 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 3Series | F30 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 3Series | F30 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 3Series | F30 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 5Series | F07 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 5Series | F07 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 5Series | F07 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 5Series | F07 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 5Series | F07 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 5Series | F07 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 5Series | F07 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 5Series | F07 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 5Series | F07 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 5Series | F07 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 5Series | F07 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 5Series | F07 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 5Series | F07 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 5Series | F07 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 5Series | F07 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 5Series | F07 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 5Series | F07 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 5Series | F07 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 5Series | F07 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 5Series | F07 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 5Series | F07 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 5Series | F07 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 5Series | F07 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 5Series | F07 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 5Series | F07 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 5Series | F07 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--------------------------------------|------------------|---------------------|
| 5Series | F07 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 5Series | F07 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 5Series | F07 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| 5Series | F07 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 5Series | F07 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 5Series | F07 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 5Series | F07 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 5Series | F07 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 5Series | F07 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 5Series | F07 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 5Series | F07 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSHL Damper satellite, rear left | ECU information | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSHL Damper satellite, rear left | Read codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSHL Damper satellite, rear left | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSHL Damper satellite, rear left | Live Data | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSHL Damper satellite, rear left | Active test | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSHL Damper satellite, rear left | Special Function | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSHR Damper satellite, rear right | ECU information | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSHR Damper satellite, rear right | Read codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSHR Damper satellite, rear right | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSHR Damper satellite, rear right | Live Data | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSHR Damper satellite, rear right | Active test | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSHR Damper satellite, rear right | Special Function | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSVL Damper satellite, front left | ECU information | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSVL Damper satellite, front left | Read codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSVL Damper satellite, front left | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSVL Damper satellite, front left | Live Data | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSVL Damper satellite, front left | Active test | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSVL Damper satellite, front left | Special Function | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSVR Damper satellite, front right | ECU information | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSVR Damper satellite, front right | Read codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSVR Damper satellite, front right | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSVR Damper satellite, front right | Live Data | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSVR Damper satellite, front right | Active test | V1.10.001 or higher |
| 5Series | F07 | Chassis | EDCSVR Damper satellite, front right | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | AL active steering | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | AL active steering | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | AL active steering | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | AL active steering | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | AL active steering | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | AL active steering | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | AMPT Top Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | AMPT Top Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | CON Controller | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 5Series | F07 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | FD Rear-compartment display | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | FD Rear-compartment display | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | FD Rear-compartment display | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | FD Rear-compartment display | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | FD Rear-compartment display | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | FD Rear-compartment display | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | FD2 Rear-compartment display 2 | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | FD2 Rear-compartment display 2 | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | FD2 Rear-compartment display 2 | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | FD2 Rear-compartment display 2 | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | FD2 Rear-compartment display 2 | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | FD2 Rear-compartment display 2 | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | FKA Rear heater/air conditioning | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | FKA Rear heater/air conditioning | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | FKA Rear heater/air conditioning | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | FKA Rear heater/air conditioning | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | FKA Rear heater/air conditioning | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | FKA Rear heater/air conditioning | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | HSR Rear-axle slip-angle control | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | HSR Rear-axle slip-angle control | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | HSR Rear-axle slip-angle control | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | HSR Rear-axle slip-angle control | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | HSR Rear-axle slip-angle control | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | HSR Rear-axle slip-angle control | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 5Series | F07 | Body | JBE Junction-box electronics | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | JBE Junction-box electronics | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | JBE Junction-box electronics | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | JBE Junction-box electronics | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | JBE Junction-box electronics | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | JBE Junction-box electronics | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | NVE Night Vision Electronics | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | NVE Night Vision Electronics | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | NVE Night Vision Electronics | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | NVE Night Vision Electronics | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | NVE Night Vision Electronics | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | NVE Night Vision Electronics | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | RSE Rear Seat Entertainment | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | RSE Rear Seat Entertainment | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | RSE Rear Seat Entertainment | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | RSE Rear Seat Entertainment | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | RSE Rear Seat Entertainment | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | RSE Rear Seat Entertainment | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | SVT Servotronic | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | SVT Servotronic | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | SVT Servotronic | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | SVT Servotronic | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | SVT Servotronic | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|---|------------------|---------------------|
| 5Series | F07 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | TRSVc allround-view camera | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | TRSVc allround-view camera | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | TRSVc allround-view camera | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | TRSVc allround-view camera | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | TRSVc allround-view camera | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | TRSVc allround-view camera | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | ULF-SBX interface box | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | ULF-SBX interface box | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | ULF-SBX interface box | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | ULF-SBX interface box | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | ULF-SBX interface box | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | ULF-SBX interface box | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | ULF-SBX-H interface box High | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | ULF-SBX-H interface box High | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | ULF-SBX-H interface box High | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | ULF-SBX-H interface box High | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | ULF-SBX-H interface box High | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | ULF-SBX-H interface box High | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | VM Video module | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | VSW video switch | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | VSW video switch | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | VSW video switch | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | VSW video switch | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | VSW video switch | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | VSW video switch | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 5Series | F07 | Body | SDARS Satellite tuner | ECU information | V1.10.001 or higher |
| 5Series | F07 | Body | SDARS Satellite tuner | Read codes | V1.10.001 or higher |
| 5Series | F07 | Body | SDARS Satellite tuner | Erase codes | V1.10.001 or higher |
| 5Series | F07 | Body | SDARS Satellite tuner | Live Data | V1.10.001 or higher |
| 5Series | F07 | Body | SDARS Satellite tuner | Active test | V1.10.001 or higher |
| 5Series | F07 | Body | SDARS Satellite tuner | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | AL active steering | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|--------------------------------------|------------------|---------------------|
| 5Series | F10/F11 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSHL Damper satellite, rear left | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSHL Damper satellite, rear left | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSHL Damper satellite, rear left | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSHL Damper satellite, rear left | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSHL Damper satellite, rear left | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSHL Damper satellite, rear left | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSHR Damper satellite, rear right | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSHR Damper satellite, rear right | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSHR Damper satellite, rear right | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSHR Damper satellite, rear right | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSHR Damper satellite, rear right | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSHR Damper satellite, rear right | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSVL Damper satellite, front left | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSVL Damper satellite, front left | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSVL Damper satellite, front left | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSVL Damper satellite, front left | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSVL Damper satellite, front left | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSVL Damper satellite, front left | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSVR Damper satellite, front right | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSVR Damper satellite, front right | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSVR Damper satellite, front right | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSVR Damper satellite, front right | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSVR Damper satellite, front right | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EDCSVR Damper satellite, front right | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | AMPT Top Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | AMPT Top Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|--|------------------|---------------------|
| 5Series | F10/F11 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | GHAS Regulated differential lock | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | GHAS Regulated differential lock | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | GHAS Regulated differential lock | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | GHAS Regulated differential lock | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | GHAS Regulated differential lock | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | GHAS Regulated differential lock | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HSR Rear-axle slip-angle control | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HSR Rear-axle slip-angle control | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HSR Rear-axle slip-angle control | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HSR Rear-axle slip-angle control | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HSR Rear-axle slip-angle control | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HSR Rear-axle slip-angle control | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | JBE Junction-box electronics | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | JBE Junction-box electronics | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | JBE Junction-box electronics | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | JBE Junction-box electronics | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | JBE Junction-box electronics | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | JBE Junction-box electronics | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | NVE Night Vision Electronics | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | NVE Night Vision Electronics | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | NVE Night Vision Electronics | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | NVE Night Vision Electronics | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | NVE Night Vision Electronics | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | NVE Night Vision Electronics | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RAD Radio | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|---|------------------|---------------------|
| 5Series | F10/F11 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RSE Rear Seat Entertainment | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RSE Rear Seat Entertainment | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RSE Rear Seat Entertainment | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RSE Rear Seat Entertainment | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RSE Rear Seat Entertainment | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | RSE Rear Seat Entertainment | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SVT Servotronic | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SVT Servotronic | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SVT Servotronic | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SVT Servotronic | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SVT Servotronic | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SCR Selective Catalytic Reduction | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SCR Selective Catalytic Reduction | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SCR Selective Catalytic Reduction | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SCR Selective Catalytic Reduction | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SCR Selective Catalytic Reduction | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SCR Selective Catalytic Reduction | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|------------------------------------|------------------|---------------------|
| 5Series | F10/F11 | Body | TRSVc allround-view camera | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | TRSVc allround-view camera | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | TRSVc allround-view camera | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | TRSVc allround-view camera | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | TRSVc allround-view camera | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | TRSVc allround-view camera | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ULF-SBX interface box | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ULF-SBX interface box | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ULF-SBX interface box | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ULF-SBX interface box | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ULF-SBX interface box | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ULF-SBX interface box | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ULF-SBX-H interface box High | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ULF-SBX-H interface box High | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ULF-SBX-H interface box High | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ULF-SBX-H interface box High | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ULF-SBX-H interface box High | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ULF-SBX-H interface box High | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VM Video module | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VSW video switch | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VSW video switch | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VSW video switch | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VSW video switch | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VSW video switch | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VSW video switch | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SDARS Satellite tuner | ECU information | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SDARS Satellite tuner | Read codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SDARS Satellite tuner | Erase codes | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SDARS Satellite tuner | Live Data | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SDARS Satellite tuner | Active test | V1.10.001 or higher |
| 5Series | F10/F11 | Body | SDARS Satellite tuner | Special Function | V1.10.001 or higher |
| 5Series | F18 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 5Series | F18 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 5Series | F18 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 5Series | F18 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 5Series | F18 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 5Series | F18 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 5Series | F18 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 5Series | F18 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 5Series | F18 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 5Series | F18 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 5Series | F18 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 5Series | F18 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 5Series | F18 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 5Series | F18 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 5Series | F18 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 5Series | F18 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 5Series | F18 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 5Series | F18 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 5Series | F18 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 5Series | F18 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 5Series | F18 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 5Series | F18 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 5Series | F18 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| 5Series | F18 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSHL Damper satellite, rear left | ECU information | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSHL Damper satellite, rear left | Read codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSHL Damper satellite, rear left | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSHL Damper satellite, rear left | Live Data | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSHL Damper satellite, rear left | Active test | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--------------------------------------|------------------|---------------------|
| 5Series | F18 | Chassis | EDCSHL Damper satellite, rear left | Special Function | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSHR Damper satellite, rear right | ECU information | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSHR Damper satellite, rear right | Read codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSHR Damper satellite, rear right | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSHR Damper satellite, rear right | Live Data | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSHR Damper satellite, rear right | Active test | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSHR Damper satellite, rear right | Special Function | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSVL Damper satellite, front left | ECU information | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSVL Damper satellite, front left | Read codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSVL Damper satellite, front left | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSVL Damper satellite, front left | Live Data | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSVL Damper satellite, front left | Active test | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSVL Damper satellite, front left | Special Function | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSVR Damper satellite, front right | ECU information | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSVR Damper satellite, front right | Read codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSVR Damper satellite, front right | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSVR Damper satellite, front right | Live Data | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSVR Damper satellite, front right | Active test | V1.10.001 or higher |
| 5Series | F18 | Chassis | EDCSVR Damper satellite, front right | Special Function | V1.10.001 or higher |
| 5Series | F18 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 5Series | F18 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 5Series | F18 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 5Series | F18 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 5Series | F18 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 5Series | F18 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 5Series | F18 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 5Series | F18 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| 5Series | F18 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 5Series | F18 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 5Series | F18 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 5Series | F18 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 5Series | F18 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 5Series | F18 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 5Series | F18 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 5Series | F18 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 5Series | F18 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 5Series | F18 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 5Series | F18 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 5Series | F18 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | AMPT Top Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | AMPT Top Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|----------------------------------|------------------|---------------------|
| 5Series | F18 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | CON Controller | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | FCON Rear compartment controller | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | FCON Rear compartment controller | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | FCON Rear compartment controller | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | FCON Rear compartment controller | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | FCON Rear compartment controller | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | FCON Rear compartment controller | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | FD Rear-compartment display | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | FD Rear-compartment display | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | FD Rear-compartment display | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | FD Rear-compartment display | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | FD Rear-compartment display | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | FD Rear-compartment display | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | FD2 Rear-compartment display 2 | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | FD2 Rear-compartment display 2 | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | FD2 Rear-compartment display 2 | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | FD2 Rear-compartment display 2 | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | FD2 Rear-compartment display 2 | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | FD2 Rear-compartment display 2 | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | FKA Rear heater/air conditioning | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | FKA Rear heater/air conditioning | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | FKA Rear heater/air conditioning | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | FKA Rear heater/air conditioning | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | FKA Rear heater/air conditioning | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | FKA Rear heater/air conditioning | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | HSR Rear-axle slip-angle control | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | HSR Rear-axle slip-angle control | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | HSR Rear-axle slip-angle control | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | HSR Rear-axle slip-angle control | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | HSR Rear-axle slip-angle control | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | HSR Rear-axle slip-angle control | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 5Series | F18 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | JBE Junction-box electronics | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | JBE Junction-box electronics | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | JBE Junction-box electronics | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | JBE Junction-box electronics | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | JBE Junction-box electronics | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | JBE Junction-box electronics | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | NVE Night Vision Electronics | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | NVE Night Vision Electronics | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | NVE Night Vision Electronics | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | NVE Night Vision Electronics | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | NVE Night Vision Electronics | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | NVE Night Vision Electronics | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | RSE Rear Seat Entertainment | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | RSE Rear Seat Entertainment | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | RSE Rear Seat Entertainment | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | RSE Rear Seat Entertainment | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | RSE Rear Seat Entertainment | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | RSE Rear Seat Entertainment | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|---------|-------|---|------------------|---------------------|
| 5Series | F18 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | TRSVc allround-view camera | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | TRSVc allround-view camera | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | TRSVc allround-view camera | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | TRSVc allround-view camera | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | TRSVc allround-view camera | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | TRSVc allround-view camera | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | ULF-SBX interface box | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | ULF-SBX interface box | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | ULF-SBX interface box | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | ULF-SBX interface box | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | ULF-SBX interface box | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | ULF-SBX interface box | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | ULF-SBX-H interface box High | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | ULF-SBX-H interface box High | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | ULF-SBX-H interface box High | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | ULF-SBX-H interface box High | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | ULF-SBX-H interface box High | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | ULF-SBX-H interface box High | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | VM Video module | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | VSW video switch | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | VSW video switch | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | VSW video switch | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | VSW video switch | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | VSW video switch | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | VSW video switch | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 5Series | F18 | Body | SDARS Satellite tuner | ECU information | V1.10.001 or higher |
| 5Series | F18 | Body | SDARS Satellite tuner | Read codes | V1.10.001 or higher |
| 5Series | F18 | Body | SDARS Satellite tuner | Erase codes | V1.10.001 or higher |
| 5Series | F18 | Body | SDARS Satellite tuner | Live Data | V1.10.001 or higher |
| 5Series | F18 | Body | SDARS Satellite tuner | Active test | V1.10.001 or higher |
| 5Series | F18 | Body | SDARS Satellite tuner | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|--------------------------------------|------------------|---------------------|
| 6Series | F12/F13 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSHL Damper satellite, rear left | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSHL Damper satellite, rear left | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSHL Damper satellite, rear left | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSHL Damper satellite, rear left | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSHL Damper satellite, rear left | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSHL Damper satellite, rear left | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSHR Damper satellite, rear right | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSHR Damper satellite, rear right | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSHR Damper satellite, rear right | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSHR Damper satellite, rear right | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSHR Damper satellite, rear right | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSHR Damper satellite, rear right | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSVL Damper satellite, front left | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSVL Damper satellite, front left | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSVL Damper satellite, front left | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSVL Damper satellite, front left | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSVL Damper satellite, front left | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSVL Damper satellite, front left | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSVR Damper satellite, front right | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSVR Damper satellite, front right | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSVR Damper satellite, front right | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSVR Damper satellite, front right | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSVR Damper satellite, front right | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EDCSVR Damper satellite, front right | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | AMPT Top Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | AMPT Top Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|----------------------------------|------------------|---------------------|
| 6Series | F12/F13 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CON Controller | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FD Rear-compartment display | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FD Rear-compartment display | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FD Rear-compartment display | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FD Rear-compartment display | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FD Rear-compartment display | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FD Rear-compartment display | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FD2 Rear-compartment display 2 | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FD2 Rear-compartment display 2 | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FD2 Rear-compartment display 2 | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FD2 Rear-compartment display 2 | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FD2 Rear-compartment display 2 | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FD2 Rear-compartment display 2 | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FKA Rear heater/air conditioning | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FKA Rear heater/air conditioning | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FKA Rear heater/air conditioning | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FKA Rear heater/air conditioning | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FKA Rear heater/air conditioning | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FKA Rear heater/air conditioning | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|--|------------------|---------------------|
| 6Series | F12/F13 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | HSR Rear-axle slip-angle control | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | HSR Rear-axle slip-angle control | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | HSR Rear-axle slip-angle control | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | HSR Rear-axle slip-angle control | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | HSR Rear-axle slip-angle control | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | HSR Rear-axle slip-angle control | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | JBE Junction-box electronics | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | JBE Junction-box electronics | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | JBE Junction-box electronics | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | JBE Junction-box electronics | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | JBE Junction-box electronics | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | JBE Junction-box electronics | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | NVE Night Vision Electronics | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | NVE Night Vision Electronics | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | NVE Night Vision Electronics | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | NVE Night Vision Electronics | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | NVE Night Vision Electronics | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | NVE Night Vision Electronics | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|-------------|-------|---|------------------|---------------------|
| 6Series | F12/F13 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SVT Servotronic | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SVT Servotronic | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SVT Servotronic | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SVT Servotronic | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SVT Servotronic | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | TRSV allround-view camera | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | TRSV allround-view camera | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | TRSV allround-view camera | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | TRSV allround-view camera | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | TRSV allround-view camera | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | TRSV allround-view camera | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VM Video module | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VSW video switch | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VSW video switch | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VSW video switch | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VSW video switch | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VSW video switch | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VSW video switch | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SDARS Satellite tuner | ECU information | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SDARS Satellite tuner | Read codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SDARS Satellite tuner | Erase codes | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SDARS Satellite tuner | Live Data | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SDARS Satellite tuner | Active test | V1.10.001 or higher |
| 6Series | F12/F13 | Body | SDARS Satellite tuner | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|-------------|------|---|------------------|---------------------|
| 7Series | F01/F02/F04 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | JBE Junction-box electronics | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | JBE Junction-box electronics | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | JBE Junction-box electronics | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | JBE Junction-box electronics | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | JBE Junction-box electronics | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | JBE Junction-box electronics | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | CON Controller | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ULF-SBX-H interface box High | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ULF-SBX-H interface box High | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ULF-SBX-H interface box High | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ULF-SBX-H interface box High | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ULF-SBX-H interface box High | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ULF-SBX-H interface box High | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | RSE Rear Seat Entertainment | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | RSE Rear Seat Entertainment | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|-------------|-------|--|------------------|---------------------|
| 7Series | F01/F02/F04 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SVT Servotronic | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SVT Servotronic | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SVT Servotronic | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SVT Servotronic | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SVT Servotronic | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | STML Headlight driver module,left | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | STML Headlight driver module,left | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | STML Headlight driver module,left | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | STML Headlight driver module,left | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | STML Headlight driver module,left | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | STML Headlight driver module,left | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | STMR Headlight driver module,right | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | STMR Headlight driver module,right | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | STMR Headlight driver module,right | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | STMR Headlight driver module,right | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | STMR Headlight driver module,right | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | STMR Headlight driver module,right | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | TRVC allround-view camera | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | TRVC allround-view camera | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | TRVC allround-view camera | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | TRVC allround-view camera | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | TRVC allround-view camera | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | TRVC allround-view camera | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | TBX Touchbox | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | TBX Touchbox | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | TBX Touchbox | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | TBX Touchbox | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | TBX Touchbox | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | TBX Touchbox | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ULF-SBX interface box | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ULF-SBX interface box | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ULF-SBX interface box | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ULF-SBX interface box | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ULF-SBX interface box | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | ULF-SBX interface box | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | VM Video module | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| 7Series | F01/F02/F04 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|-----------------------------------|------------------|---------------------|
| XSeries | X3_F25 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | AMPT Top Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | AMPT Top Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CON Controller | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CON Controller | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CON Controller | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CON Controller | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | CON Controller | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--|------------------|---------------------|
| XSeries | X3_F25 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | GHAS Regulated differential lock | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | GHAS Regulated differential lock | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | GHAS Regulated differential lock | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | GHAS Regulated differential lock | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | GHAS Regulated differential lock | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | GHAS Regulated differential lock | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | JBE Junction-box electronics | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | JBE Junction-box electronics | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | JBE Junction-box electronics | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | JBE Junction-box electronics | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | JBE Junction-box electronics | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | JBE Junction-box electronics | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | RAD Radio | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|--------|-------|---|------------------|---------------------|
| XSeries | X3_F25 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | TRSVCA allround-view camera | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | TRSVCA allround-view camera | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | TRSVCA allround-view camera | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | TRSVCA allround-view camera | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | TRSVCA allround-view camera | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | TRSVCA allround-view camera | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | VM Video module | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | VM Video module | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | VM Video module | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | VM Video module | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | VM Video module | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| XSeries | X3_F25 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| XSeries | X3_F25 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| XSeries | X3_F25 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| XSeries | X3_F25 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| XSeries | X3_F25 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | EMPI Hybrid oil-pump activation | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | EMPI Hybrid oil-pump activation | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | EMPI Hybrid oil-pump activation | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | EMPI Hybrid oil-pump activation | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | EMPI Hybrid oil-pump activation | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | EMPI Hybrid oil-pump activation | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | TCM Hybrid-transmission control | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | TCM Hybrid-transmission control | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | TCM Hybrid-transmission control | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | TCM Hybrid-transmission control | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | TCM Hybrid-transmission control | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | TCM Hybrid-transmission control | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | VTG Transfer case | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | VTG Transfer case | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|---------------------------------------|------------------|---------------------|
| XSeries | X6_E72 | Drive | VTG Transfer case | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | VTG Transfer case | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | VTG Transfer case | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Drive | VTG Transfer case | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | DSM Hybrid parking lock | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | DSM Hybrid parking lock | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | DSM Hybrid parking lock | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | DSM Hybrid parking lock | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | DSM Hybrid parking lock | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | DSM Hybrid parking lock | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | SBA Hybrid brake-actuation changeover | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | SBA Hybrid brake-actuation changeover | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | SBA Hybrid brake-actuation changeover | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | SBA Hybrid brake-actuation changeover | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | SBA Hybrid brake-actuation changeover | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Chassis | SBA Hybrid brake-actuation changeover | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | AMPT Top Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | AMPT Top Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | APM Hybrid DC/DC converter | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | APM Hybrid DC/DC converter | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | APM Hybrid DC/DC converter | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | APM Hybrid DC/DC converter | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | APM Hybrid DC/DC converter | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | APM Hybrid DC/DC converter | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | BCM Battery check module | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | BCM Battery check module | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | BCM Battery check module | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | BCM Battery check module | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | BCM Battery check module | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | BCM Battery check module | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CA Comfort access system | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CA Comfort access system | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CA Comfort access system | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CA Comfort access system | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CA Comfort access system | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CA Comfort access system | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CDC CD changer | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CDC CD changer | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CDC CD changer | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CDC CD changer | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CDC CD changer | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CDC CD changer | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CCC-GW Gateway | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|----------------------------------|------------------|---------------------|
| XSeries | X6_E72 | Body | CCC-GW Gateway | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CCC-GW Gateway | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CCC-GW Gateway | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CCC-GW Gateway | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CCC-GW Gateway | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CON Controller | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CON Controller | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CON Controller | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CON Controller | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CON Controller | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | EKK Electric A/C compressor | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | EKK Electric A/C compressor | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | EKK Electric A/C compressor | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | EKK Electric A/C compressor | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | EKK Electric A/C compressor | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | EKK Electric A/C compressor | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FD Rear-compartment display | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FD Rear-compartment display | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FD Rear-compartment display | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FD Rear-compartment display | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FD Rear-compartment display | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FD Rear-compartment display | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FKA Rear heater/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FKA Rear heater/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FKA Rear heater/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FKA Rear heater/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FKA Rear heater/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FKA Rear heater/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HCP Hybrid master control unit | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HCP Hybrid master control unit | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HCP Hybrid master control unit | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HCP Hybrid master control unit | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HCP Hybrid master control unit | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HCP Hybrid master control unit | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HIM Hybrid Interface Module | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HIM Hybrid Interface Module | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HIM Hybrid Interface Module | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HIM Hybrid Interface Module | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HIM Hybrid Interface Module | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HIM Hybrid Interface Module | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--|------------------|---------------------|
| XSeries | X6_E72 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | JBE2 Junction Box electronics | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | JBE2 Junction Box electronics | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | JBE2 Junction Box electronics | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | JBE2 Junction Box electronics | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | JBE2 Junction Box electronics | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | JBE2 Junction Box electronics | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | M-ASK-BO User interface | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | M-ASK-BO User interface | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | M-ASK-BO User interface | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | M-ASK-BO User interface | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | M-ASK-BO User interface | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | M-ASK-BO User interface | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | MCPA Hybrid electric-motor control 1 | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | MCPA Hybrid electric-motor control 1 | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | MCPA Hybrid electric-motor control 1 | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | MCPA Hybrid electric-motor control 1 | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | MCPA Hybrid electric-motor control 1 | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | MCPA Hybrid electric-motor control 1 | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | MCPB Hybrid electric-motor control 2 | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | MCPB Hybrid electric-motor control 2 | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | MCPB Hybrid electric-motor control 2 | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | MCPB Hybrid electric-motor control 2 | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | MCPB Hybrid electric-motor control 2 | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | MCPB Hybrid electric-motor control 2 | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | RLSS Rain/light solar sensor | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | RLSS Rain/light solar sensor | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | RLSS Rain/light solar sensor | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | RLSS Rain/light solar sensor | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | RLSS Rain/light solar sensor | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | RLSS Rain/light solar sensor | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | RSE Rear Seat Entertainment | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | RSE Rear Seat Entertainment | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | RSE Rear Seat Entertainment | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | RSE Rear Seat Entertainment | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | RSE Rear Seat Entertainment | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | RSE Rear Seat Entertainment | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | TFE Hybrid pressure-tank electronics | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | TFE Hybrid pressure-tank electronics | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | TFE Hybrid pressure-tank electronics | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | TFE Hybrid pressure-tank electronics | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | TFE Hybrid pressure-tank electronics | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | TFE Hybrid pressure-tank electronics | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | TRSVC allround-view camera | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | TRSVC allround-view camera | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | TRSVC allround-view camera | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | TRSVC allround-view camera | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | TRSVC allround-view camera | Active test | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|---------------------------------|------------------|---------------------|
| XSeries | X6_E72 | Body | TRSVc allround-view camera | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | ULF-SBX interface box | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | ULF-SBX interface box | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | ULF-SBX interface box | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | ULF-SBX interface box | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | ULF-SBX interface box | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | ULF-SBX interface box | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | ULF-SBX-H interface box High | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | ULF-SBX-H interface box High | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | ULF-SBX-H interface box High | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | ULF-SBX-H interface box High | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | ULF-SBX-H interface box High | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | ULF-SBX-H interface box High | Special Function | V1.10.001 or higher |
| XSeries | X6_E72 | Body | VM Video module | ECU information | V1.10.001 or higher |
| XSeries | X6_E72 | Body | VM Video module | Read codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| XSeries | X6_E72 | Body | VM Video module | Live Data | V1.10.001 or higher |
| XSeries | X6_E72 | Body | VM Video module | Active test | V1.10.001 or higher |
| XSeries | X6_E72 | Body | VM Video module | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | AMPT Top Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | AMPT Top Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CON Controller | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CON Controller | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CON Controller | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CON Controller | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CON Controller | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--|------------------|---------------------|
| XSeries | X1_E84 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | JBE Junction-box electronics | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | JBE Junction-box electronics | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | JBE Junction-box electronics | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | JBE Junction-box electronics | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | JBE Junction-box electronics | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | JBE Junction-box electronics | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | TRSVC allround-view camera | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | TRSVC allround-view camera | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | TRSVC allround-view camera | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | TRSVC allround-view camera | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | TRSVC allround-view camera | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | TRSVC allround-view camera | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | VM Video module | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | VM Video module | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | VM Video module | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | VM Video module | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | VM Video module | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CA Comfort access system | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CA Comfort access system | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CA Comfort access system | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CA Comfort access system | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CA Comfort access system | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CA Comfort access system | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CDC CD changer | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CDC CD changer | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CDC CD changer | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CDC CD changer | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CDC CD changer | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CDC CD changer | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CHAMP-BO User interface | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CHAMP-BO User interface | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CHAMP-BO User interface | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|------------------------------------|------------------|---------------------|
| XSeries | X1_E84 | Body | CHAMP-BO User interface | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CHAMP-BO User interface | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CHAMP-BO User interface | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CCC-GW Gateway | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CCC-GW Gateway | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CCC-GW Gateway | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CCC-GW Gateway | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CCC-GW Gateway | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | CCC-GW Gateway | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | DAB Digital tuner | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | DAB Digital tuner | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | DAB Digital tuner | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | DAB Digital tuner | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | DAB Digital tuner | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | DAB Digital tuner | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | DWA anti-theft alarm system | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | DWA anti-theft alarm system | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | DWA anti-theft alarm system | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | DWA anti-theft alarm system | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | DWA anti-theft alarm system | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | DWA anti-theft alarm system | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | RLSS Rain/light solar sensor | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | RLSS Rain/light solar sensor | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | RLSS Rain/light solar sensor | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | RLSS Rain/light solar sensor | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | RLSS Rain/light solar sensor | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | RLSS Rain/light solar sensor | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SHD Sliding/tilting sunroof | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SHD Sliding/tilting sunroof | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SHD Sliding/tilting sunroof | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SHD Sliding/tilting sunroof | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SHD Sliding/tilting sunroof | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SHD Sliding/tilting sunroof | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | ULF-SBX interface box | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | ULF-SBX interface box | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | ULF-SBX interface box | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | ULF-SBX interface box | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | ULF-SBX interface box | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | ULF-SBX interface box | Special Function | V1.10.001 or higher |
| XSeries | X1_E84 | Body | ULF-SBX-H interface box High | ECU information | V1.10.001 or higher |
| XSeries | X1_E84 | Body | ULF-SBX-H interface box High | Read codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | ULF-SBX-H interface box High | Erase codes | V1.10.001 or higher |
| XSeries | X1_E84 | Body | ULF-SBX-H interface box High | Live Data | V1.10.001 or higher |
| XSeries | X1_E84 | Body | ULF-SBX-H interface box High | Active test | V1.10.001 or higher |
| XSeries | X1_E84 | Body | ULF-SBX-H interface box High | Special Function | V1.10.001 or higher |
| 2Series | F22 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 2Series | F22 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 2Series | F22 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 2Series | F22 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 2Series | F22 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 2Series | F22 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 2Series | F22 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 2Series | F22 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 2Series | F22 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 2Series | F22 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 2Series | F22 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 2Series | F22 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 2Series | F22 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 2Series | F22 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 2Series | F22 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 2Series | F22 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 2Series | F22 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 2Series | F22 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 2Series | F22 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 2Series | F22 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 2Series | F22 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 2Series | F22 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 2Series | F22 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 2Series | F22 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| 2Series | F22 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 2Series | F22 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 2Series | F22 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|------------------------------------|------------------|---------------------|
| 2Series | F22 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 2Series | F22 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 2Series | F22 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 2Series | F22 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 2Series | F22 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| 2Series | F22 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 2Series | F22 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 2Series | F22 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| 2Series | F22 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 2Series | F22 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 2Series | F22 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 2Series | F22 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 2Series | F22 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 2Series | F22 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 2Series | F22 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 2Series | F22 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 2Series | F22 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 2Series | F22 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 2Series | F22 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 2Series | F22 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 2Series | F22 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 2Series | F22 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 2Series | F22 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 2Series | F22 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| 2Series | F22 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| 2Series | F22 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| 2Series | F22 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| 2Series | F22 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | CON Controller | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 2Series | F22 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | GHAS Regulated differential lock | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | GHAS Regulated differential lock | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | GHAS Regulated differential lock | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | GHAS Regulated differential lock | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | GHAS Regulated differential lock | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | GHAS Regulated differential lock | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|---|------------------|---------------------|
| 2Series | F22 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | SVT Servotronic | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | SVT Servotronic | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | SVT Servotronic | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | SVT Servotronic | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | SVT Servotronic | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|---|------------------|---------------------|
| 2Series | F22 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | VM Video module | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| 2Series | F22 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 2Series | F22 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 2Series | F22 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 2Series | F22 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 2Series | F22 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 2Series | F22 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 3Series | F34 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 3Series | F34 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 3Series | F34 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 3Series | F34 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 3Series | F34 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 3Series | F34 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 3Series | F34 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 3Series | F34 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 3Series | F34 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 3Series | F34 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 3Series | F34 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 3Series | F34 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 3Series | F34 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 3Series | F34 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 3Series | F34 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 3Series | F34 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 3Series | F34 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 3Series | F34 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 3Series | F34 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 3Series | F34 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 3Series | F34 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 3Series | F34 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 3Series | F34 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 3Series | F34 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| 3Series | F34 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 3Series | F34 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 3Series | F34 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| 3Series | F34 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 3Series | F34 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 3Series | F34 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 3Series | F34 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 3Series | F34 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| 3Series | F34 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 3Series | F34 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 3Series | F34 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| 3Series | F34 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 3Series | F34 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 3Series | F34 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 3Series | F34 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 3Series | F34 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 3Series | F34 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 3Series | F34 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 3Series | F34 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 3Series | F34 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 3Series | F34 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 3Series | F34 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 3Series | F34 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 3Series | F34 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|-----------------------------------|------------------|---------------------|
| 3Series | F34 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 3Series | F34 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 3Series | F34 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| 3Series | F34 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| 3Series | F34 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| 3Series | F34 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| 3Series | F34 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | CON Controller | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 3Series | F34 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | GHAS Regulated differential lock | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | GHAS Regulated differential lock | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | GHAS Regulated differential lock | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | GHAS Regulated differential lock | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | GHAS Regulated differential lock | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | GHAS Regulated differential lock | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|---------|-------|---|------------------|---------------------|
| 3Series | F34 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | SVT Servotronic | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | SVT Servotronic | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | SVT Servotronic | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | SVT Servotronic | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | SVT Servotronic | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | VM Video module | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| 3Series | F34 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 3Series | F34 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 3Series | F34 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 3Series | F34 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 3Series | F34 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 3Series | F34 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|------------------------------------|------------------|---------------------|
| 4Series | F32/F33 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|--|------------------|---------------------|
| 4Series | F32/F33 | Body | FZD Function centre, roof | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | GHAS Regulated differential lock | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | GHAS Regulated differential lock | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | GHAS Regulated differential lock | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | GHAS Regulated differential lock | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | GHAS Regulated differential lock | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | GHAS Regulated differential lock | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|---|------------------|---------------------|
| 4Series | F32/F33 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SVT Servotronic | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SVT Servotronic | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SVT Servotronic | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SVT Servotronic | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SVT Servotronic | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | VM Video module | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| 4Series | F32/F33 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 4Series | F32/F33 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 4Series | F32/F33 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 4Series | F32/F33 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 4Series | F32/F33 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 6Series | F06 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 6Series | F06 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 6Series | F06 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 6Series | F06 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 6Series | F06 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 6Series | F06 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 6Series | F06 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 6Series | F06 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 6Series | F06 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 6Series | F06 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 6Series | F06 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 6Series | F06 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 6Series | F06 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 6Series | F06 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 6Series | F06 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 6Series | F06 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 6Series | F06 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 6Series | F06 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 6Series | F06 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 6Series | F06 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 6Series | F06 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 6Series | F06 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 6Series | F06 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|-------------------------------------|------------------|---------------------|
| 6Series | F06 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | CON Controller | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | FCON Rear compartment controller | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | FCON Rear compartment controller | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | FCON Rear compartment controller | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | FCON Rear compartment controller | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | FCON Rear compartment controller | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | FCON Rear compartment controller | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | FD Rear-compartment display | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 6Series | F06 | Body | FD Rear-compartment display | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | FD Rear-compartment display | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | FD Rear-compartment display | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | FD Rear-compartment display | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | FD Rear-compartment display | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | FD2 Rear-compartment display 2 | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | FD2 Rear-compartment display 2 | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | FD2 Rear-compartment display 2 | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | FD2 Rear-compartment display 2 | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | FD2 Rear-compartment display 2 | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | FD2 Rear-compartment display 2 | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | FKA Rear heater/air conditioning | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | FKA Rear heater/air conditioning | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | FKA Rear heater/air conditioning | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | FKA Rear heater/air conditioning | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | FKA Rear heater/air conditioning | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | FKA Rear heater/air conditioning | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | GHAS Regulated differential lock | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | GHAS Regulated differential lock | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | GHAS Regulated differential lock | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | GHAS Regulated differential lock | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | GHAS Regulated differential lock | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | GHAS Regulated differential lock | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | HKA Rear-cabin automatic A/C | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | HKA Rear-cabin automatic A/C | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | HKA Rear-cabin automatic A/C | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | HKA Rear-cabin automatic A/C | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | HKA Rear-cabin automatic A/C | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | HKA Rear-cabin automatic A/C | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | HSR Rear-axle slip-angle control | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | HSR Rear-axle slip-angle control | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | HSR Rear-axle slip-angle control | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | HSR Rear-axle slip-angle control | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | HSR Rear-axle slip-angle control | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | HSR Rear-axle slip-angle control | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 6Series | F06 | Body | JBE Junction-box electronics | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | JBE Junction-box electronics | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | JBE Junction-box electronics | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | JBE Junction-box electronics | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | JBE Junction-box electronics | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | JBE Junction-box electronics | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | NVE Night Vision Electronics | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | NVE Night Vision Electronics | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | NVE Night Vision Electronics | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | NVE Night Vision Electronics | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | NVE Night Vision Electronics | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | NVE Night Vision Electronics | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | REM Rear Electronic Module | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | REM Rear Electronic Module | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | REM Rear Electronic Module | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | REM Rear Electronic Module | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | REM Rear Electronic Module | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | REM Rear Electronic Module | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | RSE Rear Seat Entertainment | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | RSE Rear Seat Entertainment | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | RSE Rear Seat Entertainment | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | RSE Rear Seat Entertainment | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | RSE Rear Seat Entertainment | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | RSE Rear Seat Entertainment | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | SDARS Satellite tuner | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | SDARS Satellite tuner | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | SDARS Satellite tuner | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | SDARS Satellite tuner | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | SDARS Satellite tuner | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | SDARS Satellite tuner | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|---|------------------|---------------------|
| 6Series | F06 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | SVT Servotronic | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | SVT Servotronic | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | SVT Servotronic | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | SVT Servotronic | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | SVT Servotronic | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | SDARS Satellite tuner | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | SDARS Satellite tuner | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | SDARS Satellite tuner | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | SDARS Satellite tuner | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | SDARS Satellite tuner | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | SDARS Satellite tuner | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | TCU Telematic Control Unit | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | TCU Telematic Control Unit | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | TCU Telematic Control Unit | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | TCU Telematic Control Unit | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | TCU Telematic Control Unit | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | TCU Telematic Control Unit | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | ULF-SBX interface box | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | ULF-SBX interface box | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | ULF-SBX interface box | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | ULF-SBX interface box | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | ULF-SBX interface box | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | ULF-SBX interface box | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | ULF-SBX-H interface box High | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | ULF-SBX-H interface box High | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | ULF-SBX-H interface box High | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | ULF-SBX-H interface box High | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | ULF-SBX-H interface box High | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | ULF-SBX-H interface box High | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | VM Video module | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | VSW video switch | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | VSW video switch | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | VSW video switch | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | VSW video switch | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | VSW video switch | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | VSW video switch | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|------------------------------------|------------------|---------------------|
| 6Series | F06 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| 6Series | F06 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 6Series | F06 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 6Series | F06 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 6Series | F06 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 6Series | F06 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 6Series | F06 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | AMPT Top Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | AMPT Top Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CON Controller | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CON Controller | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CON Controller | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CON Controller | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | CON Controller | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|---------|-------|--|------------------|---------------------|
| ISeries | I01/I12 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | RAD Radio | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| ISeries | I01/I12 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| ISeries | I01/I12 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| ISeries | I01/I12 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| ISeries | I01/I12 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| ISeries | I01/I12 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | QMVH Lateral-moment distribution,rear axle | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | QMVH Lateral-moment distribution,rear axle | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|--|------------------|---------------------|
| XSeries | X5_F15 | Drive | QMVH Lateral-moment distribution,rear axle | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | QMVH Lateral-moment distribution,rear axle | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | QMVH Lateral-moment distribution,rear axle | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Drive | QMVH Lateral-moment distribution,rear axle | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|---|------------------|---------------------|
| XSeries | X5_F15 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CON Controller | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CON Controller | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CON Controller | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CON Controller | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | CON Controller | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FKA Rear heater/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FKA Rear heater/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FKA Rear heater/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FKA Rear heater/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FKA Rear heater/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FKA Rear heater/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--|------------------|---------------------|
| XSeries | X5_F15 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | JBE Junction-box electronics | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | JBE Junction-box electronics | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | JBE Junction-box electronics | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | JBE Junction-box electronics | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | JBE Junction-box electronics | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | JBE Junction-box electronics | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | NVE Night Vision Electronics | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | NVE Night Vision Electronics | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | NVE Night Vision Electronics | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | NVE Night Vision Electronics | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | NVE Night Vision Electronics | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | NVE Night Vision Electronics | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PCU Power Control Unit | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PCU Power Control Unit | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PCU Power Control Unit | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PCU Power Control Unit | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PCU Power Control Unit | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | PCU Power Control Unit | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | RSE Rear Seat Entertainment | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | RSE Rear Seat Entertainment | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | RSE Rear Seat Entertainment | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | RSE Rear Seat Entertainment | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | RSE Rear Seat Entertainment | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | RSE Rear Seat Entertainment | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |

| | | | | | |
|---------|--------|-------|--|------------------|---------------------|
| XSeries | X5_F15 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SVT Servotronic | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SVT Servotronic | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SVT Servotronic | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SVT Servotronic | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SVT Servotronic | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SVT Servotronic | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | STML Headlight driver module,left | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | STML Headlight driver module,left | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | STML Headlight driver module,left | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | STML Headlight driver module,left | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | STML Headlight driver module,left | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | STML Headlight driver module,left | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | STMR Headlight driver module,right | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | STMR Headlight driver module,right | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | STMR Headlight driver module,right | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | STMR Headlight driver module,right | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | STMR Headlight driver module,right | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | STMR Headlight driver module,right | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | TR SVC allround-view camera | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | TR SVC allround-view camera | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | TR SVC allround-view camera | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | TR SVC allround-view camera | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | TR SVC allround-view camera | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | TR SVC allround-view camera | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | TBX Touchbox | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | TBX Touchbox | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | TBX Touchbox | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | TBX Touchbox | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | TBX Touchbox | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | TBX Touchbox | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | VM Video module | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | VM Video module | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | VM Video module | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | VM Video module | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | VM Video module | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| XSeries | X5_F15 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 3Series | F80 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 3Series | F80 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 3Series | F80 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 3Series | F80 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 3Series | F80 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 3Series | F80 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 3Series | F80 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 3Series | F80 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 3Series | F80 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 3Series | F80 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 3Series | F80 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 3Series | F80 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 3Series | F80 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|------------------------------------|------------------|---------------------|
| 3Series | F80 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 3Series | F80 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 3Series | F80 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 3Series | F80 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 3Series | F80 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 3Series | F80 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 3Series | F80 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 3Series | F80 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 3Series | F80 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 3Series | F80 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 3Series | F80 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| 3Series | F80 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 3Series | F80 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 3Series | F80 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| 3Series | F80 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 3Series | F80 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 3Series | F80 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 3Series | F80 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 3Series | F80 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| 3Series | F80 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 3Series | F80 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 3Series | F80 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| 3Series | F80 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 3Series | F80 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 3Series | F80 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 3Series | F80 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 3Series | F80 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 3Series | F80 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 3Series | F80 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 3Series | F80 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 3Series | F80 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 3Series | F80 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 3Series | F80 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 3Series | F80 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 3Series | F80 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 3Series | F80 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 3Series | F80 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 3Series | F80 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| 3Series | F80 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| 3Series | F80 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| 3Series | F80 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| 3Series | F80 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 3Series | F80 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | CON Controller | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | GHAS Regulated differential lock | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | GHAS Regulated differential lock | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | GHAS Regulated differential lock | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | GHAS Regulated differential lock | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | GHAS Regulated differential lock | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | GHAS Regulated differential lock | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 3Series | F80 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|---|------------------|---------------------|
| 3Series | F80 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | SVT Servotronic | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | SVT Servotronic | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | SVT Servotronic | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | SVT Servotronic | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | SVT Servotronic | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | VM Video module | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| 3Series | F80 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 3Series | F80 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 3Series | F80 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 3Series | F80 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 3Series | F80 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 3Series | F80 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|-----------------------------------|------------------|---------------------|
| 4Series | F82/F83 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CON Controller | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|--|------------------|---------------------|
| 4Series | F82/F83 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | GHAS Regulated differential lock | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | GHAS Regulated differential lock | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | GHAS Regulated differential lock | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | GHAS Regulated differential lock | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | GHAS Regulated differential lock | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | GHAS Regulated differential lock | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|---|------------------|---------------------|
| 4Series | F82/F83 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SVT Servotronic | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SVT Servotronic | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SVT Servotronic | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SVT Servotronic | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SVT Servotronic | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | VM Video module | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|------------------------------------|------------------|---------------------|
| 4Series | F82/F83 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | VM Video module | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 4Series | F82/F83 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | AMPT Top Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | AMPT Top Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--|------------------|---------------------|
| XSeries | X4_F26 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CON Controller | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CON Controller | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CON Controller | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CON Controller | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | CON Controller | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | GHAS Regulated differential lock | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | GHAS Regulated differential lock | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | GHAS Regulated differential lock | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | GHAS Regulated differential lock | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | GHAS Regulated differential lock | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | GHAS Regulated differential lock | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | JBE Junction-box electronics | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | JBE Junction-box electronics | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | JBE Junction-box electronics | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | JBE Junction-box electronics | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | JBE Junction-box electronics | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | JBE Junction-box electronics | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--|------------------|---------------------|
| XSeries | X4_F26 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | RAD Radio | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | TRSVC allround-view camera | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | TRSVC allround-view camera | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | TRSVC allround-view camera | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | TRSVC allround-view camera | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | TRSVC allround-view camera | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | TRSVC allround-view camera | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | VM Video module | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | VM Video module | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | VM Video module | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | VM Video module | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | VM Video module | Special Function | V1.10.001 or higher |
| XSeries | X4_F26 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|--|------------------|---------------------|
| XSeries | X4_F26 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| XSeries | X4_F26 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| XSeries | X4_F26 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| XSeries | X4_F26 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| XSeries | X4_F26 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | QMVH Lateral-moment distribution,rear axle | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | QMVH Lateral-moment distribution,rear axle | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | QMVH Lateral-moment distribution,rear axle | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | QMVH Lateral-moment distribution,rear axle | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | QMVH Lateral-moment distribution,rear axle | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Drive | QMVH Lateral-moment distribution,rear axle | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|-------------------------------------|------------------|---------------------|
| XSeries | X5_F85 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CON Controller | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CON Controller | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CON Controller | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CON Controller | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | CON Controller | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FKA Rear heater/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FKA Rear heater/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FKA Rear heater/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FKA Rear heater/air conditioning | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--|------------------|---------------------|
| XSeries | X5_F85 | Body | FKA Rear heater/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FKA Rear heater/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | JBE Junction-box electronics | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | JBE Junction-box electronics | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | JBE Junction-box electronics | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | JBE Junction-box electronics | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | JBE Junction-box electronics | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | JBE Junction-box electronics | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | NVE Night Vision Electronics | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | NVE Night Vision Electronics | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | NVE Night Vision Electronics | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | NVE Night Vision Electronics | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | NVE Night Vision Electronics | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | NVE Night Vision Electronics | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PCU Power Control Unit | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PCU Power Control Unit | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PCU Power Control Unit | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--|------------------|---------------------|
| XSeries | X5_F85 | Body | PCU Power Control Unit | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PCU Power Control Unit | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | PCU Power Control Unit | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | RSE Rear Seat Entertainment | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | RSE Rear Seat Entertainment | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | RSE Rear Seat Entertainment | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | RSE Rear Seat Entertainment | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | RSE Rear Seat Entertainment | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | RSE Rear Seat Entertainment | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SVT Servotronic | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SVT Servotronic | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SVT Servotronic | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SVT Servotronic | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SVT Servotronic | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SVT Servotronic | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | STML Headlight driver module,left | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | STML Headlight driver module,left | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | STML Headlight driver module,left | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | STML Headlight driver module,left | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | STML Headlight driver module,left | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | STML Headlight driver module,left | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | STMR Headlight driver module,right | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | STMR Headlight driver module,right | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | STMR Headlight driver module,right | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | STMR Headlight driver module,right | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | STMR Headlight driver module,right | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | STMR Headlight driver module,right | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | TRSVC allround-view camera | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | TRSVC allround-view camera | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | TRSVC allround-view camera | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | TRSVC allround-view camera | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | TRSVC allround-view camera | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | TRSVC allround-view camera | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | TBX Touchbox | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | TBX Touchbox | Read codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | TBX Touchbox | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | TBX Touchbox | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | TBX Touchbox | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | TBX Touchbox | Special Function | V1.10.001 or higher |
| XSeries | X5_F85 | Body | VM Video module | ECU information | V1.10.001 or higher |
| XSeries | X5_F85 | Body | VM Video module | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|--|------------------|---------------------|
| XSeries | X5_F85 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| XSeries | X5_F85 | Body | VM Video module | Live Data | V1.10.001 or higher |
| XSeries | X5_F85 | Body | VM Video module | Active test | V1.10.001 or higher |
| XSeries | X5_F85 | Body | VM Video module | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | QMVH Lateral-moment distribution,rear axle | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | QMVH Lateral-moment distribution,rear axle | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | QMVH Lateral-moment distribution,rear axle | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | QMVH Lateral-moment distribution,rear axle | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | QMVH Lateral-moment distribution,rear axle | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Drive | QMVH Lateral-moment distribution,rear axle | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|-----------------------------------|------------------|---------------------|
| XSeries | X6_F16 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CON Controller | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CON Controller | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CON Controller | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CON Controller | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | CON Controller | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--|------------------|---------------------|
| XSeries | X6_F16 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FKA Rear heater/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FKA Rear heater/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FKA Rear heater/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FKA Rear heater/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FKA Rear heater/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FKA Rear heater/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | JBE Junction-box electronics | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | JBE Junction-box electronics | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | JBE Junction-box electronics | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | JBE Junction-box electronics | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | JBE Junction-box electronics | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | JBE Junction-box electronics | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | NVE Night Vision Electronics | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | NVE Night Vision Electronics | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | NVE Night Vision Electronics | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | NVE Night Vision Electronics | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | NVE Night Vision Electronics | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | NVE Night Vision Electronics | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--|------------------|---------------------|
| XSeries | X6_F16 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PCU Power Control Unit | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PCU Power Control Unit | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PCU Power Control Unit | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PCU Power Control Unit | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PCU Power Control Unit | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | PCU Power Control Unit | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | RSE Rear Seat Entertainment | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | RSE Rear Seat Entertainment | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | RSE Rear Seat Entertainment | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | RSE Rear Seat Entertainment | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | RSE Rear Seat Entertainment | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | RSE Rear Seat Entertainment | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SVT Servotronic | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SVT Servotronic | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SVT Servotronic | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SVT Servotronic | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SVT Servotronic | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SVT Servotronic | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | STML Headlight driver module,left | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | STML Headlight driver module,left | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | STML Headlight driver module,left | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | STML Headlight driver module,left | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | STML Headlight driver module,left | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | STML Headlight driver module,left | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | STMR Headlight driver module,right | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | STMR Headlight driver module,right | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | STMR Headlight driver module,right | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | STMR Headlight driver module,right | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | STMR Headlight driver module,right | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | STMR Headlight driver module,right | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | TRSVc allround-view camera | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | TRSVc allround-view camera | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | TRSVc allround-view camera | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | TRSVc allround-view camera | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|--|------------------|---------------------|
| XSeries | X6_F16 | Body | TRSVCA allround-view camera | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | TRSVCA allround-view camera | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | TBX Touchbox | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | TBX Touchbox | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | TBX Touchbox | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | TBX Touchbox | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | TBX Touchbox | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | TBX Touchbox | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VM Video module | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VM Video module | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VM Video module | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VM Video module | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VM Video module | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| XSeries | X6_F16 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | QMVH Lateral-moment distribution,rear axle | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | QMVH Lateral-moment distribution,rear axle | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | QMVH Lateral-moment distribution,rear axle | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | QMVH Lateral-moment distribution,rear axle | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | QMVH Lateral-moment distribution,rear axle | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Drive | QMVH Lateral-moment distribution,rear axle | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|-----------------------------------|------------------|---------------------|
| XSeries | X6_F86 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CON Controller | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CON Controller | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CON Controller | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CON Controller | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | CON Controller | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--|------------------|---------------------|
| XSeries | X6_F86 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FKA Rear heater/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FKA Rear heater/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FKA Rear heater/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FKA Rear heater/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FKA Rear heater/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FKA Rear heater/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HKL Rear-lid lift | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HKL Rear-lid lift | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HKL Rear-lid lift | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HKL Rear-lid lift | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HKL Rear-lid lift | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HKL Rear-lid lift | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HUD Head-Up Display | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HUD Head-Up Display | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HUD Head-Up Display | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HUD Head-Up Display | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HUD Head-Up Display | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | HUD Head-Up Display | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | JBE Junction-box electronics | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | JBE Junction-box electronics | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | JBE Junction-box electronics | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | JBE Junction-box electronics | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | JBE Junction-box electronics | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | JBE Junction-box electronics | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | NVE Night Vision Electronics | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--|------------------|---------------------|
| XSeries | X6_F86 | Body | NVE Night Vision Electronics | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | NVE Night Vision Electronics | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | NVE Night Vision Electronics | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | NVE Night Vision Electronics | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | NVE Night Vision Electronics | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PCU Power Control Unit | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PCU Power Control Unit | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PCU Power Control Unit | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PCU Power Control Unit | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PCU Power Control Unit | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | PCU Power Control Unit | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | RDC tyre pressure control | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | RSE Rear Seat Entertainment | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | RSE Rear Seat Entertainment | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | RSE Rear Seat Entertainment | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | RSE Rear Seat Entertainment | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | RSE Rear Seat Entertainment | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | RSE Rear Seat Entertainment | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SVT Servotronic | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SVT Servotronic | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SVT Servotronic | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SVT Servotronic | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SVT Servotronic | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SVT Servotronic | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | STML Headlight driver module,left | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | STML Headlight driver module,left | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | STML Headlight driver module,left | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | STML Headlight driver module,left | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | STML Headlight driver module,left | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | STML Headlight driver module,left | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|--------------------------------------|------------------|---------------------|
| XSeries | X6_F86 | Body | STMR Headlight driver module,right | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | STMR Headlight driver module,right | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | STMR Headlight driver module,right | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | STMR Headlight driver module,right | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | STMR Headlight driver module,right | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | STMR Headlight driver module,right | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | TR SVC allround-view camera | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | TR SVC allround-view camera | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | TR SVC allround-view camera | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | TR SVC allround-view camera | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | TR SVC allround-view camera | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | TR SVC allround-view camera | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | TBX Touchbox | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | TBX Touchbox | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | TBX Touchbox | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | TBX Touchbox | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | TBX Touchbox | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | TBX Touchbox | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | VM Video module | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | VM Video module | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | VM Video module | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | VM Video module | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | VM Video module | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | VTG Transfer case | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | VTG Transfer case | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | VTG Transfer case | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | VTG Transfer case | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | VTG Transfer case | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | VTG Transfer case | Special Function | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| XSeries | X6_F86 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 1Series | F21 | Drive | Engine-DDE Diesel Electronics | ECU information | V1.10.001 or higher |
| 1Series | F21 | Drive | Engine-DDE Diesel Electronics | Read codes | V1.10.001 or higher |
| 1Series | F21 | Drive | Engine-DDE Diesel Electronics | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Drive | Engine-DDE Diesel Electronics | Live Data | V1.10.001 or higher |
| 1Series | F21 | Drive | Engine-DDE Diesel Electronics | Active test | V1.10.001 or higher |
| 1Series | F21 | Drive | Engine-DDE Diesel Electronics | Special Function | V1.10.001 or higher |
| 1Series | F21 | Drive | Engine-DME Digital Motor Electronics | ECU information | V1.10.001 or higher |
| 1Series | F21 | Drive | Engine-DME Digital Motor Electronics | Read codes | V1.10.001 or higher |
| 1Series | F21 | Drive | Engine-DME Digital Motor Electronics | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Drive | Engine-DME Digital Motor Electronics | Live Data | V1.10.001 or higher |
| 1Series | F21 | Drive | Engine-DME Digital Motor Electronics | Active test | V1.10.001 or higher |
| 1Series | F21 | Drive | Engine-DME Digital Motor Electronics | Special Function | V1.10.001 or higher |
| 1Series | F21 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 1Series | F21 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 1Series | F21 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 1Series | F21 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 1Series | F21 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 1Series | F21 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 1Series | F21 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 1Series | F21 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 1Series | F21 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 1Series | F21 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 1Series | F21 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 1Series | F21 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 1Series | F21 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 1Series | F21 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 1Series | F21 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 1Series | F21 | Chassis | ABS-DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| 1Series | F21 | Chassis | ABS-DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| 1Series | F21 | Chassis | ABS-DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Chassis | ABS-DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| 1Series | F21 | Chassis | ABS-DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| 1Series | F21 | Chassis | ABS-DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| 1Series | F21 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 1Series | F21 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 1Series | F21 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 1Series | F21 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 1Series | F21 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 1Series | F21 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 1Series | F21 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 1Series | F21 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 1Series | F21 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|-----------------------------------|------------------|---------------------|
| 1Series | F21 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 1Series | F21 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| 1Series | F21 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| 1Series | F21 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| 1Series | F21 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| 1Series | F21 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| 1Series | F21 | Chassis | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 1Series | F21 | Chassis | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 1Series | F21 | Chassis | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Chassis | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 1Series | F21 | Chassis | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 1Series | F21 | Chassis | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | Airbag-ACSM Crash Safety Module | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | Airbag-ACSM Crash Safety Module | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | Airbag-ACSM Crash Safety Module | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | Airbag-ACSM Crash Safety Module | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | Airbag-ACSM Crash Safety Module | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | Airbag-ACSM Crash Safety Module | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | CID Central Information Display | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | CID Central Information Display | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | CID Central Information Display | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | CID Central Information Display | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | CID Central Information Display | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | CID Central Information Display | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | CON Controller | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | DSP Digital Sound Processor | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | DSP Digital Sound Processor | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | DSP Digital Sound Processor | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | DSP Digital Sound Processor | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | DSP Digital Sound Processor | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | DSP Digital Sound Processor | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | FCON Rear compartment controller | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | FCON Rear compartment controller | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | FCON Rear compartment controller | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | FCON Rear compartment controller | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | FCON Rear compartment controller | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | FCON Rear compartment controller | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | FEM Front Electronic Module | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | FEM Front Electronic Module | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | FEM Front Electronic Module | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | FEM Front Electronic Module | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--|------------------|---------------------|
| 1Series | F21 | Body | FEM Front Electronic Module | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | FEM Front Electronic Module | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 1Series | F21 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 1Series | F21 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 1Series | F21 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 1Series | F21 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 1Series | F21 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | REM Rear Electronic Module | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | REM Rear Electronic Module | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | REM Rear Electronic Module | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | REM Rear Electronic Module | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | REM Rear Electronic Module | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | REM Rear Electronic Module | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--|------------------|---------------------|
| 1Series | F21 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | TR SVC allround-view camera | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | TR SVC allround-view camera | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | TR SVC allround-view camera | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | TR SVC allround-view camera | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | TR SVC allround-view camera | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | TR SVC allround-view camera | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | TBX Touchbox | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | TBX Touchbox | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | TBX Touchbox | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | TBX Touchbox | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | TBX Touchbox | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | TBX Touchbox | Special Function | V1.10.001 or higher |
| 1Series | F21 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 1Series | F21 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 1Series | F21 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 1Series | F21 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 1Series | F21 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 1Series | F21 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 2Series | F23 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 2Series | F23 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 2Series | F23 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 2Series | F23 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 2Series | F23 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DDE Diesel Electronics | ECU information | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DDE Diesel Electronics | Read codes | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DDE Diesel Electronics | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DDE Diesel Electronics | Live Data | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DDE Diesel Electronics | Active test | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DDE Diesel Electronics | Special Function | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DME Digital Motor Electronics | ECU information | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DME Digital Motor Electronics | Read codes | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DME Digital Motor Electronics | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DME Digital Motor Electronics | Live Data | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DME Digital Motor Electronics | Active test | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DME Digital Motor Electronics | Special Function | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DME Digital Motor Electronics 2 | ECU information | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DME Digital Motor Electronics 2 | Read codes | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DME Digital Motor Electronics 2 | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DME Digital Motor Electronics 2 | Live Data | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DME Digital Motor Electronics 2 | Active test | V1.10.001 or higher |
| 2Series | F23 | Drive | Engine-DME Digital Motor Electronics 2 | Special Function | V1.10.001 or higher |
| 2Series | F23 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 2Series | F23 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 2Series | F23 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 2Series | F23 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 2Series | F23 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 2Series | F23 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 2Series | F23 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 2Series | F23 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 2Series | F23 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 2Series | F23 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 2Series | F23 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 2Series | F23 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 2Series | F23 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 2Series | F23 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 2Series | F23 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 2Series | F23 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 2Series | F23 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 2Series | F23 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| 2Series | F23 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 2Series | F23 | Chassis | ABS-DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| 2Series | F23 | Chassis | ABS-DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | ABS-DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | ABS-DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| 2Series | F23 | Chassis | ABS-DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| 2Series | F23 | Chassis | ABS-DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| 2Series | F23 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 2Series | F23 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|------------------------------------|------------------|---------------------|
| 2Series | F23 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 2Series | F23 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 2Series | F23 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 2Series | F23 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 2Series | F23 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 2Series | F23 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 2Series | F23 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| 2Series | F23 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 2Series | F23 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 2Series | F23 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 2Series | F23 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 2Series | F23 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 2Series | F23 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 2Series | F23 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 2Series | F23 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 2Series | F23 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 2Series | F23 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 2Series | F23 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 2Series | F23 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 2Series | F23 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| 2Series | F23 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| 2Series | F23 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| 2Series | F23 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| 2Series | F23 | Chassis | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 2Series | F23 | Chassis | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 2Series | F23 | Chassis | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 2Series | F23 | Chassis | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | Airbag-ACSM Crash Safety Module | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | Airbag-ACSM Crash Safety Module | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | Airbag-ACSM Crash Safety Module | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | Airbag-ACSM Crash Safety Module | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | Airbag-ACSM Crash Safety Module | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | Airbag-ACSM Crash Safety Module | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | CON Controller | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 2Series | F23 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | CON Controller | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | DSP Digital Sound Processor | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | DSP Digital Sound Processor | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | DSP Digital Sound Processor | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | DSP Digital Sound Processor | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | DSP Digital Sound Processor | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | DSP Digital Sound Processor | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | GHAS Regulated differential lock | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | GHAS Regulated differential lock | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | GHAS Regulated differential lock | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | GHAS Regulated differential lock | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | GHAS Regulated differential lock | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | GHAS Regulated differential lock | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--|------------------|---------------------|
| 2Series | F23 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 2Series | F23 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 2Series | F23 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 2Series | F23 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 2Series | F23 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|---|------------------|---------------------|
| 2Series | F23 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 2Series | F23 | Chassis | SVT Servotronic | ECU information | V1.10.001 or higher |
| 2Series | F23 | Chassis | SVT Servotronic | Read codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Chassis | SVT Servotronic | Live Data | V1.10.001 or higher |
| 2Series | F23 | Chassis | SVT Servotronic | Active test | V1.10.001 or higher |
| 2Series | F23 | Chassis | SVT Servotronic | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | TRVC allround-view camera | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | TRVC allround-view camera | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | TRVC allround-view camera | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | TRVC allround-view camera | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | TRVC allround-view camera | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | TRVC allround-view camera | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | TBX Touchbox | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | TBX Touchbox | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | TBX Touchbox | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | TBX Touchbox | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | TBX Touchbox | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | TBX Touchbox | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | VM Video module | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 2Series | F23 | Drive | VTG Transfer case | ECU information | V1.10.001 or higher |
| 2Series | F23 | Drive | VTG Transfer case | Read codes | V1.10.001 or higher |
| 2Series | F23 | Drive | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Drive | VTG Transfer case | Live Data | V1.10.001 or higher |
| 2Series | F23 | Drive | VTG Transfer case | Active test | V1.10.001 or higher |
| 2Series | F23 | Drive | VTG Transfer case | Special Function | V1.10.001 or higher |
| 2Series | F23 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 2Series | F23 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 2Series | F23 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 2Series | F23 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 2Series | F23 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 2Series | F23 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 2Series | F45 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 2Series | F45 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 2Series | F45 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 2Series | F45 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 2Series | F45 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DDE Diesel Electronics | ECU information | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DDE Diesel Electronics | Read codes | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DDE Diesel Electronics | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DDE Diesel Electronics | Live Data | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DDE Diesel Electronics | Active test | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DDE Diesel Electronics | Special Function | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DME Digital Motor Electronics | ECU information | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DME Digital Motor Electronics | Read codes | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DME Digital Motor Electronics | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DME Digital Motor Electronics | Live Data | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DME Digital Motor Electronics | Active test | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DME Digital Motor Electronics | Special Function | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DME Digital Motor Electronics 2 | ECU information | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DME Digital Motor Electronics 2 | Read codes | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DME Digital Motor Electronics 2 | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DME Digital Motor Electronics 2 | Live Data | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DME Digital Motor Electronics 2 | Active test | V1.10.001 or higher |
| 2Series | F45 | Drive | Engine-DME Digital Motor Electronics 2 | Special Function | V1.10.001 or higher |
| 2Series | F45 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 2Series | F45 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 2Series | F45 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 2Series | F45 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 2Series | F45 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 2Series | F45 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 2Series | F45 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 2Series | F45 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|------------------------------------|------------------|---------------------|
| 2Series | F45 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 2Series | F45 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 2Series | F45 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 2Series | F45 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 2Series | F45 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 2Series | F45 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 2Series | F45 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 2Series | F45 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 2Series | F45 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 2Series | F45 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| 2Series | F45 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 2Series | F45 | Chassis | ABS-DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| 2Series | F45 | Chassis | ABS-DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | ABS-DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | ABS-DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| 2Series | F45 | Chassis | ABS-DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| 2Series | F45 | Chassis | ABS-DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| 2Series | F45 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 2Series | F45 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 2Series | F45 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 2Series | F45 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 2Series | F45 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 2Series | F45 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 2Series | F45 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 2Series | F45 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| 2Series | F45 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 2Series | F45 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 2Series | F45 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 2Series | F45 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 2Series | F45 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 2Series | F45 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 2Series | F45 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 2Series | F45 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 2Series | F45 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 2Series | F45 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 2Series | F45 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 2Series | F45 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 2Series | F45 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| 2Series | F45 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| 2Series | F45 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| 2Series | F45 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| 2Series | F45 | Chassis | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 2Series | F45 | Chassis | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 2Series | F45 | Chassis | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 2Series | F45 | Chassis | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | Airbag-ACSM Crash Safety Module | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | Airbag-ACSM Crash Safety Module | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | Airbag-ACSM Crash Safety Module | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | Airbag-ACSM Crash Safety Module | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | Airbag-ACSM Crash Safety Module | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | Airbag-ACSM Crash Safety Module | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|-------------------------------------|------------------|---------------------|
| 2Series | F45 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | CON Controller | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | DSP Digital Sound Processor | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | DSP Digital Sound Processor | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | DSP Digital Sound Processor | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | DSP Digital Sound Processor | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | DSP Digital Sound Processor | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | DSP Digital Sound Processor | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--|------------------|---------------------|
| 2Series | F45 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | GHAS Regulated differential lock | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | GHAS Regulated differential lock | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | GHAS Regulated differential lock | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | GHAS Regulated differential lock | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | GHAS Regulated differential lock | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | GHAS Regulated differential lock | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 2Series | F45 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 2Series | F45 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 2Series | F45 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 2Series | F45 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|---|------------------|---------------------|
| 2Series | F45 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 2Series | F45 | Chassis | SVT Servotronic | ECU information | V1.10.001 or higher |
| 2Series | F45 | Chassis | SVT Servotronic | Read codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Chassis | SVT Servotronic | Live Data | V1.10.001 or higher |
| 2Series | F45 | Chassis | SVT Servotronic | Active test | V1.10.001 or higher |
| 2Series | F45 | Chassis | SVT Servotronic | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | TRSVC allround-view camera | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | TRSVC allround-view camera | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | TRSVC allround-view camera | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | TRSVC allround-view camera | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | TRSVC allround-view camera | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | TRSVC allround-view camera | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | TBX Touchbox | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | TBX Touchbox | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | TBX Touchbox | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | TBX Touchbox | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | TBX Touchbox | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | TBX Touchbox | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | VM Video module | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 2Series | F45 | Drive | VTG Transfer case | ECU information | V1.10.001 or higher |
| 2Series | F45 | Drive | VTG Transfer case | Read codes | V1.10.001 or higher |
| 2Series | F45 | Drive | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Drive | VTG Transfer case | Live Data | V1.10.001 or higher |
| 2Series | F45 | Drive | VTG Transfer case | Active test | V1.10.001 or higher |
| 2Series | F45 | Drive | VTG Transfer case | Special Function | V1.10.001 or higher |
| 2Series | F45 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 2Series | F45 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 2Series | F45 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 2Series | F45 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 2Series | F45 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 2Series | F45 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 2Series | F46 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 2Series | F46 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 2Series | F46 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 2Series | F46 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 2Series | F46 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DDE Diesel Electronics | ECU information | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DDE Diesel Electronics | Read codes | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DDE Diesel Electronics | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DDE Diesel Electronics | Live Data | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DDE Diesel Electronics | Active test | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DDE Diesel Electronics | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--|------------------|---------------------|
| 2Series | F46 | Drive | Engine-DME Digital Motor Electronics | ECU information | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DME Digital Motor Electronics | Read codes | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DME Digital Motor Electronics | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DME Digital Motor Electronics | Live Data | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DME Digital Motor Electronics | Active test | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DME Digital Motor Electronics | Special Function | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DME Digital Motor Electronics 2 | ECU information | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DME Digital Motor Electronics 2 | Read codes | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DME Digital Motor Electronics 2 | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DME Digital Motor Electronics 2 | Live Data | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DME Digital Motor Electronics 2 | Active test | V1.10.001 or higher |
| 2Series | F46 | Drive | Engine-DME Digital Motor Electronics 2 | Special Function | V1.10.001 or higher |
| 2Series | F46 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 2Series | F46 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 2Series | F46 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 2Series | F46 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 2Series | F46 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 2Series | F46 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 2Series | F46 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 2Series | F46 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 2Series | F46 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 2Series | F46 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 2Series | F46 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 2Series | F46 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 2Series | F46 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 2Series | F46 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 2Series | F46 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 2Series | F46 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 2Series | F46 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 2Series | F46 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| 2Series | F46 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 2Series | F46 | Chassis | ABS-DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| 2Series | F46 | Chassis | ABS-DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | ABS-DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | ABS-DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| 2Series | F46 | Chassis | ABS-DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| 2Series | F46 | Chassis | ABS-DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| 2Series | F46 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 2Series | F46 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 2Series | F46 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 2Series | F46 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 2Series | F46 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 2Series | F46 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 2Series | F46 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 2Series | F46 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| 2Series | F46 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 2Series | F46 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 2Series | F46 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 2Series | F46 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 2Series | F46 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 2Series | F46 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 2Series | F46 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 2Series | F46 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 2Series | F46 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 2Series | F46 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 2Series | F46 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 2Series | F46 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 2Series | F46 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| 2Series | F46 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| 2Series | F46 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| 2Series | F46 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| 2Series | F46 | Chassis | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 2Series | F46 | Chassis | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 2Series | F46 | Chassis | ACC Active Cruise Control | Active test | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|----------------------------------|------------------|---------------------|
| 2Series | F46 | Chassis | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | Airbag-ACSM Crash Safety Module | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | Airbag-ACSM Crash Safety Module | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | Airbag-ACSM Crash Safety Module | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | Airbag-ACSM Crash Safety Module | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | Airbag-ACSM Crash Safety Module | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | Airbag-ACSM Crash Safety Module | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | CON Controller | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | DSP Digital Sound Processor | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | DSP Digital Sound Processor | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | DSP Digital Sound Processor | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | DSP Digital Sound Processor | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | DSP Digital Sound Processor | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | DSP Digital Sound Processor | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--|------------------|---------------------|
| 2Series | F46 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | GHAS Regulated differential lock | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | GHAS Regulated differential lock | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | GHAS Regulated differential lock | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | GHAS Regulated differential lock | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | GHAS Regulated differential lock | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | GHAS Regulated differential lock | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 2Series | F46 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 2Series | F46 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 2Series | F46 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 2Series | F46 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|---|------------------|---------------------|
| 2Series | F46 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 2Series | F46 | Chassis | SVT Servotronic | ECU information | V1.10.001 or higher |
| 2Series | F46 | Chassis | SVT Servotronic | Read codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Chassis | SVT Servotronic | Live Data | V1.10.001 or higher |
| 2Series | F46 | Chassis | SVT Servotronic | Active test | V1.10.001 or higher |
| 2Series | F46 | Chassis | SVT Servotronic | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | TRSVC allround-view camera | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | TRSVC allround-view camera | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | TRSVC allround-view camera | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | TRSVC allround-view camera | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | TRSVC allround-view camera | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | TRSVC allround-view camera | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | TBX Touchbox | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | TBX Touchbox | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | TBX Touchbox | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | TBX Touchbox | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | TBX Touchbox | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | TBX Touchbox | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | VM Video module | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 2Series | F46 | Drive | VTG Transfer case | ECU information | V1.10.001 or higher |
| 2Series | F46 | Drive | VTG Transfer case | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--|------------------|---------------------|
| 2Series | F46 | Drive | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Drive | VTG Transfer case | Live Data | V1.10.001 or higher |
| 2Series | F46 | Drive | VTG Transfer case | Active test | V1.10.001 or higher |
| 2Series | F46 | Drive | VTG Transfer case | Special Function | V1.10.001 or higher |
| 2Series | F46 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 2Series | F46 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 2Series | F46 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 2Series | F46 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 2Series | F46 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 2Series | F46 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 2Series | F87 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 2Series | F87 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 2Series | F87 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 2Series | F87 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 2Series | F87 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DDE Diesel Electronics | ECU information | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DDE Diesel Electronics | Read codes | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DDE Diesel Electronics | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DDE Diesel Electronics | Live Data | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DDE Diesel Electronics | Active test | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DDE Diesel Electronics | Special Function | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DME Digital Motor Electronics | ECU information | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DME Digital Motor Electronics | Read codes | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DME Digital Motor Electronics | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DME Digital Motor Electronics | Live Data | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DME Digital Motor Electronics | Active test | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DME Digital Motor Electronics | Special Function | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DME Digital Motor Electronics 2 | ECU information | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DME Digital Motor Electronics 2 | Read codes | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DME Digital Motor Electronics 2 | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DME Digital Motor Electronics 2 | Live Data | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DME Digital Motor Electronics 2 | Active test | V1.10.001 or higher |
| 2Series | F87 | Drive | Engine-DME Digital Motor Electronics 2 | Special Function | V1.10.001 or higher |
| 2Series | F87 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 2Series | F87 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 2Series | F87 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 2Series | F87 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 2Series | F87 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 2Series | F87 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 2Series | F87 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 2Series | F87 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 2Series | F87 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 2Series | F87 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 2Series | F87 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 2Series | F87 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 2Series | F87 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 2Series | F87 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 2Series | F87 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 2Series | F87 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 2Series | F87 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 2Series | F87 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| 2Series | F87 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 2Series | F87 | Chassis | ABS-DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| 2Series | F87 | Chassis | ABS-DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | ABS-DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | ABS-DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| 2Series | F87 | Chassis | ABS-DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| 2Series | F87 | Chassis | ABS-DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| 2Series | F87 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 2Series | F87 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 2Series | F87 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 2Series | F87 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 2Series | F87 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 2Series | F87 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 2Series | F87 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 2Series | F87 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| 2Series | F87 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 2Series | F87 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 2Series | F87 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 2Series | F87 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 2Series | F87 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|-----------------------------------|------------------|---------------------|
| 2Series | F87 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 2Series | F87 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 2Series | F87 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 2Series | F87 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 2Series | F87 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 2Series | F87 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 2Series | F87 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 2Series | F87 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| 2Series | F87 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| 2Series | F87 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| 2Series | F87 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| 2Series | F87 | Chassis | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 2Series | F87 | Chassis | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 2Series | F87 | Chassis | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 2Series | F87 | Chassis | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | Airbag-ACSM Crash Safety Module | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | Airbag-ACSM Crash Safety Module | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | Airbag-ACSM Crash Safety Module | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | Airbag-ACSM Crash Safety Module | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | Airbag-ACSM Crash Safety Module | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | Airbag-ACSM Crash Safety Module | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | CON Controller | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | DSP Digital Sound Processor | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | DSP Digital Sound Processor | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | DSP Digital Sound Processor | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | DSP Digital Sound Processor | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | DSP Digital Sound Processor | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | DSP Digital Sound Processor | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|--|------------------|---------------------|
| 2Series | F87 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | GHAS Regulated differential lock | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | GHAS Regulated differential lock | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | GHAS Regulated differential lock | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | GHAS Regulated differential lock | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | GHAS Regulated differential lock | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | GHAS Regulated differential lock | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|---|------------------|---------------------|
| 2Series | F87 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 2Series | F87 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 2Series | F87 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 2Series | F87 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 2Series | F87 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 2Series | F87 | Chassis | SVT Servotronic | ECU information | V1.10.001 or higher |
| 2Series | F87 | Chassis | SVT Servotronic | Read codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Chassis | SVT Servotronic | Live Data | V1.10.001 or higher |
| 2Series | F87 | Chassis | SVT Servotronic | Active test | V1.10.001 or higher |
| 2Series | F87 | Chassis | SVT Servotronic | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|---|------------------|---------------------|
| 2Series | F87 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | TRSVc allround-view camera | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | TRSVc allround-view camera | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | TRSVc allround-view camera | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | TRSVc allround-view camera | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | TRSVc allround-view camera | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | TRSVc allround-view camera | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | TBX Touchbox | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | TBX Touchbox | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | TBX Touchbox | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | TBX Touchbox | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | TBX Touchbox | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | TBX Touchbox | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | VM Video module | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 2Series | F87 | Drive | VTG Transfer case | ECU information | V1.10.001 or higher |
| 2Series | F87 | Drive | VTG Transfer case | Read codes | V1.10.001 or higher |
| 2Series | F87 | Drive | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Drive | VTG Transfer case | Live Data | V1.10.001 or higher |
| 2Series | F87 | Drive | VTG Transfer case | Active test | V1.10.001 or higher |
| 2Series | F87 | Drive | VTG Transfer case | Special Function | V1.10.001 or higher |
| 2Series | F87 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 2Series | F87 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 2Series | F87 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 2Series | F87 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 2Series | F87 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 2Series | F87 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 4Series | F36 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 4Series | F36 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 4Series | F36 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 4Series | F36 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 4Series | F36 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DDE Diesel Electronics | ECU information | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DDE Diesel Electronics | Read codes | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DDE Diesel Electronics | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DDE Diesel Electronics | Live Data | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DDE Diesel Electronics | Active test | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DDE Diesel Electronics | Special Function | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DME Digital Motor Electronics | ECU information | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DME Digital Motor Electronics | Read codes | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DME Digital Motor Electronics | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DME Digital Motor Electronics | Live Data | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DME Digital Motor Electronics | Active test | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DME Digital Motor Electronics | Special Function | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DME Digital Motor Electronics 2 | ECU information | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DME Digital Motor Electronics 2 | Read codes | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DME Digital Motor Electronics 2 | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DME Digital Motor Electronics 2 | Live Data | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DME Digital Motor Electronics 2 | Active test | V1.10.001 or higher |
| 4Series | F36 | Drive | Engine-DME Digital Motor Electronics 2 | Special Function | V1.10.001 or higher |
| 4Series | F36 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 4Series | F36 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 4Series | F36 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 4Series | F36 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 4Series | F36 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 4Series | F36 | Drive | EKPS fuel-pump control | ECU information | V1.10.001 or higher |
| 4Series | F36 | Drive | EKPS fuel-pump control | Read codes | V1.10.001 or higher |
| 4Series | F36 | Drive | EKPS fuel-pump control | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Drive | EKPS fuel-pump control | Live Data | V1.10.001 or higher |
| 4Series | F36 | Drive | EKPS fuel-pump control | Active test | V1.10.001 or higher |
| 4Series | F36 | Drive | EKPS fuel-pump control | Special Function | V1.10.001 or higher |
| 4Series | F36 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 4Series | F36 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 4Series | F36 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 4Series | F36 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 4Series | F36 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 4Series | F36 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| 4Series | F36 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| 4Series | F36 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| 4Series | F36 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| 4Series | F36 | Chassis | ABS-DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| 4Series | F36 | Chassis | ABS-DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | ABS-DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|------------------------------------|------------------|---------------------|
| 4Series | F36 | Chassis | ABS-DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| 4Series | F36 | Chassis | ABS-DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| 4Series | F36 | Chassis | ABS-DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| 4Series | F36 | Chassis | EHC Electronic Ride-Height Control | ECU information | V1.10.001 or higher |
| 4Series | F36 | Chassis | EHC Electronic Ride-Height Control | Read codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | EHC Electronic Ride-Height Control | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | EHC Electronic Ride-Height Control | Live Data | V1.10.001 or higher |
| 4Series | F36 | Chassis | EHC Electronic Ride-Height Control | Active test | V1.10.001 or higher |
| 4Series | F36 | Chassis | EHC Electronic Ride-Height Control | Special Function | V1.10.001 or higher |
| 4Series | F36 | Chassis | EMF Parking brake | ECU information | V1.10.001 or higher |
| 4Series | F36 | Chassis | EMF Parking brake | Read codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | EMF Parking brake | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | EMF Parking brake | Live Data | V1.10.001 or higher |
| 4Series | F36 | Chassis | EMF Parking brake | Active test | V1.10.001 or higher |
| 4Series | F36 | Chassis | EMF Parking brake | Special Function | V1.10.001 or higher |
| 4Series | F36 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 4Series | F36 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 4Series | F36 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 4Series | F36 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 4Series | F36 | Chassis | ICM Integrated Chassis Management | ECU information | V1.10.001 or higher |
| 4Series | F36 | Chassis | ICM Integrated Chassis Management | Read codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | ICM Integrated Chassis Management | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | ICM Integrated Chassis Management | Live Data | V1.10.001 or higher |
| 4Series | F36 | Chassis | ICM Integrated Chassis Management | Active test | V1.10.001 or higher |
| 4Series | F36 | Chassis | ICM Integrated Chassis Management | Special Function | V1.10.001 or higher |
| 4Series | F36 | Chassis | VDM Vertical dynamics management | ECU information | V1.10.001 or higher |
| 4Series | F36 | Chassis | VDM Vertical dynamics management | Read codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | VDM Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | VDM Vertical dynamics management | Live Data | V1.10.001 or higher |
| 4Series | F36 | Chassis | VDM Vertical dynamics management | Active test | V1.10.001 or higher |
| 4Series | F36 | Chassis | VDM Vertical dynamics management | Special Function | V1.10.001 or higher |
| 4Series | F36 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| 4Series | F36 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| 4Series | F36 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| 4Series | F36 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | CTM Convertible-top module | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | CTM Convertible-top module | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | CTM Convertible-top module | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | CTM Convertible-top module | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | CTM Convertible-top module | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | CTM Convertible-top module | Special Function | V1.10.001 or higher |
| 4Series | F36 | Chassis | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 4Series | F36 | Chassis | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 4Series | F36 | Chassis | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 4Series | F36 | Chassis | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | Airbag-ACSM Crash Safety Module | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | Airbag-ACSM Crash Safety Module | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | Airbag-ACSM Crash Safety Module | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | Airbag-ACSM Crash Safety Module | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | Airbag-ACSM Crash Safety Module | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | Airbag-ACSM Crash Safety Module | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | CBX-MEDIA ComBox Multimedia | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | CBX-MEDIA ComBox Multimedia | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|-----|------|---|------------------|---------------------|
| 4Series | F36 | Body | CBX-MEDIA ComBox Multimedia | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | CBX-MEDIA ComBox Multimedia | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | CBX-MEDIA ComBox Multimedia | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | CBX-MEDIA ComBox Multimedia | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | CON Controller | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | CON Controller | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | DSP Digital Sound Processor | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | DSP Digital Sound Processor | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | DSP Digital Sound Processor | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | DSP Digital Sound Processor | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | DSP Digital Sound Processor | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | DSP Digital Sound Processor | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | EMALI Electric-motor reel, left | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | EMALI Electric-motor reel, left | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | EMALI Electric-motor reel, left | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | EMALI Electric-motor reel, left | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | EMALI Electric-motor reel, left | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | EMALI Electric-motor reel, left | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | EMARE Electric-motor reel, right | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | EMARE Electric-motor reel, right | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | EMARE Electric-motor reel, right | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | EMARE Electric-motor reel, right | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | EMARE Electric-motor reel, right | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | EMARE Electric-motor reel, right | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | EME Electric machine electronics | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | EME Electric machine electronics | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | EME Electric machine electronics | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | EME Electric machine electronics | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | EME Electric machine electronics | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | EME Electric machine electronics | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | FRM Footwell module | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | FRM Footwell module | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | FRM Footwell module | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | FRM Footwell module | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | FRM Footwell module | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | FRM Footwell module | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | GHAS Regulated differential lock | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | GHAS Regulated differential lock | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | GHAS Regulated differential lock | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | GHAS Regulated differential lock | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | GHAS Regulated differential lock | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | GHAS Regulated differential lock | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|-----|---------|--|------------------|---------------------|
| 4Series | F36 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | PDC Park Distance Control | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | PDC Park Distance Control | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | PDC Park Distance Control | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | PDC Park Distance Control | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | PDC Park Distance Control | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | PDC Park Distance Control | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 4Series | F36 | Chassis | RDC tyre pressure control | ECU information | V1.10.001 or higher |
| 4Series | F36 | Chassis | RDC tyre pressure control | Read codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | RDC tyre pressure control | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | RDC tyre pressure control | Live Data | V1.10.001 or higher |
| 4Series | F36 | Chassis | RDC tyre pressure control | Active test | V1.10.001 or higher |
| 4Series | F36 | Chassis | RDC tyre pressure control | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|---|------------------|---------------------|
| 4Series | F36 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 4Series | F36 | Chassis | SVT Servotronic | ECU information | V1.10.001 or higher |
| 4Series | F36 | Chassis | SVT Servotronic | Read codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | SVT Servotronic | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Chassis | SVT Servotronic | Live Data | V1.10.001 or higher |
| 4Series | F36 | Chassis | SVT Servotronic | Active test | V1.10.001 or higher |
| 4Series | F36 | Chassis | SVT Servotronic | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | TRSV allround-view camera | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | TRSV allround-view camera | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | TRSV allround-view camera | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | TRSV allround-view camera | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | TRSV allround-view camera | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | TRSV allround-view camera | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | TBX Touchbox | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | TBX Touchbox | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | TBX Touchbox | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | TBX Touchbox | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | TBX Touchbox | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | TBX Touchbox | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | VM Video module | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 4Series | F36 | Drive | VTG Transfer case | ECU information | V1.10.001 or higher |
| 4Series | F36 | Drive | VTG Transfer case | Read codes | V1.10.001 or higher |
| 4Series | F36 | Drive | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Drive | VTG Transfer case | Live Data | V1.10.001 or higher |
| 4Series | F36 | Drive | VTG Transfer case | Active test | V1.10.001 or higher |
| 4Series | F36 | Drive | VTG Transfer case | Special Function | V1.10.001 or higher |
| 4Series | F36 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 4Series | F36 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 4Series | F36 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 4Series | F36 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 4Series | F36 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 4Series | F36 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DDE Diesel Electronics | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DDE Diesel Electronics | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DDE Diesel Electronics | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DDE Diesel Electronics | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DDE Diesel Electronics | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DDE Diesel Electronics | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DME Digital Motor Electronics | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DME Digital Motor Electronics | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DME Digital Motor Electronics | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DME Digital Motor Electronics | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DME Digital Motor Electronics | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DME Digital Motor Electronics | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DME Digital Motor Electronics 2 | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DME Digital Motor Electronics 2 | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DME Digital Motor Electronics 2 | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DME Digital Motor Electronics 2 | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | Engine-DME Digital Motor Electronics 2 | Active test | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|--|------------------|---------------------|
| 7Series | G11/G12 | Drive | Engine-DME Digital Motor Electronics 2 | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | GWS Gear selector switch | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | GWS Gear selector switch | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | GWS Gear selector switch | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | GWS Gear selector switch | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | GWS Gear selector switch | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | GWS Gear selector switch | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | VTG Transfer case | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | VTG Transfer case | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | VTG Transfer case | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | VTG Transfer case | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | VTG Transfer case | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Drive | VTG Transfer case | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | ABS-DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | ABS-DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | ABS-DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | ABS-DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | ABS-DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | ABS-DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EPS Electronic Power Steering | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EPS Electronic Power Steering | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EPS Electronic Power Steering | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EPS Electronic Power Steering | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EPS Electronic Power Steering | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EPS Electronic Power Steering | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EARSH Rear electric active roll stabilisation | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EARSH Rear electric active roll stabilisation | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EARSH Rear electric active roll stabilisation | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EARSH Rear electric active roll stabilisation | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EARSH Rear electric active roll stabilisation | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EARSH Rear electric active roll stabilisation | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EARSV Front electric active roll stabilisation | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EARSV Front electric active roll stabilisation | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EARSV Front electric active roll stabilisation | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EARSV Front electric active roll stabilisation | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EARSV Front electric active roll stabilisation | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | EARSV Front electric active roll stabilisation | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | VDM2 Vertical dynamics management | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | VDM2 Vertical dynamics management | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | VDM2 Vertical dynamics management | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | VDM2 Vertical dynamics management | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | VDM2 Vertical dynamics management | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | VDM2 Vertical dynamics management | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | ACC Active Cruise Control | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | ACC Active Cruise Control | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | ACC Active Cruise Control | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | ACC Active Cruise Control | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | ACC Active Cruise Control | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Chassis | ACC Active Cruise Control | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | Airbag-ACSM Crash Safety Module | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | Airbag-ACSM Crash Safety Module | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | Airbag-ACSM Crash Safety Module | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | Airbag-ACSM Crash Safety Module | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | Airbag-ACSM Crash Safety Module | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | Airbag-ACSM Crash Safety Module | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | AMPT Top Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | AMPT Top Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CON Controller | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CON Controller | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CON Controller | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|--|------------------|---------------------|
| 7Series | G11/G12 | Body | CON Controller | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CON Controller | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | EME2 Electrical machine electronics | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | EME2 Electrical machine electronics | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | EME2 Electrical machine electronics | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | EME2 Electrical machine electronics | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | EME2 Electrical machine electronics | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | EME2 Electrical machine electronics | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FCON Rear compartment controller | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FCON Rear compartment controller | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FCON Rear compartment controller | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FCON Rear compartment controller | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FCON Rear compartment controller | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FCON Rear compartment controller | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FLA High Beam Assist | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FLA High Beam Assist | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FLA High Beam Assist | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FLA High Beam Assist | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FLA High Beam Assist | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FLA High Beam Assist | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HKA Rear-cabin automatic A/C | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HKA Rear-cabin automatic A/C | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HKA Rear-cabin automatic A/C | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HKA Rear-cabin automatic A/C | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HKA Rear-cabin automatic A/C | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HKA Rear-cabin automatic A/C | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HSR Rear-axle slip-angle control | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HSR Rear-axle slip-angle control | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HSR Rear-axle slip-angle control | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HSR Rear-axle slip-angle control | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HSR Rear-axle slip-angle control | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HSR Rear-axle slip-angle control | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LHML LED main light module,left | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LHML LED main light module,left | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LHML LED main light module,left | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LHML LED main light module,left | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LHML LED main light module,left | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LHML LED main light module,left | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LHMR LED main light module,right | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LHMR LED main light module,right | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LHMR LED main light module,right | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LHMR LED main light module,right | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LHMR LED main light module,right | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LHMR LED main light module,right | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | NVE Night Vision Electronics | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | NVE Night Vision Electronics | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | NVE Night Vision Electronics | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | NVE Night Vision Electronics | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | NVE Night Vision Electronics | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | NVE Night Vision Electronics | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | RAD Radio | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | RAD Radio | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | RAD Radio | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | RAD Radio | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | RAD Radio | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | RAD Radio | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | RSE Rear Seat Entertainment | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | RSE Rear Seat Entertainment | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | RSE Rear Seat Entertainment | Erase codes | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|---|------------------|---------------------|
| 7Series | G11/G12 | Body | RSE Rear Seat Entertainment | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | RSE Rear Seat Entertainment | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | RSE Rear Seat Entertainment | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMBF Seat module, passenger | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMBF Seat module, passenger | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMBF Seat module, passenger | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMBF Seat module, passenger | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMBF Seat module, passenger | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMBF Seat module, passenger | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMBFH seat module, passenger's side, rear | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMBFH seat module, passenger's side, rear | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMBFH seat module, passenger's side, rear | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMBFH seat module, passenger's side, rear | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMBFH seat module, passenger's side, rear | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMBFH seat module, passenger's side, rear | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SME Accumulator-management electronics | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SME Accumulator-management electronics | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SME Accumulator-management electronics | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SME Accumulator-management electronics | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SME Accumulator-management electronics | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SME Accumulator-management electronics | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMFAH Seat module, driver's side, rear | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMFAH Seat module, driver's side, rear | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMFAH Seat module, driver's side, rear | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMFAH Seat module, driver's side, rear | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMFAH Seat module, driver's side, rear | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SMFAH Seat module, driver's side, rear | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SWW Lane change warning | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SWW Lane change warning | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SWW Lane change warning | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SWW Lane change warning | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SWW Lane change warning | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SWW Lane change warning | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | TR SVC allround-view camera | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | TR SVC allround-view camera | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | TR SVC allround-view camera | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | TR SVC allround-view camera | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | TR SVC allround-view camera | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | TR SVC allround-view camera | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | VM Video module | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | VM Video module | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | VM Video module | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | VM Video module | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | VM Video module | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | VM Video module | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | PCU Power Control Unit | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | PCU Power Control Unit | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | PCU Power Control Unit | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | PCU Power Control Unit | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | PCU Power Control Unit | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | PCU Power Control Unit | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SCR Selective Catalytic Reduction | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SCR Selective Catalytic Reduction | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SCR Selective Catalytic Reduction | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SCR Selective Catalytic Reduction | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SCR Selective Catalytic Reduction | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SCR Selective Catalytic Reduction | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | KLE Convenience Charge Electronics | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | KLE Convenience Charge Electronics | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | KLE Convenience Charge Electronics | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | KLE Convenience Charge Electronics | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | KLE Convenience Charge Electronics | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | KLE Convenience Charge Electronics | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CVM Convertible top module | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CVM Convertible top module | Read codes | V1.10.001 or higher |

| | | | | | |
|---------|---------|------|---|------------------|---------------------|
| 7Series | G11/G12 | Body | CVM Convertible top module | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CVM Convertible top module | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CVM Convertible top module | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | CVM Convertible top module | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ASDA Vehicle Sound Generator | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ASDA Vehicle Sound Generator | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ASDA Vehicle Sound Generator | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ASDA Vehicle Sound Generator | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ASDA Vehicle Sound Generator | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | ASDA Vehicle Sound Generator | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SEC Supplementary control unit | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SEC Supplementary control unit | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SEC Supplementary control unit | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SEC Supplementary control unit | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SEC Supplementary control unit | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SEC Supplementary control unit | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SEC2 Supplementary control unit 2 | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SEC2 Supplementary control unit 2 | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SEC2 Supplementary control unit 2 | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SEC2 Supplementary control unit 2 | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SEC2 Supplementary control unit 2 | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SEC2 Supplementary control unit 2 | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SINE Siren and tilt sensor | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SINE Siren and tilt sensor | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SINE Siren and tilt sensor | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SINE Siren and tilt sensor | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SINE Siren and tilt sensor | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SINE Siren and tilt sensor | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SAS Optional extra system | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SAS Optional extra system | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SAS Optional extra system | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SAS Optional extra system | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SAS Optional extra system | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SAS Optional extra system | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LEM Light effect manager | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LEM Light effect manager | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LEM Light effect manager | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LEM Light effect manager | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LEM Light effect manager | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LEM Light effect manager | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMVL Front left seat inflator module | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMVL Front left seat inflator module | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMVL Front left seat inflator module | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMVL Front left seat inflator module | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMVL Front left seat inflator module | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMVL Front left seat inflator module | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMVR Front right seat inflator module | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMVR Front right seat inflator module | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMVR Front right seat inflator module | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMVR Front right seat inflator module | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMVR Front right seat inflator module | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMVR Front right seat inflator module | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMHL Rear left seat inflator module | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMHL Rear left seat inflator module | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMHL Rear left seat inflator module | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMHL Rear left seat inflator module | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMHL Rear left seat inflator module | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMHL Rear left seat inflator module | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMHR Rear right seat inflator module | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMHR Rear right seat inflator module | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMHR Rear right seat inflator module | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMHR Rear right seat inflator module | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMHR Rear right seat inflator module | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | SPNMHR Rear right seat inflator module | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LIM Chanrge Interface Module | ECU information | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LIM Chanrge Interface Module | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LIM Chanrge Interface Module | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LIM Chanrge Interface Module | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LIM Chanrge Interface Module | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | LIM Chanrge Interface Module | Special Function | V1.10.001 or higher |
| 7Series | G11/G12 | Body | TFE Hybrid pressure-tank electronics | ECU information | V1.10.001 or higher |

| | | | | | |
|---------|---------|---------|--------------------------------------|------------------|---------------------|
| 7Series | G11/G12 | Body | TFE Hybrid pressure-tank electronics | Read codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | TFE Hybrid pressure-tank electronics | Erase codes | V1.10.001 or higher |
| 7Series | G11/G12 | Body | TFE Hybrid pressure-tank electronics | Live Data | V1.10.001 or higher |
| 7Series | G11/G12 | Body | TFE Hybrid pressure-tank electronics | Active test | V1.10.001 or higher |
| 7Series | G11/G12 | Body | TFE Hybrid pressure-tank electronics | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | CAS Car access system | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | Engine-DME Digital Motor Electronics | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | Engine-DME Digital Motor Electronics | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | Engine-DME Digital Motor Electronics | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | Engine-DME Digital Motor Electronics | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | Engine-DME Digital Motor Electronics | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | Engine-DME Digital Motor Electronics | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Chassis | ABS-DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Chassis | ABS-DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Chassis | ABS-DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Chassis | ABS-DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Chassis | ABS-DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Chassis | ABS-DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | Airbag-ACSM Crash Safety Module | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | Airbag-ACSM Crash Safety Module | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | Airbag-ACSM Crash Safety Module | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | Airbag-ACSM Crash Safety Module | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | Airbag-ACSM Crash Safety Module | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | Airbag-ACSM Crash Safety Module | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AMPT Top Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AMPT Top Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CON Controller | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CON Controller | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CON Controller | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CON Controller | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | CON Controller | Special Function | V1.10.001 or higher |

| | | | | | |
|---------|--------|-------|--|------------------|---------------------|
| XSeries | X1_F48 | Body | DSP Digital Sound Processor | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | DSP Digital Sound Processor | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | DSP Digital Sound Processor | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | DSP Digital Sound Processor | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | DSP Digital Sound Processor | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | DSP Digital Sound Processor | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | TRSVc allround-view camera | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | TRSVc allround-view camera | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | TRSVc allround-view camera | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | TRSVc allround-view camera | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | TRSVc allround-view camera | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | TRSVc allround-view camera | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | TBX Touchbox | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | TBX Touchbox | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | TBX Touchbox | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | TBX Touchbox | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | TBX Touchbox | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | TBX Touchbox | Special Function | V1.10.001 or higher |
| XSeries | X1_F48 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| XSeries | X1_F48 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| XSeries | X1_F48 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| XSeries | X1_F48 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| XSeries | X1_F48 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | CAS Car access system | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | CAS Car access system | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | CAS Car access system | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | CAS Car access system | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | CAS Car access system | Active test | V1.10.001 or higher |

| | | | | | |
|---------|--------|---------|--------------------------------------|------------------|---------------------|
| XSeries | X1_F49 | Drive | CAS Car access system | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | Engine-DME Digital Motor Electronics | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | Engine-DME Digital Motor Electronics | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | Engine-DME Digital Motor Electronics | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | Engine-DME Digital Motor Electronics | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | Engine-DME Digital Motor Electronics | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | Engine-DME Digital Motor Electronics | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | EGS transmission management | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | EGS transmission management | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | EGS transmission management | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | EGS transmission management | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | EGS transmission management | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Drive | EGS transmission management | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Chassis | AL active steering | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Chassis | AL active steering | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Chassis | AL active steering | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Chassis | AL active steering | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Chassis | AL active steering | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Chassis | AL active steering | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Chassis | ABS-DSC Dynamic Stability Control | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Chassis | ABS-DSC Dynamic Stability Control | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Chassis | ABS-DSC Dynamic Stability Control | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Chassis | ABS-DSC Dynamic Stability Control | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Chassis | ABS-DSC Dynamic Stability Control | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Chassis | ABS-DSC Dynamic Stability Control | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | Airbag-ACSM Crash Safety Module | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | Airbag-ACSM Crash Safety Module | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | Airbag-ACSM Crash Safety Module | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | Airbag-ACSM Crash Safety Module | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | Airbag-ACSM Crash Safety Module | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | Airbag-ACSM Crash Safety Module | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AHM trailer module | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AHM trailer module | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AHM trailer module | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AHM trailer module | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AHM trailer module | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AHM trailer module | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AMPH Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AMPH Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AMPH Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AMPH Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AMPH Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AMPH Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AMPT Top Hi-Fi amplifier | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AMPT Top Hi-Fi amplifier | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AMPT Top Hi-Fi amplifier | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AMPT Top Hi-Fi amplifier | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AMPT Top Hi-Fi amplifier | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | AMPT Top Hi-Fi amplifier | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | ASD Active Sound Design | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | ASD Active Sound Design | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | ASD Active Sound Design | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | ASD Active Sound Design | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | ASD Active Sound Design | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | ASD Active Sound Design | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CBX-ECALL ComBox emergency call | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CBX-ECALL ComBox emergency call | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CBX-ECALL ComBox emergency call | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CBX-ECALL ComBox emergency call | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CBX-ECALL ComBox emergency call | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CBX-ECALL ComBox emergency call | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CIC Car Information Computer | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CIC Car Information Computer | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CIC Car Information Computer | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CIC Car Information Computer | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CIC Car Information Computer | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CIC Car Information Computer | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CON Controller | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CON Controller | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CON Controller | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CON Controller | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CON Controller | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | CON Controller | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | DSP Digital Sound Processor | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | DSP Digital Sound Processor | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | DSP Digital Sound Processor | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | DSP Digital Sound Processor | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | DSP Digital Sound Processor | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | DSP Digital Sound Processor | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | DVDC DVD changer | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | DVDC DVD changer | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | DVDC DVD changer | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | DVDC DVD changer | Live Data | V1.10.001 or higher |

| | | | | | |
|---------|--------|------|--|------------------|---------------------|
| XSeries | X1_F49 | Body | DVDC DVD changer | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | DVDC DVD changer | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | FZD Function centre,roof | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | FZD Function centre,roof | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | FZD Function centre,roof | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | FZD Function centre,roof | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | FZD Function centre,roof | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | FZD Function centre,roof | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | HKL Automatic luggage compartment lid actuation | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | HKL Automatic luggage compartment lid actuation | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | HKL Automatic luggage compartment lid actuation | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | HKL Automatic luggage compartment lid actuation | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | HKL Automatic luggage compartment lid actuation | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | HKL Automatic luggage compartment lid actuation | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | IHKA Integrated automatic heating/air conditioning | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | IHKA Integrated automatic heating/air conditioning | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | IHKA Integrated automatic heating/air conditioning | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | IHKA Integrated automatic heating/air conditioning | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | IHKA Integrated automatic heating/air conditioning | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | IHKA Integrated automatic heating/air conditioning | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | INSTR Instrument cluster | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | INSTR Instrument cluster | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | INSTR Instrument cluster | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | INSTR Instrument cluster | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | INSTR Instrument cluster | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | INSTR Instrument cluster | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | KAFAS Camera-based driver-assistance systems | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | KAFAS Camera-based driver-assistance systems | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | KAFAS Camera-based driver-assistance systems | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | KAFAS Camera-based driver-assistance systems | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | KAFAS Camera-based driver-assistance systems | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | KAFAS Camera-based driver-assistance systems | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | PMA Parking assistant | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | PMA Parking assistant | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | PMA Parking assistant | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | PMA Parking assistant | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | PMA Parking assistant | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | PMA Parking assistant | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | SMFA Seat module, driver | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | SMFA Seat module, driver | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | SMFA Seat module, driver | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | SMFA Seat module, driver | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | SMFA Seat module, driver | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | SMFA Seat module, driver | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | Airbag-SZL Switch centre, steering column | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | Airbag-SZL Switch centre, steering column | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | Airbag-SZL Switch centre, steering column | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | Airbag-SZL Switch centre, steering column | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | Airbag-SZL Switch centre, steering column | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | Airbag-SZL Switch centre, steering column | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | TRSV allround-view camera | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | TRSV allround-view camera | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | TRSV allround-view camera | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | TRSV allround-view camera | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | TRSV allround-view camera | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | TRSV allround-view camera | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | TBX Touchbox | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | TBX Touchbox | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | TBX Touchbox | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | TBX Touchbox | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | TBX Touchbox | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | TBX Touchbox | Special Function | V1.10.001 or higher |
| XSeries | X1_F49 | Body | ZGM Central Gateway Control Module | ECU information | V1.10.001 or higher |
| XSeries | X1_F49 | Body | ZGM Central Gateway Control Module | Read codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | ZGM Central Gateway Control Module | Erase codes | V1.10.001 or higher |
| XSeries | X1_F49 | Body | ZGM Central Gateway Control Module | Live Data | V1.10.001 or higher |
| XSeries | X1_F49 | Body | ZGM Central Gateway Control Module | Active test | V1.10.001 or higher |
| XSeries | X1_F49 | Body | ZGM Central Gateway Control Module | Special Function | V1.10.001 or higher |